


# Kayak CD-ROM Installer

1. Insert the Kayak Software CD into your computer's CD-ROM drive. The Autorun software displays the **CD Installer Welcome** screen (If the autorun feature is disabled on your PC, you can launch the software manually by navigating to the directory /autorun on the CD-ROM and double-clicking on the file autorun.exe.

**Note** If you cannot read the Kayak documentation in Adobe PDF (Portable Document Format) you may need to install Adobe Reader software. Click on the Install Adobe Reader icon at the bottom left of the main **CD Installer Welcome** screen (See [Figure 1 on page 1](#)) and follow the instructions on the screen.

You can perform several functions by clicking on the buttons on the left-hand side of the **CD Installer Welcome** screen ([Figure 1](#)):

Figure 1. CD Installer Welcome Screen

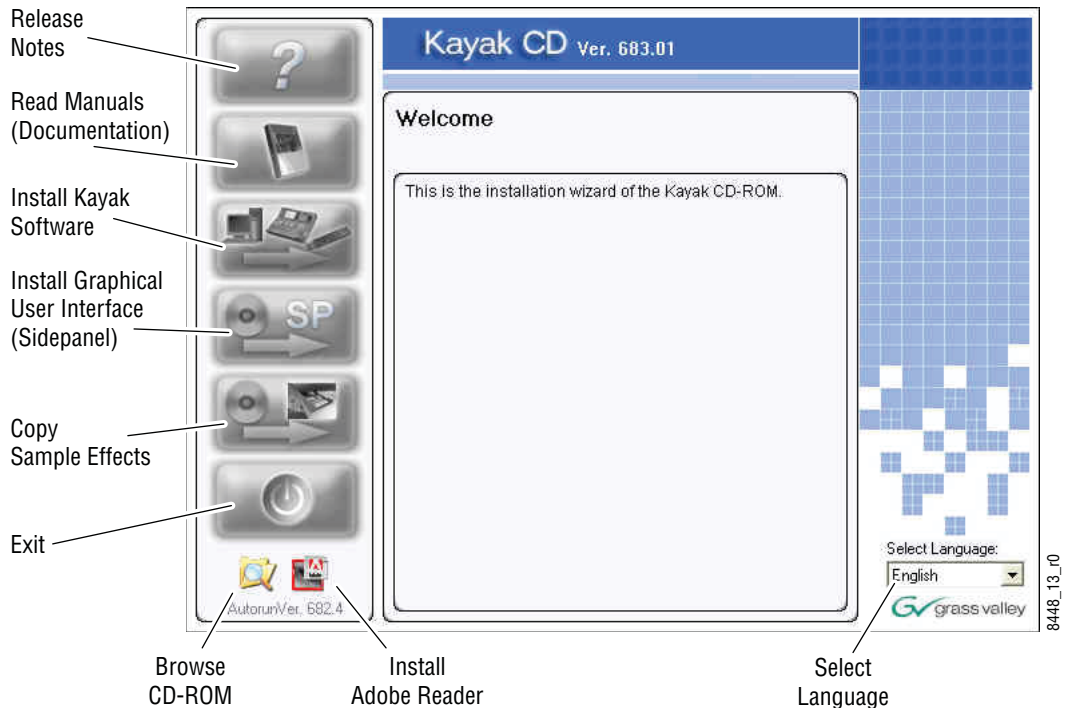


- Read the *Release Notes* and *Release Notes Addendum* for the latest information on this software release.
- Install Kayak software to a USB flash drive or to devices connected to the PC network. (See [Install Kayak Software on page 2.](#))
- Install the graphical user interface (Kayak Sidepanel software) to a PC computer.

## Install Kayak Software


1. From the **CD Installer Welcome** screen click on the **Install Kayak Software** button in the upper left-hand corner ([Figure 2](#)) to install Kayak software to a USB flash drive or to install Kayak software directly to devices connected to the PC network.

Figure 2. Install Kayak Software Button on the CD Installer Welcome Screen

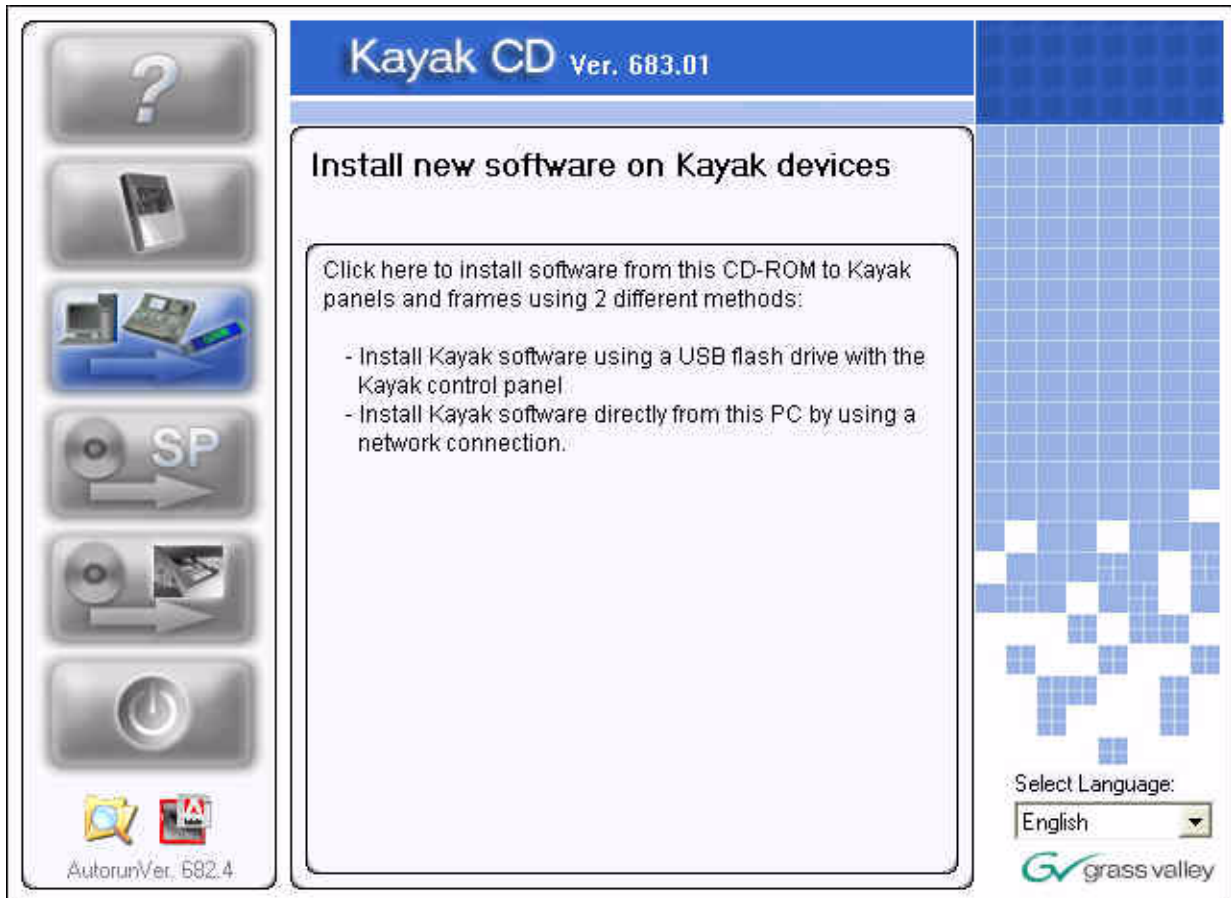

The **Install new software on Kayak devices** selection screen displays (Figure 3).

Figure 3. Install Kayak Software Selection Screen

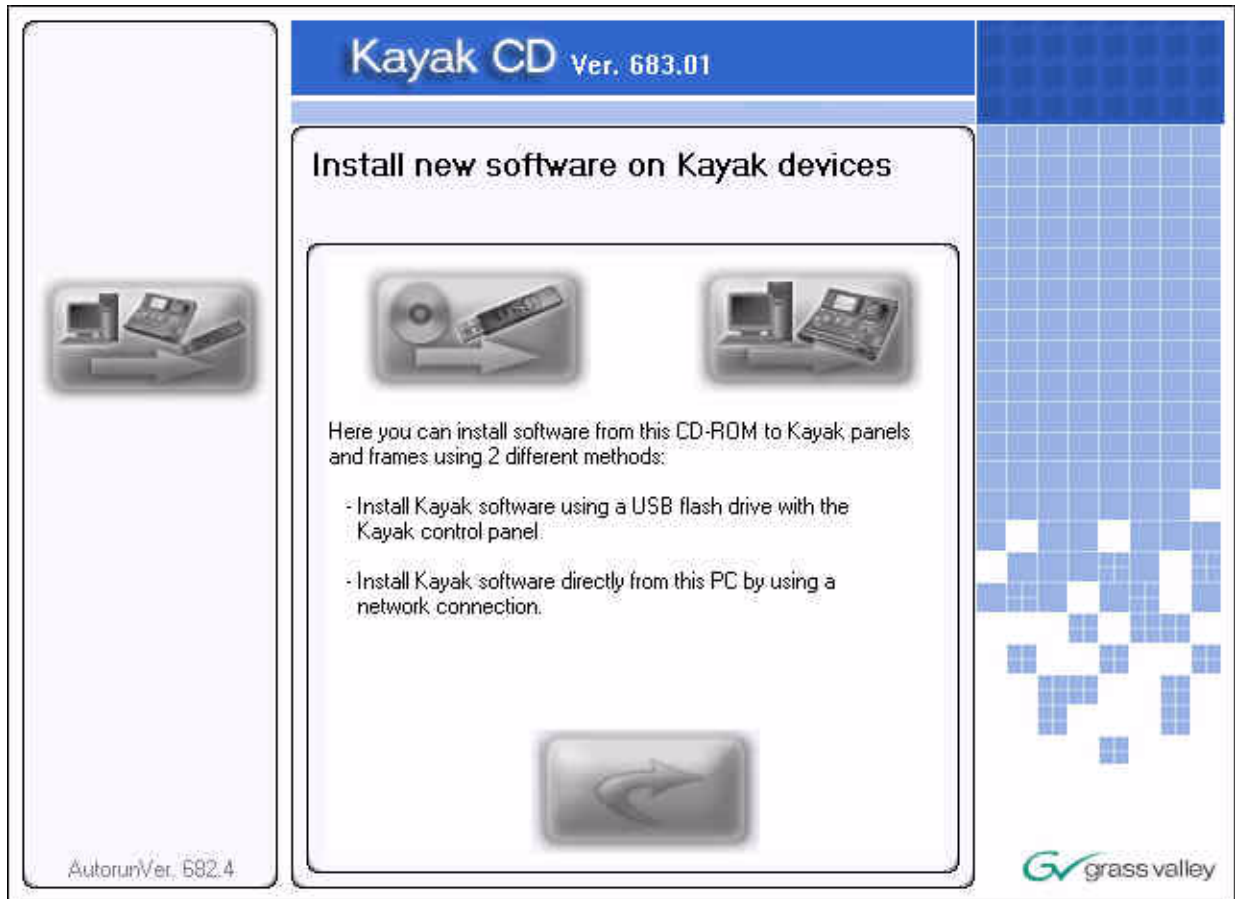

**Note** Before you click on the Kayak software button (top left) you must first plug in a supported USB flash drive for software installation. Not all USB flash drives are supported for Kayak installation. A complete list of supported drives and installation instructions can be found in the *Kayak HD Installation and Service Manual* available online.

## USB Flash Drive Installation


- From this screen click on the **Kayak software** button (USB flash drive icon on the left) to copy Kayak software from the CD-ROM to a USB flash drive. You can then install the software from the USB flash drive onto a Kayak frame and then the control panel. Make sure you have plugged in a supported USB flash drive and then follow the instructions in the USB Flash Device Setup Program wizard to complete the installation.

### Installation over the Network

3. From the **Install new software on Kayak devices** screen click on the **Kayak Network Devices** button on the right to install Kayak software to any device visible from the same subnet connected to the PC computer running the CD Installer.


The **Kayak Software Installer** displays (Figure 4).

Figure 4. Kayak Software Installer

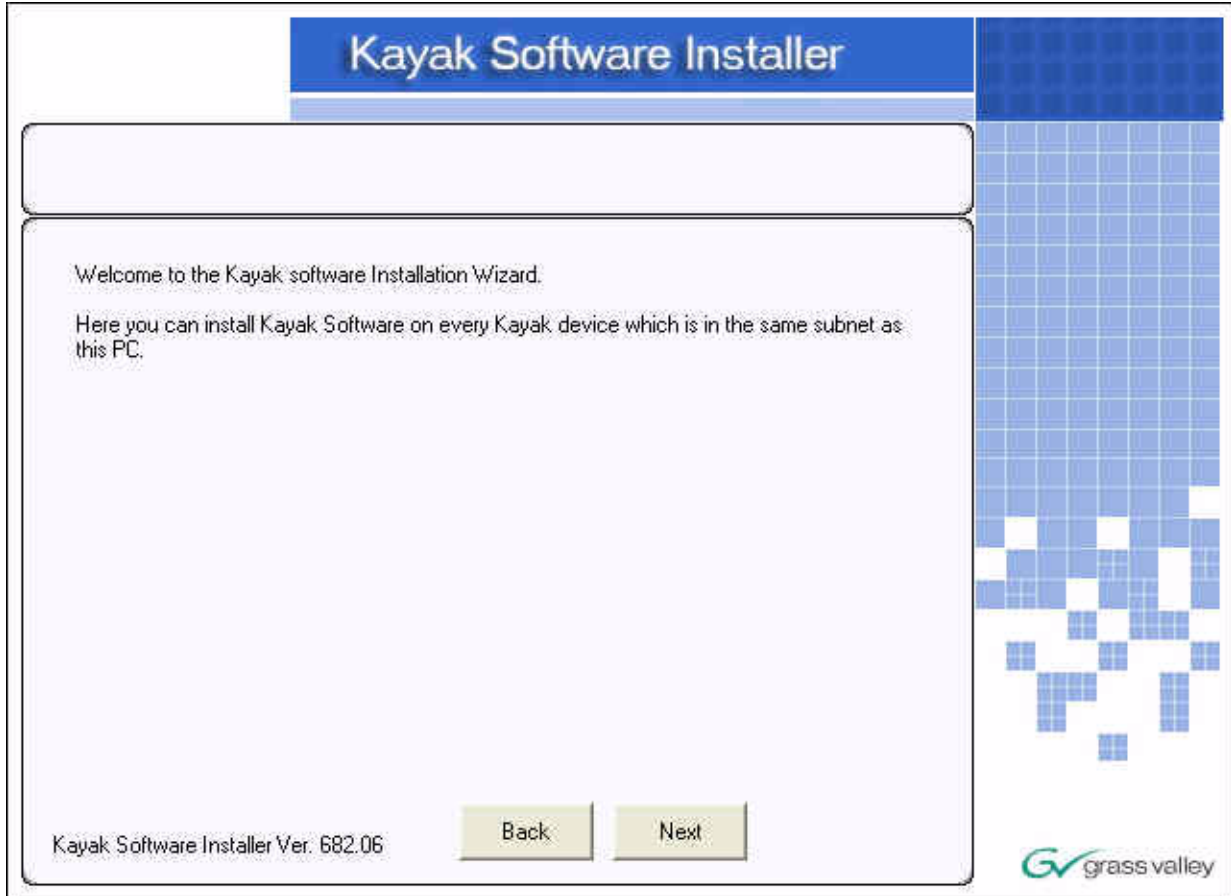

4. Click the **Next** button to continue.  
You can also click the **Back** button to return to the **Install new software on Kayak devices** screen.
5. Clicking the **Next** button displays the **Kayak Device Selection** screen (Figure 5). Every Kayak device connected to your computer's network is displayed here in the Kayak devices window. Click on a name in the list to select a device for installation.

Figure 5. Kayak Network Device Selection

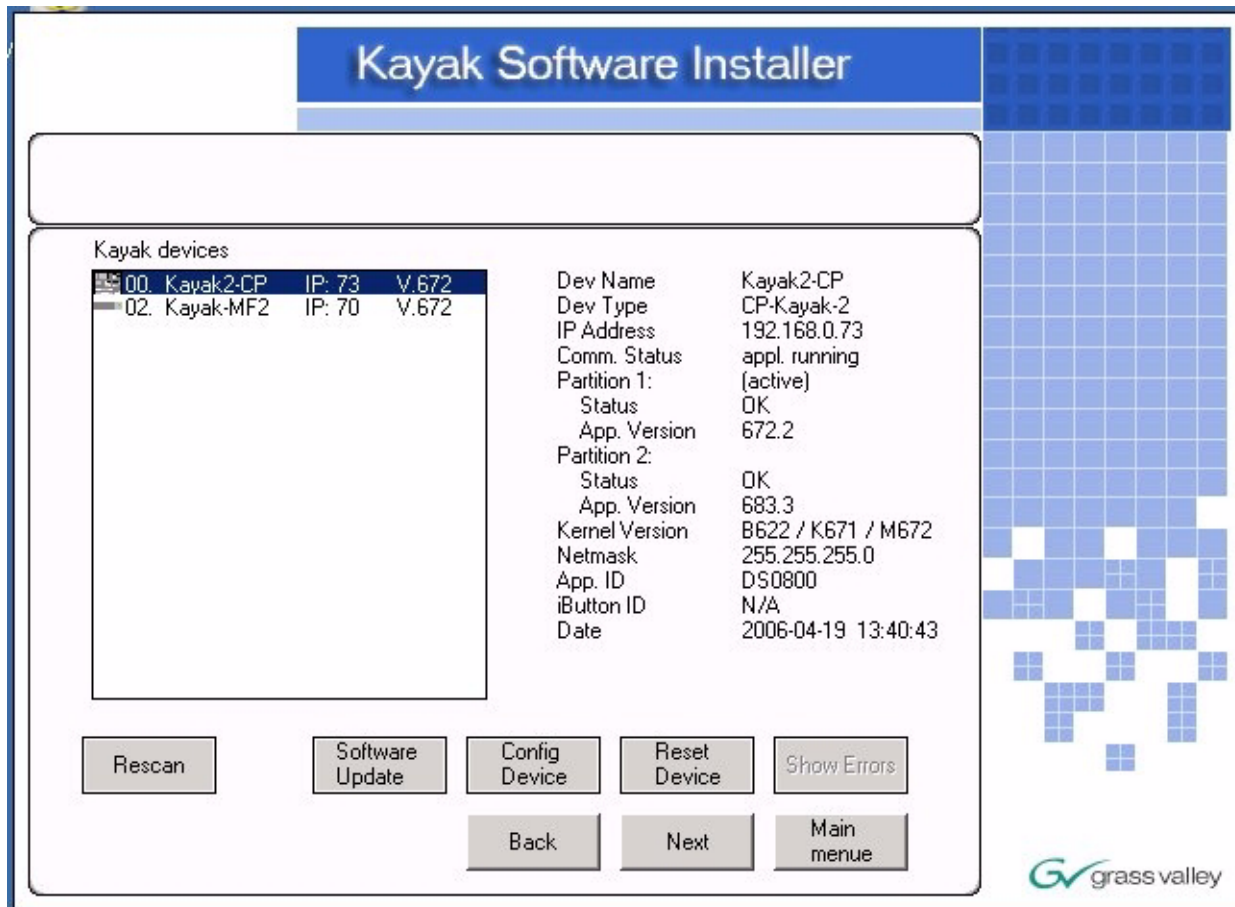

6. Once you have selected a device click one of the active buttons below the device list (see [Figure 5 on page 5](#)) to choose the action you want to perform:

The **Rescan** button will go back to the network to check for any new devices that may have been added.

**Software Update** installs Kayak software to the device you selected.

**Config Device** lets you configure the selected device over the network.

**Reset Device** resets the selected device to its default settings.

**Show Errors** displays a list of any errors discovered by the Kayak software.

Click the **Next** button to exit the Kayak Software Installer.

The **Back** button returns you to the previous screen.

The **Main Menu** button returns to the main **CD Installer Welcome** screen.


## Install Graphical User Interface (PC Sidepanel Software)

The PC Sidepanel software can be used to configure and control Kayak switchers from a PC computer.

To install the graphical user interface PC Sidepanel software:

From the **CD Installer Welcome** screen click on the **Install Sidepanel Software** button (with the disc and the SP logo) in the upper left-hand corner to install Kayak Sidepanel software to a PC Computer.

Figure 6. Install Sidepanel Software Button on the CD Installer Welcome Screen

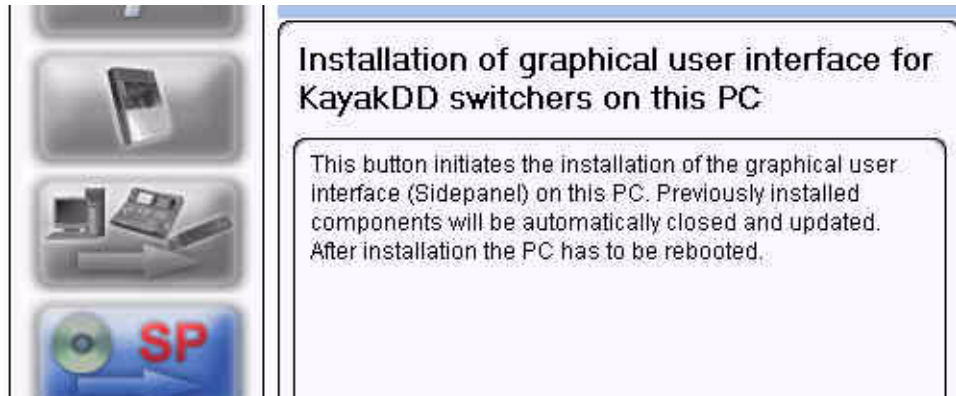

This launches a software wizard to install the Kayak Sidepanel software to your computer. Follow the instructions on the screen to install the software. When you are done the wizard closes and returns you to the **CD Installer Welcome** screen.