


LDK 4607
Master Control Panel
Operator's Manual

Contents

Quick Guide to Using the MCP	2	Control Functions for LDK 93	16
General	4	Control Functions for LDK 93W	17
Operate menu	4	Control Functions for LDK 91	18
Setup menus	5	Control Functions for LDK 9000	19
Setup menus - HD cameras	7	Control Functions for LDK 10	20
Maintenance menus	9	Control Functions for LDK 10P	21
Files Menu	10	Control Functions for LDK 20P	22
Common	11	Control Functions for LDK 23HS	24
Diagnose	11	Control Functions for LDK 23HS mkII	26
Control Functions for LDK 9	12	Control Functions for LDK 100	28
Control Functions for LDK 9P	13	Control Functions for LDK 200	30
Control Functions for LDK 9PW	14	Control Functions for LDK 6000	32
Control Functions for LDK 910	15	List of Abbreviations	34

Quick Guide to Using the MCP

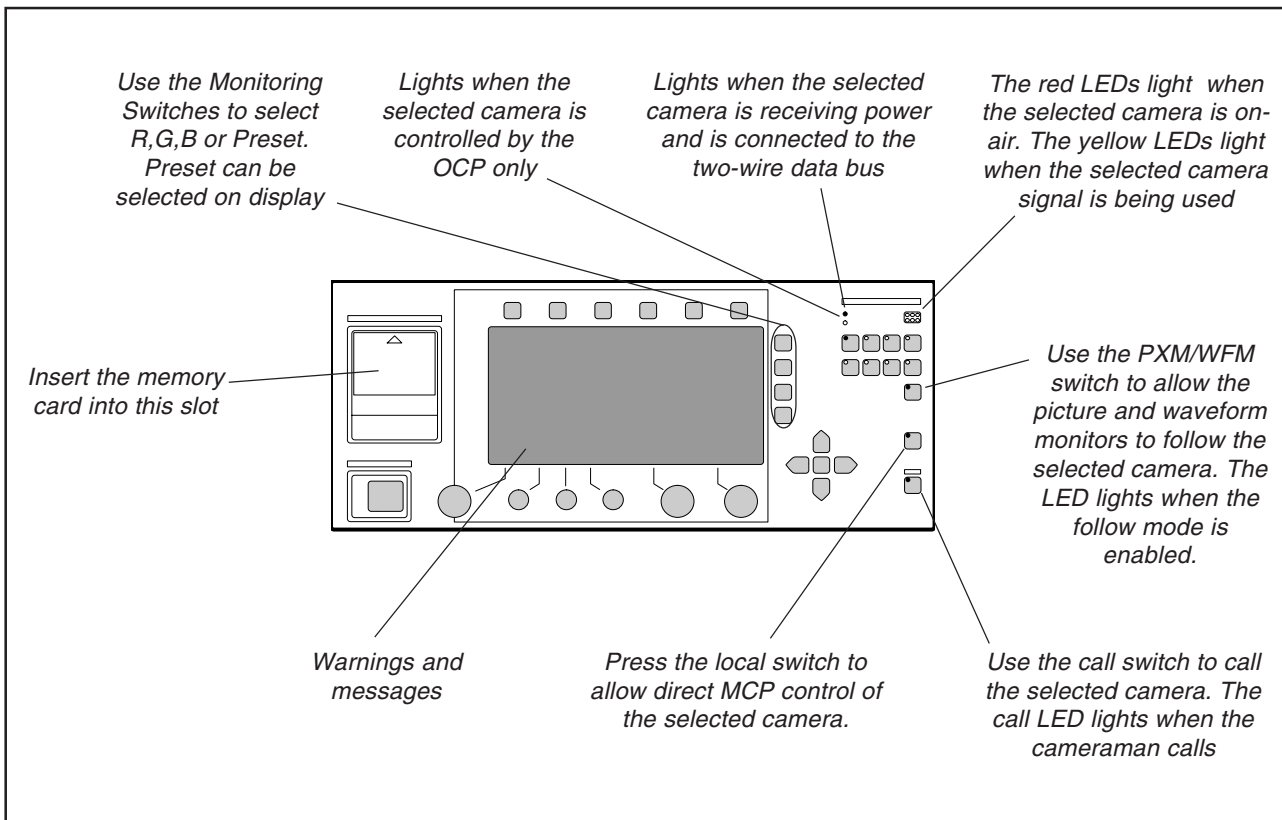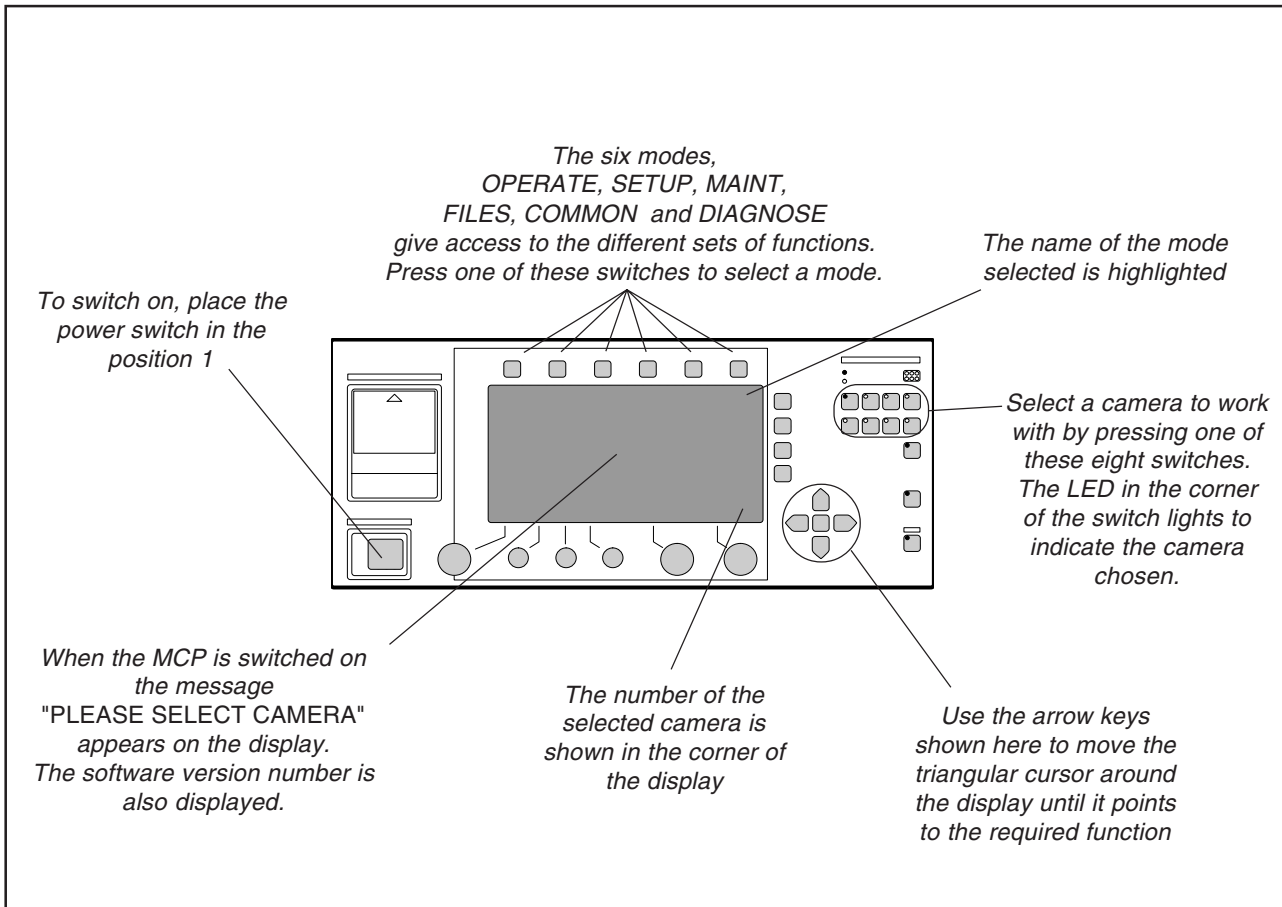

The lefthand column shows analogue functions

When an analogue function is selected by the cursor...

... the name and value of that function are displayed here

This control knob, which varies the focus, only works with the LDK 9000 camera system.

The value of the analogue function shown is adjusted with these three control knobs. The value ranges from 00 to 99.

This control knob varies the master black level in the range 00 to 99.

This control knob varies the iris. The display shows the F-stop.

OPERATE	SETUP 1 ▾	MAINT 1 ▾	FILES	COMMON	DIAGNOSE
GAIN	50	50	50	COL. TEMP	3200K
BLACK	50	50	50	AUTOBLACK	OFF
KNEE	00	...	10	KNEE	VAR
CONTOUR			50	CONTOUR	VAR
GAMMA			76	GAMMA	1
BL. STR.			50	BL. STR.	OFF
				MON	CVBS
				BARS	OFF
				EXPOSURE	NOM
				FILTER	CLEAR
				GAIN	0
				AUTO IRIS	ON
GAIN	50	50	50	50	4.0
RED	GREEN	BLUE	MASTER BLACK	IRIS	

These two columns show switch functions

When a switch function with multiple choices is selected a pop-up menu appears on top of the switch columns

When a switch function with two choices is selected press the centre key of the function selection keys to switch the function indicated by the cursor

OPERATE	SETUP 1 ▾	MAINT 1 ▾	FILES	COMMON	DIAGNOSE
GAIN	50	50	50	COL. TEMP	3200K
BLACK	50	50	50	AUTOBLACK	OFF
KNEE	00	...	10	KNEE	VAR
CONTOUR			50	CONTOUR	VAR
GAMMA			76	GAMMA	1
BL. STR.			50	BL. STR.	OFF
				MON	CVBS
				BARS	OFF
				EXPOSURE	NOM
				FILTER	CLEAR
				GAIN	0
				AUTO IRIS	ON
GAIN	50	50	50	50	4.0
RED	GREEN	BLUE	MASTER BLACK	IRIS	

Use the arrow keys to move the cursor to the switch position you want.

Use the centre key to make the pop-up menu disappear

The pop-up menu displays the choices available for the switch function

for example, the monitoring selection menu

Different Cameras

The set of functions which can be changed is dependent on the type of camera. For example, the filterwheel position can be selected on the MCP for the LDK 9 camera head but not for the LDK 91. The menus shown on the following pages apply to an LDK 20P camera with the latest system software. Some of the functions shown may not be available on your camera.

In the common mode only those functions which are common are displayed when they are relevant to the type of camera. When transferring values from one camera to another, only those values relevant to the type of camera are transferred.

Camera Number


The number of the selected camera and the type number (for example, LDK 20P) of that camera are shown in the lower righthand corner of the MCP display. The number shown corresponds with the camera assignment number set during installation. For more information on setting the camera assignment number refer to the installation manuals of the Series 9000 modules.

Menus

Initially, six menu names are listed across the top of the MCP display. These menus give access to different sets of functions. Sometimes an analogue function may be shown with dotted lines. This means that the function has been disabled. The purpose of most of the MCP functions is self-evident. The following pages do not attempt to explain each function, but seek to give an insight into those functions which might not be familiar to the operator.

Operational Control of the Camera


The operate menu is the main menu and shows those functions which are available on the OCP. The menu line always contains the OPERATE selection in the lefthand corner, even in sub-menus, so that you can easily return to it.

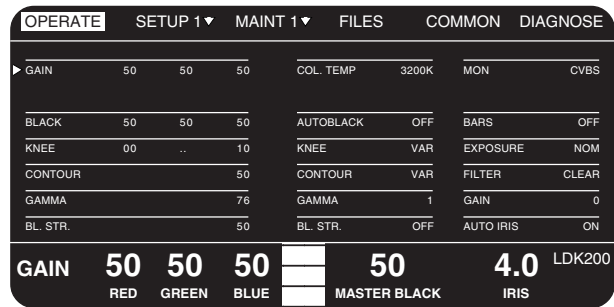

Setup menus

For a fully functioning LDK 20P camera, the setup menu consists of five screens, each of which is numbered. The triangular arrow indicates that these screens can be selected sequentially by repeatedly pressing the setup menu selection switch.

Setup 1 Menu

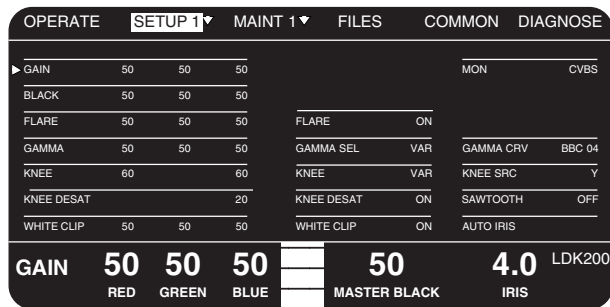

Flare

In setup menu 1 the flare function can be switched on or to auto. The flare function operates as a dynamic black circuit to improve picture contrast.


Knee

Setup menu 1 allows the knee compression circuit to be controlled. The signal source for the knee compression (KNEE SRC) can be selected as either the Y signal or a non-additive mix (NAM) of the RGB signals. With the knee function switched to variable, the point and slope of the knee can be varied. The knee desaturation function, when switched on, can also be varied. This variable desaturation regulates the dilution of the colour for the compressed highlights.

Gamma

Setup menu 1 also contains a switch function for selecting one of the six standard preset gamma curves (GAMMA CRV).


Setup 2 Menu

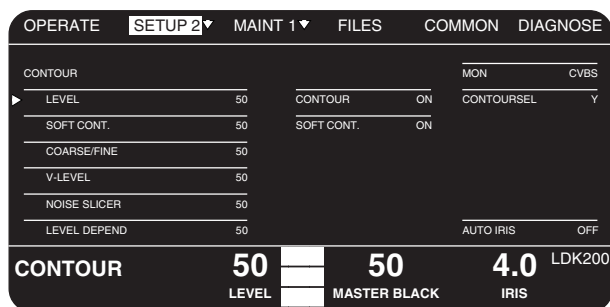

Soft Contours

The soft contour function in setup menu 2 acts as a type of compression circuit on the level of contours. When the function is switched on, the level of contour signal applied to large black/white transitions is reduced to prevent a shadow appearing around these transitions.

Setup 3 Menu

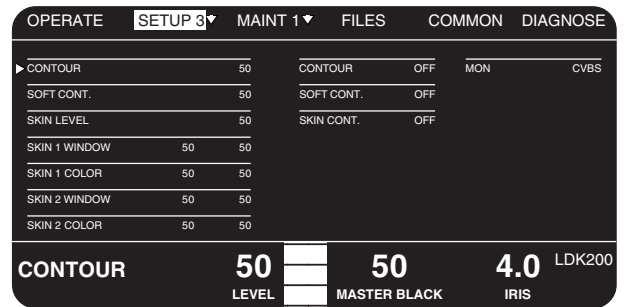


Skin Contours

The skin contour function in setup menu 3 selects an area of the picture containing flesh tones and sets the contour level in that area independently of the rest of the picture. Two different skin tones can be defined.

Switch on the skin contour function and select skin contour 1. When the skin auto function is selected a window appears in the viewfinder. This window must be pointed at the skin area that is to be selected. By pressing the skin auto function again the automatic selection process is started. The colour of the flesh tone is measured and stored in the skin 1 memory. The process can then be repeated for the second skin colour if required.

If the skin view selection is on when the automatic process is finished, the monitor displays a black and white picture with the selected flesh tones shown as a coloured area. The skin colour controls may be used as a fine adjustment in blue and red to select more closely the outline of the face. The skin window function is also a fine adjustment which can be used to restrict the selected area to one part of the picture even if, for example, the same flesh tones appear in the background. Once the area for the skin has been defined, the level of skin contour to be applied there (usually zero) is set.

Setup 4 Menu

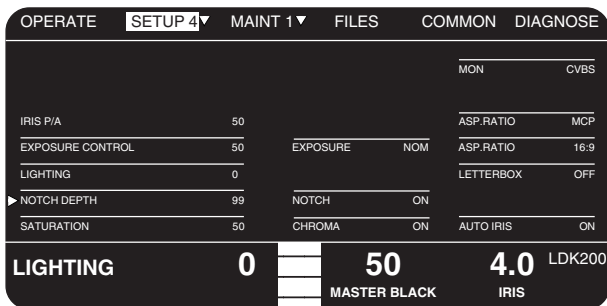

Auto Iris

Setup menu 4 has an Iris P/A analogue control. The value selected determines to what degree the auto iris circuit uses the Peak (00) video value or the Average (99) video value.

Exposure Control

The exposure control switch and analogue functions are also located in setup menu 4.

When the exposure time is set to variable to capture computer monitors pictures, the exposure control is used to eliminate the horizontal bar from the picture. The exposure control can handle computer monitors with frequencies between 51 and 103 Hz (625 lines) or 61 and 151 Hz (525 lines).

Lighting Control

The lighting control function can be found in setup menu 4. When the exposure time is set to 50 or 60Hz to handle HMI or TL lighting situations, the lighting control is used to correct frequency deviations of the lighting power supply. The correction range is approximately ± 3 Hz.


Notch Filter

The notch filter switch and analogue functions are located in setup menu 4. The notch filter in the encoded output (CVBS) can be switched on and its depth varied.

Letterbox

The letterbox aspect ratio switch function is located in setup menu 4. When selected, it provides a 16:9, 16:10, or 16:11 display.

Setup 5 Menu

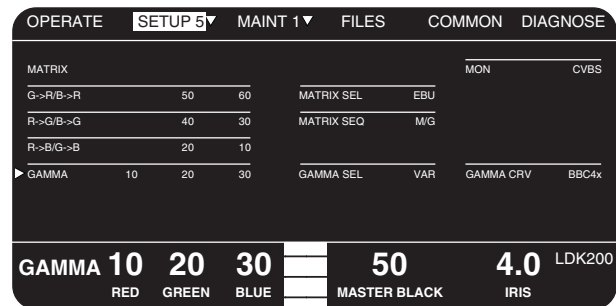

Matrix Control

The matrix control functions are found in setup menu 5. The MATRIX SEL switch function allows the selection of two variable matrix settings or six standard preset settings (B/W; 1:1; EBU; BBC; SKIN; RAI). If a variable setting is selected then a six point variable matrix can be set with the analogue controls.

The MATRIX SEQ switch function allows the sequence of the processing in the video path to be chosen to facilitate colour matching with different cameras. If M/G is selected then the matrix processing takes place before the gamma processing. With G/M selected the gamma processing takes place first.


Gamma Control

Gamma selection, the gamma standard preset curve selection and the variable gamma analogue controls are also found in setup menu 5. The gamma curve switch function allows one of the six different standard curves to be selected (ARD; CCIR; RAI; BBC04; BBC05; BBC06). When the gamma selection switch is set to position 1 then the selected standard curve is used unaltered. When the gamma selection switch is set to position 2 then the selected standard curve is used with a preset attenuation factor.

Setup menus - HD cameras


High definition cameras have a slightly different setup menu structure to enable the contours to be set differently for HDTV and SDTV outputs. When the setup button is pressed, two additional menus appear along the top for HDTV and SDTV setup. The setup menu itself consists now of four screens, each of which is numbered.

Setup 1 Menu

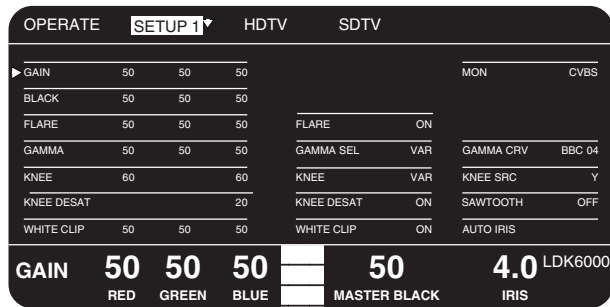


Setup 1 menu is similar to the Setup1 menu of SDTV cameras.

HDTV Menu

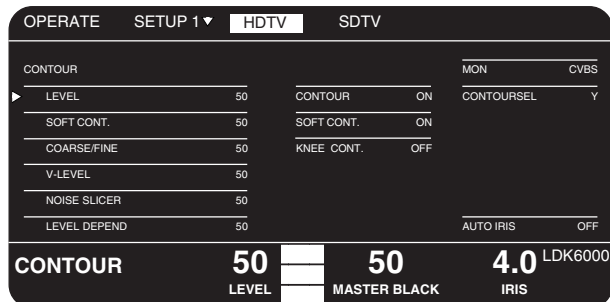


SDTV Menu

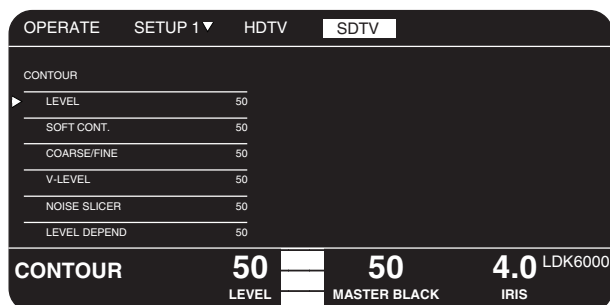

The HDTV and SDTV menus set the contours separately for the respective output.

Setup 2 Menu

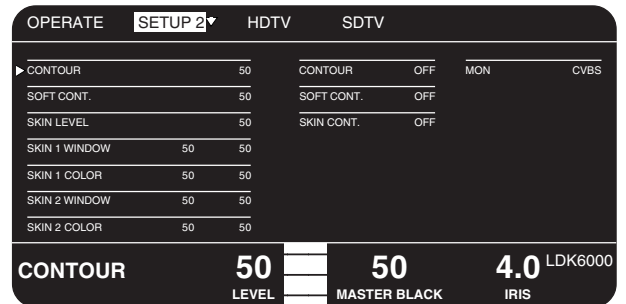


Skin Contours

The skin contour function in setup menu 2 selects an area of the picture containing flesh tones and sets the contour level in that area independently of the rest of the picture. Two different skin tones can be defined.

Switch on the skin contour function and select skin contour 1. When the skin auto function is selected a window appears in the viewfinder. This window must be pointed at the skin area that is to be selected. By pressing the skin auto function again the automatic selection process is started. The colour of the flesh tone is measured and stored in the skin 1 memory. The process can then be repeated for the second skin colour if required.

If the skin view selection is on when the automatic process is finished, the monitor displays a black and white picture with the selected flesh tones shown as a coloured area. The skin colour controls may be used as a fine adjustment in blue and red to select more closely the outline of the face. The skin window function is also a fine adjustment which can be used to restrict the selected area to one part of the picture even if, for example, the same flesh tones appear in the background. Once the area for the skin has been defined, the level of skin contour to be applied there (usually zero) is set.

Setup 3 Menu

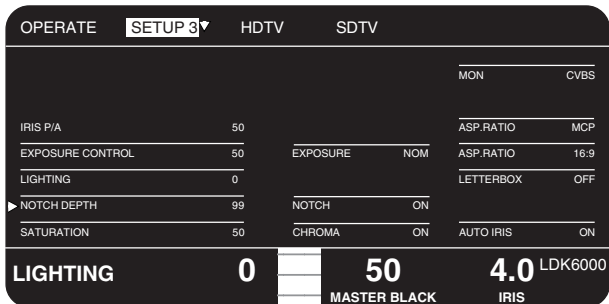

Auto Iris

Setup menu 3 has an Iris P/A analogue control. The value selected determines to what degree the auto iris circuit uses the Peak (00) video value or the Average (99) video value.

Exposure Control

The exposure control switch and analogue functions are also located in setup menu 3.

When the exposure time is set to variable to capture computer monitors pictures, the exposure control is used to eliminate the horizontal bar from the picture. The exposure control can handle computer monitors with frequencies between 51 and 103 Hz (625 lines) or 61 and 151 Hz (525 lines).

Lighting Control

The lighting control function can be found in setup menu 3. When the exposure time is set to 50 or 60Hz to handle HMI or TL lighting situations, the lighting control is used to correct frequency deviations of the lighting power supply. The correction range is approximately ± 3 Hz.


Notch Filter

The notch filter switch and analogue functions are located in setup menu 3. The notch filter in the encoded output (CVBS) can be switched on and its depth varied.

Letterbox

The letterbox aspect ratio switch function is located in setup menu 3. When selected, it provides a 16:9, 16:10, or 16:11 display.

Setup 4 Menu

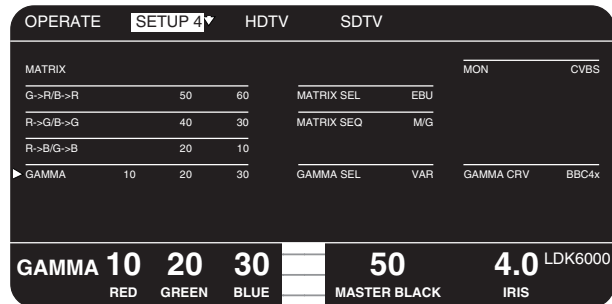

Matrix Control

The matrix control functions are found in setup menu 4. The MATRIX SEL switch function allows the selection of two variable matrix settings or six standard preset settings (B/W; 1:1; EBU; BBC; SKIN; RAI). If a variable setting is selected then a six point variable matrix can be set with the analogue controls.

The MATRIX SEQ switch function allows the sequence of the processing in the video path to be chosen to facilitate colour matching with different cameras. If M/G is selected then the matrix processing takes place before the gamma processing. With G/M selected the gamma processing takes place first.


Gamma Control

Gamma selection, the gamma standard preset curve selection and the variable gamma analogue controls are also found in setup menu 4. The gamma curve switch function allows one of the six different standard curves to be selected (ARD; CCIR; RAI; BBC04; BBC05; BBC06). When the gamma selection switch is set to position 1 then the selected standard curve is used unaltered. When the gamma selection switch is set to position 2 then the selected standard curve is used with a preset attenuation factor.

Maintenance menus

For a fully functioning LDK 20P camera with large lens adapter, the maintenance menu consists of three screens, each of which is numbered. The triangular arrow indicates that these screens can be selected sequentially by repeatedly pressing the maintenance menu selection switch. (For LDK6000 cameras, the MAINT 2 menu has an extra entry for setting the OCP contour controls.)

Maint 1 Menu

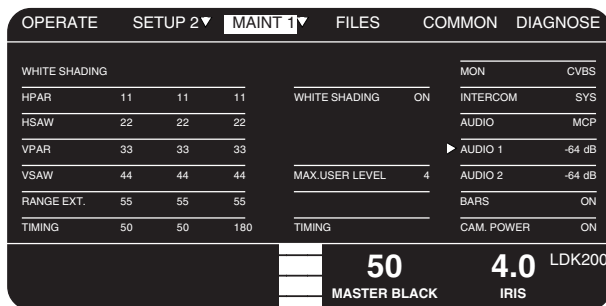


Audio Levels

Control of the levels of the two audio channels of the camera can be obtained by using an external dc control voltage connected to the base station or by using the switch functions located in the MAINT 1 menu.

When the audio control source function is switched to MCP, the dB levels of the audio 1 and audio 2 channels can be set individually using their respective pop-up menus.


Maint 2 Menu - for Large lens adapter

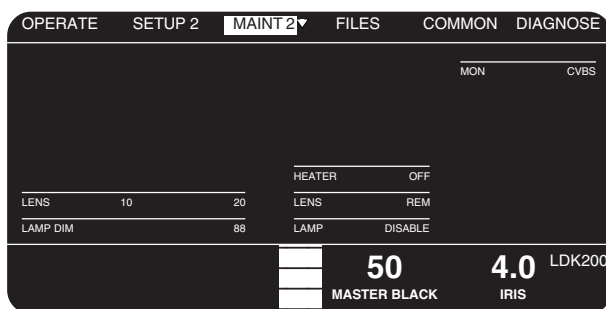

LLA Control

The MAINT 2 menu allows control of some of the functions of the large lens adapter if one is being used with the camera.

Maint 2 (or 3)¹ Menu

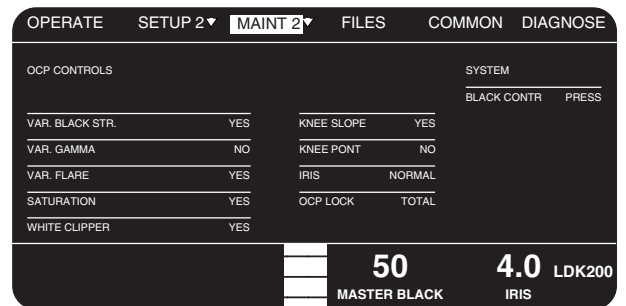

System Control


The MAINT 2 menu has a single system control, namely, black contrast. When set to PRESS the S-curve of film is simulated thereby improving the contrast impression. The variable black stretch control now follows this new range.

OCP Control

Different types of OCP can be used in the Series 9000 control system. The MAINT 2 menu allows some controls of the OCP to be disabled.

The OCP can also be locked totally. All the functions listed in the above menu may not be available on your OCP.

Maint 2 (or 3)¹ Menu - LDK6000

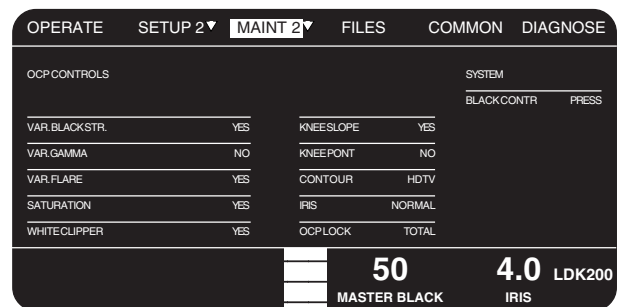

OCP Contour Control

The MAINT 2 menu for the LDK6000 has a contour control which sets the controls on the OCP to operate either for HDTV contours or for SDTV contours.

¹ If a Large Lens Adapter (LLA) is used, then this menu is called MAINT 3.


Files Menu

The FILES menu when selected, gives access to a set of submenus. These submenus handle the transfer, storage and recall of scene and standard files. When the files menu is selected, a new selection of menus appears across the top of the display. The modes that can be chosen now are:

- OPERATE** which brings you back to the main operations menu.
- TRANSFER** opens up a sub-menu which allows you to copy settings from the current camera to other cameras connected to the MCP data bus.
- VIEW 1 & 2** menus list the settings that are to be handled.
- STORE** allows a set of functions to be stored in a scene file or in a customer standard file or on a memocard.
- RECALL** allows stored sets of functions to be recalled.
- EXECUTE** is used to carry out the store, recall or transfer operation.

Camera Selection

When transferring values from one camera to another, only those values relevant to the type of camera are transferred. The cameras to which the values are to be transferred are selected by means of a pop-up menu.

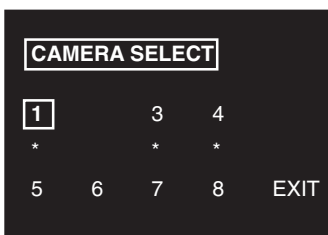

When a camera is selected to receive a transfer an asterisk appears under its number in the menu. Close the menu by selecting EXIT.

View

The view menu consists of one or two screens depending on the number of functions that are to be handled. Before storing or recalling files, select this menu option to see a list of the functions that will be affected by the operation.


Storing Settings

When storing settings a source must be selected, for example, the current settings, and a destination. The destination can be a scene file, or a memocard scene file. The scene file number is selected by means of a pop-up menu. A typical store procedure would be as follows:

1. Select a source, for example, Current Settings.
2. Select a destination.
This can be a scene file or a memocard file.
3. View the file that will be overwritten.
4. Press Execute to complete the store procedure.

Customer File

The MCP can be used to set the standard scene file to either the factory standard or a customer defined standard. The customer defined standard file is made on the MCP by means of the STORE menu. The standard file to be used by the OCP and MCP is toggled by the DEFINED BY function of the STORE menu. This function can be set to either FACTORY or CUSTOMER.

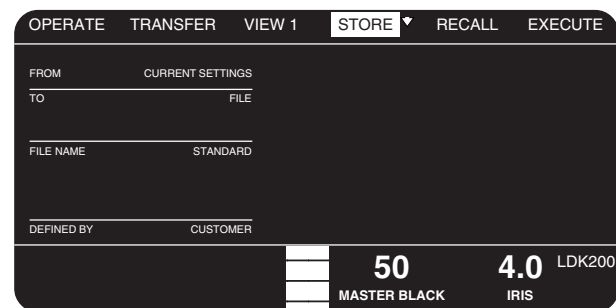


Recalling Settings


When recalling settings a source must be selected, for example, a scene file, or a memocard scene file, and a destination. The destination can be the current settings. The scene file number is selected by means of a pop-up menu.

Common

The common menu is a specific form of the OPERATE menu used to vary the operational functions common to the selected cameras. The common menu shows those functions which can be simultaneously varied on more than one camera.

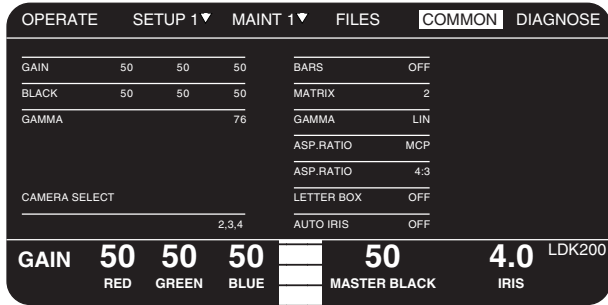


The cameras that are to be changed can be selected from a camera selection pop-up menu.

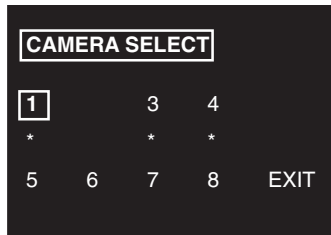

When a camera is selected for common control an asterix appears under its number in the menu. Close the menu by selecting EXIT. The numbers of the selected cameras appears at the bottom lefthand side of the MCP display.

Diagnose

The diagnose menu shows diagnostic information about the state of the system including software status.

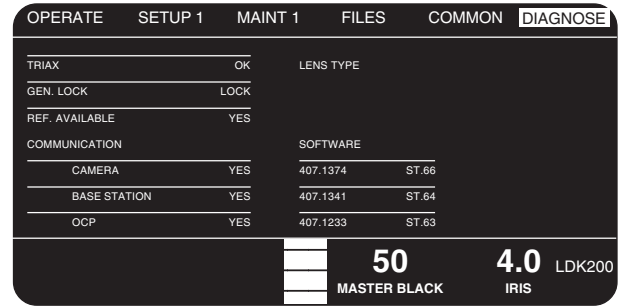

Control Functions for LDK 9

Analogue Control Functions

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Operate Menu</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Knee	Slope/Point	00/10
Contour	Level	50
Gamma	Master	76
Black Stretch	Master	50
<u>Setup Menu 1</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Flare	R/G/B	00/00/00
Gamma	R/Master/B	76/76/76
Knee Slope	R/Master/B	50/00/50
Knee Point	R/Master/B	50/10/50
White Clip	R/Master/B	60/60/60
<u>Setup Menu 2</u>		
Contour		
Level	Master	50
Soft Contour	Master	70
Coarse/fine	Master	25
V-Level	Master	50
Noise Slicer	Master	50
Level Depend	Master	50
<u>Setup Menu 3</u>		
Contour	Master	50
Soft Contour	Master	70
Skin Level	Skin 1and 2	00
Skin 1 Window	-	-
Skin 1 Colour	-	-
Skin 2 Window	-	-
Skin 2 Colour	-	-
<u>Setup Menu 4</u>		
Notch Depth	Master	99
Exposure Control	-	-
Lighting	-	0
Saturation	Master	50
<u>Maintenance Menu 1</u>		
White Shading		
H. Saw	-	-
H. Par	-	-
V. Saw	-	-
V. Saw	-	-
Timing	-	-
Lens	-	-

The master black value stored in the factory standard file is 50. The iris value is expressed as an F-stop. The master black and iris controls are always available.

Switch Control Functions

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Operate Menu</u>		
Colour Temp.	5-positions	3200 K
Auto Black	On / Off	-
Knee	Off / Auto / Var	Var
Contour	Off / Var	Var
Gamma	1, 2, Var, Lin	1
Black Stretch	On / Off	Off
Monitoring	11-positions	CVBS
Bars	On / Off	Off
Exposure	7-positions	Nom
Filter	1(clear) - 8(cap)	1 (clear)
Gain	- / 0 / + / ++	0
Auto Iris	On / Off	On
<u>Setup Menu 1</u>		
Monitoring	11-positions	CVBS
Matrix	1 / 2	2
Gamma	1, 2, Var, Lin	1
Knee	Off / Auto / Var	Var
Sawtooth	On / Off	Off
White Clipper	On / Off	On
<u>Setup Menu 2</u>		
Contour	Off / Var	Var
Soft Contour	On / Off	On
Monitoring	11-positions	CVBS
Auto Iris	On / Off	On
<u>Setup Menu 3</u>		
Contour	Off / Var	Var
Soft Contour	On / Off	On
Skin Contour	Off / 1 / 2 / 1+2	Off
Monitoring	11-positions	CVBS
<u>Setup Menu 4</u>		
Monitoring	11-positions	CVBS
Notch	On / Off	On
Exposure	6-positions	Nom.
Letterbox	On / Off	Off
Chroma	On / Off	On
<u>Maintenance Menu 1</u>		
White Shading	On / Off	On
Timing	On / Lock	-
Lens	Local / Remote	-
Monitoring	11-positions	CVBS
Bars	On / Off	Off
Intercom	Syst / Iso	-
Audio	MCP / External	-
Audio 1	8-positions	-
Audio 2	8-positions	-
Cam. Power	On / Off	-

A pop-up menu appears when there are more than two selections available.

Control Functions for LDK 9P

Analogue Control Functions

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Operate Menu</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Knee	Slope/Point	00/10
Contour	Level	50
Gamma	Master	76
Black Stretch	Master	50
<u>Setup Menu 1</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Flare	R/G/B	00/00/00
Gamma	R/Master/B	76/76/76
Knee Slope	R/Master/B	50/00/50
Knee Point	R/Master/B	50/10/50
White Clip	R/Master/B	60/60/60
<u>Setup Menu 2</u>		
Contour		
Level	Master	50
Soft Contour	Master	70
Coarse/fine	Master	25
V-Level	Master	50
Noise Slicer	Master	50
Level Depend	Master	50
<u>Setup Menu 3</u>		
Contour	Master	50
Soft Contour	Master	50
Skin Level	Skin 1 and 2	00
Skin 1 Window	-	-
Skin 1 Colour	-	-
Skin 2 Window	-	-
Skin 2 Colour	-	-
<u>Setup Menu 4</u>		
Notch Depth	Master	99
Exposure Control	-	-
Lighting	-	0
Saturation	Master	50
<u>Maintenance Menu 1</u>		
White Shading		
H. Saw	-	-
H. Par	-	-
V. Saw	-	-
V. Saw	-	-
Timing	-	-
Lens	-	-

The master black value stored in the factory standard file is 50. The iris value is expressed as an F-stop. The master black and iris controls are always available.

Switch Control Functions

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Operate Menu</u>		
Colour Temp.	5-positions	3200 K
Auto Black	On / Off	-
Knee	Off / Auto / Var	Var
Contour	Off / Var	Var
Gamma	1, 2, Var, Lin	1
Black Stretch	On / Off	Off
Monitoring	11-positions	CVBS
Bars	On / Off	Off
Exposure	7-positions	Nom
Filter	1(clear) - 4(cap)	1 (clear)
Gain	- / 0 / + / ++	0
Auto Iris	On / Off	On
<u>Setup Menu 1</u>		
Monitoring	11-positions	CVBS
Matrix	1 / 2	2
Gamma	1, 2, Var, Lin	1
Knee	Off / Auto / Var	Var
Sawtooth	On / Off	Off
White Clipper	On / Off	On
<u>Setup Menu 2</u>		
Contour	Off / Var	Var
Soft Contour	On / Off	On
Monitoring	11-positions	CVBS
Auto Iris	On / Off	On
<u>Setup Menu 3</u>		
Contour	Off / Var	Var
Soft Contour	On / Off	On
Skin Contour	On / Off	On
Monitoring	11-positions	CVBS
<u>Setup Menu 4</u>		
Monitoring	11-positions	CVBS
Notch	On / Off	On
Exposure	6-positions	Nom.
Letterbox	On / Off	Off
Chroma	On / Off	On
<u>Maintenance Menu 1</u>		
Timing	On / Lock	-
Lens	Local / Remote	-
Monitoring	11-positions	CVBS
Bars	On / Off	Off
Intercom	Syst / Iso	-
Audio	MCP / External	-
Audio 1	8-positions	-
Audio 2	8-positions	-
Cam. Power	On / Off	-

A pop-up menu appears when there are more than two selections available.

Control Functions for LDK 9PW

Analogue Control Functions

Functions	Parameters	Factory File
<u>Operate Menu</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Knee	Slope/Point	00/10
Contour	Level	50
Gamma	Master	76
Black Stretch	Master	50
<u>Setup Menu 1</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Flare	R/G/B	00/00/00
Gamma	R/Master/B	76/76/76
Knee Slope	R/Master/B	50/00/50
Knee Point	R/Master/B	50/10/50
White Clip	R/Master/B	60/60/60
<u>Setup Menu 2</u>		
Contour		
Level	Master	50
Soft Contour	Master	70
Coarse/fine	Master	25
V-Level	Master	50
Noise Slicer	Master	50
Level Depend	Master	50
<u>Setup Menu 3</u>		
Contour	Master	50
Soft Contour	Master	50
Skin Level	Skin 1 and 2	00
Skin 1 Window	-	-
Skin 1 Colour	-	-
Skin 2 Window	-	-
Skin 2 Colour	-	-
<u>Setup Menu 4</u>		
Notch Depth	Master	99
Exposure Control	-	-
Lighting	-	0
Saturation	Master	50
<u>Maintenance Menu 1</u>		
White Shading		
H. Saw	-	-
H. Par	-	-
V. Saw	-	-
V. Saw	-	-
Timing	-	-
Lens	-	-

The master black value stored in the factory standard file is 50. The iris value is expressed as an F-stop. The master black and iris controls are always available.

Switch Control Functions

Functions	Parameters	Factory File
<u>Operate Menu</u>		
Colour Temp.	5-positions	3200 K
Auto Black	On / Off	-
Knee	Off / Auto / Var	Var
Contour	Off / Var	Var
Gamma	1, 2, Var, Lin	1
Black Stretch	On / Off	Off
Monitoring	11-positions	CVBS
Bars	On / Off	Off
Exposure	7-positions	Nom
Filter	1(clear) - 4(cap)	1 (clear)
Gain	- / 0 / + / ++	0
Auto Iris	On / Off	On
<u>Setup Menu 1</u>		
Monitoring	11-positions	CVBS
Matrix	1 / 2	2
Gamma	1, 2, Var, Lin	1
Knee	Off / Auto / Var	Var
Sawtooth	On / Off	Off
White Clipper	On / Off	On
<u>Setup Menu 2</u>		
Contour	Off / Var	Var
Soft Contour	On / Off	On
Monitoring	11-positions	CVBS
Auto Iris	On / Off	On
<u>Setup Menu 3</u>		
Contour	Off / Var	Var
Soft Contour	On / Off	On
Skin Contour	On / Off	On
Monitoring	11-positions	CVBS
<u>Setup Menu 4</u>		
Monitoring	11-positions	CVBS
Notch	On / Off	On
Exposure	6-positions	Nom.
Aspect Ratio	16:9 / 4:3	4:3
Letterbox	On / Off	Off
Chroma	On / Off	On
<u>Maintenance Menu 1</u>		
Timing	On / Lock	-
Lens	Local / Remote	-
Monitoring	11-positions	CVBS
Bars	On / Off	Off
Intercom	Syst / Iso	-
Audio	MCP / External	-
Audio 1	8-positions	-
Audio 2	8-positions	-
Cam. Power	On / Off	-

A pop-up menu appears when there are more than two selections available.

Control Functions for LDK 910

Analogue Control Functions

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Operate Menu</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Contour	Level	50
Black Stretch	Master	50
<u>Setup Menu</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Contour	Level	50
Notch Depth	Master	99
Saturation	Master	50
<u>Maintenance Menu</u>		
Timing	-	-

The master black value stored in the factory standard file is 50. The iris value is expressed as an F-stop. The master black and iris controls are always available.

Switch Control Functions

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Operate Menu</u>		
Colour Temp.	5-positions	3200 K
Auto Black	On / Off	-
Knee	Fix / Off / Auto	Auto
Contour	Min / Norm / Extra / Var	Var
Gamma	1 / 2	1
Black Stretch	On / Off	Off
Monitoring	11-positions	CVBS
Bars	On / Off	Off
Exposure	5-positions	Nom
Filter	1(clear) - 4(cap)	1
Gain	- / 0 / + / ++	0
Auto Iris	On / Off	On
<u>Setup Menu</u>		
Knee	Fix / Off / Auto	Auto
Contour	Min / Norm / Var	Var
Gamma	1 / 2	1
Monitoring	11-positions	CVBS
Auto Iris	On / Off	On
Sawtooth	On / Off	Off
Notch	On / Off	On
Chroma	On / Off	On
<u>Maintenance Menu</u>		
Monitoring	11-positions	CVBS
Bars	On / Off	Off
Intercom	Syst / Iso	-
Timing	On / Lock	-

A pop-up menu appears when there are more than two selections available.

Control Functions for LDK 93

Analogue Control Functions

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Operate Menu</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Contour	Level	50
Black Stretch	Master	50
<u>Setup Menu</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Contour	Level	50
Notch Depth	Master	99
Saturation	Master	50
<u>Maintenance Menu</u>		
Timing	-	-

The master black value stored in the factory standard file is 50. The iris value is expressed as an F-stop. The master black and iris controls are always available.

Switch Control Functions

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Operate Menu</u>		
Colour Temp.	5-positions	3200 K
Auto Black	On / Off	-
Knee	Fix / Off / Auto	Auto
Contour	Min / Norm / Extra / Var	Var
Gamma	1 / 2	1
Black Stretch	On / Off	Off
Monitoring	11-positions	CVBS
Bars	On / Off	Off
Exposure	5-positions	Nom
Filter	1 (clear) - 4 (cap)	1 (clear)
Gain	- / 0 / + / ++	0
Auto Iris	On / Off	On
<u>Setup Menu</u>		
Knee	Fix / Off / Auto	Auto
Contour	Min / Norm / Var	Var
Gamma	1 / 2	1
Monitoring	11-positions	CVBS
Auto Iris	On / Off	On
Sawtooth	On / Off	Off
Notch	On / Off	On
Chroma	On / Off	On
<u>Maintenance Menu</u>		
Monitoring	11-positions	CVBS
Bars	On / Off	Off
Intercom	Syst / Iso	-
Timing	On / Lock	-

A pop-up menu appears when there are more than two selections available.

Control Functions for LDK 93W

Analogue Control Functions

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Operate Menu</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Contour	Level	50
Black Stretch	Master	50
<u>Setup Menu</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Contour	Level	50
Notch Depth	Master	99
Saturation	Master	50
<u>Maintenance Menu</u>		
Timing	-	-

The master black value stored in the factory standard file is 50. The iris value is expressed as an F-stop. The master black and iris controls are always available.

Switch Control Functions

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Operate Menu</u>		
Colour Temp.	5-positions	3200 K
Auto Black	On / Off	-
Knee	Fix / Off / Auto	Auto
Contour	Min / Norm / Extra / Var	Var
Gamma	1 / 2	1
Black Stretch	On / Off	Off
Monitoring	11-positions	CVBS
Bars	On / Off	Off
Exposure	5-positions	Nom
Filter	1(clear) - 4(cap)	1 (clear)
Gain	- / 0 / + / ++	0
Auto Iris	On / Off	On
<u>Setup Menu</u>		
Knee	Fix / Off / Auto	Auto
Contour	Min / Norm / Var	Var
Gamma	1 / 2	1
Monitoring	11-positions	CVBS
Auto Iris	On / Off	On
Sawtooth	On / Off	Off
Notch	On / Off	On
Chroma	On / Off	On
Aspect Ratio	16:9 / 4:3	4:3
Letterbox	On / Off	Off
<u>Maintenance Menu</u>		
Monitoring	11-positions	CVBS
Bars	On / Off	Off
Intercom	Syst / Iso	-
Timing	On / Lock	-

A pop-up menu appears when there are more than two selections available.

Control Functions for LDK 91

Analogue Control Functions

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Operate Menu</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Contour	Level	50
Black Stretch	Master	50
<u>Setup Menu</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Contour	Level	50
Notch Depth	Master	99
Saturation	Master	50
<u>Maintenance Menu</u>		
Timing	-	-

The master black value stored in the factory standard file is 50. The iris value is expressed as an F-stop. The master black and iris controls are always available.

Switch Control Functions

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Operate Menu</u>		
Colour Temp.	5-positions	3200 K
Auto Black	On / Off	-
Knee	Fix / Off / Auto	Auto
Contour	Min / Norm / Extra / Var	Var
Gamma	1 / 2	1
Black Stretch	On / Off	Off
Monitoring	11-positions	CVBS
Bars	On / Off	Off
Exposure	5-positions	Nom
Gain	- / 0 / + / ++	0
Auto Iris	On / Off	On
<u>Setup Menu</u>		
Knee	Fix / Off / Auto	Auto
Contour	Min / Norm / Var	Var
Gamma	1 / 2	1
Monitoring	11-positions	CVBS
Auto Iris	On / Off	On
Sawtooth	On / Off	Off
Notch	On / Off	On
Chroma	On / Off	On
<u>Maintenance Menu</u>		
Monitoring	11-positions	CVBS
Bars	On / Off	Off
Intercom	Syst / Iso	-
Timing	On / Lock	-

A pop-up menu appears when there are more than two selections available.

Control Functions for LDK 9000

Analogue Control Functions

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Operate Menu</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Knee Point	Master	30
Knee Slope	Master	30
Gamma	R/Master/B	33/33/33
Black Stretch	Master	00
<u>Contour</u>		
Level	Master	50
B/W Balance	Master	50
Noise Slicer	Master	30
<u>Setup Menu 1</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Knee Point	Master	30
Knee Slope	Master	30
Gamma	R/Master/B	33/33/33
Lighting	-	00
Flare	R/G/B	00/00/00
<u>Setup Menu 2</u>		
<u>Contour</u>		
Level	Master	50
H/V Balance	Master	50
B/W Balance	Master	50
Coarse/fine	Master	50
Noise Slicer	Master	30
Level Depend	Master	50
<u>Maintenance Menu 1</u>		
<u>White Shading</u>		
H. Saw	R/G/B	50/50/50
H. Par	R/G/B	50/50/50
V. Saw	R/G/B	50/50/50
V. Saw	R/G/B	50/50/50
Zoom	Master	50

The master black value stored in the factory standard file is 50. The focus value stored in the factory standard file is 50. The iris value is expressed as an F-stop. The master black, focus and iris controls are always available.

Switch Control Functions

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Operate Menu</u>		
Colour Temp.	5-positions	3200 K
	AW1	3200K
	AW2	5600K
Auto White	On / Off	-
Auto Black	On / Off	-
Knee	Off / Auto / Var / Hold	Auto
Contour	Off / On / Var	Var
Gamma	Lin / 1 / 2 / Var	1
Black Stretch	On / Off	Off
Monitoring	11-positions	Y
Bars	On / Off	Off
Exposure	6-positions	Nom
Filter I	1 (clear) - 4	1 (clear)
Filter II	1 - 4 (cap)	1 (clear)
Gain	- / 0 / + / ++	0
Auto Iris	On / Off	Off
<u>Setup Menu 1</u>		
Knee	Off / Auto / Var / Hold	Auto
Gamma	Lin / 1 / 2 / Var	1
Monitoring	11-positions	Y
Monitoring VF	11-positions	Y
Sawtooth	Off / 1 / 2 / 3	Off
Matrix	1 / 2	2
Flare	On / Off	On
<u>Setup Menu 2</u>		
Contour	Off / On / Var	Var
Contour SRC	R / G / Y	Y
Monitoring	11-positions	Y
Monitoring VF	11-positions	Y
Auto Iris	On / Off	Off
<u>Maintenance Menu 1</u>		
Monitoring	11-positions	Y
Monitoring VF	11-positions	Y
Bars	On / Off	Off
White Shading	On / Off	On
Intercom	Syst / Iso	System
Audio	MCP / External	MCP
Audio 1	8-positions	-64dB
Audio 2	8-positions	-64dB
Audio Filter	Off / 1 / 1+2 / 3	Off
Lens Focus	Local / Remote	Local
Lens Zoom	Local / Remote	Local
Heater	On / Off	-

A pop-up menu appears when there are more than two selections available.

Control Functions for LDK 10

Analogue Control Functions

Functions	Parameters	Factory File
<u>Operate Menu</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Knee	Slope/Point	00/10
Contour	Level	50
Gamma	Master	76
Black Stretch	Master	50
<u>Setup Menu 1</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Flare	R/G/B	00/00/00
Gamma	R/Master/B	76/76/76
Knee Slope	R/Master/B	50/00/50
Knee Point	R/Master/B	50/10/50
White Clip	R/Master/B	60/60/60
<u>Setup Menu 2</u>		
Contour		
Level	Master	50
Soft Contour	Master	70
Coarse/fine	Master	25
V-Level	Master	50
Noise Slicer	Master	50
Level Depend	Master	50
<u>Setup Menu 3</u>		
Contour		
Soft Contour	Master	70
Skin Level	Skin 1and 2	00
Skin 1 Window	-	-
Skin 1 Colour	-	-
Skin 2 Window	-	-
Skin 2 Colour	-	-
<u>Setup Menu 4</u>		
Notch Depth		
Exposure Control	Master	99
Lighting	-	0
Saturation	Master	50
<u>Maintenance Menu 1</u>		
White Shading		
H. Saw	-	-
H. Par	-	-
V. Saw	-	-
V. Saw	-	-
Timing	-	-
Lens	-	-

The master black value stored in the factory standard file is 50. The iris value is expressed as an F-stop. The master black and iris controls are always available.

Switch Control Functions

Functions	Parameters	Factory File
<u>Operate Menu</u>		
Colour Temp.	5-positions	3200 K
Auto Black	On / Off	-
Knee	Off / Auto / Var	Var
Contour	Off / Var	Var
Gamma	1, 2, Var, Lin	1
Black Stretch	On / Off	Off
Monitoring	11-positions	CVBS
Bars	On / Off	Off
Exposure	7-positions	Nom
Filter	1(clear) - 7(cap)	1 (clear)
Gain	- / 0 / + / ++	0
Auto Iris	On / Off	On
<u>Setup Menu 1</u>		
Flare		
Monitoring	11-positions	CVBS
Matrix	1 / 2	2
Gamma	1, 2, Var, Lin	1
Knee	Off / Auto / Var	Var
Sawtooth	On / Off	Off
White Clipper	On / Off	On
Auto Iris	On / Off	On
<u>Setup Menu 2</u>		
Contour		
Soft Contour	On / Off	On
Monitoring	11-positions	CVBS
Auto Iris	On / Off	On
<u>Setup Menu 3</u>		
Contour		
Soft Contour	On / Off	On
Skin Contour	Off / 1 / 2 / 1+2	Off
Monitoring	11-positions	CVBS
<u>Setup Menu 4</u>		
Monitoring		
Asp. Ratio	MCP / Ext.	-
Asp. Ratio	16 : 9 / 4 : 3	-
Notch	On / Off	On
Exposure	6-positions	Nom.
Letterbox	On / Off	Off
Chroma	On / Off	On
Hor. Scan	Norm / Rev	-
<u>Maintenance Menu 1</u>		
White Shading		
Timing	On / Lock	-
Lens	Local / Remote	-
On air lights	Dis / Ena	-
Monitoring	11-positions	CVBS
Bars	On / Off	Off
Intercom	Syst / Iso	-
Audio	MCP / External	-
Audio 1	8-positions	-
Audio 2	8-positions	-
Cam. Power	On / Off	-

A pop-up menu appears when there are more than two selections available.

Control Functions for LDK 10P

Analogue Control Functions

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Operate Menu</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Knee	Slope/Point	00/10
Contour	Level	50
Gamma	Master	76
Black Stretch	Master	50
<u>Setup Menu 1</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Flare	R/G/B	00/00/00
Gamma	R/Master/B	76/76/76
Knee Slope	R/Master/B	50/00/50
Knee Point	R/Master/B	50/10/50
White Clip	R/Master/B	60/60/60
<u>Setup Menu 2</u>		
Contour		
Level	Master	50
Soft Contour	Master	70
Coarse/fine	Master	25
V-Level	Master	50
Noise Slicer	Master	50
Level Depend	Master	50
<u>Setup Menu 3</u>		
Contour	Master	50
Soft Contour	Master	70
Skin Level	Skin 1 and 2	00
Skin 1 Window	-	-
Skin 1 Colour	-	-
Skin 2 Window	-	-
Skin 2 Colour	-	-
<u>Setup Menu 4</u>		
Notch Depth	Master	99
Exposure Control	-	-
Lighting	-	0
Saturation	Master	50
<u>Maintenance Menu 1</u>		
Timing	-	-
Lens	-	-

The master black value stored in the factory standard file is 50. The iris value is expressed as an F-stop. The master black and iris controls are always available.

Switch Control Functions

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Operate Menu</u>		
Colour Temp.	5-positions	3200 K
Auto Black	On / Off	-
Knee	Off / Auto / Var	Var
Contour	Off / Var	Var
Gamma	1, 2, Var, Lin	1
Black Stretch	On / Off	Off
Monitoring	11-positions	CVBS
Bars	On / Off	Off
Exposure	7-positions	Nom
Filter	1(clear) - 7(cap)	1 (clear)
Gain	- / 0 / + / ++	0
Auto Iris	On / Off	On
<u>Setup Menu 1</u>		
Monitoring	11-positions	CVBS
Flare	On / Off	On
Matrix	1 / 2	2
Gamma	1, 2, Var, Lin	1
Knee	Off / Auto / Var	Var
Sawtooth	On / Off	Off
White Clipper	On / Off	On
Auto Iris	On / Off	On
<u>Setup Menu 2</u>		
Contour	Off / Var	Var
Soft Contour	On / Off	On
Monitoring	11-positions	CVBS
Auto Iris	On / Off	On
<u>Setup Menu 3</u>		
Contour	Off / Var	Var
Soft Contour	On / Off	On
Skin Contour	Off / 1 / 2 / 1+2	Off
Monitoring	11-positions	CVBS
<u>Setup Menu 4</u>		
Monitoring	11-positions	CVBS
Asp. Ratio	MCP / Ext.	-
Asp. Ratio	16 : 9 / 4 : 3	-
Notch	On / Off	On
Exposure	8-positions	Nom.
Letterbox	On / Off	Off
Chroma	On / Off	On
<u>Maintenance Menu 1</u>		
White Shading	On / Off	On
Max User	Level 0 --- 4	-
Timing	On / Lock	-
Lens	Local / Remote	-
Monitoring	11-positions	CVBS
Bars	On / Off	Off
Intercom	Syst / Iso	-
Audio	MCP / External	-
Audio 1	8-positions	-
Audio 2	8-positions	-
Cam. Power	On / Off	-

A pop-up menu appears when there are more than two selections available.

Control Functions for LDK 20P

Analogue Control Functions

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Operate Menu</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Knee	Slope/Point	00/28
Contour	Level	50
Gamma	Master	76
Black Stretch	Master	50
<u>Setup Menu 1</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Flare	R/G/B	00/00/00
Gamma	R/Master/B	76/76/76
Knee	Slope/Point	00/28
Knee Desaturation	Level	99
White Clip	R/Master/B	60/60/60
<u>Setup Menu 2</u>		
Contour		
Level	Master	50
Soft Contour	Master	70
Coarse/fine	Master	25
V-Level	Master	50
Noise Slicer	Master	50
Level Depend	Master	50
<u>Setup Menu 3</u>		
Contour	Master	50
Soft Contour	Master	70
Skin Level	Skin 1and 2	00
Skin 1 Window	R/B	-
Skin 1 Colour	R/B	-
Skin 2 Window	R/B	-
Skin 2 Colour	R/B	-
<u>Setup Menu 4</u>		
Iris Peak/average	Level	-
Exposure Control	-	-
Lighting	-	0
Notch Depth	Master	99
Saturation	Master	50
<u>Setup Menu 5</u>		
Matrix		
G->R/B->R	-	-
R->G/B->G	-	-
R->B/G->B	-	-
Gamma	R/Master/B	76/76/76

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Maintenance Menu 1</u>		
White Shading		
H. Saw	-	-
H. Par	-	-
V. Saw	-	-
V. Par	-	-
Range Extender	R/G/B	-
Timing	HPh/Fine/Coarse	-
<u>Maintenance Menu 3</u>		
Lens	Zoom/Focus	-
Lamp Dim	Level	88

The master black value stored in the factory standard file is 50. The iris value is expressed as an F-stop. The master black and iris controls are always available.

Switch Control Functions

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Operate Menu</u>		
Colour Temp.	5-positions	3200 K
Auto Black	On / Off	-
Knee	Off / Auto / Var	Var
Contour	Off / Var	Var
Gamma	1 / 2 / Var / Lin	1
Black Stretch	On / Off	Off
Monitoring	11-positions	CVBS
Bars	On / Off	Off
Exposure	7-positions	Nom
Filter	1(clear) - 7(cap)	1 (clear)
Gain	- / 0 / + / ++	0
Auto Iris	On / Off	On
<u>Setup Menu 1</u>		
Monitoring	11-positions	CVBS
Flare	On / Auto	On
Gamma	1 / 2 / Var / Lin	1
Gamma curve	6-positions	ARD
Knee	Off / Auto / Var	Var
Knee source	Y / NAM	Y
Knee desaturation	On / Off	Off
Sawtooth	On / Off	Off
White Clipper	On / Off	On
Auto Iris	On / Off	On
<u>Setup Menu 2</u>		
Contour	Off / Var	Var
Soft Contour	On / Off	On
Contour selection	Y/R/G/R+G	Y
Monitoring	11-positions	CVBS
Auto Iris	On / Off	On
<u>Setup Menu 3</u>		
Contour	Off / Var	Var
Soft Contour	On / Off	On
Skin Contour	Off / 1 / 2 / 1+2	Off
Monitoring	11-positions	CVBS
<u>Setup Menu 4</u>		
Monitoring	11-positions	CVBS
Asp. Ratio	MCP / Ext.	-
Asp. Ratio	16 : 9 / 4 : 3	-
Letterbox	On / Off	Off
Exposure	8-positions	Nom.
Notch	On / Off	On
Chroma	On / Off	On
Auto Iris	On / Off	On

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Setup Menu 5</u>		
Monitoring	11-positions	CVBS
Matrix selection	8-positions	Skin
Matrix sequence	M/G - G/M	M/G
Gamma	1 / 2 / Var / Lin	1
Gamma curve	6-positions	ARD
<u>Maintenance Menu 1</u>		
White Shading	On / Off	On
Max User	Level 0 --- 4	-
Timing	On / Lock	-
Lens	Local / Remote	-
Monitoring	11-positions	CVBS
Bars	On / Off	Off
Intercom	Syst / Iso	-
Audio	MCP / External	-
Audio 1	8-positions	-
Audio 2	8-positions	-
Cam. Power	On / Off	-
<u>Maintenance Menu 2</u>		
<u>OCP Controls</u>		
Variable Black Str.		Yes
Variable Gamma		Yes
Variable Flare		Yes
Satuation		Yes
White Clipper		Yes
Knee slope		Yes
Knee point		Yes
Iris		Normal
OCP lock		Total
<u>System</u>		
Black contrast		Strch
<u>Maintenance Menu 3 (LLA)</u>		
Monitoring	11-positions	CVBS
Heater	On / Off	Off
Lens	Local / Remote	Rem
Lamp	Enable / Disable	Disable

A pop-up menu appears when there are more than two selections available.

Control Functions for LDK 23HS

Analogue Control Functions

Functions	Parameters	Factory File
<u>Operate Menu</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Knee	Slope/Point	00/10
Contour	Level	50
Gamma	Master	76
Black Stretch	Master	50
<u>Setup Menu 1</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Flare	R/G/B	15/15/15
Gamma	R/Master/B	76/76/76
Knee Slope	R/Master/B	50/00/50
Knee Point	R/Master/B	50/10/50
White Clip	Master	56
<u>Setup Menu 2</u>		
Contour		
Level	Master	50
Soft Contour	Master	70
Coarse/fine	Master	25
V-Level	Master	50
Noise Slicer	Master	06
Level Depend	Master	50
<u>Setup Menu 3</u>		
Exposure control	-	151
Saturation	-	50
<u>Maintenance Menu 1</u>		
White Shading		
H. Saw	R/G/B	-
H. Par	R/G/B	-
V. Saw	R/G/B	-
V. Saw	R/G/B	-
Range ext	R/G/B	-
Timing	HPhase/Fine/Course	-

The master black value stored in the factory standard file is 50. The iris value is expressed as an F-stop. The master black and iris controls are always available.

Switch Control Functions

Functions	Parameters	Factory File
<u>Operate Menu</u>		
Colour Temp.	5-positions	3200 K
Auto Black	On / Off	-
Knee	Off / Auto / Var	Var
Contour	Off / Var	Var
Gamma	1, 2, Var, Lin	1
Black Stretch	On / Off	Off
Monitoring	11-positions	CVBS
Bars	On / Off	Off
Exposure	5-positions	Nom
Filter	1(clear) - 7(cap)	1 (clear)
Gain	- / 0 / + / ++	0
Auto Iris	On / Off	On
<u>Setup Menu 1</u>		
Flare	On / Off	On
Monitoring	11-positions	CVBS
Matrix	1 / 2	2
Gamma	1, 2, Var, Lin	1
Knee	Off / Auto / Var	Var
Sawtooth	On / Off	Off
White Clipper	On / Off	On
Auto Iris	On / Off	On
<u>Setup Menu 2</u>		
Contour	Off / Var	Var
Soft Contour	On / Off	On
Monitoring	11-positions	CVBS
Contour sel	R / Y / G / R+G	Y
Auto Iris	On / Off	On
<u>Setup Menu 3</u>		
Combine	On / Off	On
Monitoring	11-positions	CVBS
Asp. Ratio	MCP / Ext.	-
Asp. Ratio	16 : 9 / 4 : 3	-
Exposure	5-positions	Nom.
Auto-Light	On / Off	On
Notch	On / Off	Off
Chroma	On / Off	On
<u>Maintenance Menu 1</u>		
White Shading	On / Off	On
Max. User Level	0..4	-
Timing	On / Lock	-
Monitoring	11-positions	CVBS
Intercom	Syst / Iso	-
Audio	MCP / External	-
Audio 1	8-positions	-
Audio 2	8-positions	-
Bars	On / Off	Off
Cam. Power	On / Off	-

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Maintenance Menu 2</u>		
OCP Controls		
	Variable Black Str.	Yes
	Variable Gamma	Yes
	Variable Flare	Yes
	Satuation	Yes
	White Clipper	Yes
	Knee slope	Yes
	Knee point	Yes
	Iris	Normal
	OCP lock	Total
System		
	Black contrast	Strch
<u>Maintenance Menu 3 (LLA)</u>		
Monitoring	11-positions	CVBS
Heater	On / Off	Off
Lens	Local / Remote	Rem
Lamp	Enable / Disable	Disable

A pop-up menu appears when there are more than two selections available.

Control Functions for LDK 23HS mkII

Analogue Control Functions

Functions	Parameters	Factory File
<u>Operate Menu</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Knee	Slope/Point	00/10
Contour	Level	50
Gamma	Master	76
Black Stretch	Master	50
<u>Setup Menu 1</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Flare	R/G/B	15/15/15
Gamma	R/Master/B	76/76/76
Knee Slope	R/Master/B	50/00/50
Knee Point	R/Master/B	50/10/50
White Clip	Master	56
<u>Setup Menu 2</u>		
Contour		
Level	Master	50
Soft Contour	Master	70
Coarse/fine	Master	25
V-Level	Master	50
Noise Slicer	Master	06
Level Depend	Master	50
<u>Setup Menu 3</u>		
Exposure control	-	151
Saturation	-	50
<u>Maintenance Menu 1</u>		
White Shading		
H. Saw	R/G/B	-
H. Par	R/G/B	-
V. Saw	R/G/B	-
V. Saw	R/G/B	-
Range ext	R/G/B	-
Timing	HPhase/Fine/Course	-

The master black value stored in the factory standard file is 50. The iris value is expressed as an F-stop. The master black and iris controls are always available.

Switch Control Functions

Functions	Parameters	Factory File
<u>Operate Menu</u>		
Colour Temp.	5-positions	3200 K
Auto Black	On / Off	-
Knee	Off / Auto / Var	Var
Contour	Off / Var	Var
Gamma	1, 2, Var, Lin	1
Black Stretch	On / Off	Off
Monitoring	11-positions	CVBS
Bars	On / Off	Off
Exposure	5-positions	Nom
Filter	1(clear) - 7(cap)	1 (clear)
Gain	- / 0 / + / ++	0
Auto Iris	On / Off	On
<u>Setup Menu 1</u>		
Flare	On / Off	On
Monitoring	11-positions	CVBS
Matrix	1 / 2	2
Gamma	1, 2, Var, Lin	1
Knee	Off / Auto / Var	Var
Sawtooth	On / Off	Off
White Clipper	On / Off	On
Auto Iris	On / Off	On
<u>Setup Menu 2</u>		
Contour	Off / Var	Var
Soft Contour	On / Off	On
Monitoring	11-positions	CVBS
Contour sel	R / Y / G / R+G	Y
Auto Iris	On / Off	On
<u>Setup Menu 3</u>		
Combine	On / Off	On
Diskrec I/F	EVS / STD	-
Lighting	5-positions	-
Monitoring	11-positions	CVBS
Asp. Ratio	MCP / Ext.	-
Asp. Ratio	16 : 9 / 4 : 3	-
Exposure	5-positions	Nom.
Notch	On / Off	Off
Chroma	On / Off	On
<u>Maintenance Menu 1</u>		
White Shading	On / Off	On
Max. User Level	0..4	-
Timing	On / Lock	-
Monitoring	11-positions	CVBS
Intercom	Syst / Iso	-
Audio	MCP / External	-
Audio 1	8-positions	-
Audio 2	8-positions	-
Bars	On / Off	Off
Cam. Power	On / Off	-

Functions	Parameters	Factory File
<u>Maintenance Menu 2</u>		
OCP Controls		
	Variable Black Str.	Yes
	Variable Gamma	Yes
	Variable Flare	Yes
	Satuation	Yes
	White Clipper	Yes
	Knee slope	Yes
	Knee point	Yes
	Iris	Normal
	OCP lock	Total
System		
	Black contrast	Strch
<u>Maintenance Menu 3 (LLA)</u>		
Monitoring	11-positions	CVBS
Heater	On / Off	Off
Lens	Local / Remote	Rem
Lamp	Enable / Disable	Disable

A pop-up menu appears when there are more than two selections available.

Control Functions for LDK 100

Analogue Control Functions

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Operate Menu</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Knee	Slope/Point	00/12
Contour	Level	50
Gamma	Master	76
Black Stretch	Master	99
<u>Setup Menu 1</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Flare	R/G/B	10/15/25
Gamma	R/Master/B	76/76/76
Knee	Slope/Point	00/12
Knee Desaturation	Level	40
White Clip	Master	80
<u>Setup Menu 2</u>		
Contour		
Level	Master	50
Soft Contour	Master	70
Coarse/fine	Master	25
V-Level	Master	50
Noise Slicer	Master	5
Level Depend	Master	40
<u>Setup Menu 3</u>		
Contour	Master	50
Soft Contour	Master	70
Skin Level	Skin 1and 2	50
Skin 1 Window	R/B	50/50
Skin 1 Colour	R/B	50/50
Skin 2 Window	R/B	50/50
Skin 2 Colour	R/B	50/50
<u>Setup Menu 4</u>		
Iris Peak/average	Level	65
Exposure Control	-	50.6
Lighting	-	0
Notch Depth	Master	99
Saturation	Master	50
<u>Setup Menu 5</u>		
Matrix		
G->R/B->R	G->R/B->R	-/-
R->G/B->G	R->G/B->G	-/-
R->B/G->B	R->B/G->B	-/-
Gamma	R/Master/B	76/76/76

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Maintenance Menu 1</u>		
White Shading		
H. Saw	R/G/B	-/-/-
H. Par	R/G/B	-/-/-
V. Saw	R/G/B	-/-/-
V. Par	R/G/B	-/-/-
Range Extender	R/G/B	-/-/-
Timing	HPh/Fine/Coarse	-
<u>Maintenance Menu 3 *</u>		
Lens	Zoom/Focus	-
Lamp Dim	Level	88

The master black value stored in the factory standard file is 50. The iris value is expressed as an F-stop. The master black and iris controls are always available.

* Only with Large Lens Adaptor

Switch Control Functions

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Operate Menu</u>		
Colour Temp.	7-positions	3200 K
Auto Black	On / Off	-
Knee	Off / Auto / Var	Off
Contour	Off / Var	Var
Gamma	1 / 2 / Var / Lin	1
Black Stretch	On / Off	Off
Monitoring	11-positions	CVBS
Bars	On / Off	Off
Exposure	9-positions	Nom
Filter 1	clear / 1/4 / 1/16 1/64	clear
Filter 2	clear / 4-Star / 6-Star / Soft	clear
Gain	- / 0 / + / ++ / +++	0
Auto Iris	On / Off	-
<u>Setup Menu 1</u>		
Monitoring	11-positions	CVBS
Flare	On / Auto	Off
Gamma	1 / 2 / Var / Lin	1
Gamma curve	7-positions	ARD
Knee	Off / Auto / Var	Off
Knee source	Y / NAM	Y
Knee desaturation **	On / Off	Off
Sawtooth	On / Off	Off
White Clipper	On / Off	On
Auto Iris	On / Off	-
<u>Setup Menu 2</u>		
Contour	Off / Var	Var
Soft Contour ***	On / Off	On
Knee Contour	1..4 / On / Off	Off
Contour selection	Y/R/G/R+G	R+G
Monitoring	11-positions	CVBS
Auto Iris	On / Off	-
<u>Setup Menu 3</u>		
Contour	Off / Var	Var
Soft Contour ***	On / Off	Off
Skin Contour	Off / 1 / 2 / 1+2	Off
Skin Auto ****	On / Off	Off
Skin View *****	On / Off	Off
Monitoring	11-positions	CVBS
<u>Setup Menu 4</u>		
Monitoring	11-positions	CVBS
Asp. Ratio	MCP / Ext	Ext
Asp. Ratio	16:9 / 4:3	4:3
Exposure	10-positions	Nom
Notch	On / Off	On
Chroma	On / Off	On
Auto Iris	On / Off	-

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Setup Menu 5</u>		
Monitoring	11-positions	CVBS
Matrix selection	9-positions	Skin
Matrix sequence	M/G - G/M	G/M
Gamma	1 / 2 / Var / Lin	1
Gamma curve	7-positions	ARD
<u>Maintenance Menu 1</u>		
White Shading	On / Off	On
Cam. Disable	On / Off	Off
Lens *	Local / Remote	-
Monitoring	11-positions	CVBS
Bars	On / Off	Off
Intercom	Syst / Iso	-
Audio	MCP / External	-
Audio	8-positions	-
Cam. Power	On / Off	-
<u>Maintenance Menu 2</u>		
OCP Controls	Yes / No	
Variable Black Str.	Yes / No	Yes
Variable Gamma	Yes / No	Yes
Variable Flare	Yes / No	Yes
Satuation	Yes / No	Yes
White Clipper	Yes / No	Yes
Knee slope	Yes / No	Yes
Knee point	Yes / No	Yes
Iris	Normal / Reverse	Normal
OCP lock	Total / Upper	Total
<u>System</u>		
Black contrast	Strch / Press	Strch
<u>Maintenance Menu 3 *</u>		
Monitoring	11-positions	CVBS
Heater	On / Off	Off
Lens	Local / Remote	Rem
Lamp	Enable / Disable	Disable

A pop-up menu appears when there are more than two selections available.

* Only with Large Lens Adaptor

** Blocked if Knee = Off

*** Blocked if Contour = Off

**** Blocked if Skin Contour <> 1 or 2

***** Blocked if Skin Contour = Off

Control Functions for LDK 200

Analogue Control Functions

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Operate Menu</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Knee	Slope/Point	60/50
Contour	Level	50
Gamma	Master	76
Black Stretch	Master	99
<u>Setup Menu 1</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Flare	R/G/B	10/15/25
Gamma	R/Master/B	76/76/76
Knee	Slope/Point	60/50
Knee Desaturation	Level	50
White Clip	Master	80
<u>Setup Menu 2</u>		
Contour		
Level	Master	50
Soft Contour	Master	70
Coarse/fine	Master	25
V-Level	Master	50
Noise Slicer	Master	5
Level Depend	Master	40
<u>Setup Menu 3</u>		
Contour	Master	50
Soft Contour	Master	70
Skin Level	Skin 1and 2	50
Skin 1 Window	R/B	50/50
Skin 1 Colour	R/B	50/50
Skin 2 Window	R/B	50/50
Skin 2 Colour	R/B	50/50
<u>Setup Menu 4</u>		
Iris Peak/average	Level	65
Exposure Control	-	50.6
Lighting	-	0
Notch Depth	Master	99
Saturation	Master	50
<u>Setup Menu 5</u>		
Matrix		
G->R/B->R	G->R/B->R	-/-
R->G/B->G	R->G/B->G	-/-
R->B/G->B	R->B/G->B	-/-
Gamma	R/Master/B	76/76/76

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Maintenance Menu 1</u>		
White Shading		
H. Saw	R/G/B	-/-/-
H. Par	R/G/B	-/-/-
V. Saw	R/G/B	-/-/-
V. Par	R/G/B	-/-/-
Range Extender	R/G/B	-/-/-
Timing	HPh/Fine/Coarse	-
<u>Maintenance Menu 3 *</u>		
Lens	Zoom/Focus	-
Lamp Dim	Level	88

The master black value stored in the factory standard file is 50. The iris value is expressed as an F-stop. The master black and iris controls are always available.

* Only with Large Lens Adaptor

Switch Control Functions

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Operate Menu</u>		
Colour Temp.	7-positions	3200 K
Auto Black	On / Off	-
Knee	Off / Auto / Var	Off
Contour	Off / Var	Var
Gamma	1 / 2 / Var / Lin	1
Black Stretch	On / Off	Off
Monitoring	11-positions	CVBS
Bars	On / Off	Off
Exposure	9-positions	Nom
Filter 1	clear / 1/4 / 1/16 1/64	clear
Filter 2	clear / 4-Star / 6-Star / Soft	clear
Gain	- / 0 / + / ++ / +++	0
Auto Iris	On / Off	-
<u>Setup Menu 1</u>		
Monitoring	11-positions	CVBS
Flare	On / Auto	Off
Gamma	1 / 2 / Var / Lin	1
Gamma curve	6-positions	ARD
Knee	Off / Auto / Var	Off
Knee source	Y / NAM	Y
Knee desaturation **	On / Off	Off
Sawtooth	On / Off	Off
White Clipper	On / Off	On
Auto Iris	On / Off	-
<u>Setup Menu 2</u>		
Contour	Off / Var	Var
Soft Contour ***	On / Off	On
Knee Contour	1..4 / On / Off	Off
Contour selection	Y/R/G/R+G	R+G
Monitoring	11-positions	CVBS
Auto Iris	On / Off	-
<u>Setup Menu 3</u>		
Contour	Off / Var	Var
Soft Contour ***	On / Off	Off
Skin Contour	Off / 1 / 2 / 1+2	Off
Skin Auto ****	On / Off	Off
Skin View *****	On / Off	Off
Monitoring	11-positions	CVBS
<u>Setup Menu 4</u>		
Monitoring	11-positions	CVBS
Asp. Ratio	MCP / Ext	Ext
Asp. Ratio	16:9 / 4:3	4:3
Exposure	9-positions	Nom
Notch	On / Off	On
Chroma	On / Off	On
Auto Iris	On / Off	-

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Setup Menu 5</u>		
Monitoring	11-positions	CVBS
Matrix selection	9-positions	Skin
Matrix sequence	M/G - G/M	G/M
Gamma	1 / 2 / Var / Lin	1
Gamma curve	7-positions	ARD
<u>Maintenance Menu 1</u>		
White Shading	On / Off	On
Cam. Disable	On / Off	Off
Lens *	Local / Remote	-
Monitoring	11-positions	CVBS
Bars	On / Off	Off
Intercom	Syst / Iso	-
Audio	MCP / External	-
Audio 1	8-positions	-
Audio 2	8-positions	-
Cam. Power	On / Off	-
<u>Maintenance Menu 2</u>		
OCP Controls	Yes / No	
Variable Black Str.	Yes / No	Yes
Variable Gamma	Yes / No	Yes
Variable Flare	Yes / No	Yes
Satuation	Yes / No	Yes
White Clipper	Yes / No	Yes
Knee slope	Yes / No	Yes
Knee point	Yes / No	Yes
Iris	Normal / Reverse	Normal
OCP lock	Total / Upper	Total
<u>System</u>		
Black contrast	Strch / Press	Strch
<u>Maintenance Menu 3 *</u>		
Monitoring	11-positions	CVBS
Heater	On / Off	Off
Lens	Local / Remote	Rem
Lamp	Enable / Disable	Disable

A pop-up menu appears when there are more than two selections available.

* Only with Large Lens Adaptor

** Blocked if Knee = Off

*** Blocked if Contour = Off

**** Blocked if Skin Contour <> 1 or 2

***** Blocked if Skin Contour = Off

Control Functions for LDK 6000

Analogue Control Functions

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Operate Menu</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Knee	Slope/Point	60/50
Contour	Level	50
Gamma	Master	76
Black Stretch	Master	50
<u>Setup Menu 1</u>		
Gain	R/G/B	50/50/50
Black	R/G/B	50/50/50
Flare	R/G/B	10/15/25
Gamma	R/Master/B	76/76/76
Knee	Slope/Point	60/50
Knee Desaturation	Level	50
White Clip	Master	80
<u>Setup Menu 2</u>		
Contour	Master	50
Soft Contour	Master	70
Skin Level	Skin 1 and 2	50
Skin 1 Window	R/B	50/50
Skin 1 Colour	R/B	50/50
Skin 2 Window	R/B	50/50
Skin 2 Colour	R/B	50/50
<u>Setup Menu HDTV</u>		
Contour		
Level	Master	50
Soft Contour	Master	70
Coarse/fine	Master	50
V-Level	Master	25
Noise Slicer	Master	5
Level Depend	Master	40
<u>Setup Menu SDTV</u>		
SDTV Contour		
Level	Master	50
Soft Contour	Master	70
Coarse/fine	Master	25
V-Level	Master	50
Noise Slicer	Master	6
Level Depend	Master	50
<u>Setup Menu 3</u>		
Iris Peak/average	Level	65
Exposure Control	-	50.6
Lighting	-	0
Notch Depth	Master	50
Saturation	Master	50
<u>Setup Menu 4</u>		
Matrix		
G->R/B->R	G->R/B->R	-/-
R->G/B->G	R->G/B->G	-/-
R->B/G->B	R->B/G->B	-/-
Gamma	R/Master/B	76/76/76

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Maintenance Menu 1</u>		
White Shading		
H. Saw	R/G/B	-/-/-
H. Par	R/G/B	-/-/-
V. Saw	R/G/B	-/-/-
V. Par	R/G/B	-/-/-
Range Extender	R/G/B	-/-/-
Timing	HPh/Fine/Coarse	-
<u>Maintenance Menu 2¹</u>		
Lens	Zoom/Focus	-
Lamp Dim	Level	88

The master black value stored in the factory standard file is 50. The iris value is expressed as an F-stop. The master black and iris controls are always available.

¹ Only with Large Lens Adaptor

Switch Control Functions

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Operate Menu</u>		
Colour Temp.	8-positions	3200 K
Auto Black	On / Off	-
Knee	Off / Auto / Var	Off
Contour	Off / Var	Var
Gamma	1 / 2 / Var / Lin	1
Black Stretch	On / Off	Off
Monitoring	Y/G/R/B	Y
Bars	On / Off	Off
Exposure	9-positions	Nom
Filter 1	clear / 1/4 / 1/16 1/64	clear
Filter 2	clear / 4-Star / 6-Star / Soft	clear
Gain	- / 0 / + / ++ / +++	0
Auto Iris	On / Off	-
<u>Setup Menu 1</u>		
Monitoring	Y/G/R/B	Y
Video Mode ¹	available video modes	-
Flare	On / Auto	Off
Gamma	1 / 2 / Var / Lin	1
Gamma curve	6-positions	ARD
Knee	Off / Auto / Var	Off
Knee source	Y / NAM	Y
Knee desaturation ²	On / Off	Off
Sawtooth	On / Off	Off
White Clipper	On / Off	On
Auto Iris	On / Off	-
<u>Setup Menu 2</u>		
Contour	Off / Var	Var
Soft Contour ³	On / Off	On
Skin Contour	Off / 1 / 2 / 1+2	Off
Monitoring	Y/G/R/B	Y
Skin View ⁴	On/Off	Off
<u>Setup Menu HDTV</u>		
Contour	Off / Var	Var
Soft Contour ³	On / Off	On
Knee Contour	1..4 / Off	Off
Contour selection	Y/R/G/R+G	R+G
Monitoring	Y/G/R/B	Y
Auto Iris	On / Off	-
<u>Setup Menu SDTV</u>		
-		
<u>Setup Menu 3</u>		
Monitoring	Y/G/R/B	Y
Exposure	9-positions	Nom
Notch	On / Off	On
Chroma	On / Off	On
Auto Iris	On / Off	-

<i>Functions</i>	<i>Parameters</i>	<i>Factory File</i>
<u>Setup Menu 4</u>		
Monitoring	Y/G/R/B	Y
Matrix selection	9-positions	Skin
Matrix sequence	M/G - G/M	G/M
Gamma	1 / 2 / Var / Lin	1
Gamma curve	7-positions	ARD
<u>Maintenance Menu 1</u>		
White Shading	On / Off	On
Cam. Disable	On / Off	Off
Monitoring	Y/G/R/B	Y
Intercom	Syst / Iso	-
Audio	MCP / External	-
Audio 1	8-positions	-
Audio 2	8-positions	-
Bars	On / Off	Off
Cam. Power	On / Off	-
<u>Maintenance Menu 2⁵</u>		
Monitoring	Y/G/R/B	Y
Heater	On / Off	Off
Lens	Local / Remote	Rem
Lamp	Enable / Disable	Disable
<u>Maintenance Menu 2 (or 3-⁵)</u>		
OCP Controls	Yes / No	
Variable Black Str.	Yes / No	Yes
Variable Gamma	Yes / No	Yes
Variable Flare	Yes / No	Yes
Satuation	Yes / No	Yes
White Clipper	Yes / No	Yes
Knee slope	Yes / No	Yes
Knee point	Yes / No	Yes
Contour	HDTV / SDTV	HDTV
Iris	Normal / Reverse	Normal
OCP lock	Total / Upper	Total
<u>System</u>		
Black contrast	Strch / Press	Strch

A pop-up menu appears when there are more than two selections available.

- 1 Press EXIT to select
- 2 Blocked if Knee = Off
- 3 Blocked if Contour = Off
- 4 Blocked if Skin Contour <> 1 or 2
- 5 If Large Lens Adapter is used

List of Abbreviations

B	Blue	Mon	Monitoring
Bl	Black	Nom	Nominal
Cam	Camera	OCP	Operational Control Panel
Col	Colour	P/A	Peak/average
Cont	Contours	Par	Parabola
Crv	Curve	R	Red
Desat	Desaturation	Ref	Reference
G	Green	Saw	Sawtooth
H	Horizontal	Sel	Selection
Kn	Knee	Seq	Sequence
Lin	Linear	Src	Source
Loc	Local	Str, Strch	Stretch
Maint	Maintenance	Sys	System
MCP	Master Control Panel	V	Vertical
		Var	Variable