

Master Control

iMC-Panel-100 Operator's Guide
(for Imagestore 750s)



Miranda

Miranda Technologies Inc.
3499 Douglas B. Floreani
Montreal, Quebec
Canada H4S 2C6

Operator's Guide for Imagestore 750

- **Revision:** 1.0
- **Software Version:** 7.2.0.0
- **Part Number:** UG0069-00
- Copyright: © 2011 Miranda Technologies. All rights reserved.
- No part of this manual may be reproduced in any form by photocopy, microfilm, xerography or any other means, or incorporated into any information retrieval system, electronic or mechanical, without the written permission of Miranda Technologies, Inc.
- The information contained in this manual is subject to change without notice or obligation.
- All title and copyrights as well as trade secret, patent and other proprietary rights in and to the Software Product (including but not limited to any images, photographs, animations, video, audio, music, test, and “applets” incorporated into the Software Product), the accompanying printed materials, and any copies of the Software Product, are owned by Miranda Technologies, Inc. The Software Product is protected by copyright laws and international treaty provisions. Customer shall not copy the printed materials accompanying the software product.

Notice

The software contains proprietary information of Miranda Technologies, Inc. It is provided under a license agreement containing restrictions on use and disclosure and is also protected by copyright law. Reverse engineering of the software is prohibited.

Due to continued product development, the accuracy of the information in this document may change without notice. The information and intellectual property contained herein is confidential between Miranda and the client and remains the exclusive property of Miranda. If you find any problems in the documentation, please report them to us in writing. Miranda does not warrant that this document is error-free.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Declaration of Conformance (CE)

All of the equipment described in this manual has been designed to conform with the required safety and emissions standards of the European Community. Products tested and verified to meet these standards are marked as required by law with the CE mark. (See [Symbols and Their Meanings](#) on page v.)

When shipped into member countries of the European Community, this equipment is accompanied by authentic copies of original Declarations of Conformance on file in Miranda GVD offices in Grass Valley, California USA.

Trademarks

Miranda is a registered trademark of Miranda Technologies, Inc.

Brand and product names mentioned in this manual may be trademarks, registered trademarks or copyrights of their respective holders. All brand and product names mentioned in this manual serve as comments or examples and are not to be understood as advertising for the products or their manufactures.

Software License Agreement and Warranty Information

Contact Miranda for details on the software license agreement and product warranty.

Technical Support Contact Information

Miranda has made every effort to ensure that the equipment you receive is in perfect working order and that the equipment fits your needs. In the event that problems arise that you cannot resolve, or if there are any questions regarding this equipment or information about other products manufactured by Miranda, please contact your local representative or contact Miranda directly through one of the appropriate means listed here.

- Main telephone: 530-265-1000 (9 am to 9 pm PST)
Fax: 530-265-1021

In the Americas, call toll-free: +1-800-224-7882 (9 am to 9 pm EST)

In Europe, the Middle East, Africa, or the UK, call +44 118 952 3444 (9 am to 6 pm, GMT)

In France, call +33 1 55 86 87 88 (9 am to 5 pm, GMT + 1)

In Asia, call +852-2539-6987 (9 am to 5 pm, GMT + 8)

In China, call +86-10-5873-1814

- Emergency after hours: toll-free: +1-800-224-7882
Tel: +1-514-333-1772

- E-Mail:

In the Americas, support@miranda.com

In Europe, the Middle East, African or the UK, eurotech@miranda.com

In France, eurotech@miranda.com

In Asia, asiatech@miranda.com

In China, asiatech@miranda.com

- Website: <http://www.miranda.com>

- Mail Shipping

Miranda GVD

P.O. Box 1658

Nevada City, CA 95959, USA

Miranda GVD

125 Crown Point Court

Grass Valley, CA 95945, USA

Note

Return Material Authorization (RMA) required for all returns.

Change History

The table below lists the changes to the iMC-Panel-200 Operator's Guide (for Imagestore 750).

- Part # UG0069-00
- Software version: 7.2.0.0

Rev	Date	ECO	Description	Approved By
1.0	29 Nov 11	17941	New document.	D.Cox

Important Safeguards and Notices

This section provides important safety guidelines for operators and service personnel. Specific warnings and cautions appear throughout the manual where they apply. Please read and follow this important information, especially those instructions related to the risk of electric shock or injury to persons.

Warning

Any instructions in this manual that require opening the equipment cover or enclosure are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any service other than that contained in the operating instructions unless you are qualified to do so.

Symbols and Their Meanings



The lightning flash with arrowhead symbol within an equilateral triangle alerts the user to the presence of dangerous voltages within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle alerts the user to the presence of important operating and maintenance/service instructions.



The Ground symbol represents a protective grounding terminal. Such a terminal must be connected to earth ground prior to making any other connections to the equipment.



The fuse symbol indicates that the fuse referenced in the text must be replaced with one having the ratings indicated.



The presence of this symbol in or on Miranda equipment means that it has been designed, tested and certified as complying with applicable Underwriter's Laboratory (USA) regulations and recommendations.



The presence of this symbol in or on Miranda equipment means that it has been designed, tested and certified as essentially complying with all applicable European Union (CE) regulations and recommendations.

General Warnings

A warning indicates a possible hazard to personnel which may cause injury or death. Observe the following general warnings when using or working on this equipment:

- Heed all warnings on the unit and in the operating instructions.
- Do not use this equipment in or near water.
- This equipment is grounded through the grounding conductor of the power cord. To avoid electrical shock, plug the power cord into a properly wired receptacle before connecting the equipment inputs or outputs.
- Route power cords and other cables so they are not likely to be damaged.
- Disconnect power before cleaning the equipment. Do not use liquid or aerosol cleaners; use only a damp cloth.
- Dangerous voltages may exist at several points in this equipment. To avoid injury, do not touch exposed connections and components while power is on.
- Do not wear rings or wristwatches when troubleshooting high current circuits such as the power supplies.
- To avoid fire hazard, use only the specified fuse(s) with the correct type number, voltage and current ratings as referenced in the appropriate locations in the service instructions or on the equipment. Always refer fuse replacements to qualified service personnel.
- To avoid explosion, do not operate this equipment in an explosive atmosphere.
- Have qualified service personnel perform safety checks after any service.

General Cautions

A caution indicates a possible hazard to equipment that could result in equipment damage. Observe the following cautions when operating or working on this equipment:

- When installing this equipment, do not attach the power cord to building surfaces.
- To prevent damage to equipment when replacing fuses, locate and correct the problem that caused the fuse to blow before re-applying power.
- Use only the specified replacement parts.
- Follow static precautions at all times when handling this equipment.
- This product should only be powered as described in the manual. To prevent equipment damage, select the proper line voltage on the power supply(ies) as described in the installation documentation.
- To prevent damage to the equipment, read the instructions in the equipment manual for proper input voltage range selection.
- Some products include a backup battery. There is a risk of explosion if the battery is replaced by a battery of an incorrect type. Dispose of batteries according to instructions.
- Products that have (1) no on/off switch and (2) use an external power supply must be installed in proximity to a main power output that is easily accessible.



Table of Contents

Chapter 1	Preface	1
	Chapter Structure	1
	The PDF Document	1
	Terms, Conventions and Abbreviations	2
	Prerequisites	3
	Options	3
Chapter 2	Introduction	5
	Purpose	5
	Master Control System Overview	5
	NV9000 Router Control System	6
	Control Panels	7
	Other Miranda Products	7
	Tally Processor	7
	Intuition XG	7
	Imagestore 750 Overview	7
	Conceptual Model	9
	Detailed Model	10
	Control Panel Features	11
Chapter 3	Control Panel	13
	Panel Summary	13
	Button Panel	13
	Display Unit	14
	Panel Buttons	15
	Soft buttons	16
	Panel Knobs	16
	Functional Sections of the Panel	17
	Top Row Buttons	20
	Menu Area	21
	Configurable Button Section	22
	Audio Levels	23
	‘Program Out’ Knob	23
	‘Preset In’ Knob	23
	‘Over Ratio/Duck Level’ Knob	23
	On-Screen “Knobs” and the Slider	24
	Audio Monitoring	24
	Preset and Program Buttons	25
	Aux/User and Preview/User Buttons	26
	Button Details	27
	Source Button Characteristics	27
	“Hot Cuts”	27
	Video Effects	27
	Voice-Overs	29
	Bottom Row Buttons	29
	Transition Button	30

Table of Contents

Definable Button Functions	30
None	30
Channel Selection	30
Channel Select	31
No Channels	31
Salvo	32
System Control	32
Panel Lock	32
Automation Off	32
Fade to Black	32
Fade to Silence	33
Group Select	33
Audio Lock	33
Macro Arm	33
Fire Macro	33
PGM DVE Enable	33
PST DVE Enable	34
KaleidoX Layout	34
Menu	34
Automation Assist	34
Transition Type	34
Transition Rate	35
Notes	36
Connectors	36
Button Panel	36
Power	36
Ethernet	37
USB Ports	37
VGA Port	37
GPI/Alarm	37
Touchscreen Display	38
Chapter 4	
Installation	39
Summary	39
Button Panel	40
Display	41
Mounting the display	41
Connections	42
GPI/ Alarms	42
Cabling	43
Setup	44
Chapter 5	
Menus	45
About Menus	45
Main Menu	46
Other Menus	47
Menu Button Conventions	49
Keypads	49
Lists	50
Main Menu	51
Audio Meters Menu	53
Audio Preview Menu	55
Automation Menu	56
Buttons	56

Table of Contents

Channel Select Menu	57
Sharing Channels	58
Preemption	58
Sharing	58
Edit/More	59
Channel Details Sub-Menu	59
Version Info Sub-Menu	60
DSK Menus	61
Options Buttons	62
List Buttons	62
Rates, CGT, Keying	62
Position, Size, Crop	64
‘Options Saving’	65
“EasyPlay” Menus	66
Macro Menu	67
Program Input Audio Menu	68
Buttons	68
Gains and Mutes	69
“Phase Inverts”	70
Audio Channel Shuffle	71
Program Output Audio Menu	72
Buttons	72
Gains and Mutes	73
“Phase Inverts”	74
Preset Input Audio Menu	75
Buttons	75
Gains and Mutes	76
“Phase Inverts”	77
Audio Channel Shuffle	78
Voice-Over Menus	79
Buttons	79
Gains and Mutes	80
Phase Inverts	81
Audio Channel Shuffle	82
XG Keyer Layers Menu	83
XG Layer Menus	84
A/B Mixer Menu	85
Adjust Profiles	86
Sources Menu	87
Adding a Source to a Group	88
Changing a Source within a Group	89
Removing a Source from a Group	90
Panel Menu	91
IP Setup	92
Manage Log	93
Set Date Time	94
Version Info	95
Panel Status	95
Panel Test Sub-Menu	96

Table of Contents

Chapter 6	Operation	99
	General Information	99
	About Colors	99
	Colors on Physical LCD Buttons	100
	Colors on “Soft” Buttons	101
	Button Colors in the Menu Area	102
	Thumbnail Color	103
	About Error Messages	103
	About the Button Rows	104
	About “Layer” Buttons	104
	About Configurable Buttons	104
	Panels and Channels	104
	Sharing vs. Preemption	105
	Using the Keypad	105
	Performing Transitions	106
	Basic Transition	106
	Transition Options	107
	Working with Transition Type and Rate	108
	Notes	109
	Changing Transition Rates	109
	Working with DSKs	109
	Performing Key Transitions	110
	Changing Key Settings	110
	Rates, CGT, Keying	111
	Position, Size, and Crop	113
	Saving DSK Settings	114
	Working with DVEs	115
	Working with XG Layers	115
	Working with Voice-Overs	116
	Performing Transitions with Voice-Over	116
	Voice-Over Menu	117
	Gains and Mutes	118
	“Phase Inverts”	119
	Audio Channel Shuffle	120
	Performing Over Transitions	120
	Working with Audio Monitors	121
	Audio Preview Menu	122
	Working with Audio Meters	123
	Working with Audio Levels	124
	‘Program Out’ Knob	124
	‘Preset In’ Knob	124
	‘Over Ratio/Duck Level’ Knob	125
	Menus	125
	Gains and Mutes	127
	Phase Inverts	128
	Audio Channel Shuffle	129
	Shuffling Audio Channels	129
	Performing a Shuffle	129
	Working with Multiple Channels	131
	Automatic Gang Mode	131
	Channel Selection with Buttons	132
	Channel Selection in the Menus	132
	No Channel Selection	132
	Sharing Channels	132
	Preemption	133
	Sharing	133
	Monitor Wall Re-Layout	133

Table of Contents

	Working with a Monitor Wall	134
	Working with the Aux Buttons	134
	‘Aux Bus Follow’	134
	Using the Panel Menu	135
	Panel Status	136
	IP Address	137
	View Version Information	138
	View or Clear the Panel’s Log File	138
	Set Time and Date	139
	Fade to Black	140
	Fade to Silence	140
	Updating Configuration Settings	140
	Panel Startup and Shutdown	141
Chapter 7	Misc. Topics	143
	Glossary	143
	Notes	144
	Alarms	144
	Specifications	145
	Power Supply	145
	Button Panel	145
	Electrical	145
	Mechanical	145
	Control Inputs and Outputs	145
	Planar PT1945R Touchscreen Display	146
	Drawings	147
Index	153

Table of Contents

1. Preface

This is an *operator's* guide that is intended for panel operators using the iMC-Panel-100 to control Imagestore 750s. Operators who control MCEs (or MCPMs) may refer to the *iMC-Panel-100 Operator's Guide for MCEs and MCPMs*.

Chapter 1 provides an introduction to this guide. It presents the following topics:

- [Chapter Structure](#)
- [The PDF Document](#)
- [Terms, Conventions and Abbreviations](#)

Chapter Structure

The following chapters provide information regarding the iMC-Panel-100 in the master control system:

- Chapter 1, [Preface](#), (this chapter) presents easy ways to use this guide and provides a list of terms and conventions.
- Chapter 2, [Introduction](#), describes how the panel relates to the master control system.
- Chapter 3, [Control Panel](#), discusses the features and functions of the panel.
- Chapter 5, [Menus](#), provides a detailed discussion of the panel menus.
- Chapter 6, [Operation](#), provides operating instructions.
- Chapter 7, [Misc. Topics](#), presents a glossary, specifications, and miscellaneous instructions and information.

An [Index](#) is also available for your reference.

The PDF Document

This guide is provided in PDF format, allowing you to use Acrobat's "bookmarks" to navigate to any desired location. You can also easily print a hardcopy. Please note:

- Use the Table of Contents or the bookmarks page to jump to any desired section.
- Many hyperlinks are provided within the chapters.
- Use the Index to jump to specific topics within a chapter. Each page number in the index is a hyperlink.
- Use Acrobat's 'Go to Previous View' and 'Go to Next View' buttons to retrace your complete navigational path.

1. Preface

Terms, Conventions and Abbreviations

- Use the ‘First Page’, ‘Previous Page’, and ‘Next Page’, and ‘Last Page’ buttons to go to the first, previous, next, or last page within a PDF file.

Note

To display the navigation buttons, right-click the Tool Bar area, and check ‘Navigation’.

- Use Acrobat’s extensive search capabilities, such as the ‘Find’ tool and ‘Search’ tool to perform comprehensive searches as required.

Terms, Conventions and Abbreviations

The following conventions are used throughout this guide:

- The symbol ▲ denotes either an example or a special message.
- Entries enclosed in single quotes denote the names of control panel buttons and knobs, or menu items.

Choose ‘Aux’ to ...

Press ‘Keyer 2’ button ...

The following terms and abbreviations are used throughout this guide:

- The term “MCPM” refers to any of several older models of master control processing modules.
- “MCE” stands for Master Control Engine. An MCE as a type of MCPM.
- “High tally” means that a button is brightly illuminated—at full intensity. “Low tally” means that a button is illuminated at low intensity. Most buttons assume a low tally state until selected. Some buttons are not illuminated.

Other terms, used occasionally, include the following:

- Intuition XG is a single- or dual-channel graphics processor. The term “Intuition XG” can encompass all the hardware and software involved in the Intuition XG component of master control.
- XMedia is a term that includes different software applications that create and manage images, keyers, logos, etc. used by Intuition XG.
- Xplay and the XG Dashboard are software applications under XMedia. Both of these are used to configure the Intuition XG processor.
- Xbuilder and Xstudio are creative software applications under XMedia.
- Oxtel is a division of Miranda. Its name is used to identify certain ports of the Intuition XG hardware. The Oxtel protocol is used by the Imagestore 750 in the master control system.
- The terms “XG media clip” and “XG clip” refer to one of the video and audio sequences stored in and played by the Intuition XG processor. The term “XG media” refers to the body of clips available. An XG clip is a composition of video, static and animated graphics, audio, and text (which can be obtained from live data).

Prerequisites

Please observe the following important prerequisites:

- Equipment and software properly installed.
- Video monitors properly set.
Ensure that your control room's program and preview monitors are properly set, according to the requirements of your facility.
- NV9000 requirements met.
You are using a master control system in conjunction with an NV9000 router control system. Ensure that your master control system and NV9000 are communicating with each other and configured as required.
- Channels properly configured.
Ensure that each Imagestore 750 has been configured (using the Imagestore 750 Configurator or by using the Imagestore 750's front panel). Refer also to the *Imagestore 750 Reference Manual* for more information.
- All control panels properly configured.
All control panels (and GUIs) should be configured and operational. Refer to the *MCS Panel Configuration Editor User's Guide* for details.
- User accounts for PCs used for master control set to 'Standard User' or better.
Master control software does not function properly when user accounts are set to 'Restricted User' or its equivalent.

Options

The Master Control Tally Processor is an option. It provides 32 GPI inputs and 32 GPI outputs. It can monitor master control events and trigger master control events.

Intuition XG is an option that adds rich branding to master control because it includes sophisticated design tools, a powerful graphics processor, and storage for video clips, and access to "live" data.

1. Preface

Options

2. Introduction

Chapter 2 is an introduction to the iMC-Panel-100 as it applies to controlling Imagestore 750s. It presents the following topics:

- [Purpose](#)
- [Master Control System Overview](#)
- [Imagestore 750 Overview](#)
- [Control Panel Features](#)

Purpose

The iMC-Panel-100 is one of the hardware control panels available in the Miranda master control system. These are its distinguishing characteristics:

- Separate button panel and display. The display can be mounted anywhere with respect to the panel.
- Compact and rack-mountable button panel. The panel is 19.0" wide × 5.22" high × 3.7" deep. The iMC-Panel-100 requires at least 2–3" clearance at the rear for cables.
- Moderate price.
- Menu system that allows an operator to change parameter settings.
- A set of buttons that can be configured as sources, video effects, or voice-overs as required by your facility. You can switch between several groups of sources.

Some of the buttons are present on the button panel and other buttons ("soft" buttons) are present on the display.

- A set of customer-definable function buttons.
- Audio control knobs.

The iMC-Panel-100 can control Imagestore 750s, MCEs, and MCPMs and therefore its button panel has silkscreen markings that refer to either Imagestore 750s or MCEs and MCPMs.

Master Control System Overview

Miranda's combined master control system—a multi-channel switcher—might include one or more Imagestore 750s, MCEs, and MCPMs. Imagestore 750s are independent 1RU transition processors (a.k.a. channel branding processors).

MCEs and MCPMs reside in NV5100MC frames. The frames are 8RU assemblies with 16 I/O card slots that can operate in conjunction with other switchers, routers, an NV9000 router control system, and other products. Each frame holds one or more MCPMs, MCEs, and optionally a multi-format router.

2. Introduction

Master Control System Overview

Each Imagestore 750, MCE, or MCPM is considered a *channel*.

Imagestore 750s, MCPMs, MCEs, and control panels communicate on an Ethernet LAN. When an operator presses control panel buttons (the ‘Transition’ button, for example), the control panel issues commands to the attached channel (Imagestore 750, MCPM, or MCE). The channel responds with status and (unless a problem exists) executes the command. When a command is successfully executed, the channel notifies the panel, which updates its displays and indicators accordingly.

Figure 2-1 shows the basic relationships in a master control system:

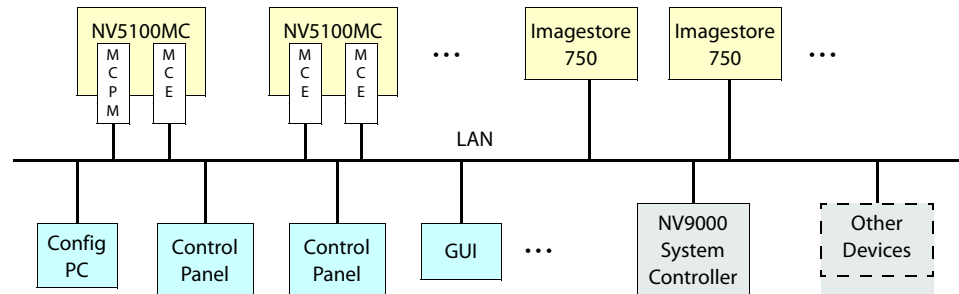


Figure 2-1. Master Control Network

Master control can work in conjunction with an NV9000 router control system. In such a configuration, a channel has access to the *entire* router input space, with the ability to select any router source.

Most control panels can control one or more channels at any time—but usually one at a time. Operators can select which channel(s) to control. When you change channels, control panel updates take about a second. We say that the panel *attaches* the newly selected channel, and the channel’s own source layout, transition rates, and layer presets are available for use.

Each channel can also be operated under automation. A channel can be controlled by multiple control panels.

The panel’s features when it is controlling an Imagestore 750 are quite different from the same panel’s features when it is controlling an MCE or MCPM. (This guide discusses only the features that support Imagestore 750s.)

NV9000 Router Control System

A master control system can be viewed as a part of an NV9000 system. Alternatively, the NV9000 can be regarded as a provider of inputs to the master control system.

In either case, master control allows router outputs as master control inputs and allows an operator (or automation) to take router sources to the master control output.

The NV9000 system is a requirement for master control systems that use Imagestore 750s.

An NV5100MC frame used in conjunction with an NV9000 system must be connected to the NV9000 (in the control section of the master control frame).

Control Panels

Presently there are 2 hardware control panels and 1 software control panel (GUI) that support Imagestore 750s:

iMC-Panel-GUI	A software control panel, also called the “GUI.” This panel also runs on a PC and has a graphical user interface. This GUI is a software emulation of the <i>iMC-Panel-200</i> . This GUI is designed to operate with (or without) a touch-sensitive screen.
iMC-Panel-100	A 3RU rack-mounted panel with a separate rack-mountable display. This panel has reduced size (just over 3” in depth) and reduced cost.
iMC-Panel-200	A compact hardware control panel that has a large LCD touchscreen, many function buttons, and a joystick. The iMC-Panel-200 mounts on a desktop or work surface. All buttons have LCD legends and color-coding.
iMC-Panel-300	A “full-size” control panel that has a large LCD touchscreen, many function buttons, and a joystick. The iMC-Panel-300 mounts on a desktop or work surface. All but 2 buttons have LCD legends and color-coding.

Other Miranda Products

Listed here are products that relate to master control.

Tally Processor

Miranda offers a third-party “tally processor”—a 1RU device that provides 32 optically isolated inputs and 32 relay outputs, also optically isolated. The tally processor can sense master control events such as main source selections and transitions, trigger master control events, and control various devices in your system. A master control network can include multiple tally processors.

Intuition XG

As a master control subsystem, Intuition XG is a combination of the following:

- Intuition XG—a single- or dual-channel HD/SD graphics processor. This processor stores XG media clips and transmits the clips (fill and key) when directed by an Imagestore 750, MCE, or MCPM.
- XMedia software for configuration and for composing, rendering, and previewing graphics. Panel operators will generally not need to understand or use this software.

Imagestore 750 Overview


The Imagestore 750 is an independent transition processor (also called a “channel branding processor”) that can operate as a stand-alone unit with or without automation, or as part of Miranda’s iMC master control system. In the context of the combined master control system, it operates in conjunction with an NV9000 router control system, that provides video and audio sources, and one or more master control panels, such as the iMC-Panel-100, that provide commands. The Imagestore 750 issues switching instructions to the NV9000 when it receives commands from a master control panel.

2. Introduction

Imagestore 750 Overview

The Imagestore 750 is essentially an A/B transition processor that inserts video effects (DVEs and DSKs) and voice-overs into its output. It has many configuration options.

This is a system block diagram of the Imagestore 750:

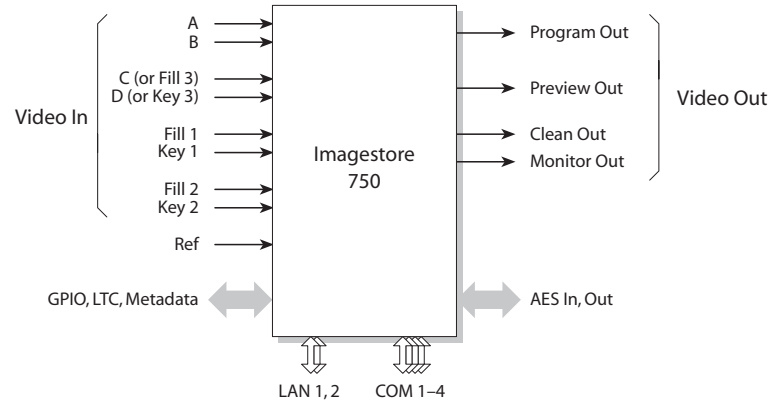


Inputs and outputs of the Imagestore 750 include:

- Four SDI inputs, A–D. These accept HD or SD input.
- Two external keyer pairs (fill and key). Inputs C and D can be used for a third keyer pair.
- A GPIO connector that supports 16 GPIO ports (each configurable as an input or an output), LTC, and Dolby metadata.
- 16 AES inputs and 16 AES outputs.
- Four SDI outputs (program, preview, clean-feed, and monitor).

There are also 4 COM ports and 2 Ethernet ports.

Conceptual Model

This diagram shows the Imagestore 750's native conceptual model:

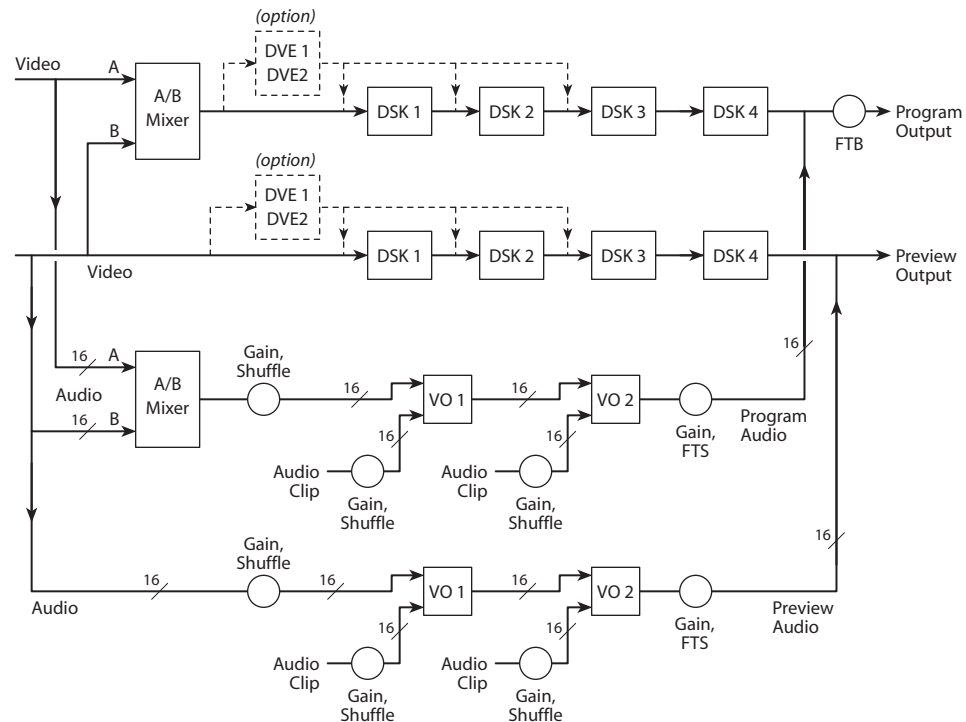


There are two video processing paths, program and preview. Each includes 4 downstream keyers (DSKs) and an optional DVE processor.

After audio is disembedded, the audio processing path includes an A/B mixer for 16 audio channels and two voice-over processors, also for the 16 channels. Audio is re-embedded in program and preview audio after processing.

The model also includes a clean-feed (video) output and a (video) monitor output. There are many selectable tap locations for these outputs.

Detailed Model

This diagram shows a more detailed view of the Imagestore 750's video processing:

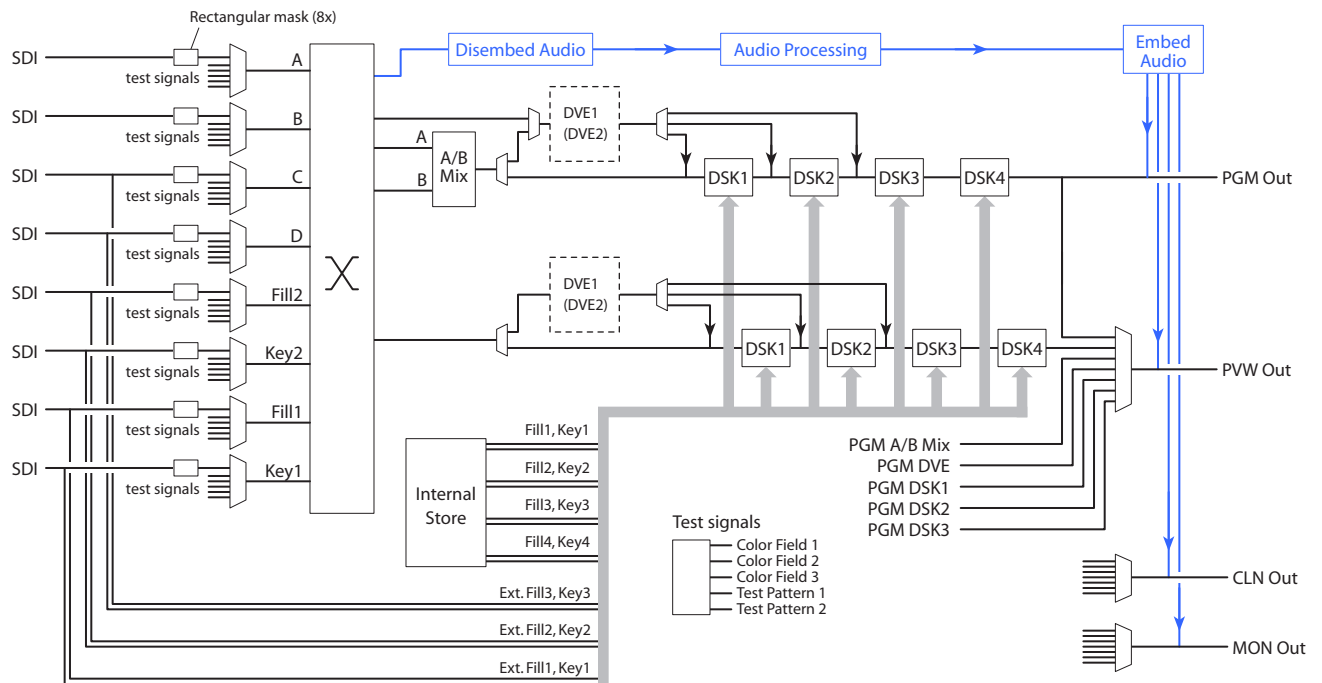

Each input (A, B, C, D, Fill1, Key1, Fill2, and Key2) can be individually selected as an SDI input or one of 5 test signals. (Each SDI input can be subject to a rectangular clipping mask.)

Inputs C and D can be used as a (fill3, key3) pair. The Imagestore 750 can use any of its fill/key inputs to receive clips from an Intuition XG processor. The Intuition XG processor produces up to 8 “XG keyer layers.” The Imagestore 750 sends commands to the Intuition XG processor that control the layout of the clips.

Both the A and B side of the A/B mixers can connect to any of the inputs (A, B, C, D, Fill1, Key1, Fill2, and Key2). Similarly, any of the DVEs can connect to any of those inputs.

The DVEs can also accept the output of the A/B mixer. The DVE output (either DVE1 or DVE2) can be inserted in the processing path in one of 3 places: before DSK1, before DSK2, or before DSK3. The DVE processing section is a purchase option. The DVE processor can be bypassed if it is installed.

The Imagestore 750 has storage supporting internal keyers (logos, etc.). Inputs C and D can be used as external keyer (fill3, key3).

The preview output can present video from one of several different tap points. Similarly, the clean-feed (CLN) output and the monitor (MON) outputs can present video from several different tap points.

Audio is disembedded from SDI sources, sent to the audio processing section, and re-embedded on output. The audio is re-embedded in the PGM, PVW, CLN, and MON outputs.

Control Panel Features

The iMC-Panel-100 offers the following features. (In many cases, the features are those of the Imagestore 750 under control.)

- Configurable function buttons.

All master control panels have a set of buttons whose functions can vary according to the needs of the facility and the operator. When it is controlling an Imagestore 750, the iMC-Panel-100 has 5 sets of customer-definable buttons.

- Channel selection, including ‘no channel’ mode, and ganged channels.

Your panel will usually have a default channel which is the channel selected when the panel powers up. Your panel might be configured so that its default channel is part of a channel gang. That is called “automatic gang mode.” Whenever that channel is selected, all the channels in the gang are selected.

The 8 buttons in the top row of the iMC-Panel-100’s display are meant to be channel selection buttons, but are configurable for any function. As channel selection buttons, they can display thumbnail images for the channels. (The thumbnails are static and do not change with the content of the channel.)

- Salvos.

The iMC-Panel-100 can trigger a NV9000 control system salvo each time a channel change occurs. For example, a salvo can be programmed to change your entire audio/video monitor configuration instantly. Refer to the NV9000-SE Utilities User’s Guide for instructions on programming system salvos.

Salvos can also be assigned to panel buttons.

- ▲ Salvos are inhibited when a channel gang is in effect.

- Independent downstream keyers (DSKs). When it is controlling an Imagestore 750, the iMC-Panel-100 can control 4 independent (linear) DSKs, each with separate key and fill inputs. Keyer parameters (e.g., clip, gain, and transparency) are configured independently in each Imagestore 750.

The DSKs handle internal keys (stills and animations) as well as (up to 3) external keys.

- DVEs.

A DVE (digital video effect) is a sequence of operations that can dynamically scale and position a video image on the screen, overlaying the main source. A DVE might perform other effects too. DVEs are created in the DVE Editor. DVEs are stored within the Imagestore 750.

The panel supports up to 4 independent DVEs. Not all Imagestore 750s have DVE processors. If your panel is controlling such an Imagestore 750, its DVE buttons, if any, are disabled.

- XG layers.

An XG layer (or clip) is one of up to 8 outputs of an Intuition XG processor. When it is controlling an Imagestore 750, the panel can control up to 8 XG layers. XG layers are processed by one of the DSKs. Usually there is a default DSK assigned to XG layers.

- Fade to black. Master control provides a fade-to-black and a fade-to-silence function.
- General-purpose I/O (GPIO). Control panels have two optically isolated inputs that can sense external events and two relay outputs that can trigger external events.

The Imagestore 750 has GPIs can be associated with Imagestore 750 macros.

2. Introduction

Control Panel Features

- Audio monitoring.
The iMC-Panel-100 has two audio monitor knobs, but they are not used when the panel is controlling an Imagestore 750s.
- Audio channel control.
The Imagestore 750 processes 16 audio channels.
The Imagestore 750 has 5 audio sections: program input audio, program output audio, preset input audio, and voice-over 1 audio and voice-over 2 audio. The Imagestore 750 has gain control, inversion, and 16-channel shuffles for each of these 5 sections.
The iMC-Panel-100 has 3 knobs for program audio output, preset audio input, and voice-over level. (These are live controls.)
- Panel lock. You can use a 'Panel Lock' button to prevent accidental changes to the panel settings.
- Automation control. You can enable or inhibit automation with a button press. There are 4 automation assist functions, such as 'Cue Next' and 'Skip Next'.
- Source groups. The iMC-Panel-100 can have up to 16 source buttons. The Imagestore 750 allows the definition of multiple *source groups*. Each of those source groups can be mapped to the source buttons of the iMC-Panel-100. The sources in a group are selected from the sources defined in the NV9000 system. Thus, all NV9000 sources are potentially accessible.

3. Control Panel

Chapter 3 describes the structure and functioning of the iMC-Panel-100 as it applies to the Imagestore 750. It presents the following topics:

- [Panel Summary](#)
- [Functional Sections of the Panel](#)
- [Definable Button Functions](#)
- [Connectors](#)

Panel Summary

The iMC-Panel-100 is a configurable master control panel. It has two parts:

- 3RU rack-mountable button panel, 19.0" wide × 5.22" high × 3.7" deep.
You can also mount the button panel in a recess of a console surface.

The rear of the panel includes 2 USB ports, one VGA port, 2 (redundant) power supply connectors (Molex 4-pin), an Ethernet port, GPI/alarm connector, and fan outlet.

- VGA display.

The VGA display is third-party equipment you must purchase separately. We recommend, and support, the Planar series of touchscreen monitors. This guide describes the Planar PT1495R 19" monitor.

Touchscreen monitors from other manufacturers will probably not work as part of the iMC-Panel-100. However, most non-touchscreen VGA monitors will work as part of the iMC-Panel-100. The monitor you use must have a screen resolution of at least 1280×1024 pixels. The iMC-Panel-100 supports resolutions up to 1920×1200.

A mouse must be used with a non-touchscreen monitor.

The display provides a menu and a number of "soft" function buttons.

Button Panel

At the front of the iMC-Panel-100's button panel are 41 color-coded LCD buttons and 6 knobs (a.k.a. rotary encoders). Each LCD button has a 64×32 graphic display that usually shows 3 lines of text, 8 characters per line. Sometimes a button can show graphics, as does the 'Transition' button at the lower right.

3. Control Panel

Panel Summary

Three knobs at the far right control audio levels. Two knobs at the bottom of the panel control audio monitor levels. The remaining knob (labeled 'Scroll/Set', at the bottom) is for adjusting parameter values.

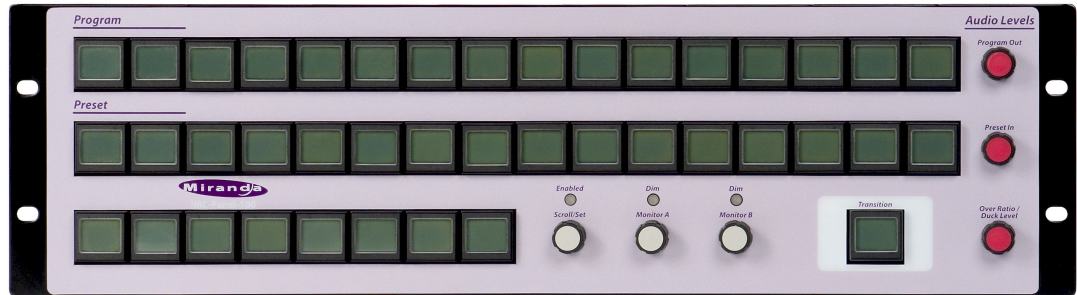


Figure 3-1. iMC-Panel-100 Button Panel (Front View)

At the rear of the panel are two power connections, an Ethernet port, a fan, two USB ports, a VGA connector, and a GPI/alarm connector. See [GPI/Alarm](#) on page 37 for more information.



Figure 3-2. iMC-Panel-100 Button Panel (rear view)

Display Unit

Miranda supports the Planar series of touchscreens. This is the Planar PT1945R:



It has a removable stand and can be wall-mounted.

The iMC-Panel-100's separate display unit provide a set of menus and “soft” function buttons in which you can do the following:

- Select a channel (i.e., Imagestore 750, MCE, or MCPM).
- Select a main source or an over source.
- Choose a router source.
- Select a video effect and alter its settings.
- Manipulate audio.
- Change transition rates.
- Perform panel maintenance and updates.
- View status and error messages.

Some menus have a scrollbar with which to select items. You can use an on-screen “slider” to adjust parameter values or you can enter a value using a touchscreen keypad. In many cases, you can use the ‘Scroll/Set’ knob of the button panel to adjust parameter values.

The recommended display unit is a *touchscreen*: you *press* or *touch* buttons on the screen itself to perform menu selections.

- ▲ Your panel will operate with a non-touchscreen display. In that case, you’ll use a mouse. (There is no need for a keyboard).

Panel Buttons

Buttons appear in several colors and 3 brightness levels: off, low-tally, and high-tally.

Buttons allow you to choose sources and video effects and to make menu selections. Some buttons display status. Pressing a button usually selects something. However, nothing happens when you push a button that is disabled or off and nothing happens when you push a button that merely displays status.

The buttons on the panel display the following colors:

Low Green	Low Blue	Low Violet	Low Orange	Aqua	High Red
High Green	High Blue	High Violet	High Orange	White	High Amber

In addition to these 12 colors, a button can be dark (that is, off, or having no color). High red and high amber usually indicate warnings.

The following color scheme usually applies. Exceptions will be noted.

- Non-selected state: low tally—green, blue, violet, orange, or white.
- Selected state: high tally—green, blue, violet, orange, or red, or aqua.

Some buttons are *tooggles*. Pressing a deselected toggle button will cause it to become selected. Pressing a selected toggle button will make it deselected.

Some groups of buttons operate as a mutually exclusive set. Pressing a deselected button will cause it to become selected and all other buttons in the set to become deselected. There are two types of mutually exclusive buttons:

- 1 Pressing a selected button makes it deselected. (All other buttons in the set remain deselected.)
- 2 Pressing a selected button has no effect: the button remains selected.

3. Control Panel

Panel Summary

Soft buttons

The display has 3 rows of button:

- Top row.

There are 8 large buttons in this row. All are configurable buttons. However, the row is designed to support channel selection buttons that have thumbnail images representing the channels.

- Aux/user buttons.

The aux/user row has 16 buttons. The leftmost buttons are source buttons that you can use to direct a source to an auxiliary device. The rightmost buttons (if any) are customer-configurable buttons.

- ▲ The source buttons are identical in all 4 button rows: the aux and preview rows of the display and the program and preset rows of the button panel.

- Preview/user buttons.

The preview/user row has 16 buttons. All 16 buttons are customer-configurable buttons. (The button row is used to control the preview bus of an MCE when the panel is controlling an MCE.)

Panel Knobs

Turning a knob clockwise increases the associated value until the maximum value is reached. After that, turning the knob clockwise has no effect.

Turning the knob counter-clockwise decreases the associated value until the minimum value is reached. After that, turning the knob counter-clockwise has no effect.

The function assigned to a knob might be disabled. In that case, turning the knob does nothing.

- ▲ The LED above the 'Scroll/Set' knob illuminates when scrolling is enabled.
- ▲ The LEDs above the audio monitor buttons illuminate when the monitor is "dimmed."

Functional Sections of the Panel

Figure 3-3 shows the location of the iMC-Panel-100's touchscreen, function buttons, and controls.

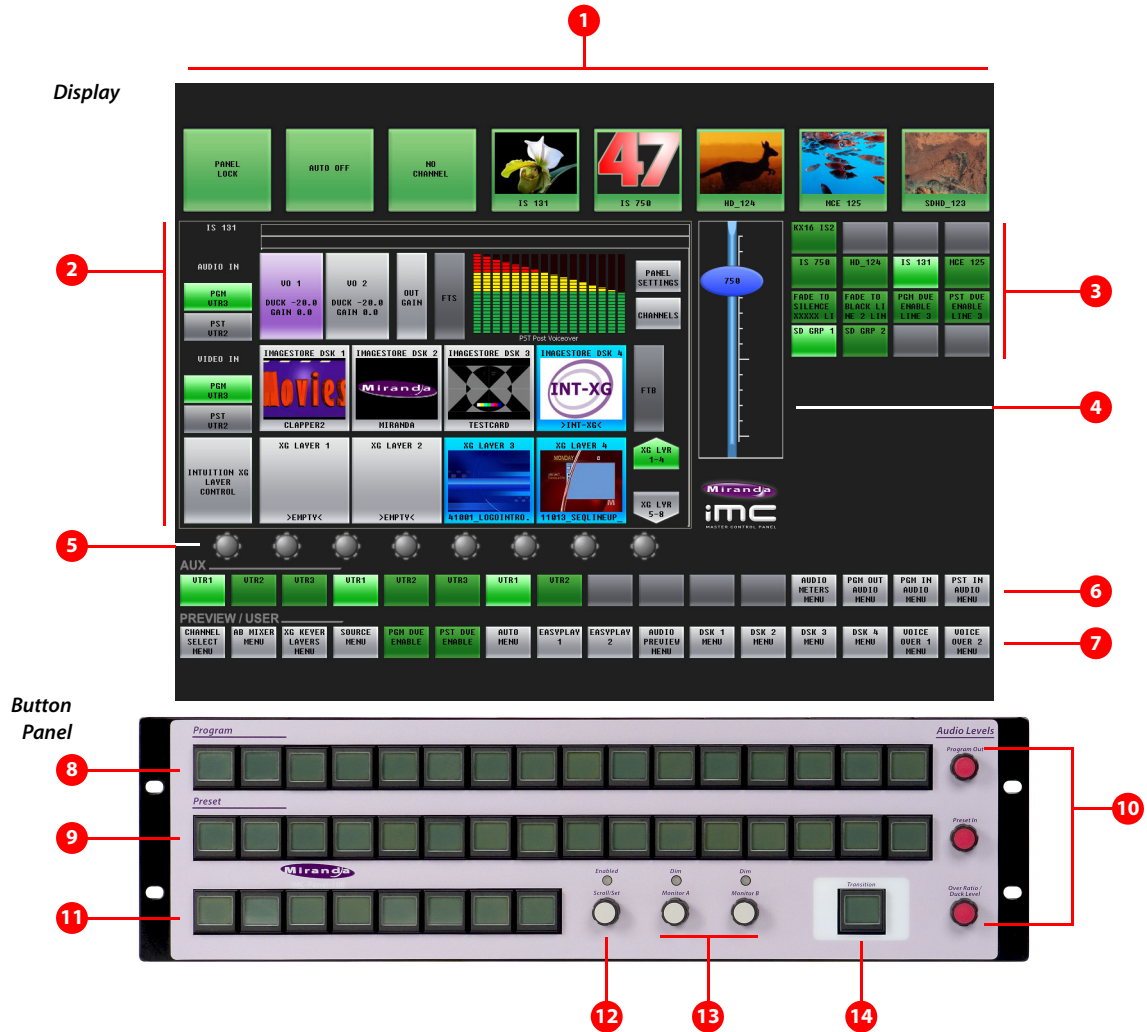


Figure 3-3. Sections of the iMC-Panel-100

- | | | |
|--|--|---|
| 1 Top row buttons | 6 Aux/user buttons | 11 Bottom row buttons |
| 2 Menu area | 7 Preview/user buttons | 12 ‘Scroll/Set’ knob |
| 3 Configurable buttons | 8 Program buttons | 13 Audio monitoring knobs |
| 4 Slider | 9 Preset buttons | 14 Transition button |
| 5 Knob “Proxies” | 10 Audio level knobs | |

3. Control Panel

Functional Sections of the Panel

Following are brief descriptions of each section:

1 Top row buttons

The 8 large buttons in this row are all customer-configurable buttons. However, the row is designed to accommodate channel selection buttons that have thumbnail images representing the channels.

2 Menu area

Using the menus of the display, you can adjust parameters and control system functions. Associated with the menu are 8 knob “proxies” for adjustment of parameters. See [Menu Area](#) on page 21 for detail.

3 Configurable buttons

The configurable button section includes 16 buttons, each of which may be programmed to perform functions such as channel selection, menu selection, or source group selection. Some of these buttons can function as status indicators. See [Configurable Button Section](#) on page 22 for detail.

Buttons in other sections of the panel are also configurable.

4 Slider

The slider helps you make certain parameter adjustments such as changes to the size or position of DSKs. See [On-Screen “Knobs” and the Slider](#) on page 24 for detail.

5 Knob “Proxies”

The 8 knob “proxies” under the menu area allow you to adjust menu parameters. Not all of these “knobs” are active all the time. When a knob is active, the menu shows a colored indicator near the knob.

Touch (or click) a knob proxy to select it. When you do, the knob proxy turns green and a slider appears, to the right of the menu, and the ‘Scroll/Set’ knob of the button panel becomes enabled. You can use either the slider or the ‘Scroll/Set’ button to perform parameter adjustments.

6 Aux/user buttons

When the panel is controlling an Imagestore 750, this button row contains source buttons and customer-definable buttons.

The sources are the same sources as on the preset and program button rows. These buttons allow you to direct a main source to an auxiliary device such as a waveform monitor.

- ▲ Imagestore 750s have an “aux bus follow” option. Depending on how this option is set, your aux buttons might follow the program or preset bus or might remain independent. When they follow the program bus, whatever source becomes selected on the program bus is also selected on the aux bus. When they follow the preset bus, whatever source becomes selected on the preset bus is also selected on the aux bus.

In any case, you can always use the aux buttons, normally, regardless of what was selected on the preset or program bus.

- ▲ If the Imagestore 750 is not configured for controlling an auxiliary device, the aux button row’s source buttons are disabled (dark).

7 Preview/user buttons

This row of buttons is a set of “preview” buttons when the panel is controlling an MCE or MCPM and it is a set of customer-definable buttons when the panel is controlling an Imagestore 750. (Among the customer-definable buttons can be “menu” buttons.)

8 Program buttons

The 16 program buttons include main source buttons and “layer” buttons. The layer buttons can be configured as video effects or voice-overs. The number of main sources, video effects, and voice-overs varies according to the panel configuration.

Whatever main source, video effects, and voice-overs are selected on the program buttons form the *program* output of the Imagestore 750 that is currently controlled by the iMC-Panel-100.

See [Preset and Program Buttons](#) on page 25 for detail.

- ▲ The preset and program buses behave differently under different transition options. See [Transition Options](#) on page 88.

9 Preset buttons

The preset buttons allows you to set up the state of the program output that will exist after the next transition.

The preset buttons include main source buttons and “layer” buttons. In fact, the preset bus and program bus have the same button functions. The function assigned to a program button is also assigned to the preset button directly beneath it.

Whatever main source, video effects, and voice-overs are selected on the preset bus form the *preview* output of the Imagestore 750 that is currently controlled by the iMC-Panel-100.

See [Preset and Program Buttons](#) on page 25 for detail.

- ▲ The preset and program buses behave differently under different transition options. See [Transition Options](#) on page 88.

10 Audio level knobs

The panel has 3 rotary knobs in this section, labeled:

- Program Out

This knob controls either the program output level as a whole or (when a voice-over is active on the program bus) the voice-over level.

- Preset In

This knob controls the preset input level (as a whole).

- Over Ratio / Duck Level

When the panel is controlling an Imagestore 750, this knob controls the audio level of the main source when a voice-over is mixed with program output. (That is called the “duck level.” The term “over ratio” applies only to MCEs and MCPMs.)

See [Audio Levels](#) on page 23 for detail.

11 Bottom row buttons

The buttons in this section are all configurable. (See [Definable Button Functions](#), on page 30.)

3. Control Panel

Functional Sections of the Panel

12 ‘Scroll/Set’ knob

When you touch (or click) the knob proxy (under the menu) associated with some parameter (such as voice-over level), the slider appears on the display and the ‘Scroll/Set’ knob of the button panel becomes enabled. You can use either the ‘Scroll/Set’ knob or the slider to adjust the parameter.

13 Audio monitoring knobs

The panel has two rotary knobs in this section, labeled:

- Monitor A
- Monitor B

The knobs apply when the panel is controlling an MCE or an MCPM. The knobs do not apply to Imagestore 750s.

14 Transition button

The transition button displays the transition type (as a graphic) and the transition rate (in text). ‘Cut’ transitions involve no rate and for cut transitions, the button displays no rate text.

The button is bright orange.

Pressing the transition button initiates a transition in the Imagestore 750 according to the iMC-Panel-100 setup.

See [Transition Button](#) on page 30 for detail.

Top Row Buttons

Figure 3-5 shows the top row of buttons:

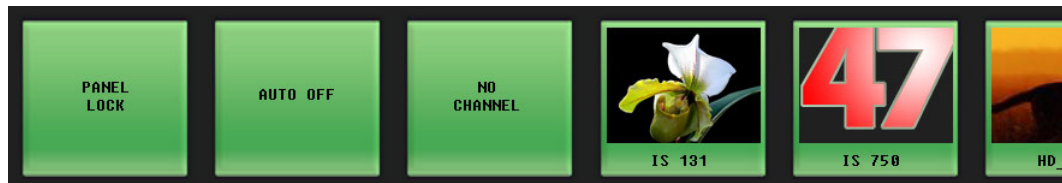


Figure 3-4. Menu Area (Sample Showing Knob Proxies)

The 8 large buttons in this row are all configurable buttons. However, the row is designed to accommodate channel selection buttons that have thumbnail images representing the channels.

Menu Area

Figure 3-5 shows the menu area and its 8 associated “knobs”:

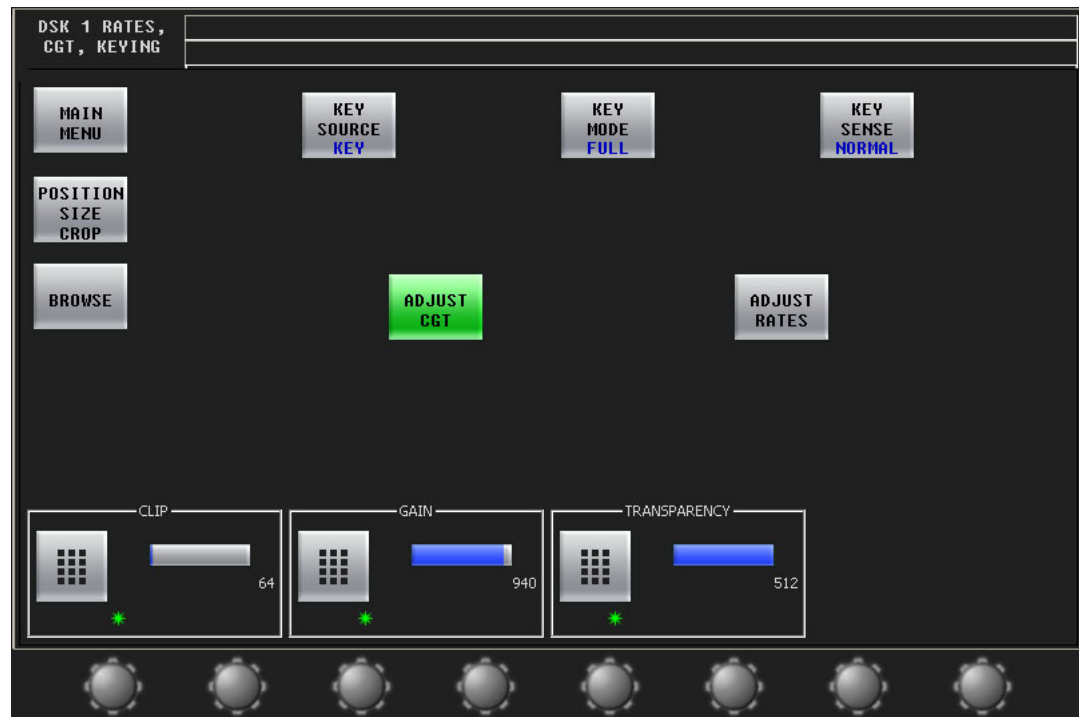


Figure 3-5. Menu Area (Sample Showing Knob Proxies)

The menu area presents a number of different menus that allow you to perform source selections and adjust operating parameters.

Menu buttons allow you to select the menu that appears in the menu area. Menu buttons are toggles: pressing the button once displays the menu; pressing the button again displays the main menu.

Some menus allow you to adjust function parameters, such as the ‘DSK Rates, CGT, and Keying’ menu shown in Figure 3-5. You can adjust function parameters in two ways:

- Using the adjacent knob proxies.
 - Touch (or click) the knob proxy. Use the slider that appears or the ‘Scroll/Set’ knob that becomes enabled to adjust the parameter.
- Pressing the keypad image within the menu itself.
 - Use the on-screen keypad that appears to adjust numeric values.

The menu area has a region at the top for status and error messages and another region at the top for informative messages.

Refer to Chapter 4, [Menus](#), on page 31 for a comprehensive review of all menus.

3. Control Panel

Functional Sections of the Panel

Configurable Button Section

Figure 3-6 shows the configurable button section:

KX16 IS2			
IS 750	HD_124	IS 131	MCE 125
FADE TO SILENCE XXXXX LI	FADE TO BLACK LI NE 2 LIN	PGM DUE ENABLE LINE 3	PST DUE ENABLE LINE 3
SD GRP 1	SD GRP 2		

Figure 3-6. Configurable Button Section

The configurable button section includes 16 buttons, each of which may be programmed to perform various functions such as channel selection, GPI triggers, or machine control. The buttons can also be status buttons.

Each button displays 3 rows of 8 characters. The button functions and button legends are determined during panel configuration. Each configured button is illuminated. Buttons that are not configured are dark and have no legend. The illumination can be high or low tally—green, white, amber, or red. Red usually indicates a problem.

There are about 70 different button functions available to the configurer. You, the operator, will find a variety of these button types in the configurable button section of the panel you are using.

▲ [Bottom Row Buttons](#) of the panel are configurable too.

This table lists the button function classes for controlling Imagestore 750s:

Channel Selection	Transition Type	Salvo	Automation Assist
System Control	Transition Rate	Menu	

See [Definable Button Functions](#) on page 30 for details regarding these button functions.

Audio Levels

Figure 3-7 shows the audio level section in which there are 3 knobs:



Figure 3-7. Audio Level Section

▲ The knobs are red because level changes affect *on-air* levels.

'Program Out' Knob

This knob controls either the program output level or voice-over level.

When no voice-over is active on the program bus, the knob controls the overall program output level.

When one voice-over is active on the program bus, the knob controls the level of the selected voice-over signal.

When both voice-overs are active on the program bus, the knob controls the level of both voice-over signals. The effect is additive: a turn of the knob adds the same amount to each voice-over level.

This knob adjusts the audio level in increments of 0.5 dB, from -100.0 dB to $+28.0$ dB.

'Preset In' Knob

When the panel is controlling an Imagestore 750, this knob controls the preset input level.

This knob adjusts the audio level in increments of 0.5 dB, from -100.0 dB to $+28.0$ dB.

'Over Ratio/Duck Level' Knob

When the panel is controlling an Imagestore 750, this knob controls the audio level of the program source when a voice-over is mixed with program output. (That is called the "duck level." The term "over ratio" applies only to MCEs and MCPMs.)

When no voice-over is active on the program bus, the knob is inoperative.

When one voice-over is active on the program bus, the knob controls the audio level of the program source for the selected voice-over signal.

When both voice-overs are active on the program bus, the knob controls the level of the program source for both voice-over signals. The effect is additive: a turn of the knob adds the same amount to each voice-over level.


This knob adjusts the duck level in increments of 0.5 dB, from -100.0 dB to $+28.0$ dB.

3. Control Panel

Functional Sections of the Panel

On-Screen “Knobs” and the Slider

There are 8 knob “proxies” under the menu area:

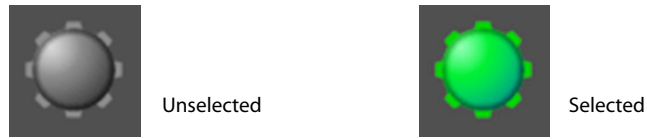

When you select a knob proxy, it turns green, a slider then appears to the right of the menu area, and the ‘Scroll/Set’ button of the button panel becomes enabled. Use either the slider or the ‘Scroll/Set’ knob to adjust parameter values.

Figure 3-8 shows the slider and the ‘Scroll/Set’ knob:

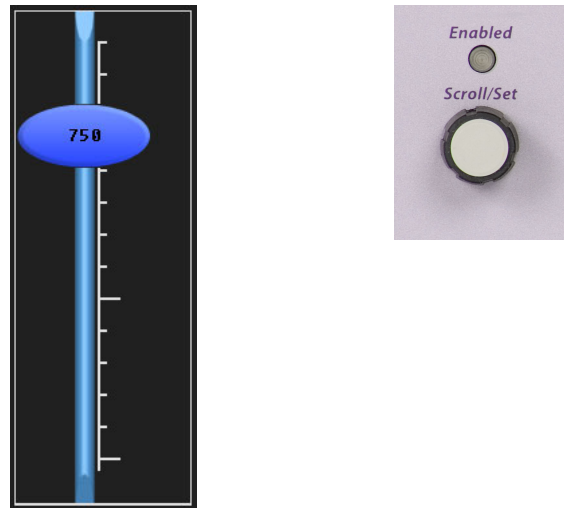


Figure 3-8. Slider

The slider scale changes according to the value being adjusted. If you are adjusting an audio level, the range is -100.0 dB to $+28.0$ dB. If you are adjusting transparency, the scale shows values in the range 0 to 512.

The slider is for rapid and coarse adjustment only. Its steps are large and uneven. To operate the slider, click or touch and drag the oval up or down. The setting value is displayed within the oval.

Audio Monitoring

Figure 3-9 shows the monitor section in which there are 2 knobs and 2 LEDs:



Figure 3-9. Audio Monitor Section

The audio monitor knobs are not used for panels controlling Imagestore 750s, but they are used for panels controlling MCEs or MCPMs.

Preset and Program Buttons

The preset and program buttons, on the button panel, are each divided into two parts:

1 Source buttons.

The leftmost buttons represent sources *only*.




Source buttons are usually green, high-tally when selected and low-tally when not. If a source has a problem (e.g., LOS or non-sync), it is high-tally amber when unselected and red when selected. Unused source buttons are dark.

Source buttons can be configured so that buttons for selected sources are white or red.

2 “Layer” buttons.

The rightmost buttons can be configured as video effects, and voice-overs:

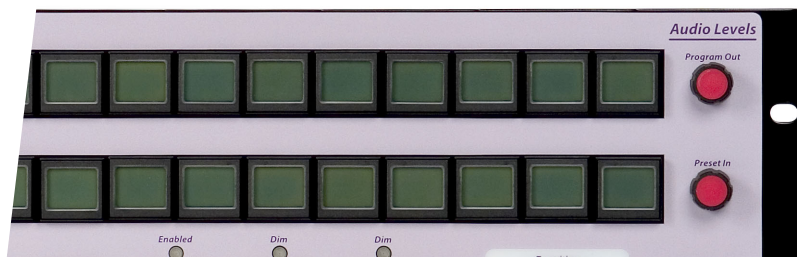

The layer section provides up to 4 DSKs, 4 DVEs, 8 XG layers, and 2 voice-overs (voice-overs).

Sixteen main sources buttons and 18 “layer” buttons obviously do not fit in a button row. The panel’s configurator will have made trade-offs in this regard.

Source buttons and layer buttons together forming 2 processing sequences:

Program Selections on the *program* buttons compose the *program* output of the currently selected Imagestore 750.

Preset Selections on the *preset* buttons preview the content of the program bus as it will appear after the next transition.

- ▲ The preset buttons can be configured to tally according to the “PresStation” model or the traditional model.

The preset bus (and its output) allow you to set up new output for the program bus. When the new output is ready, you press the transition button and the Imagestore 750 transitions the contents of the preset bus to the program bus.

- ▲ The preset and program buses behave differently under different transition options. For example, the preset buttons can be configured to tally according to the “PresStation” model or the traditional model. See [Transition Options](#) on page 88.

3. Control Panel

Functional Sections of the Panel


Your iMC-Panel-100 might be configured with one or more “group select” button. If it has group select button(s), you can switch between several groups of sources. When you switch groups, the source mnemonics of the selected group appear on the physical buttons.

In any case, up to 16 source buttons are available, using one group or another. Usually an iMC-Panel-100 will have fewer than 16 source buttons.

Source buttons are mutually exclusive. Pressing one selects that source and deselects an other source. Video effects and voice-overs are independent and *not* mutually exclusive.

Aux/User and Preview/User Buttons

The aux/user buttons and the preview/user buttons are on the display unit:

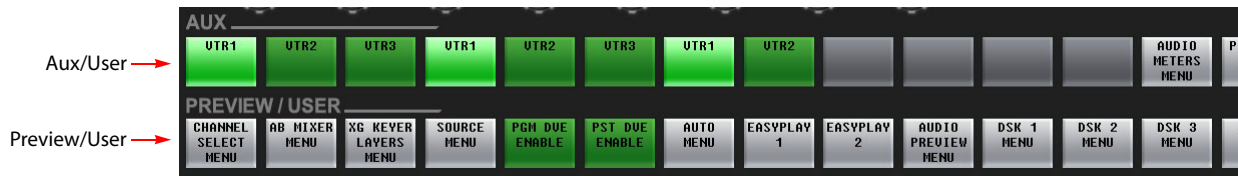

When the panel is controlling an Imagestore 750, all the buttons in the ‘Preview/User’ row are customer-definable. There are several dozen configurable button types among which are menu buttons.

The aux/user buttons, on the display unit, are divided into two parts:

1 Source buttons.

The leftmost buttons of the aux/user row represent sources *only*. They are the same sources as on the preview, program, and preset buttons.

Source buttons are usually green, high-tally when selected and low-tally when not. If a main source has a problem (e.g., LOS or non-sync), it is high-tally amber when unselected and red when selected. Unused main sources are dark.

- ▲ If the Imagestore 750 under control does not support an auxiliary device, all source buttons of the aux/user row are disabled (dark).
- ▲ Imagestore 750s have an “aux bus follow” option. Depending on how this option is set, your aux buttons might follow the program or preset bus or might remain independent. When they follow the program bus, whatever source becomes selected on the program bus is also selected on the aux bus. When they follow the preset bus, whatever source becomes selected on the preset bus is also selected on the aux bus.

In any case, it is always possible to use the aux buttons, normally, regardless of what was selected on the preset or program bus.

2 “Customer-definable buttons.

The rightmost buttons of the aux/user row, if not committed to sources, are customer-definable buttons. If your aux/user row has few source buttons and few customer-definable buttons, the intervening buttons will be unused (and dark).

Button Details

Source Button Characteristics

The source buttons display an 8-character source name on the button.

The main source buttons use the following color scheme:

Dark	Button is not in use.
Low Green	Not selected.
High Green	Selected video.
High Amber	An unselected video source is non-sync or LOS, or an unselected audio source is LOS.
High Red	The selected video source is non-sync or LOS, or audio source is LOS.

The touchscreen displays the source status. If status is “OK,” there is no message text. These are possible fault conditions:

1 Video LOS	3 Video Non-Sync
2 Audio LOS	4 Audio Problem

The numbers here show the priority of the messages (in case more than one condition arises).

“Hot Cuts”

When you press a button on the *program* bus, whether main source, video effect, or voice-over, the iMC-Panel-100 will request the Imagestore 750 to perform a “hot cut” on the program bus. The Imagestore 750 performs the hot cut without benefit of a transition.

Video Effects

Selected video effects overlay the selected main video source. Video effects are cumulative and apply in the order defined by the Imagestore 750.

DSKs are applied in this order: DSK1, DSK2, DSK3, DSK4.

If the Imagestore 750 has a DVE unit, it can insert DVEs in the video stream in one of three places: before DSK1, before DSK2, or before DSK3.

If the Imagestore 750 is connected to an Intuition XG processor, one of its DSKs can process XG keyer layers from the Intuition XG.

Any one effect is electronically *downstream* and visually *on top of* all the effects preceding it in the order. Any one effect is electronically *upstream* and visually *under* of all the effects following it in the order.

“Downstream” effects modify “upstream” effects and the main source. Upstream effects never modify downstream effects. For example, a DVE might transform the main source and DSK1, but not DSK2 or DSK3.

- ▲ Please note: the order of effect buttons and the number of effects assigned to the *buttons* do **not** affect the order in which the Imagestore 750 applies the effects. (Also, the source is always upstream of any effect.)

3. Control Panel

Functional Sections of the Panel

The video effect buttons use the following color scheme:

Dark	The video effect is not supported by the Imagestore 750.
Low-tally blue	The video effect is <i>not</i> selected.
High-tally blue	The video effect is selected.
High-tally amber	An unselected video effect has a problem (e.g. non-sync or LOS). Amber is a warning flag.
High-tally red	The selected video effect has a problem (e.g. non-sync or LOS). Red is an error flag or a severe warning.

A video effect button has 3 lines of 8 characters.

The first line of text identifies the video effect itself.

The second line of text identifies the effect assigned to the effect processor.

The third line of text varies:

- For DSKs, VOs, and XG keyers on the preset bus, the third line displays “CUT” or “FADE” depending on how the effect is armed. If the effect is not armed, the third line of the button displays nothing.
- For DVEs on the preset bus, the third line displays “ARMED” if the effect was armed. If the effect is not armed, the third line of the button displays nothing.
- On the program bus, the third line generally is blank, but for XG keyers, the third line might contain a portion of the XG keyer name if the name is longer than 8 characters.
- On the preset bus, for unarmed XG keyers, the third line generally is blank, the third line might contain a portion of the XG keyer name if the name is longer than 8 characters.

Downstream Keyers

The 4 keyer buttons are independent toggles. A downstream keyer (DSK) is active when its button is selected (high-tally) and inactive when its button is low-tally. (A DSK cannot actually be used when it is non-sync or LOS.)

An external key is usually a pair of video sources—a key and a fill. The key forms a mask for the fill. An internal key is a stored still frame or an animation. External keys can be provided by an Intuition XG processor.

A key source overlays the upstream source (and upstream effects) with specified clip, gain, and transparency parameters that control the key values.

Any DSK button can be associated with any key source, including Intuition XG clips.

DVE

The 4 DVE buttons are independent toggles. A DVE is active (selected) when its button is high-tally and inactive when its button is low-tally.

A DVE button is pre-configured with a DVE stored in the Imagestore 750.

There are button functions available (‘PGM DVE Enable’ and ‘PST DVE Enable’) that enable or disable DVEs on the program button row and the preset button row.

Video Effect Source Status

The touchscreen displays an effect's source status. Possible fault conditions include LOS and non-synchronous video.

You can check panel status to view all error conditions. Use the 'Manage Log' sub-menu under the 'Panel' menu. See page 93.

Voice-Overs

Like video effect buttons, the 2 voice-over button pairs on the program and preset bus are *not* mutually exclusive. When an over is selected on the program button row, its audio contributes to program audio. When an over is selected on the preset button row, it becomes armed and will play at the next transition.

▲ An over function mixes the selected audio source to air, but it does *not* trigger audio playback.

Voice-Over Button Characteristics

The voice-over buttons use the following color scheme:

Low violet	The voice-over is <i>not</i> selected.
High violet	The voice-over is selected.

Voice-Over Source Status

The touchscreen displays an over's source status. These are the fault conditions:

- 1 LOS
- 2 Problem

If status is "OK," there will be no message.

The third line of text displays "CUT" or "FADE" depending on how the over was armed. If the effect is not armed, the third line of the button is blank.

Bottom Row Buttons

These buttons are all configurable:




The configurable button functions are described under [Definable Button Functions](#), on page 30.

3. Control Panel

Definable Button Functions

Transition Button

Pressing the transition button initiates a transition in the Imagestore 750 controlled by your panel. You can change the transition rate and type.

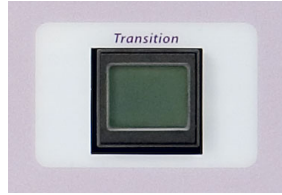

The transition button is orange under normal circumstances. The transition button is high-tally while the Imagestore 750 is performing a transition. Otherwise it is low-tally.

The maximum transition period is 999 frames. The minimum is 1.

When you press this button, the panel sends a transition request to the Imagestore 750.

Please note the following points regarding transitions:

- You can start a new transition only after the current transition has completed.
- You can always interrupt a transition in progress with a cut on the program bus.
- Fade transitions (cut-fade, V-fade, U-fade, and fade-cut, and others) involve a fade to *black* during the transition.

Definable Button Functions

Buttons in the configurable button section, the transition control section, and the system control section of the iMC-Panel-100 can be redefined. These are the button function classes:

Channel Selection	Menu	Transition Type	Automation Assist
Salvo	System Control	Transition Rate	

Following are descriptions of the functions that can be assigned to definable buttons during configuration (using the MCS Panel Configuration Editor).

Remember that the iMC-Panel-100's button legends are at the discretion of the configurer. They might not be exactly what you see listed in this guide.

None

This kind of button has no function. On the panel, the button's legend is blank and the button is dark. (The iMC-Panel-100 can never enable or disable this kind of button.)

Channel Selection

An Imagestore 750 is equivalent to a *channel*. A typical iMC-Panel-100 configuration provides a set of channel selection buttons. (You can also select channels in the menus.)

A channel can be configured to invoke an NV9000 salvo when selected. Consult your administrator to determine which channels execute salvos.

Your panel will usually have a default channel which is the channel that is selected when the panel powers up. Your panel might be configured so that its default channel is part of a channel gang. If so, your panel is configured in what is called “automatic gang mode.” Whenever the default channel is selected, all the channels in the automatic channel gang are selected—as a channel gang.

There are 2 button types for channels:

- ‘Channel’ selection.
- ‘No Channels’.

Channel Select

A channel is equivalent to an Imagestore 750, an MCE, or an MCPM. Press a ‘Channel Select’ button to select a channel to control.

When you press a ‘Channel Select’ button, all status and configuration data for the newly selected channel are downloaded to the panel. (It takes about one second.)

‘Channel Select’ buttons are mutually exclusive.

If “automatic gang mode” is in effect and the channel you select is the default channel, the ‘Channel Select’ button causes all channels in the automatic channel gang to be selected. If you have a ‘Channel Gang’ button, it becomes high-tally. The main channel in the gang (which is the default channel, to which the button corresponds) tallies green and the follower channels in the gang tally amber.

When “automatic gang mode” is not in effect or you are selecting a channel other than the default channel, pressing the ‘Channel Select’ button does nothing more than acquire that channel. The channel button tallies green unless there are problems.

‘Channel Select’ buttons use the following colors:

- Low-tally green. The associated channel is not selected.
- High-tally green. The associated channel is selected and communicating. The channel might or might not be the main channel in a channel gang.
- High-tally amber. The associated channel is selected as a follower in a channel gang and is communicating.
- High-tally red. The associated channel is selected, but the iMC-Panel-100 cannot establish communication with it.

A channel selection button also displays a mnemonic for the associated Imagestore 750, MCE, or MCPM.

An Imagestore 750 can accept up to 4 concurrent connections: any combination of up to 4 control panels may acquire the same channel at the same time. If a fifth control panel attempts to connect to an Imagestore 750 that already has four control panel connected to it, the fifth control panel’s request for connection will be ignored.

▲ Note to configurers: only one channel selection button may be assigned to a channel.

No Channels

A ‘No Channel’ button quickly disconnects the panel from all channels. (To restore operation, select any channel.) These are the ‘No Channel’ button colors:

- Green. The panel is connected to a channel.
- Red. The panel is not connected to any channel.

3. Control Panel

Definable Button Functions

- ▲ Note to configurers: a panel configuration can have only one ‘No Channel’ button.
- ▲ A “no channel” button is typically used in diagnostic situations.

Salvo

A panel might have one or more salvo buttons. Pressing a salvo button causes an NV9000 salvo to execute. (This button requires a connected NV9000 router control system.)

- ▲ A channel change can also execute a salvo (except when you are switching to the default channel under automatic gang mode). That is because of the following restriction:
- ▲ When channel gang selection is enabled, salvos are inhibited.

System Control

There are 11 system control button *types* that can be present on your iMC-Panel-100:

Panel Lock	Auto Off	Fade-to-Black	Macro Arm	PGM DVE Enable
Group Select	Audio Lock	Fade-to-Silence	Fire Macro	PST DVE Enable
Kaleido-X Layout				

Panel Lock

The panel lock button prevents you (or someone else) from accidentally making changes to the Imagestore 750 while allowing you see the status of the Imagestore 750.

A panel lock button is a toggle. Press it once to lock the panel. Press it again to unlock the panel.

When the panel is locked:

- The panel lock button is high-tally red.
- All other buttons on the panel are disabled (locked) but their colors and legends remain unchanged.

When the panel is locked and you press the panel lock button, the panel will become unlocked and the panel will function normally.

Automation Off

The ‘Automation Off’ button is a toggle that enables or disables control of the currently selected Imagestore 750 by an automation system. When this button is high-tally red, the currently selected Imagestore 750 ignores commands from the automation system (if there is one). When this button is low-tally green, the Imagestore 750 communicates with the automation system normally.

If the currently selected Imagestore 750 does not allow you to turn automation off and on, the button is disabled (dark).

Fade to Black

A ‘Fade To Black’ (FTB) button is a toggle. Press it once to fade the program output of the currently selected Imagestore 750 to both black and silence. Press it again to fade the program output up from black and silence.

When the program output is in black/silence, fading to it, or fading up from it, the FTB and FTS buttons of the main menu are red.

Fades occur at the FTB (and FTS) rate defined in the Imagestore 750 configuration. The FTB rate is fixed in the Imagestore 750 configuration.

These are the button colors:

- High-tally green. The program output is fading or has faded to black.
- Low-tally green. The program output is fading or has faded back to normal.

Fade to Silence

A 'Fade To Silence' (FTS) button is a toggle. Press it once to fade the program output of the currently selected Imagestore 750 to silence. Press it again to fade the program output up from silence.

When the program output is silent, fading to it, or fading up from it, the FTS button of the main menu is red.

Fades occur at the FTS rate defined in the Imagestore 750 configuration. The FTS rate is fixed in the Imagestore 750 configuration.

These are the button colors:

- High-tally green. The program output is fading or has faded.
- Low-tally green. The program output is normal.

Group Select

The Imagestore 750 allows different source groups to be defined, where the sources in a group can be mapped to the main source buttons of the panel.

A 'Group Select' button selects a source group. When the group is selected, its source mnemonics appear on the main source buttons and (if your system is so configured) the sources in the group appear on monitors in a monitor wall.

When you hold the button down, an automated transition is suspended. When you release the button, the transition continues. This is special-purpose button that lets you synchronize a transition with a video feed that might be delayed unpredictably.

The button is low-tally green normally and high-tally amber when you press it.

Audio Lock

An 'Audio Lock' button is a toggle that enables or disables the 3 audio level knobs on the iMC-Panel-100. (This feature helps prevent accidental changes to the audio levels)

The button is amber when the audio level knobs are locked.

Macro Arm

A 'Macro Arm' button selects an Imagestore 750 macro that will execute at the next transition.

- ▲ Certain macros can contain functions that must not execute during a transition. Such macros will execute immediately after the transition completes.

Fire Macro

A 'Fire Macro' button executes an Imagestore 750 macro immediately.

PGM DVE Enable

A 'PGM DVE Enable' button enables or disables the use of DVE buttons on the program button row.

3. Control Panel

Definable Button Functions

PST DVE Enable

A 'PST DVE Enable' button enables or disables the use of DVE buttons on the preset button row.

KaleidoX Layout

A 'Kaleido-X Layout' button triggers a *re-layout* of a Kaleido-X multi-viewer. (The panel will probably not have any 'Kaleido-X Layout' buttons if your master control system is not associated with a Kaleido-X multi-viewer. The Kaleido-X multi-viewer supports multiple layouts.)

Menu

A menu button is a toggle. Press it once to place the indicated menu on the touchscreen. Press the button again to return the main menu on the touchscreen.

There are 20 different menus that you can control:

- Main menu
- Automation
- Macro
- XG Keyer Layers
- Audio Preview
- Audio Meters
- Source
- A/B Mixer
- DSK 1–4
- Channel Select
- PGM Out Audio
- PGM In Audio
- PST In Audio
- Voice-Over 1, 2
- EasyPlay 1, 2

Each menu button controls one menu. To control all 18 menus, you need 18 menu buttons.

Details on the different menus can be found in Chapter 5, [Menus](#), on page 45.

Automation Assist

There are 4 'Automation Assist' button functions:

- 1 Cue next.
- 2 Drop next.
- 3 Hold next.
- 4 Take next.

These buttons allow you to manipulate the automation playout to a limited extent.


Transition Type

There are 8 'Transition Type' button functions:

Cut	V-fade (or fade-fade)	V-fade preset 1
Fade/cut	Cross fade (or X-fade)	V-fade preset 2
Cut/fade	U-fade	


Transition type buttons are mutually exclusive. Press one to select the transition type the Imagestore 750 will use subsequently to execute transitions. All other transition type buttons become deselected.

Transition type buttons appear green and show graphics instead of text:

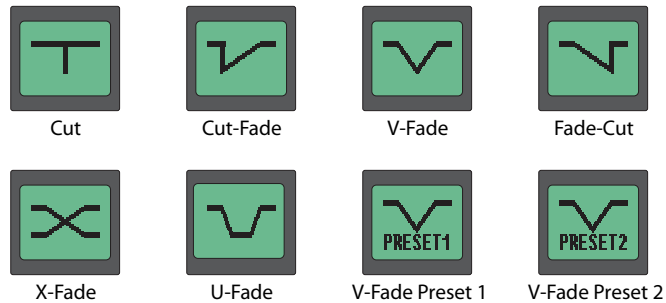

(A U-type transition is like a V-fade, but with a pre-configured dwell period. The exact length of the dwell period is defined by the person configuring the Imagestore 750. The characteristics of the V-fade preset 1 and preset 2 types are also defined by the person configuring the Imagestore 750.)

If one or more transition functions on your panel were assigned to the “soft” buttons of the display, they look like these — the same basic graphics with different shading:

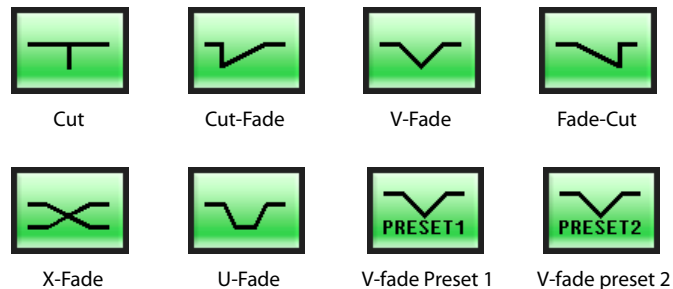

Transition Rate

There are 4 ‘Transition Rate’ button types:

- 1 Slow.
- 2 Medium.
- 3 Fast.
- 4 Automation Rate.

The actual rates (i.e., the duration, in frames, of the transitions) that correspond to slow, medium, and fast are defined in the Imagestore 750 configuration.

The ‘Automation Rate’ button selects whatever rate is in effect in your automation system (if there is one).

The transition rate buttons are mutually exclusive. Press one to select the transition rate the Imagestore 750 will use subsequently to execute transitions. Other rate buttons become deselected.

Transition rate buttons are green.

- ▲ Keep in mind that each DSK has its own slow, fast, and medium rate settings. If you press the ‘Medium’ button, for instance, all DSKs will play out at their medium rate (unless they are set to cut to the program output).

3. Control Panel


Connectors

Notes

Remember that most of the iMC-Panel-100's button legends are at the discretion of the configurator. They might not be exactly what you see listed in this guide.

Connectors

At the rear of the iMC-Panel-100's button panel are 2 power connectors, an Ethernet connector, two USB connectors, a VGA connector (for the display unit) and a GPI/alarm connector:

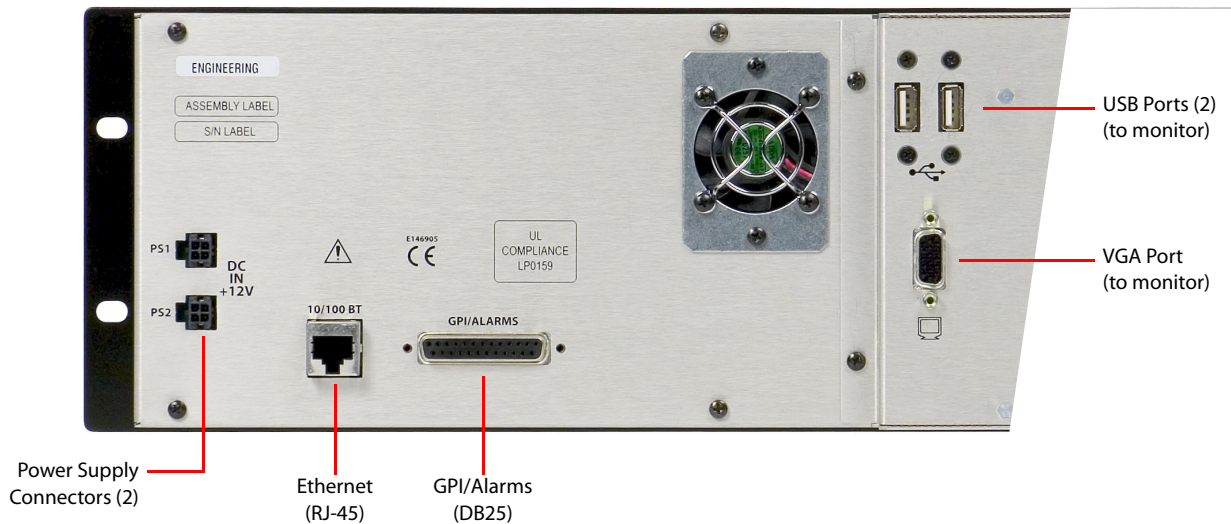

Button Panel

Power

There are 2 power connectors, PS1 and PS2, for the sake of redundancy. Only one is required, but with both, the iMC-Panel-100 will continue uninterrupted operation if one fails.

The PS0001 power supply that comes with the iMC-Panel-100 has a 4-pin plug that goes in the connector. The plugs are keyed so that you cannot insert the plugs the wrong way:



Connect the line cable to the power supply and then to AC power. Then insert the 4-pin plug into the iMC-Panel-100's power connector.

The button panel has two power connectors. You can connect an additional PS0001 for redundancy.

Ethernet

The iMC-Panel-100 has one RJ-45 Ethernet connector. Connect the iMC-Panel-100 to the switch on the master control network using CAT5 cable or better.

It is on this network that the iMC-Panel-100 communicates with MCPMs and with the configuration software. You (or your system administrator) must provide a unique IP address for the iMC-Panel-100.

Without the IP address, the iMC-Panel-100 cannot communicate with MCPMs, MCEs, or the configuration software. Use the Panel ID menu under the Panel Menu to set the IP address and IP subnet mask.

The default IP address is 192.168.7.100, and the subnet mask must always be 255.255.255.0.

▲ Operators generally need not be concerned with the iMC-Panel-100's network address.

USB Ports


There are two USB ports. If your iMC-Panel-100 uses a Planar touchscreen, one of the USB ports will connect to the USB port of the touchscreen. If your panel does not have a touchscreen, one of the USB ports will be used for a mouse (with which you manipulate items on the display). The other port is discretionary.

VGA Port


The VGA port (HD15) connects to the VGA port of the display.

GPI/Alarm

The iMC-Panel-100 has a DB25 connector that supports GPI inputs, GPI outputs, and alarms:

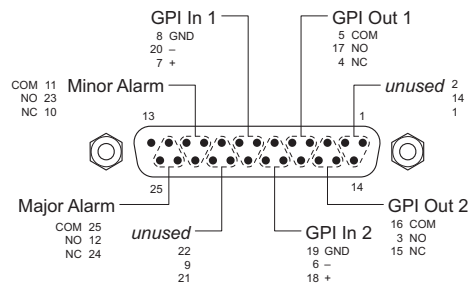

If you intend to use any of these connections, make the connections according to figures 3-10 and two diagrams.

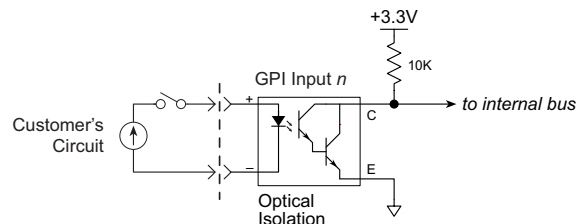

If your GPI input cable has a ground wire or shielding, you can connect the ground (or shielding) to the associated ground (or shielding) pin on the DB25 connector. It is not necessary to do so. The ground pin is not shown here.

Figure 3-10. GPI Input

3. Control Panel

Connectors

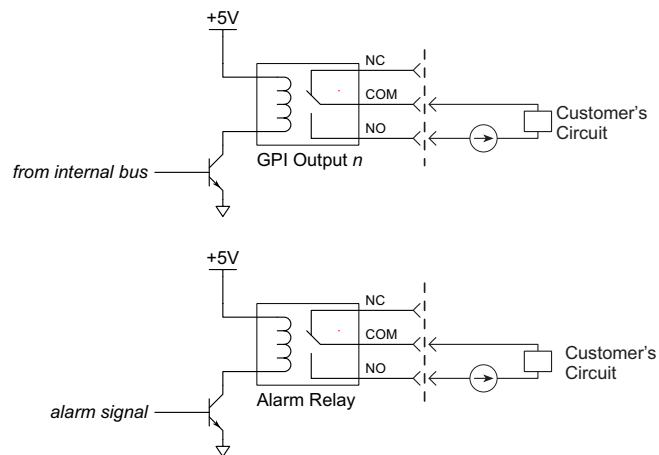


Figure 3-11. GPI Output and Alarms


Power applied to the inputs can be from 5 to 24 VDC, and less than 30 mA. Typically, 5 V at 1 mA. Loads for the outputs can be larger:

Max current:	1 A
Max voltage:	125 VAC, 110 VDC.
Max capacity:	62.5 VA, 33 W.
Rated loads:	1 A at 30 VDC; 0.3 A at 110 VDC; 0.5A at 125 VAC.

Touchscreen Display

This describes the Planar PT1945R touchscreen display. (If you have purchased another display type, the connections will differ.)

At the bottom of the Planar touchscreen display (in a recess) are an AC power connector, a VGA connector, an RS232 connector, a 3 mm audio jack, and a USB connector:

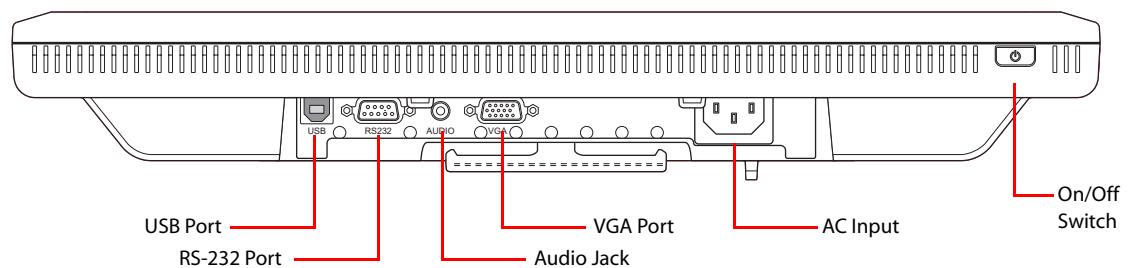

Use the cables supplied with the display to make connections. See Chapter 4, [Connectors](#), for connection details.

Important: do not make any connection to the RS-232 port.

Notes:

- 1 You can obtain a manual for the Planar PT1945R monitor from the manufacturer at either www.planartouch.com or www.planar.com.
- 2 The on/off switch is at the bottom of the display at the right, as you are viewing the display from the front.
- 3 At the right of the display are 4 buttons (not shown here) that are to be used to set the operating characteristics of the display.

4. Installation

Chapter 4 addresses concepts relating to the installation of the iMC-Panel-100. It presents the following topics:

- [Summary](#)
- [Button Panel](#)
- [Display](#)
- [Connections](#)

Summary

The iMC-Panel-100 has two separate parts: a button panel and a display. There are several installation options.

You can rack-mount the button panel, either in a full rack or in a small desktop rack. It is also possible to mount the button panel in a recess in a console or desktop. The button panel is light in weight and not very deep (3.7"). It does not require special rack supports and should allow adequate knee clearance when mounted in a recess of a desktop.

The display comes with a detachable stand. It can be placed on a desktop or a shelf. In particular, it can be placed on a shelf in a vertical rack, presumably above the button panel.

The display has VESA-standard 100 mm mounting holes that mate to a number of readily available wall-mounting fixtures. The mounting fixture must be able to support 11 lb (5 kg).

- ▲ Exercise care not to damage the LCD surface of the display. When making wiring connections to the display, place the display face-down on a flat, even surface that is clear of small parts or debris.


4. Installation

Button Panel

Button Panel

Rack-mounting the button panel is trivial. It need not be discussed.

If you wish to place the button panel in a recess of a console or desktop, you will need to cut a hole in the console surface that will fit the button panel. This is a suggested cutout:

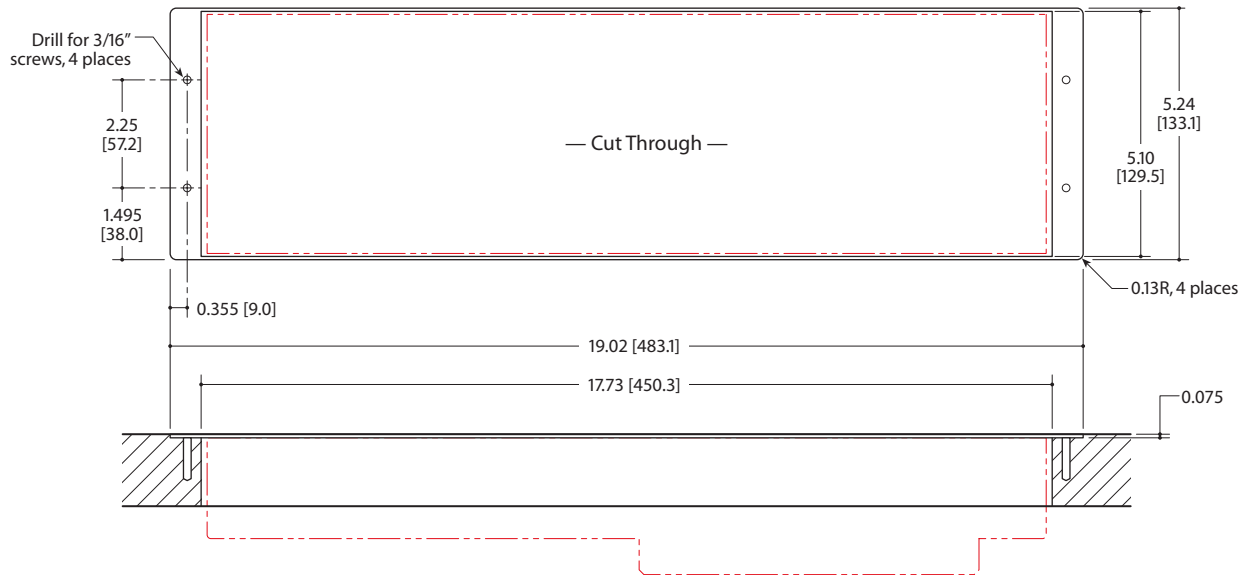

The dimensions given above allow 0.01" (0.25 mm) clearance on each edge of the front surface of the button panel, about 0.125" (3 mm) clearance on each short side of the panel's enclosure for ventilation, and about 0.06" (1.5 mm) clearance on the long sides of the enclosure.

With recessed mounting, keep in mind that cables must run from the button panel to the display unit and also to the Ethernet switch for the master control network and to external power supplies (PS0001).


Display

(This applies to the Planar PT1945R touchscreen display. Other displays might differ.)


Mounting the display

Skip this section if you plan to use the display with its stand, on a flat surface.

- 1 If the stand is attached to the display, remove it. (There are 4 mounting screws. See the following figures.)
- 2 Using finger pressure, slide the cover of the wiring recess down to remove it:

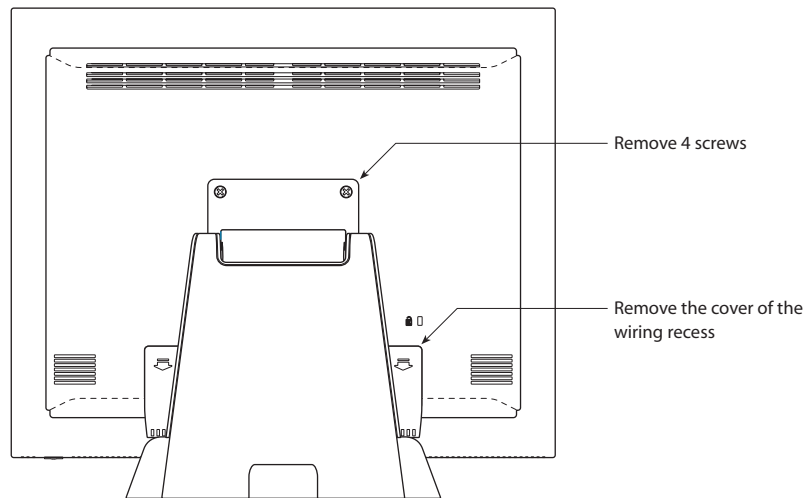

The wiring recess and the 4 mounting holes are now exposed.

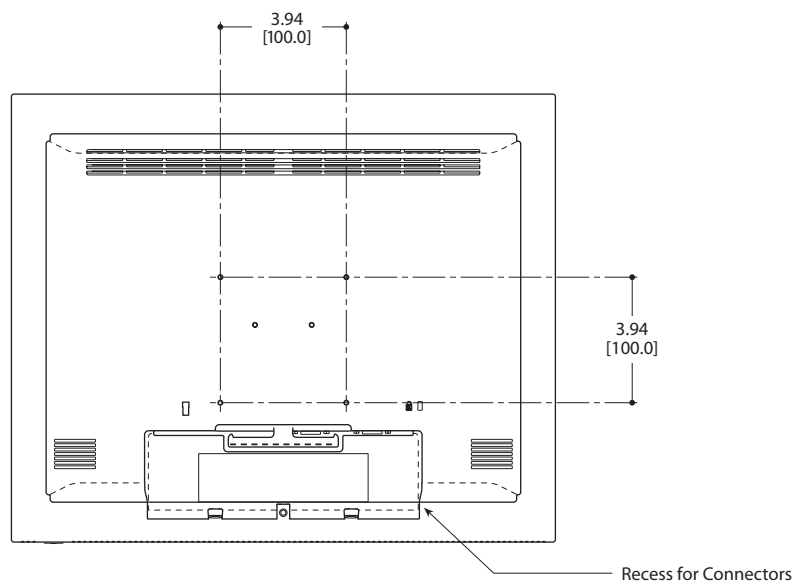

Attach the monitor to your mounting fixture. The mounting holes are tapped for M4 screws and are 11 mm deep. Use screws of a length appropriate for your mounting fixture.


The monitor has cooling vents at the rear. You should not block the vents.

4. Installation


Connections

Connections

These are the connectors at the rear of the button panel:

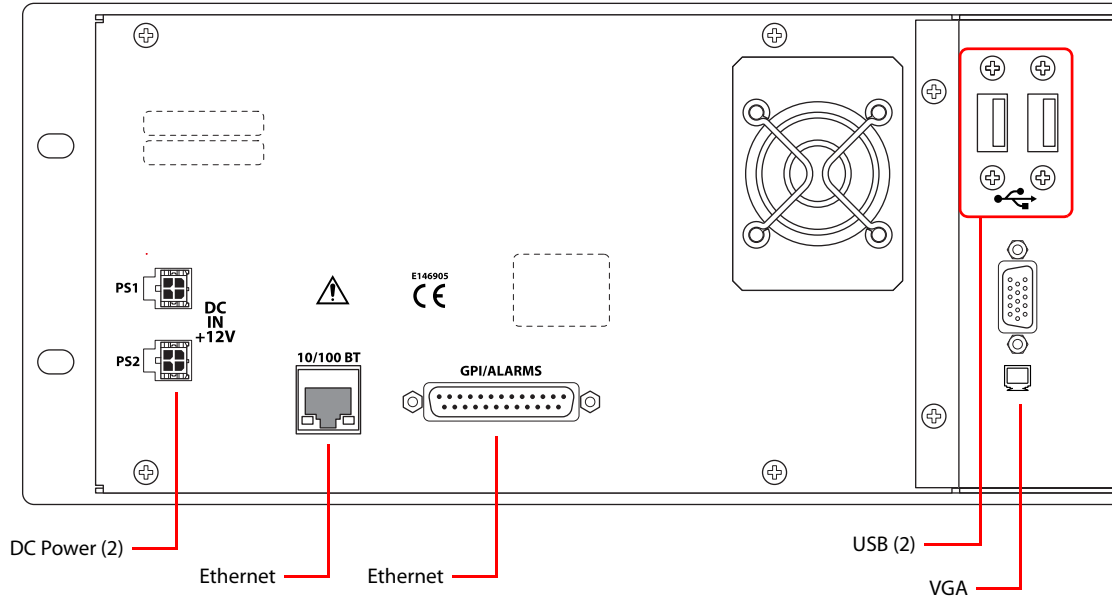

These are the connectors in the wiring recess of the display unit:

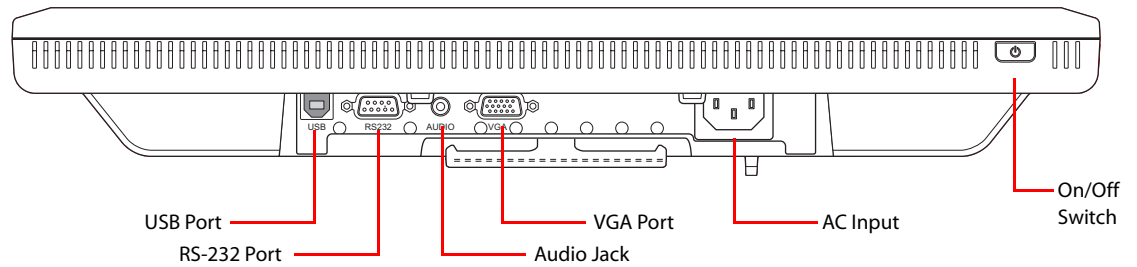


GPI/Alarms

The GPI/Alarms connector of the button panel supports optional or discretionary wiring. The connector is a DB25. See [Specifications](#) on page 145 for pinout and usage information.

Cabling


If you are using the display with its stand, route the cables through the cable harness (in the wiring recess) and then through the cavity in the middle of the stand:

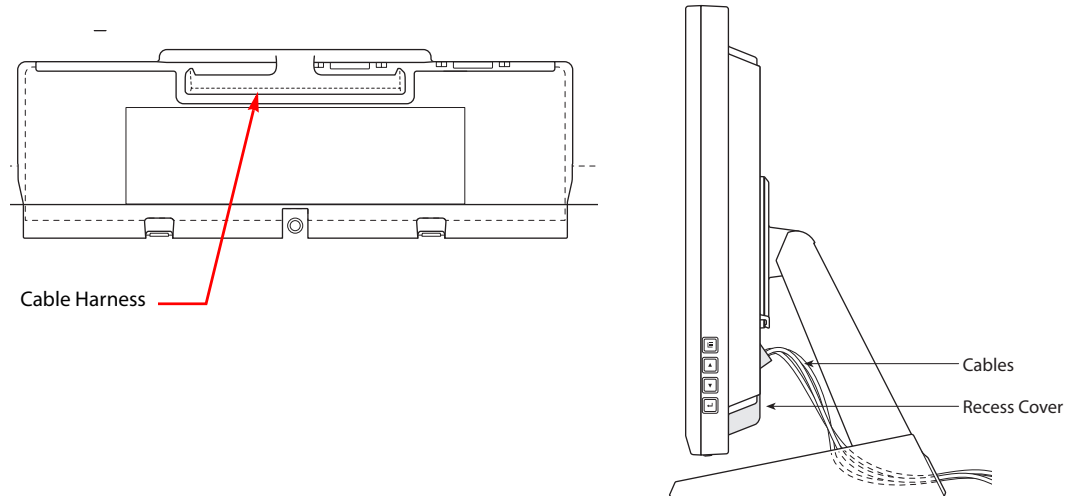


If you are not using the stand, it is not necessary to use the cable harness.

In any case, you will have to remove the cover of the wiring recess to perform some of these steps.

- 1 Connect a power supply or power supplies (PS0001) to either or both of the power connectors of the button panel. Then connect the power supplies to AC power.
- 2 Connect the button panel's Ethernet port to a port on the Ethernet switch of the master control network.
Later, you will assign an IP address to the iMC-Panel-100.
- 3 Using the supplied VGA cable, connect the VGA port of the button panel to the VGA port of the display:

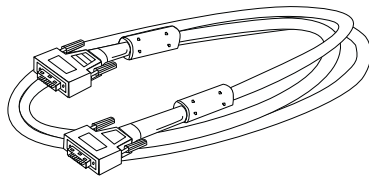

- 4 Using the supplied USB cable, connect the USB port of the display to one of the USB ports of the button panel:

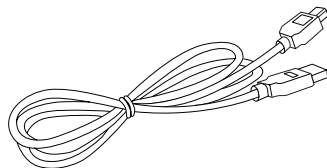


- 5 If you wish to use a mouse with the iMC-Panel-100, connect the mouse to the remaining USB port of the button panel. (The mouse must, of course, have a USB connector.)

4. Installation

Connections

- Using the supplied power cable, connect AC power to the display:

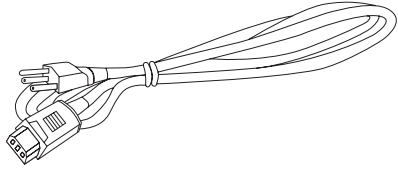

- If you are using the display with a stand, ensure that the cables pass through the cable harness in the wiring recess and then replace the recess cover. It snaps into place.

There is a small screw in the kit that comes with the display. Use it to secure the recess cover.


- Turn on the display using its on/off switch located at the bottom, on the right as you are facing the display from the front.

You should see the main menu of the iMC-Panel-100 on the display.

- ▲ Important: leave the RS232 port of the display unconnected.

Setup

- Press the 'Panel' button of the main menu (of the display). Then press the 'IP Setup' button. Use the buttons of the 'IP Setup' menu to enter an IP address, a subnet mask, and a gateway IP address for the iMC-Panel-100. Generally the subnet mask should be 255.255.255.0. (All devices on the master control network must have unique IP addresses.)
- There are 4 buttons at the right side of the display:

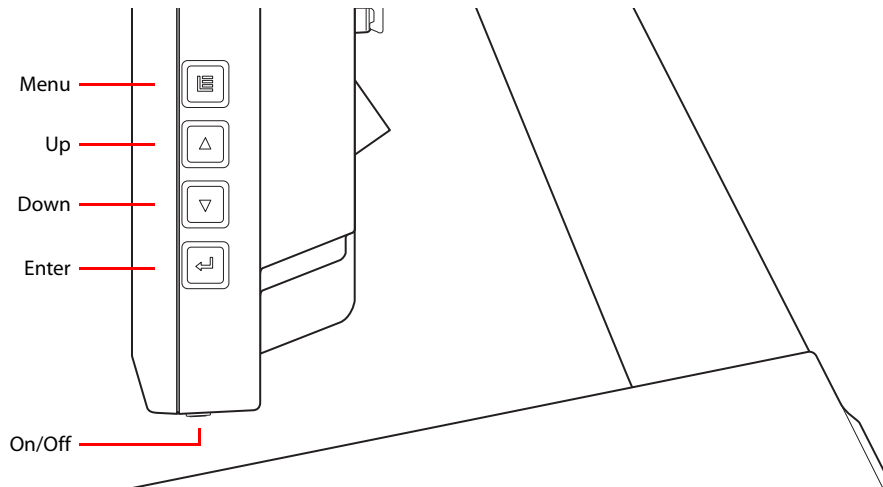

Press the menu button to reveal the on-screen adjustment menu. Press the button again to hide the menu. (The menu will turn off by itself if it is idle for a certain amount of time. You can change the timeout period.)

If you wish to adjust the display settings (e.g., brightness, language, menu timeout period), use the up, down, and enter buttons to navigate through the entries of the menu.

Use the up and down buttons to increase or decrease parameter values.

Please refer to the Planar PT1945R manual for further details.

You can obtain a manual for the Planar PT1945R monitor from the manufacturer at either www.planar.com or www.planar.com.

5. Menus

Chapter 5 describes the menus of the iMC-Panel-100 as they apply to Imagestore 750s. It presents the following topics:

- [About Menus](#)
- [Main Menu](#)
- [Automation Menu](#)
- [Channel Select Menu](#)
- [Audio Preview Menu](#)
- [Program Input Audio Menu](#)
- [Preset Input Audio Menu](#)
- [A/B Mixer Menu](#)
- [XG Keyer Layers Menu](#)
- [“EasyPlay” Menus](#)
- [Menu Button Conventions](#)
- [Audio Meters Menu](#)
- [Channel Select Menu](#)
- [DSK Menus](#)
- [Macro Menu](#)
- [Program Output Audio Menu](#)
- [Voice-Over Menus](#)
- [Sources Menu](#)
- [Panel Menu](#)

About Menus

The iMC-Panel-100’s color LCD touchscreen presents a number of selectable menus. Using the menu(s), you can make source selections and parameter adjustments in several ways:

- Pressing the menu’s on-screen buttons or selecting an item in a list.
- Entering numeric values on the menu’s keypad by pressing the numeric menu buttons.
- Using any of the 8 knob proxies below the menu to set a parameter value. When selected, the knob proxies enable an on-screen slider and the ‘Scroll/Set’ knob of the button panel, either of which can be used to adjust the parameter.

5. Menus

About Menus

Main Menu

Figure 5-2 illustrates the main menu components:

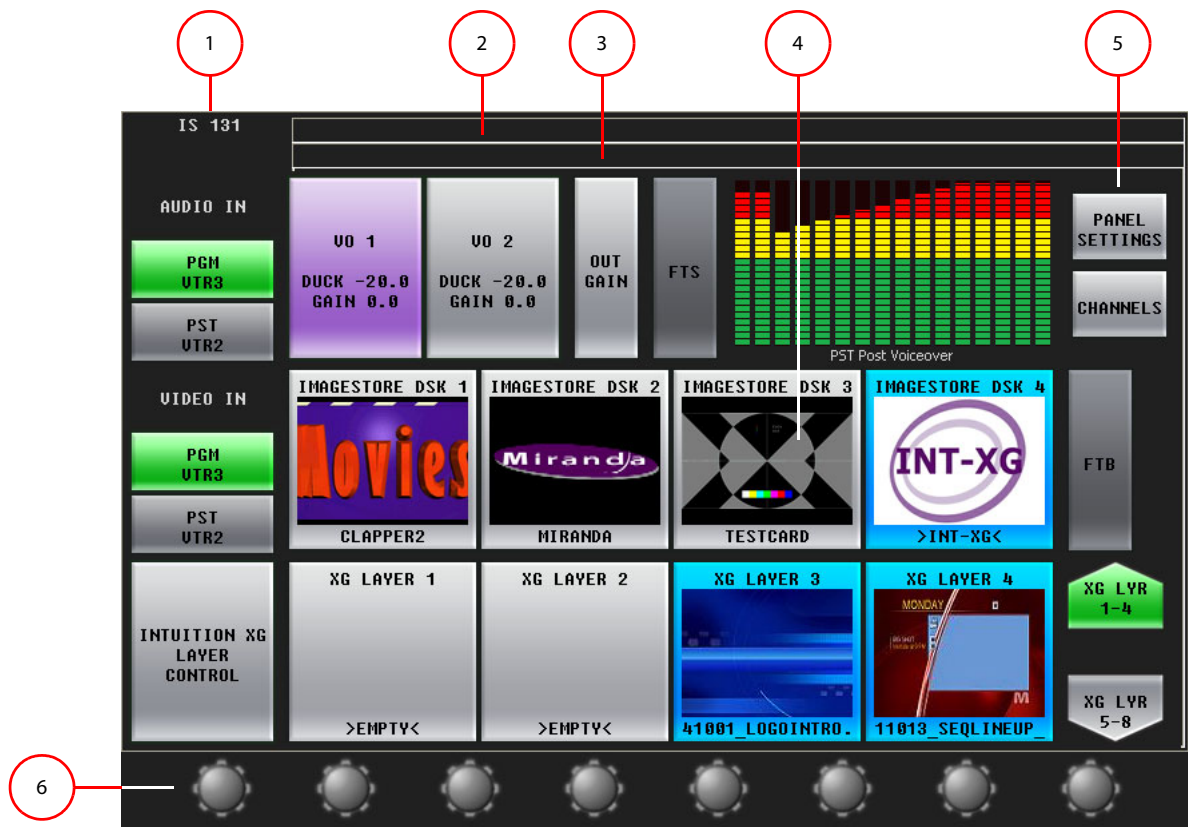


Figure 5-1. Menu Parts (Showing the Main Menu)

1	Menu name	3	Message bar	5	Navigation buttons
2	Error Bar	4	Toggle button	6	Knob proxies

Following are descriptions of each menu area:

1 Menu name

The current menu name is always present in the top left corner. This label changes dynamically as you use different menus.

The main menu shows the channel name in this area.

2 Error Bar

The error bar is a rectangular area at the top of the menu that displays error messages (e.g., “Panel Not Connected”) and other important “alerts.”

3 Message bar

The message bar is a second rectangular area at the top of the menu that displays confirmation messages when certain actions are in progress (e.g., “Changing Channels”) or have completed (e.g., “NV9000 Salvo Successful”).

4 Selection buttons

A selection button lets you choose an one of several items. In Figure 5-2, the selection button identified selects DSK 3.

5 Navigation buttons

A navigation button takes you to another menu. In Figure 5-2, the navigation button identified selects the panel menu.

6 Knob proxies

You can adjust menu parameters (such as DSK transparency) by clicking a parameter's associated knob "proxy" and moving the slider that appears or turning the 'Scroll/Set' knob. (The proxy turns green when you select it.) For disabled parameters, the knob proxy is also disabled. Enabled parameters show a green "asterisk" near by the proxy to show that it is usable.

Other Menu

Figure 5-2 illustrates the usual menu components:

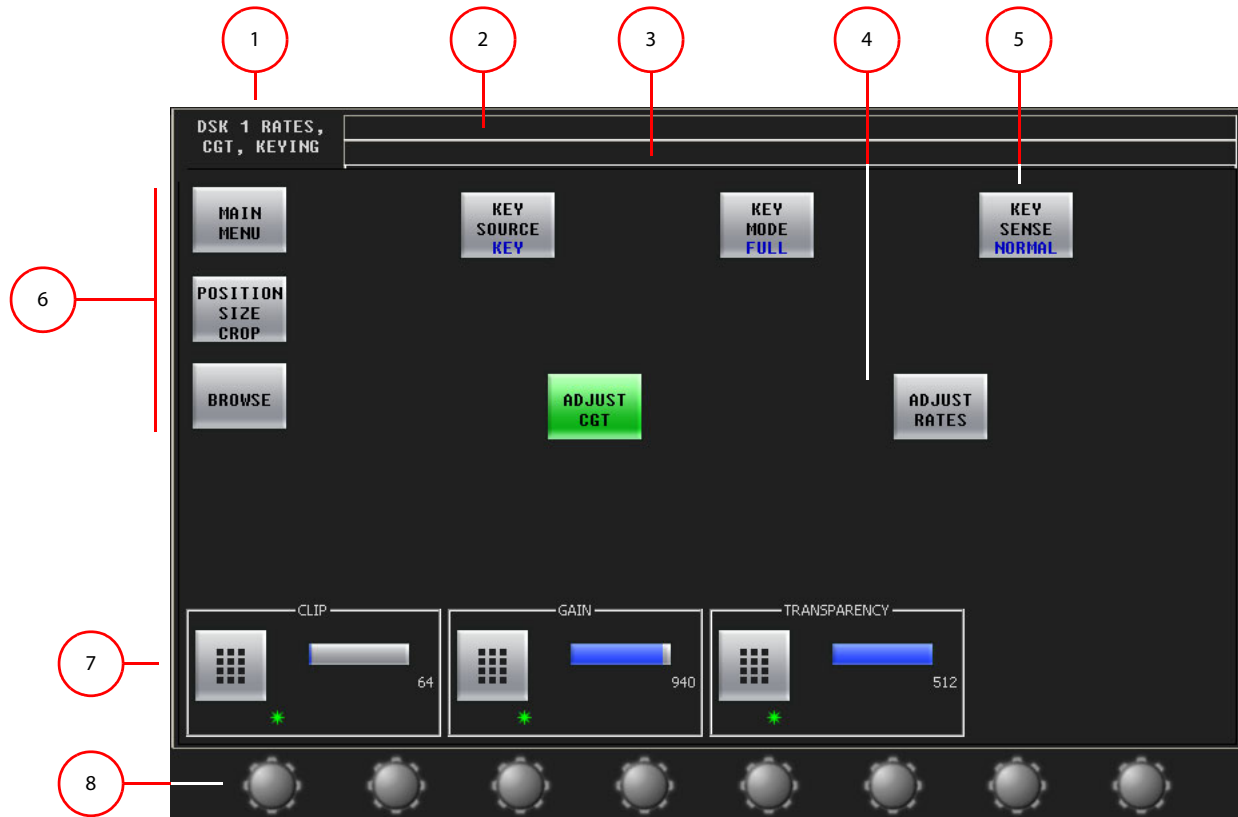


Figure 5-2. Menu Parts

1	Menu name	3	Message bar	5	Functional area	7	Keypad Buttons
2	Error Bar	4	Toggle button	6	Navigation bar	8	Menu "knobs"

5. Menus

About Menus

Following are descriptions of each menu area:

1 Menu name

The current menu name is always present in the top left corner. This label changes dynamically as you change menus.

2 Error Bar

The error bar is a rectangular area at the top of the menu that displays error messages (e.g., “Panel Not Connected”) and other important “alerts.”

3 Message bar

The message bar is a second rectangular area at the top of the menu that displays confirmation messages when certain actions are in progress (e.g., “Changing Channels”) or have completed (e.g., “NV9000 Salvo Successful”).

4 Toggle button

A toggle button lets you switch a function or an option on and off or switch between two options.

5 Functional area

The function area is the menu’s working area for all selections, adjustments, and modifications. The content of the area changes according to the selected menu. Content can include messages, lists of settings, a scroll bar, graphics, buttons, and a keypad.

6 Navigation bar

Some buttons are “navigation buttons.” These buttons either change the display, introducing new controls, or take you to another menu altogether.

These are typical navigation buttons:



Press ‘Main Menu’ to return to the main menu.



Press ‘Back’ to jump one level up in the menu structure, from your current location. This button is present on many menus.



Press ‘Edit/More’ to jump one level down the menu structure, for purposes of adjusting a selected item (e.g., an item in a list). Only a few menus have this button.

7 Keypad Buttons

The keypad buttons appear when a menu has a parameter that you can set with a numeric value. When you touch a keypad button, the panel displays the keypad.

8 Menu “knobs”

You can adjust menu parameters by clicking a parameter’s associated knob “proxy” and moving the slider that appears or by turning the ‘Scroll/Set’ knob. (The proxy turns green when you select it.) For disabled parameters, the knob proxy is also disabled. Enabled parameters show a green “asterisk” near by the proxy to show that it is usable.

Menu Button Conventions


The following concepts apply to menu buttons in the iMC-Panel-100's touchscreen:



A *momentary* button executes the selected function, changes to bright green for an instant, then returns to dark green. The 'Restore Default' button is an example.



A few buttons are red, indicating that caution is advised. The 'Take' buttons in the audio channel shuffle menus are also red.

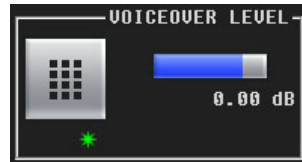

Active keypad buttons appear bright and usually have a green "asterisk" that indicates the "knob" below it will change the button's parameter value. The parameter's current value is present in the enclosing box. Pressing the button itself activates the keypad (menu) so that you can adjust a parameter numerically.

Inactive keypad buttons appear with a dim pattern and any associated graphics are also dimmed. Parameter values are not evident.



A *list* button is blue or green. A selected list entry is high-tally.

See [About Colors](#) on page 99 for additional information on button colors.

Keypads

Figure 5-3 shows the keypad, used in menus for numeric entry and parameter adjustment:



Figure 5-3. Keypad (Sample)

Please note:

- The box with large numbers is the "entry register" that shows your numeric entry in progress.
- Press 'Clear' to clear the entry register.
- Press 'Cancel' to return to the previous menu—without entering a number.
- Press 'Done' to accept the new entry, and return to the previous menu. The 'Done' button remains disabled until you make an entry.

5. Menus

About Menus

If the number is out of range, an error message appears. (Press 'OK' to return to the keypad.)

Lists

The menus present channels in lists. Lists are arrays of "buttons," up to 3 buttons wide and indefinitely long. When a list has more than 4 rows of buttons, a scroll bar appears at the right.

Figure 5-4 shows a sample:

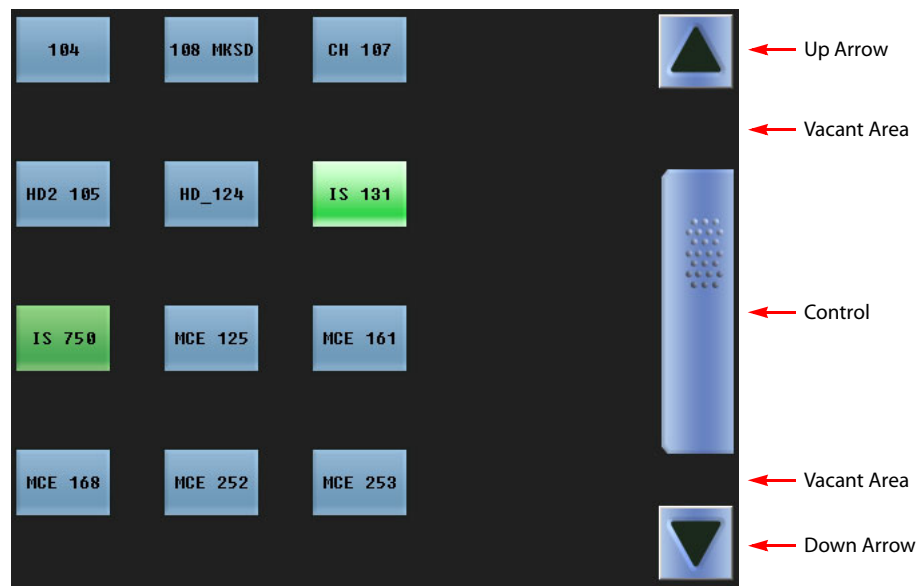


Figure 5-4. Example of a Settings List with Scrollbar

Touch any item in the list to select the item. Use the scroll bar when the item you want is off-screen.

You can scroll through a list in several ways:

- A page at a time.
 - A. Touch an up or down arrow.
 - B. Touch either of the vacant areas in the scrollbar.
- A row at a time.

Touch the scroll bar control and move it up or down.

When you press a setting button, the setting takes effect *immediately*. The panel does not wait for any confirmation.

Main Menu

Figure 5-5 shows the iMC-Panel-100's main menu:

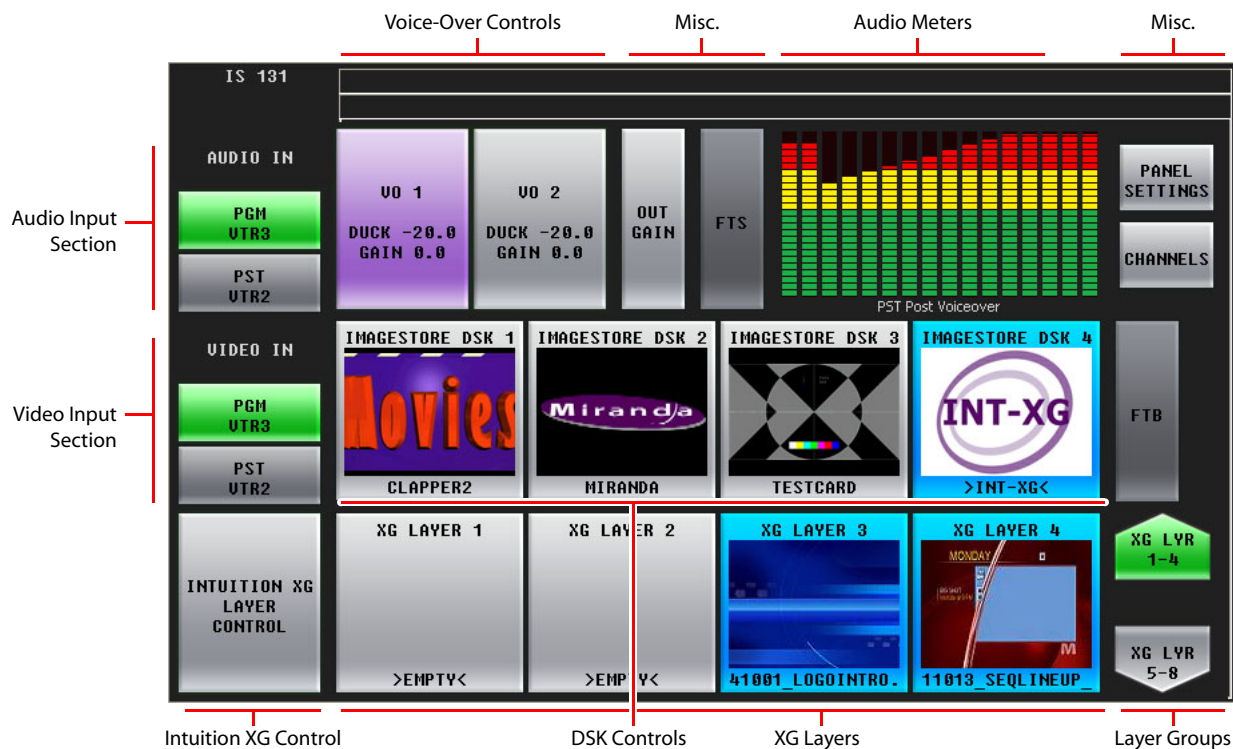


Figure 5-5. Main Menu

Following are brief descriptions regarding the main menu elements:

- Audio input section

The buttons in this section are status buttons, showing the main sources selected on the program and preset button rows. (This can be important if the source selected is not among the sources currently on the program and preset buttons.)

The buttons are labeled 'PGM' and 'PST'. The 'PGM' button is always green and shows the source currently selected on the program bus. The 'PST' button is always grey and shows the source selected on the preset bus.

If you press 'PGM', the panel shows the 'Program Input Audio' menu. If you press 'PST', the panel shows the 'Preset Input Audio' menu.

- Video input section

The buttons in this section are status buttons, showing the main sources selected on the program and preset button rows. (This can be important if the source selected is not among the sources currently on the program and preset buttons.)

Here too, the buttons are labeled 'PGM' and 'PST'. The 'PGM' button is always green and shows the source currently selected on the program bus. The 'PST' button is always grey and shows the source selected on the preset bus.

If you press either of these buttons, the panel shows the 'Sources' menu.

5. Menus

Main Menu

- Voice over control

The two buttons in this section access the voice-over 1 and voice-over 2 menus. The button becomes highlighted (in purple) when the corresponding voice-over is on program output. See [Voice-Over Menus](#) on page 79.
- Audio Meters

The meters in this portion of the screen show the audio levels of the designated audio source which can be selected in the audio meters menu. See [Audio Meters Menu](#) on page 53.

Touch the meters section to access the audio meters menu.
- Intuition XG, XG layers and Layer groups.

The button on the left, labeled ‘Intuition XG Layer Control’, accesses the [XG Keyer Layers Menu](#) (page 83).

The two buttons on the right, labeled ‘XG Lyr 1–4’ and ‘XG Lyr 5–8’ cause the 4 middle buttons at the bottom of the screen to represent XG layers 1–4 or 5–8.

The 4 middle buttons at the bottom represent XG layers.
- DSK controls

Each of the 4 ‘Imagestore DSK’ buttons in the middle of the screen accesses a DSK browser menu. See [DSK Menus](#) on page 61.
- Miscellaneous controls

The ‘Output Gain’ button accesses the ‘Program Output Audio’ menu. See [Program Output Audio Menu](#) on page 72.

The ‘FTS’ button is a status button that turns red when the channel’s program output is in silence, fading to silence, or fading up from silence.

The ‘FTB’ button is a status button that turns red when the channel’s program output is in black/silence, fading to black/silence, or fading up from black/silence.

The ‘Panel Settings’ button accesses the panel menu. See [Panel Menu](#) on page 91.

The ‘Channels’ button accesses the channel selection menu. See [Channel Select Menu](#) on page 57.

Audio Meters Menu

Figure 5-6 shows the iMC-Panel-100's audio meters menu:

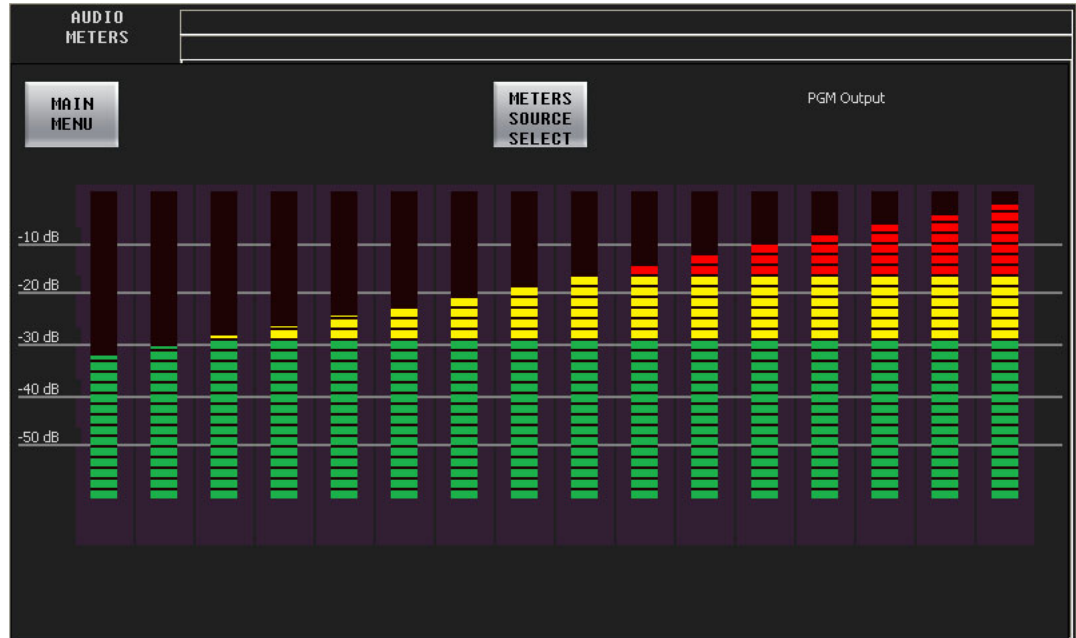


Figure 5-6. Audio Meters Menu


The audio meters menu displays 16 audio meters. The meters show the audio channels for the selected source. Press 'Meters Source Select' to get the 'Meters Source Select' menu where you can select the source for the meters.

Press 'Audio Meters' to return to the main menu.

5. Menus

Audio Meters Menu

This is the 'Meters Source Select' sub-menu:

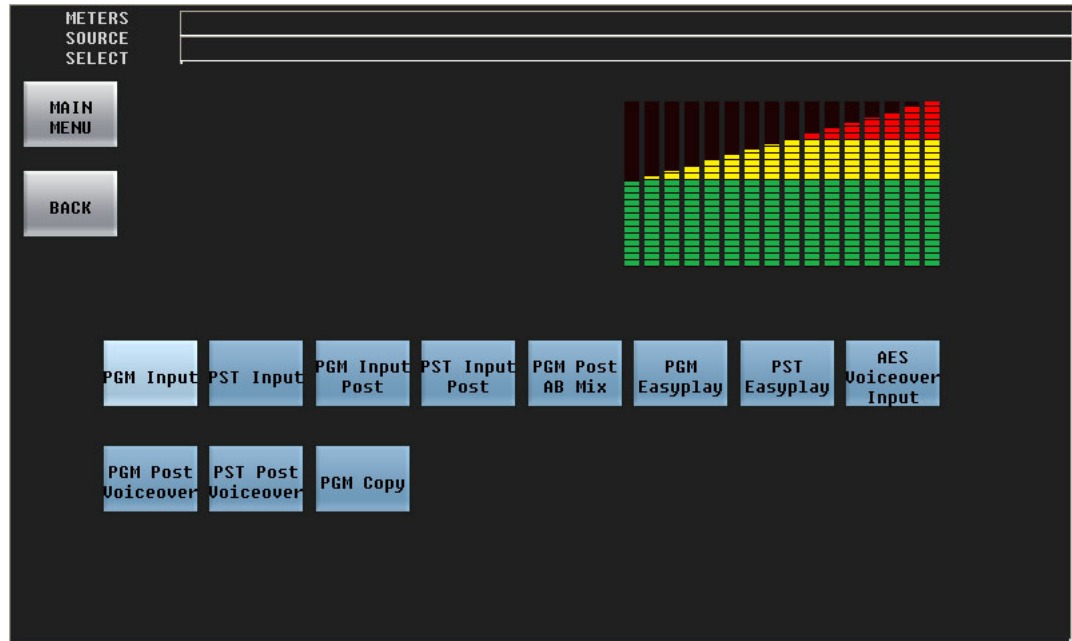

Press any source button to change the metering source.

There are 11 source choices illustrated here:

PGM Input	PGM Input Post	PGM Easyplay ¹	PGM Post Voice-Over
PST Input	PST Input Post	PST Easyplay	PST Post Voice-Over
PGM Copy	PGM Post AB Mix	AES Voice-Over Input	

The number of sources and the names of the sources are determined by the person who configured the Imagestore 750. Please consult your management if you need to know what the sources represent.

Press 'Back' to return to the 'Audio Meters' menu.

Press 'Main Menu' to return to the main menu.

1. Easyplay is a trade name that represents audio segments stored in the Imagestore 750.

Audio Preview Menu

Figure 5-6 shows the panel's 'Audio Preview' menu:

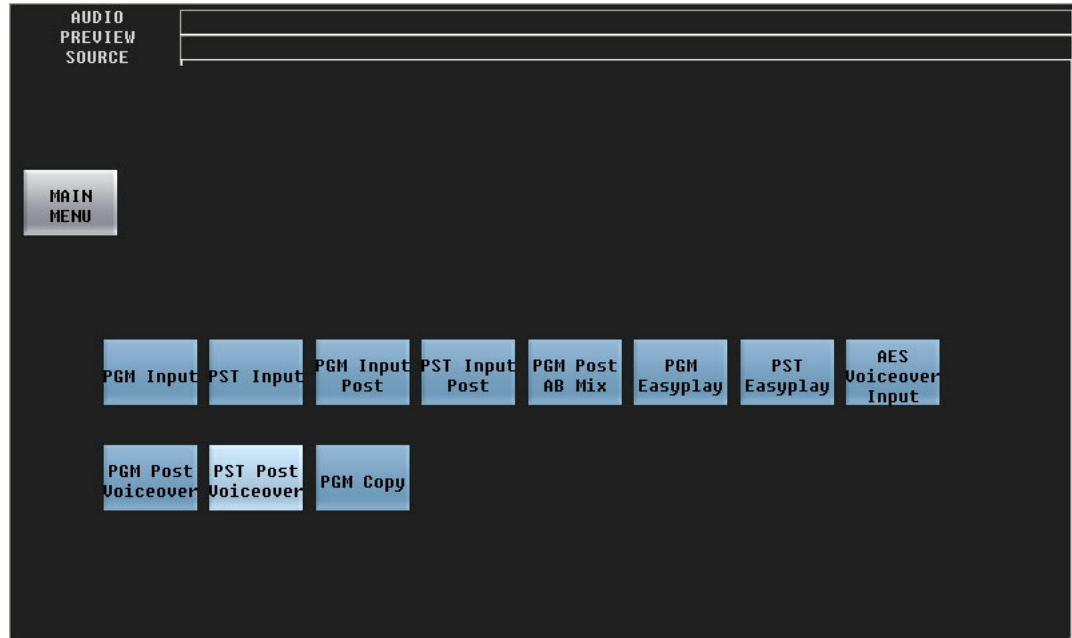


Figure 5-7. Audio Preview Menu

This menu allows you to select the source for the audio that is directed to the preview monitor.

There are 11 source choices illustrated here:

PGM Input	PGM Input Post	PGM Easyplay	PGM Post Voice-Over
PST Input	PST Input Post	PST Easyplay	PST Post Voice-Over
PGM Copy	PGM Post AB Mix	AES Voice-Over Input	

The number of sources and the names of the sources are determined by the person who configured the Imagestore 750. Please consult your management if you need to know what the sources represent.

▲ Easyplay is a trade name that represents audio segments stored in the Imagestore 750.

Press the 'Main Menu' button to return to the main menu.

5. Menus

Automation Menu

Automation Menu

Figure 5-8 shows the panel's automation menu:

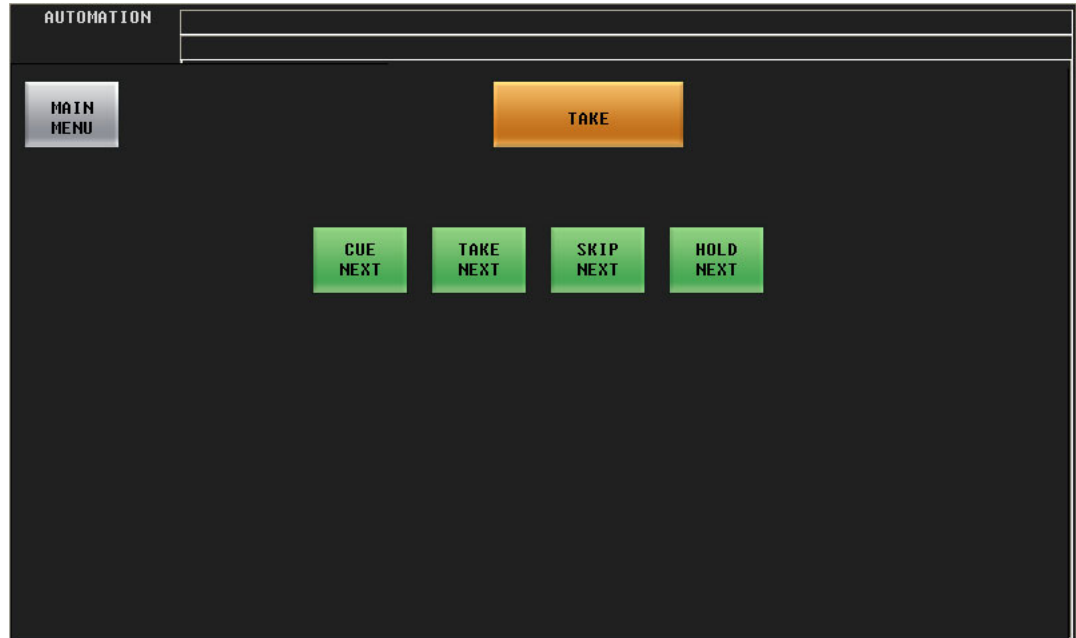


Figure 5-8. Automation Menu

The automation menu provides an alternative to dedicated function buttons.

Buttons

These buttons allow you to manipulate the automation ployout to a limited extent.

The meanings of the terms 'Cue Next', 'Skip Next', 'Hold Next', and 'Take Next' are defined by the automation system. Consult your management if necessary.

The 'Take' button initiates a transition.

Press the 'Main Menu' button to return to the main menu.

Channel Select Menu

Figure 5-9 shows the panel's channel select menu:

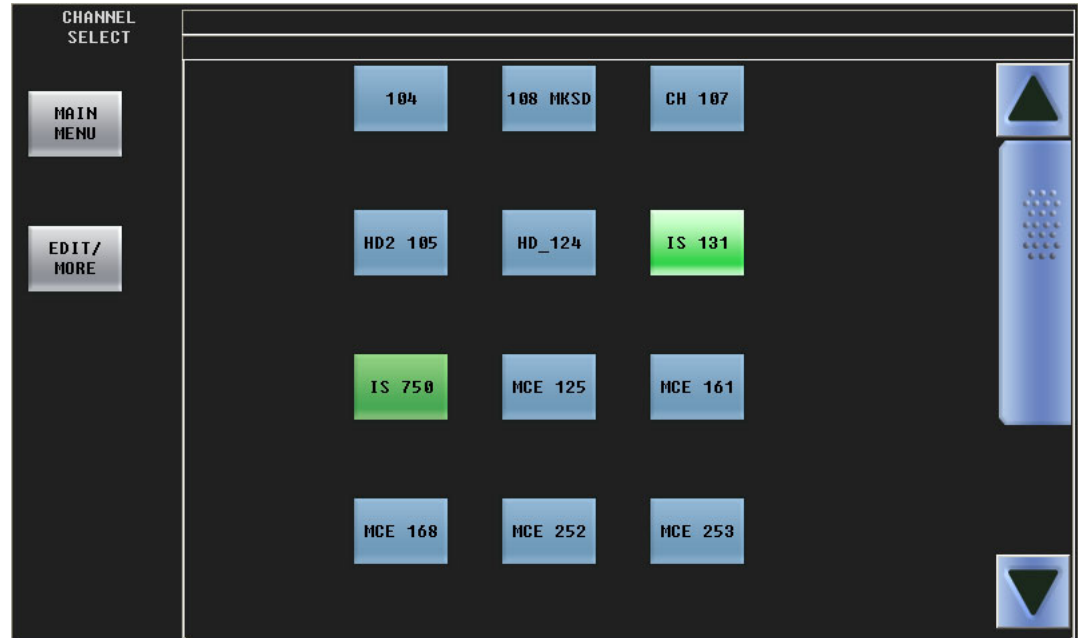


Figure 5-9. Channel Select Menu

This menu shows a list of channels. The currently selected channel is highlighted. If the list has more than 12 channels, scrolling is enabled.

Press any channel button to select that channel. The channel selection is immediate, although it takes about one second for the switch to occur. If your panel is under “automatic gang mode” and you choose the default channel, all channels in the automatic channel gang are selected and gang selection is enabled. A multiple channel selection takes slightly longer than one second.

However, the channel selection is not immediate if the channel (or one of the ganged channels) is in use at a panel that does not share. Either you will be given the opportunity to preempt (i.e., “kick”) the other panel or you will be denied access to the channel. See [Sharing Channels](#), following.

- ▲ When you and other operators share the same channel, the other panels reflect any change you make, and your control panel reflects changes made on other panels.

When your panel is in “automatic gang mode,” one of the channels (the default channel) is the main channel in a channel gang. The menu does not indicate which channel is the default channel. Consult your administrator if you need to determine which is the default channel. (The default channel is the channel that is selected on panel power-up.)

If a configurable button is assigned to the channel you select, it becomes high-tally. Under automatic gang mode, any buttons assigned to the channels in the gang become high-tally.

5. Menus

Channel Select Menu

Sharing Channels

Your panel can be configured to share or not to share channels with other panels.



If your panel is not configured to share, an attempt to acquire the channel at an other panel can preempt your use of the channel. If the other panel has a higher priority than yours has, it will preempt you and take over the channel, and you will be notified of the fact.

Conversely, if you wish to preempt another panel, and have a higher priority than that panel, you can preempt the other panel.

If your panel is configured for sharing, it is possible for you to share a channel with other panels, unless some other channel that is not configured for sharing controls that channel.

Preemption

When your panel is not configured for sharing, if the channel (or one of the ganged channels) you want to control is in use, you will see either a permission message or a denial of access message:

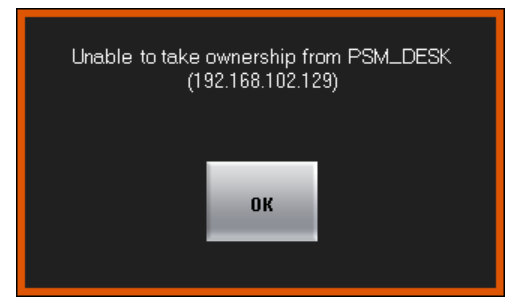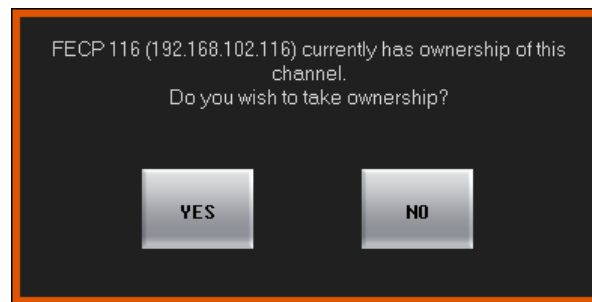



If you see a permission message, and you wish to preempt the other panel, press 'OK'. Otherwise press 'Cancel'.

If you see a denial of access message, press 'OK'. You may not acquire the channel. You can try again later, choose another channel, or negotiate with the other panel operator.

- ▲ If someone preempts you, your panel will immediately appear to "go dead." What actually happens is the same thing that would happen if you pressed a 'No Channel' button. You will have to wait for the channel to become available again or switch to another channel.
- ▲ A panel can preempt another panel if it has been configured with a higher priority or in some cases, with the same or higher priority.

Sharing

When your panel is configured for sharing, if the channel (or one of the ganged channels) you want to control is in *exclusive* use (at a panel that does not share), you will see a failure message:

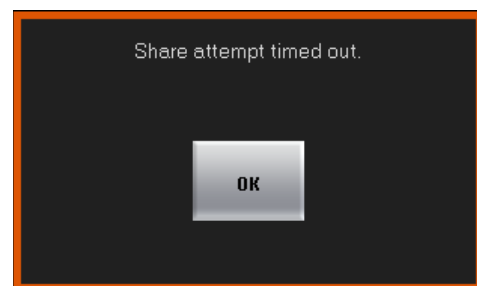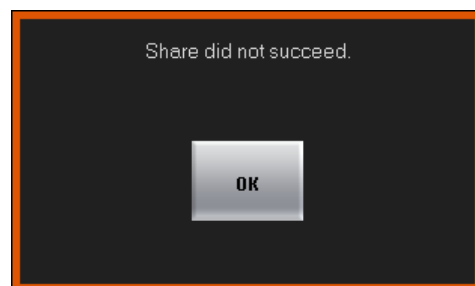

If the sharing attempt failed, your panel will revert to its previous state, controlling the channel it controlled prior to the sharing attempt.

Edit/More

Press 'Edit/More' to access the [Channel Details Sub-Menu](#), which lets you view a channel's parameters and the channel's log.

Note

You cannot specifically gang channels, although you can select the default channel which might be part of a channel gang under automatic gang mode.

Channel Details Sub-Menu

Press 'Edit/More' in the 'Channel Select' menu to view the 'Channel Details' menu:

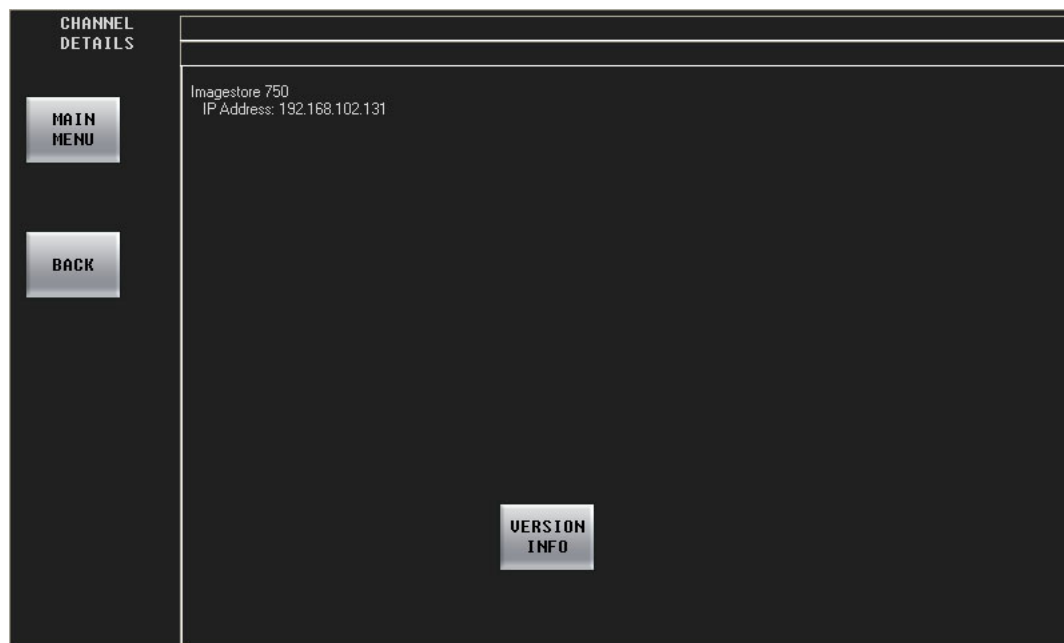


Figure 5-10. Channel Details Menu (Sample)

The top of the function area displays the name, IP address, and type of the selected Imagestore 750. Press 'Version Info' to display the 'Version Info' sub-menu.

If the channel you have selected is the default channel and it is part of an automatic channel gang, the 'Channel Details' sub-menu displays information about the default channel only. (The default channel is the main channel of the gang.)

Press the 'Back' button to return to the 'Channel Select' menu.

Press the 'Main Menu' button to return to the main menu.

5. Menus

Channel Select Menu

Version Info Sub-Menu

The 'Version Info' sub-menu lists the software and firmware versions of the attached Imagestore 750. Refer to this menu, as required, for channel-related trouble-shooting:

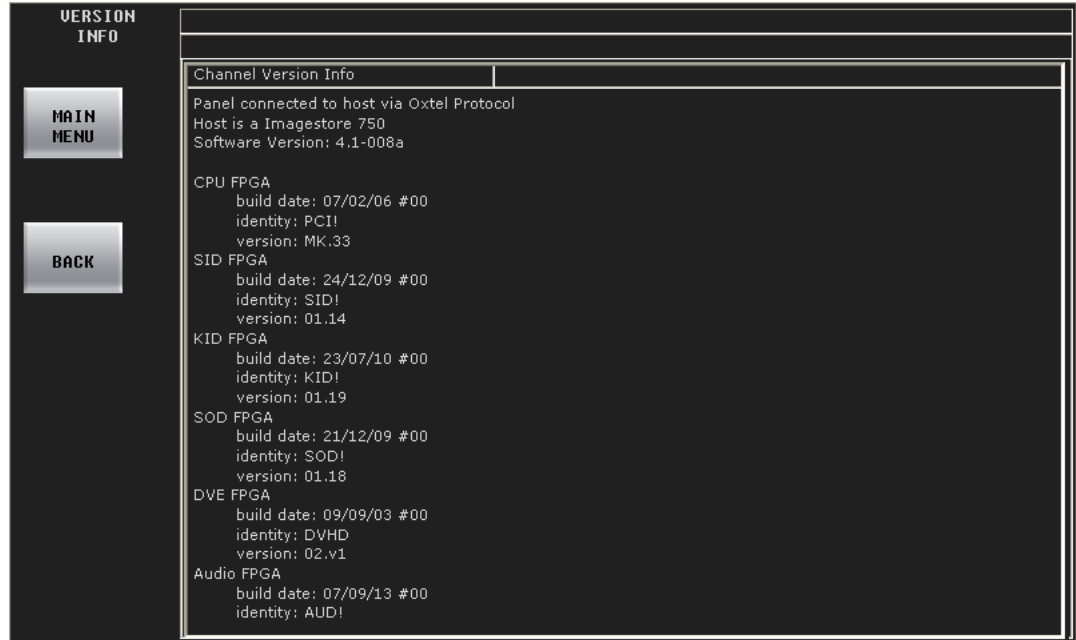


Figure 5-11. Version Info Menu (Sample)

Press the 'Back' button to return to the 'Channel Select' menu.

Press the 'Main Menu' button to return to the main menu.

DSK Menus

Figure 5-12 shows the panel's 'DSK 1 Browser' menu:



Figure 5-12. DSK 1 Menu

The DSK 2, DSK 3, and DSK 4 browser menus are just like the DSK 1 browser menu.

The DSK browser menus let you select a DSK (downstream key) and specify display parameters for it.

Touch a DSK thumbnail to select the DSK. Use the scroll bar to view additional thumbnails. The outer arrows of the scrollbar scroll the list to its top or bottom. The inner arrows scroll the list of DSKs by one line up or down. The 'Show Selection' button causes the list to scroll so that the currently selected DSK appears in the window. This can be important if you have very many DSKs from which to choose.

The parameters controlled by the options buttons apply to the most recently selected DSK.

Press the red 'Load Disabled' button to enable selection of clips using thumbnails. The button turns green and reads 'Load Enabled' when clip selection is enabled. Disabling loads prevents accidental select of a clip. Press 'Load Enabled' again to re-disable selection of clips.

Press the 'Clear DSK' button unselect the currently selected DSK. The result is no selection.

Press the 'Main Menu' button to return to the main menu.

XG layers are handled by one of the DSKs. The relationship between XG layers and a DSK is not simple. See [Working with XG Layers](#) on page 115 for information.

5. Menus

DSK Menus

Options Buttons

There are 2 options buttons:

- Rates CGT Keying
This button accesses the [Rates, CGT, Keying](#) sub-menu.
- Position Size Crop
This button accesses the [Position, Size, Crop](#) sub-menu.
- ‘Options Saving’
This button accesses the [‘Options Saving’](#) sub-menu.

List Buttons


There are 2 list buttons. These buttons filter the list of keys presented in the menu. When the button is green, the list includes items of the type indicated:

- Still Stored still frames.
- Anim Stored animations.

When the button is dark gray, the list of keys does not show items of that type. If all the list buttons are dark gray, the list appears empty.

Rates, CGT, Keying

This is the ‘Rates, CGT, Keying’ sub-menu:

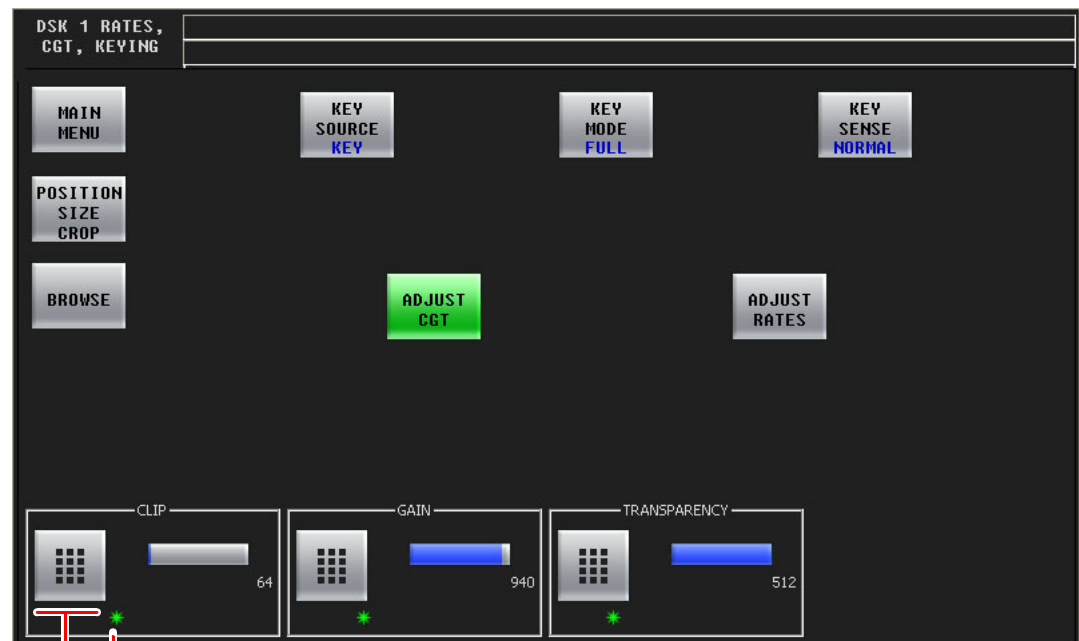

Keypad Icon Green Asterisk

In this menu, you can make adjustments to the currently selected DSK.

The ‘Adjust CGT’ button causes the clip, gain, and transparency controls to appear (as shown above).


The ‘Adjust Rates’ button causes the slow, medium, and fast rate controls to appear.

Clip, Gain, Transparency

At the bottom of the screen are 3 numerical controls for the CGT (clip, gain, and transparency) parameters. To adjust any of those parameters, either touch the knob proxy associated with the green asterisk in the control box, or touch the keypad icon to access a large keypad with which to enter a number. When you touch the knob proxy, a slider appears and the 'Scroll/Set' knob becomes enabled. Use either to adjust the parameter.

Rate Adjustment

When you touch the 'Adjust Rate' button, the menu presents rate controls at the bottom:

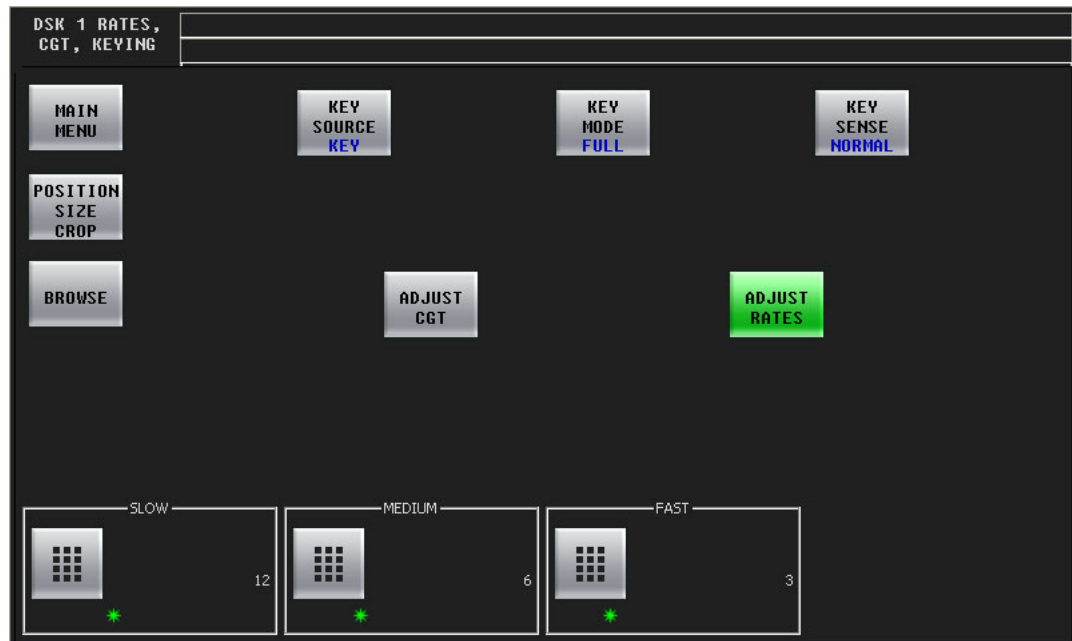

There are 3 numerical controls for the 3 rates (slow, medium, and fast). To adjust any of those parameters, either use the knob proxy associated with the green asterisk in the control box, or touch the keypad icon to access a large keypad with which to enter a number.

Press the 'Position Size Crop' button to go to the 'Position, Size, Crop' sub-menu.

Press the 'Back' button to return to the DSK browser menu.

Press the 'Main Menu' button to return to the main menu.

Keying Parameters

The 'Key Source' button is a toggle that switches between 'Key' and 'Self'. 'Key' means that the key includes a key signal. 'Self' means that the key is a self-key and does not include a key signal.

The 'Key Mode' button is a toggle that switches between 'Full' and 'Linear'.


The 'Key Sense' button toggles between 'Normal' and 'Invert'.

5. Menus

DSK Menus

Position, Size, Crop

This is the 'Position, Size, Crop' sub-menu. When you touch 'Adjust Position', two position controls appear at the bottom:

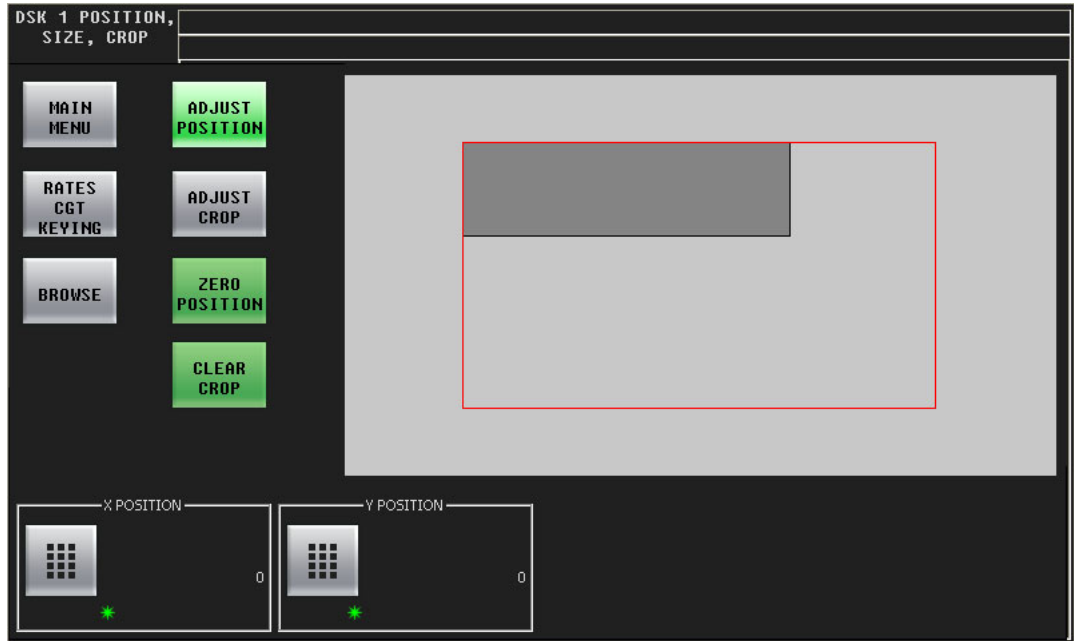

When you touch 'Adjust Crop', four boundary controls appear at the bottom:




To adjust any of those parameters, either use the knob proxy associated with the green asterisk in the control box, or touch the keypad icon to access a large keypad with which to enter a number.

The numerical values are in units of pixels.

The 'Zero Position' button sets the 'X Position' and 'Y Position' parameters to 0.

The 'Clear Crop' button sets the 'Top', 'Bottom', 'Left', and 'Right' parameters to 0.


Position and crop values are independent. Changing one does not change the other. However, the position controls affect the placement of the *uncropped* boundary of the DSK. For example, with position (0,0) and crop values (left = 30 and top = 40), the DSK will appear to be inset from the edge of the frame by 30 and 40 pixels.

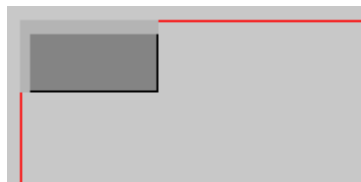

The amount of crop is indicated by a light grey field.

'Options Saving'

This is the 'Options Saving' sub-menu:

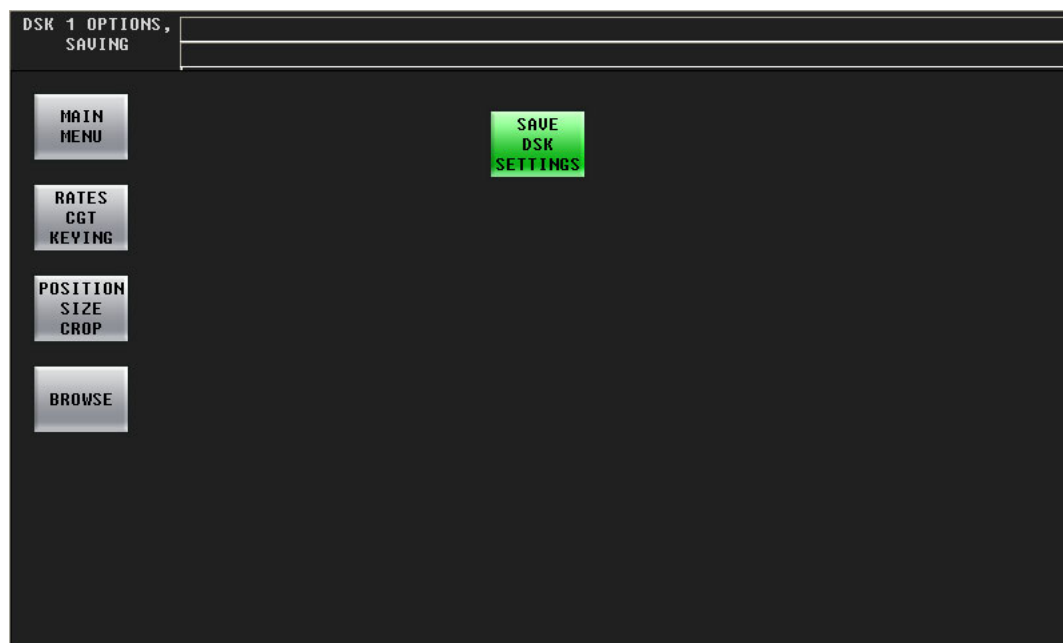

In this menu, you can save the settings of the currently selected DSK. Press 'Save DSK Settings' to do so.

▲ If you have cleared the DSK, the 'Save DSK Settings' button is absent.

The 'Main Menu' button returns you to the main menu.

The 'Rates, CGT, Keying' button takes you to the 'Rates, CGT, Keying' sub-menu.

The 'Position, Size, Crop' button takes you to the 'Position, Size, Crop' sub-menu.

The 'Browse' button takes you back to the DSK browser.

5. Menus

“EasyPlay” Menus

“EasyPlay” Menu

Figure 5-12 shows the panel’s EasyPlay 1 browser menu:

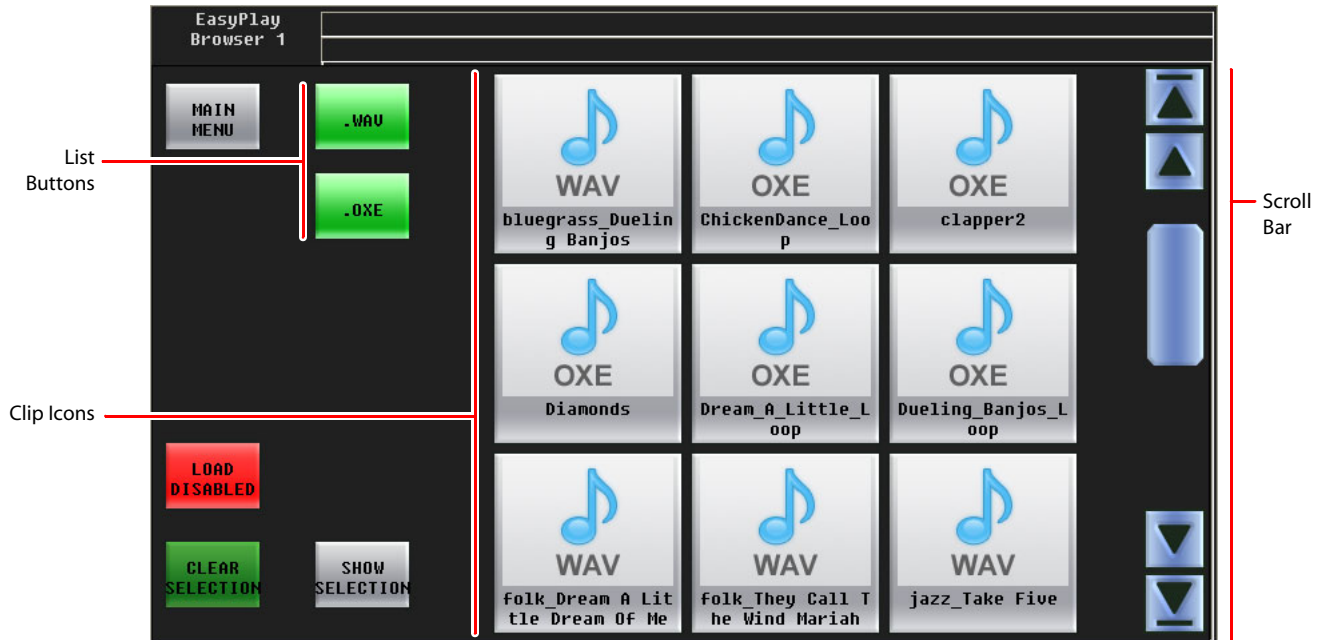


Figure 5-13. DSK 1 Menu

The EasyPlay 1 browser menu corresponds to voice-over 1. The EasyPlay 2 browser menu corresponds to voice-over 2. These menus are functionally identical.

- ▲ “Easyplay” is a trademark that represents an (optional) audio clip playout component in the Imagestore 750. If your Imagestore 750 does not have Easyplay, these two menus are empty.

An Easyplay browser menu lets you select an audio clip.

Touch a clip icon to select the clip. Use the scroll bar to show additional clips. The outer arrows of the scrollbar scroll the list to its top or bottom. The inner arrows scroll the list of clips by one line up or down.

The ‘Show Selection’ button causes the list to scroll so that the currently selected clip appears in the window. This can be important if you have very many clips from which to choose.

The ‘Load Disabled’ button—when it is red—prevents you from accidentally selecting a clip. To be able to select a clip, first click the ‘Load Disabled’ button. It will turn green and you can proceed to make a selection.

The ‘Clear Selection’ button removes the currently selected clip from the EasyPlay component.

Macro Menu

Figure 5-14 shows the panel's macro menu:



Figure 5-14. Macro Menu

This menu can arm macros or execute Imagestore 750 macros immediately. The upper row of buttons are “fire” buttons and execute the macros immediately. The lower row of buttons are “arming” buttons. An armed macro will execute at the next transition (or at the end of the next transition if it contains commands that interfere with the transition itself).

Buttons for armed macro appear high-tally and show the word ‘ARMED’.

The “fire” buttons go high-tally briefly when the macro is executing.

Press the ‘Main Menu’ button to return to the main menu.

The number of macros and the names of the macros depend on the Imagestore 750 configuration.

Consult your management to determine what the Imagestore 750’s macros do.

5. Menus

Program Input Audio Menu

Program Input Audio Menu

Figure 5-15 shows the panel's 'Program Input Audio' menu:

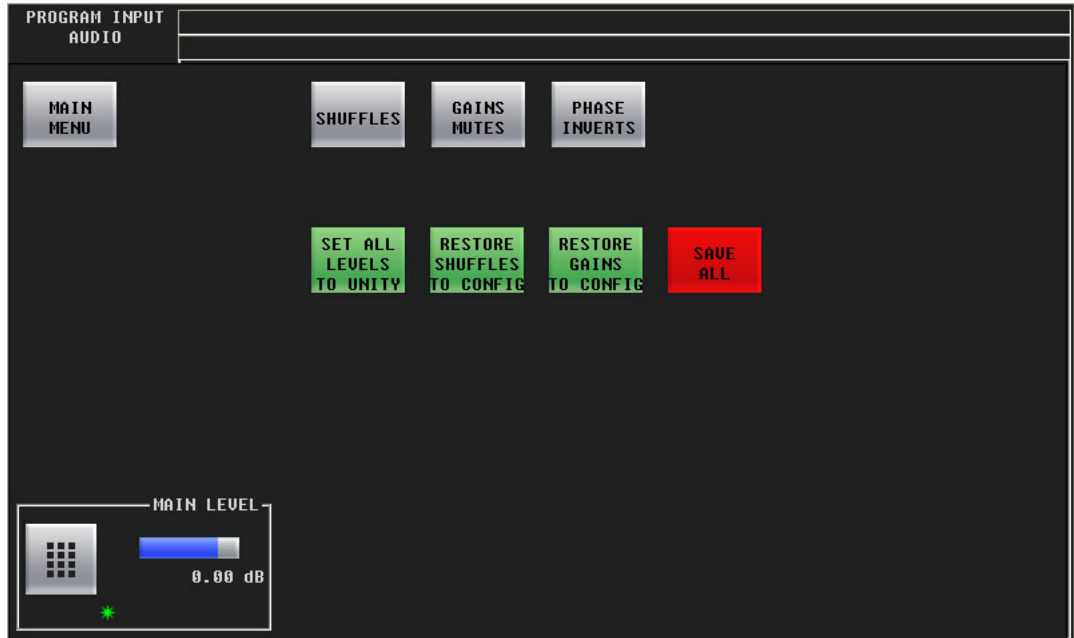


Figure 5-15. PGM In Audio Menu

The 'Program Input Audio' menu and the 'Preset Input Audio' menu control the Imagestore 750's audio *input*.

The control at the bottom of the screen adjusts the master audio level of program input. To adjust this parameter, either use the knob proxy associated with the green asterisk in the control box, or touch the keypad icon to access a large keypad with which to enter a number.

Buttons

The 'Shuffles' button accesses the 'Audio Channel Shuffle' sub-menu (for program input audio).

The 'Main Menu' button returns you to the main menu.

The 'Gains Mutes' button accesses the 'Gains and Mutes' sub-menu (for program input audio).

The 'Phase Inverts' button accesses the 'Phase Inverts' sub-menu (for program input audio).

The 'Set All Levels to Unity' sets each of the 16 audio channels to unity gain.


The 'Restore Shuffle to Config' button reverts the shuffle to that which was defined in the Imagestore 750 configuration.

The 'Restore Gain to Config' button reverts the audio channels' gains to those that were defined in the Imagestore 750 configuration.

The 'Save All' button saves all audio channel manipulations to the Imagestore 750 configuration. Audio channel data can be saved for each individual main source.

Gains and Mutes

This is the ‘Gains and Mutes’ sub-menu:

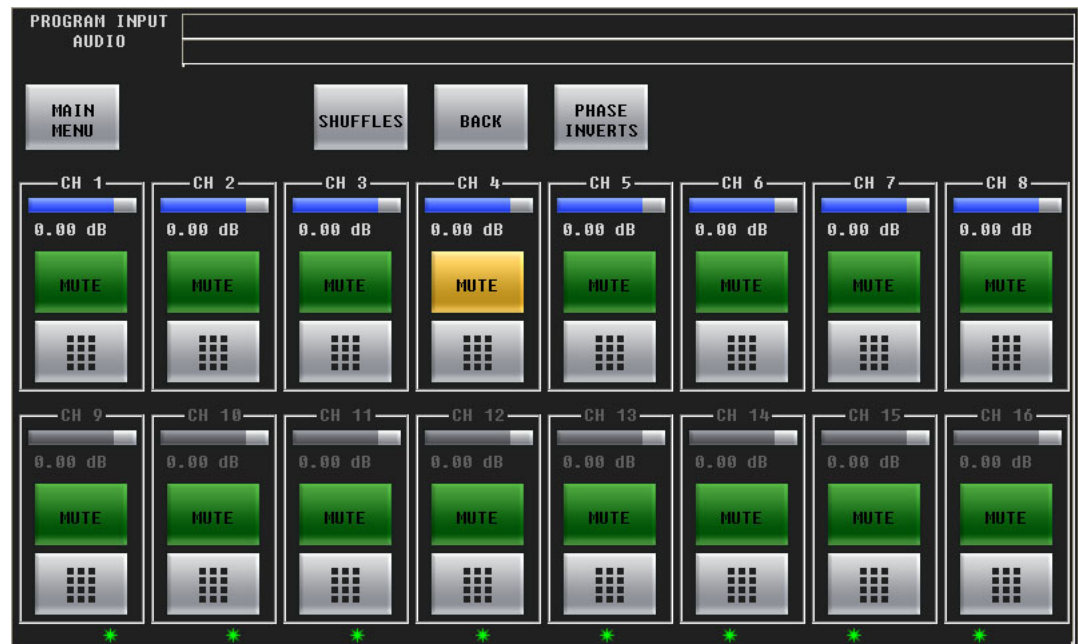

Each of the 16 audio channels has a mute button.

Each of the 16 audio channels has a keypad icon. Touch the keypad icon to access a keypad in which you can enter a numerical value.

Either the top row of 8 buttons or the bottom row of 8 buttons can be associated with the 8 knob proxies. You can adjust the gain of each channel by using the knob proxy to activate the slider and the ‘Scroll/Set’ knob with which you can adjust the level. To choose the top row, touch the top row. To choose the bottom row, touch the bottom row.

The gain range is -100.0 dB to $+28.0\text{ dB}$. The gain of individual channels is affected by the master gain of the program input.

Press the ‘Shuffles’ button to go to the ‘Audio Channel Shuffle’ menu.

Press the ‘Phase Inverts’ button to go to the ‘Phase Inverts’ menu.

Press the ‘Back’ button to return to the ‘Program Input Audio’ menu.


Press the ‘Main Menu’ button to return to the main menu.

5. Menus

Program Input Audio Menu

“Phase Inverts”

This is the ‘Phase Inverts’ sub-menu:

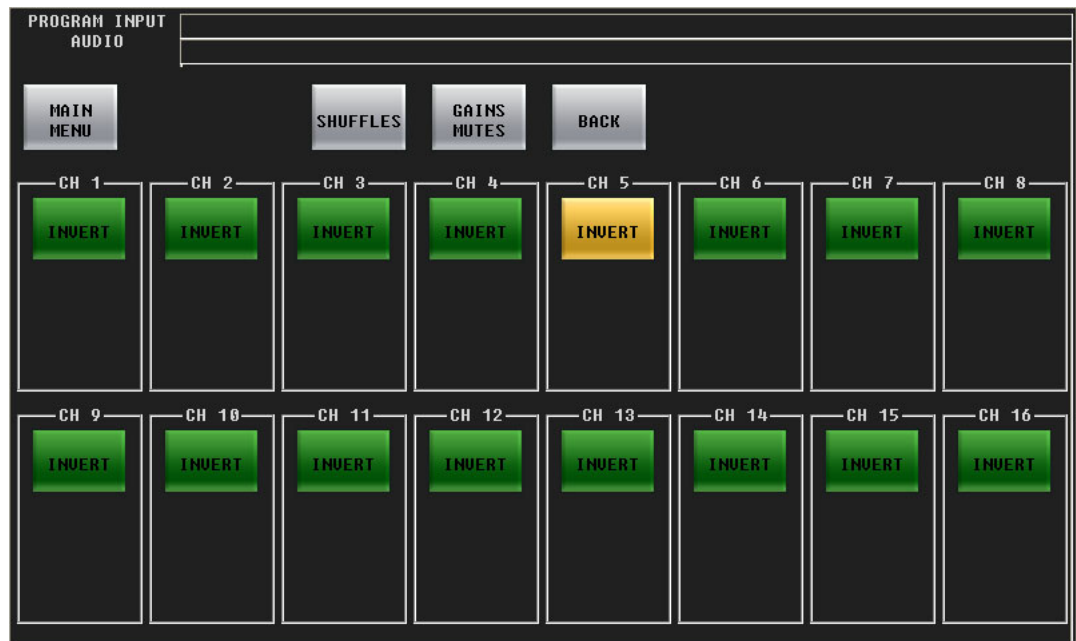

▲ The term phase is a misnomer. Phase has nothing to do with signal inversion.

When the audio channel is inverted, its PCM values are multiplied by -1 .

Pressing an invert button either inverts or un-inverts the audio samples. When the button is amber, the samples are inverted. When the button is green, the samples are normal.

Press the ‘Shuffles’ button to go to the ‘Audio Channel Shuffle’ menu.


Press the ‘Gains Mutes’ button to go to the ‘Gains and Mutes’ menu.

Press the ‘Back’ button to return to the ‘Program Input Audio’ menu.

Press the ‘Main menu’ button to return to the main menu.

Audio Channel Shuffle

This is the 'Audio Channel Shuffle' sub-menu:

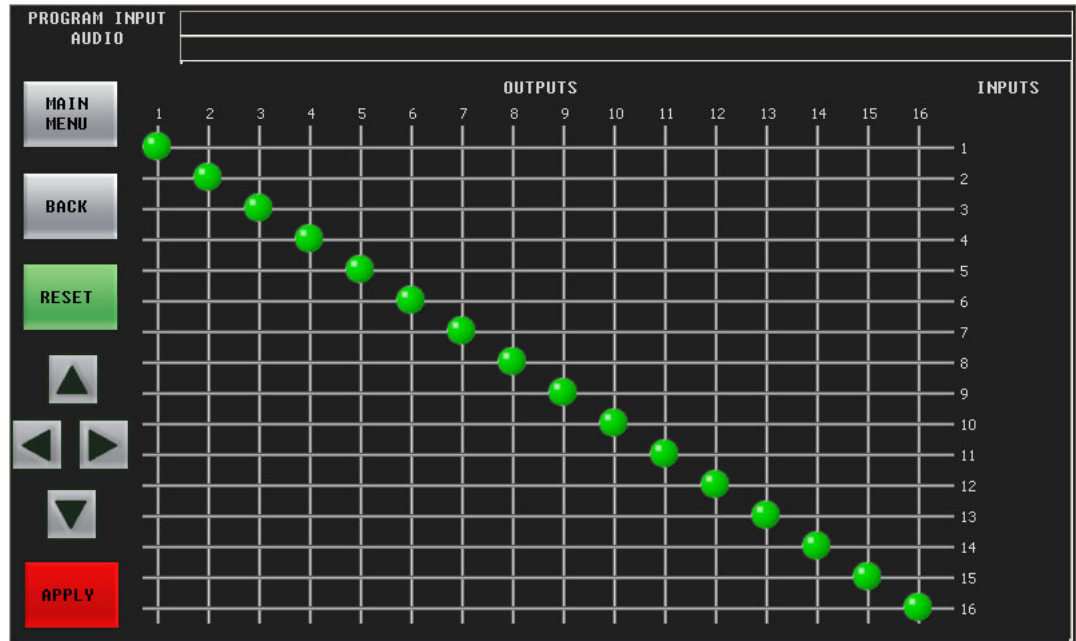

See [Shuffling Audio Channels](#) on page 129.

Press the 'Back' button to return to the 'Program Input Audio' menu.

Press the 'Main menu' button to return to the main menu.

5. Menus

Program Output Audio Menu

Program Output Audio Menu

Figure 5-16 shows the iMC-Panel-100's 'Program Output Audio' menu:



Figure 5-16. PGM Out Audio Menu

The 'Program Output Audio' menu controls the Imagestore 750's audio *output*.

The control at the bottom of the screen adjusts the main overall audio level of program output. To adjust this parameter, either use the knob proxy associated with the green asterisk in the control box, or touch the keypad icon to access a large keypad with which to enter a number.

Buttons

The 'Main Menu' button returns you to the main menu.


The 'Gains Mutes' button accesses the 'Gains and Mutes' sub-menu (for program input audio).

The 'Phase Inverts' button accesses the 'Phase Inverts' sub-menu (for program input audio).

The 'Set All Levels to Unity' sets each of the 16 audio channels to unity gain.

Gains and Mutes

This is the ‘Gains and Mutes’ sub-menu:

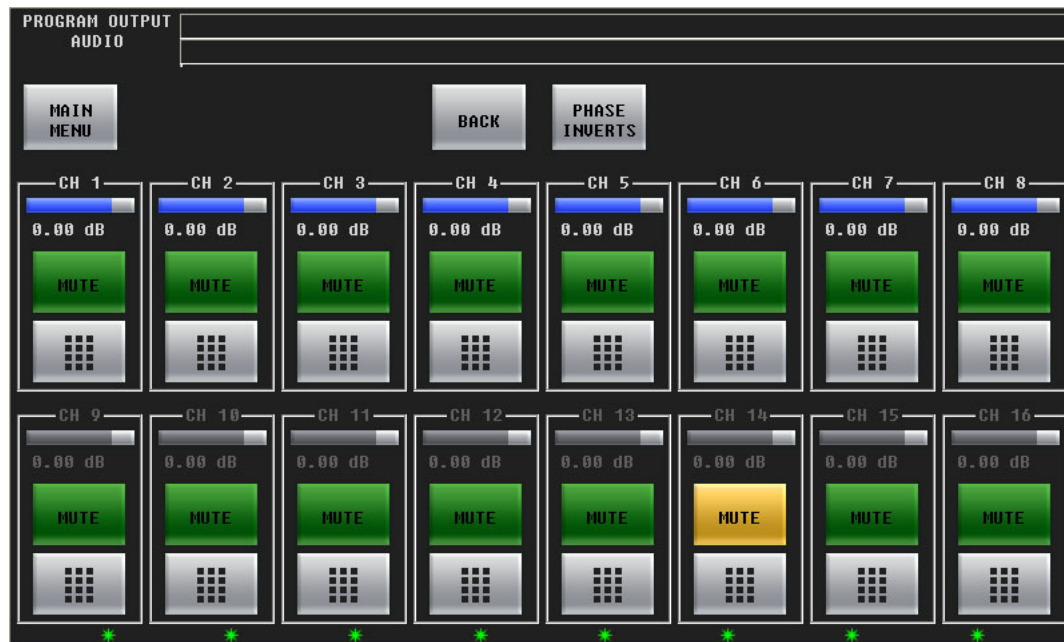

Each of the 16 audio channels has a mute button.

Each of the 16 audio channels has a keypad icon. Touch the keypad icon to access a keypad in which you can enter a numerical value.

Either the top row of 8 buttons or the bottom row of 8 buttons can be associated with the 8 knob proxies. You can adjust the gain of each channel by using its knob proxy to activate the slider and the ‘Scroll/Set’ knob with which you can adjust the level. To choose the top row, touch the top row. To choose the bottom row, touch the bottom row.

The gain range is -100.0 dB to $+28.0$ dB. The gain of individual channels is affected by the master gain of the program output.

Press the ‘Phase Inverts’ button to go to the ‘Phase Inverts’ sub-menu.

Press the ‘Back’ button to return to the ‘Program Output Audio’ menu.


Press the ‘Main menu’ button to return to the main menu.

5. Menus

Program Output Audio Menu

“Phase Inverts”

This is the ‘Phase Inverts’ sub-menu:

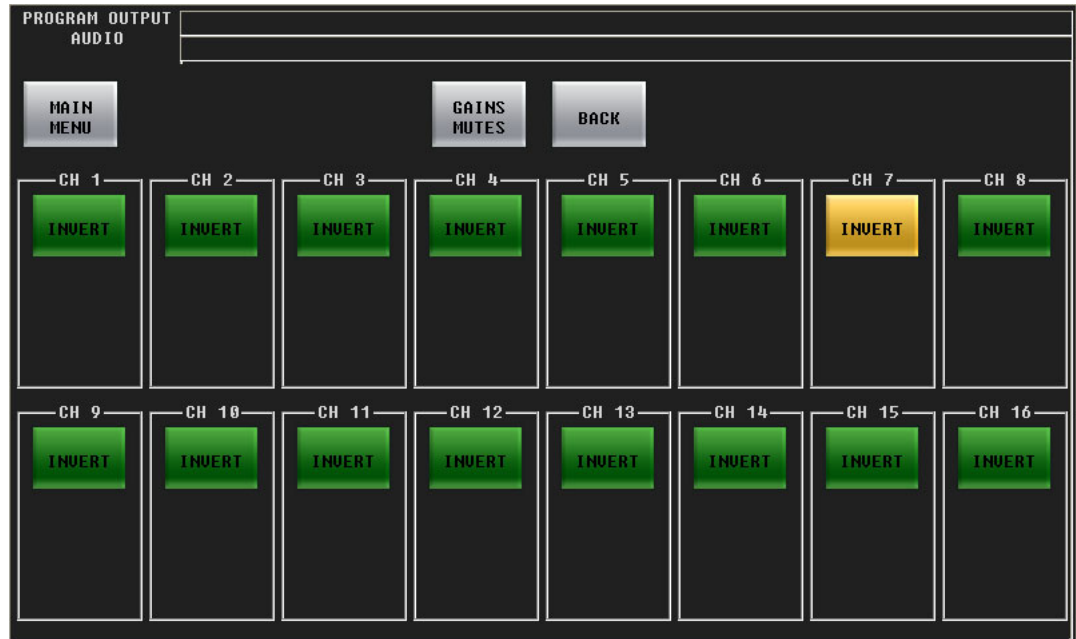

▲ The term phase is a misnomer. Phase has nothing to do with signal inversion.

When the audio channel is inverted, its PCM values are multiplied by -1 .

Pressing an invert button either inverts or un-inverts the audio samples. When the button is amber, the samples are inverted. When the button is green, the samples are normal.

Press the ‘Gains Mutes’ button to go to the ‘Gains and Mutes’ sub-menu.

Press the ‘Back’ button to return to the ‘Program Output Audio’ menu.

Press the ‘Main menu’ button to return to the main menu.

Preset Input Audio Menu

Figure 5-17 shows the panel's 'Preset Input Audio' menu:

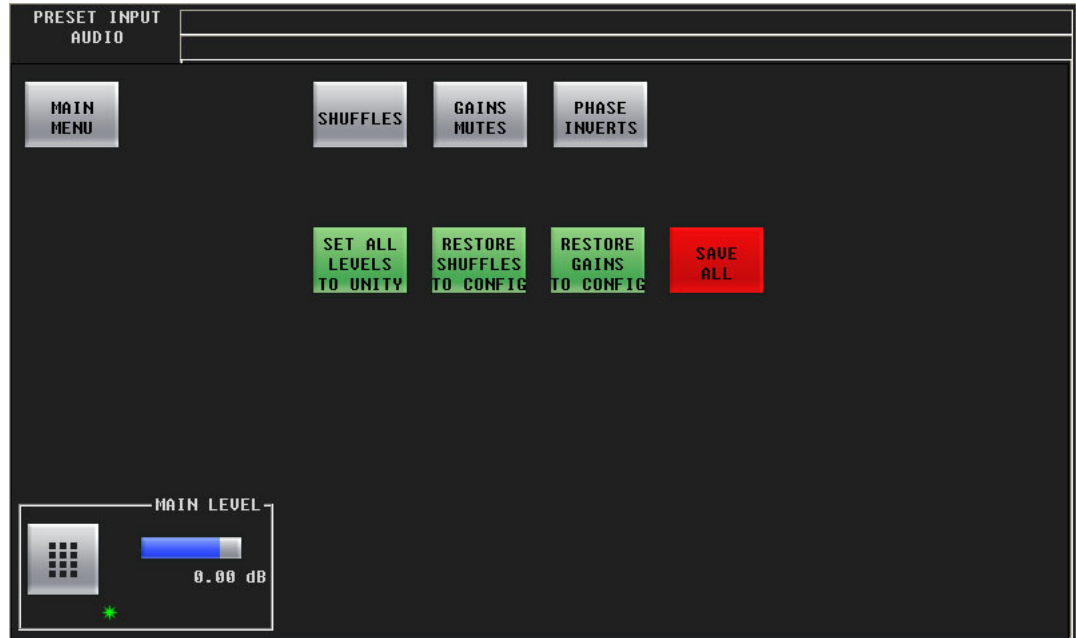


Figure 5-17. PST In Audio Menu

The 'Program Input Audio' menu and the 'Preset Input Audio' menu control the Imagestore 750's audio *input*.

The control at the bottom of the screen adjusts the main overall audio level of program output. To adjust this parameter, either use the knob proxy associated with the green asterisk in the control box, or touch the keypad icon to access a large keypad with which to enter a number.

Buttons

The 'Main Menu' button returns you to the main menu.

The 'Shuffles' button accesses the 'Audio Channel Shuffle' sub-menu (for program input audio).

The 'Gains Mutes' button accesses the 'Gains and Mutes' sub-menu (for program input audio).

The 'Phase Inverts' button accesses the 'Phase Inverts' sub-menu (for program input audio).

The 'Set All Levels to Unity' sets each of the 16 audio channels to unity gain.

The 'Restore Shuffle to Config' button reverts the shuffle to that which was defined in the Imagestore 750 configuration.

The 'Restore Gain to Config' button reverts the audio channels' gains to those that were defined in the Imagestore 750 configuration.

The 'Save All' button saves all audio channel manipulations to the Imagestore 750 configuration. Audio channel data can be saved for each individual main source.

5. Menus

Preset Input Audio Menu

Gains and Mutes

This is the 'Gains and Mutes' sub-menu:



Each of the 16 audio channels has a mute button. The mute button is amber if the channel is muted.

Each of the 16 audio channels has a keypad icon. Touch the keypad icon to access a keypad in which you can enter a numerical value.

Either the top row of 8 buttons or the bottom row of 8 buttons can be associated with the 8 knob proxies. You can adjust the gain of each channel by using its knob proxy to activate the slider and the 'Scroll/Set' knob with which you can adjust the level. To choose the top row, touch the top row. To choose the bottom row, touch the bottom row.

The gain range is -100.0 dB to $+28.0$ dB. The gain of individual channels is affected by the master gain of the preset input.

Press the 'Shuffles' button to go to the 'Audio Channel Shuffle' sub-menu.


Press the 'Phase Inverts' button to go to the 'Phase Inverts' sub-menu.

Press the 'Back' button to return to the 'Preset Input Audio' menu.

Press the 'Main menu' button to return to the main menu.

“Phase Inverts”

This is the ‘Phase Inverts’ sub-menu:

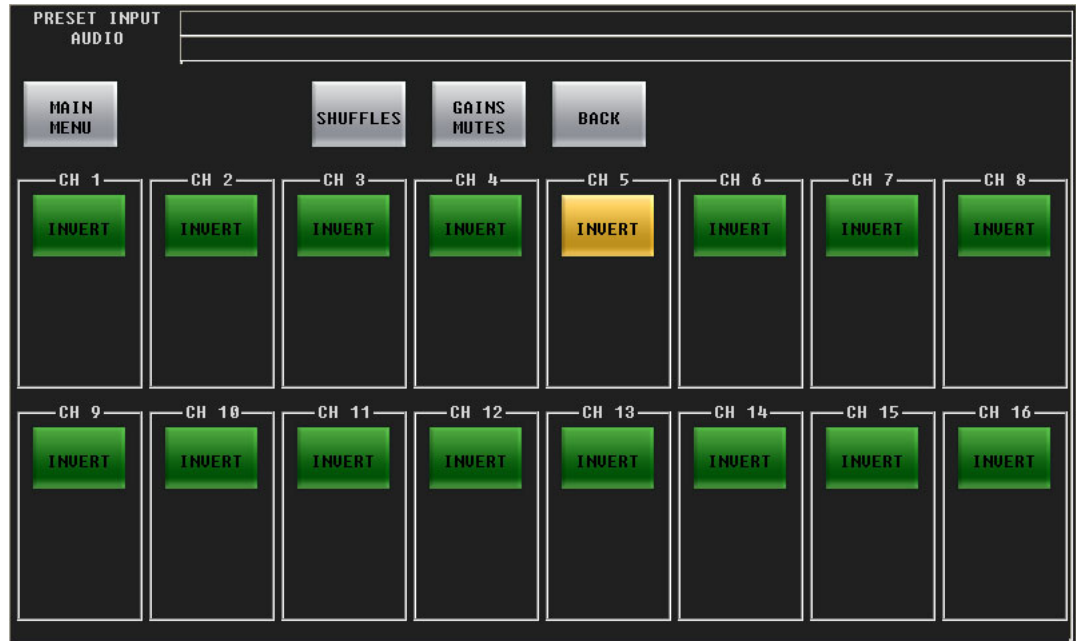

▲ The term phase is a misnomer. Phase has nothing to do with signal inversion.

When the audio channel is inverted, its PCM values are multiplied by -1 .

Pressing an invert button either inverts or un-inverts the audio samples. When the button is amber, the samples are inverted. When the button is green, the samples are normal.

Press the ‘Shuffles’ button to go to the ‘Audio Channel Shuffle’ sub-menu.

Press the ‘Gains Mutes’ button to go to the ‘Gains and Mutes’ sub-menu.

Press the ‘Back’ button to return to the ‘Preset Input Audio’ menu.


Press the ‘Main menu’ button to return to the main menu.

5. Menus

Preset Input Audio Menu

Audio Channel Shuffle

This is the 'Audio Channel Shuffle' sub-menu:

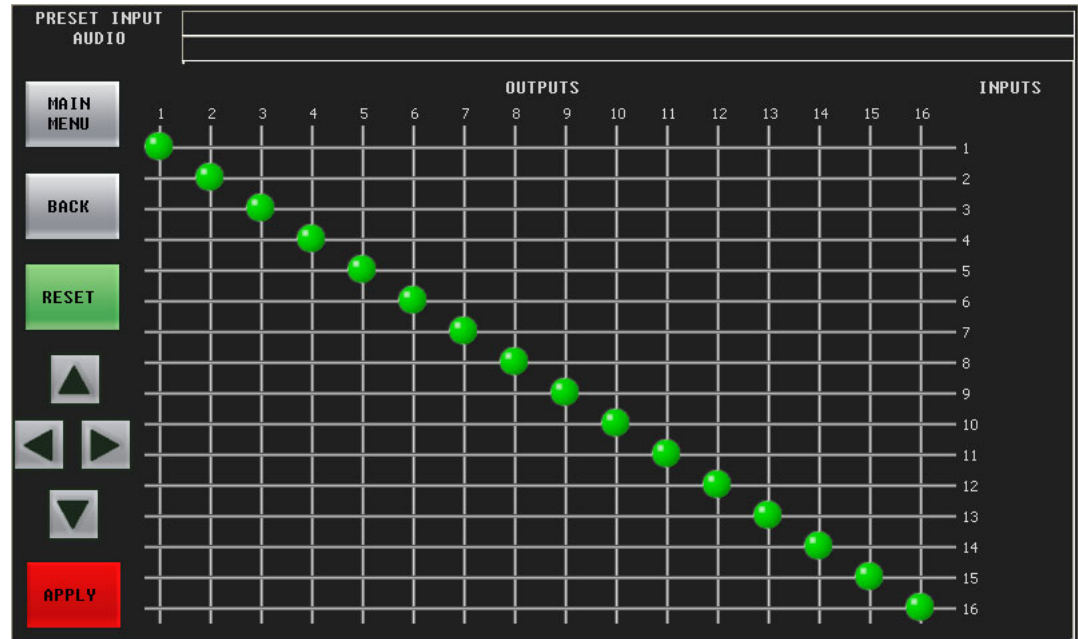

See [Shuffling Audio Channels](#) on page 129.

Press the 'Back' button to return to the 'Preset Input Audio' menu.

Press the 'Main menu' button to return to the main menu.

Voice-Over Menus

Figure 5-18 shows the iMC-Panel-100's 'Voice-Over 1' menu:

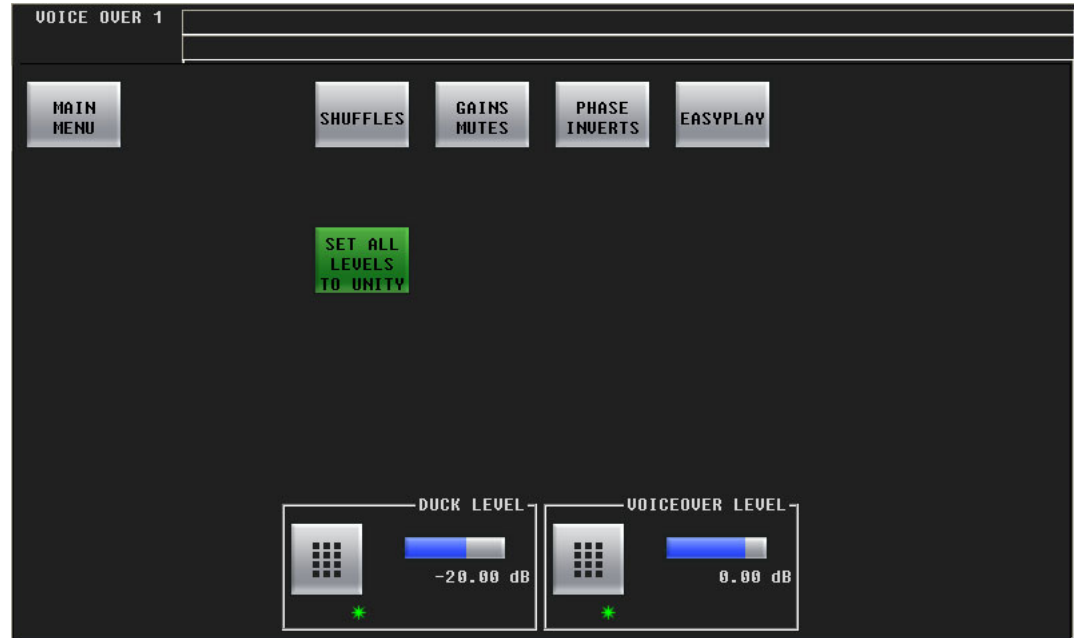


Figure 5-18. Voice-Over 1 Menu

▲ There are two voice-over menus: 'Voice-Over 2' is just like 'Voice-Over 1'.

The controls at the bottom of the screen adjust the "duck" level and the voice-over level of program output. To adjust these parameters, either using the knob proxy associated with the green asterisk in the control box, or touch the keypad icon to access a large keypad with which to enter a number.

Buttons

The 'Main Menu' button returns you to the main menu.

The 'Shuffles' button accesses the 'Audio Channel Shuffle' sub-menu (for voice-over audio).

The 'Gains Mutes' button accesses the 'Gains and Mutes' sub-menu (for voice-over audio).

The 'Phase Inverts' button accesses the 'Phase Inverts' sub-menu (for voice-over audio).

The 'Audio Channel Shuffle' button accesses the 'Audio Channel Shuffle' sub-menu (for voice-over audio).

The 'Set All Levels to Unity' sets each of the 16 audio channels to unity gain.

5. Menus

Voice-Over Menus

Gains and Mutes

This is the 'Gains and Mutes' sub-menu:



Each of the 16 audio channels has a mute button. The mute button is amber if the channel is muted.

Each of the 16 audio channels has a keypad icon. Touch the keypad icon to access a keypad in which you can enter a numerical value.

Either the top row of 8 buttons or the bottom row of 8 buttons can be associated with the 8 knob proxies. You can adjust the gain of each channel by using its knob proxy to activate the slider and the 'Scroll/Set' knob with which you can adjust the level. To choose the top row, touch the top row. To choose the bottom row, touch the bottom row.

The gain range is -100.0 dB to $+28.0$ dB. The gain of individual channels is affected by the over level.

Press the 'Shuffles' button to go to the 'Audio Channel Shuffles' sub-menu.


Press the 'Phase Inverts' button to go to the 'Phase Inverts' sub-menu.

Press the 'Back' button to return to the voice-over menu.

Press the 'Main Menu' button to return to the main menu.

Phase Inverts

This is the 'Phase Inverts' sub-menu:

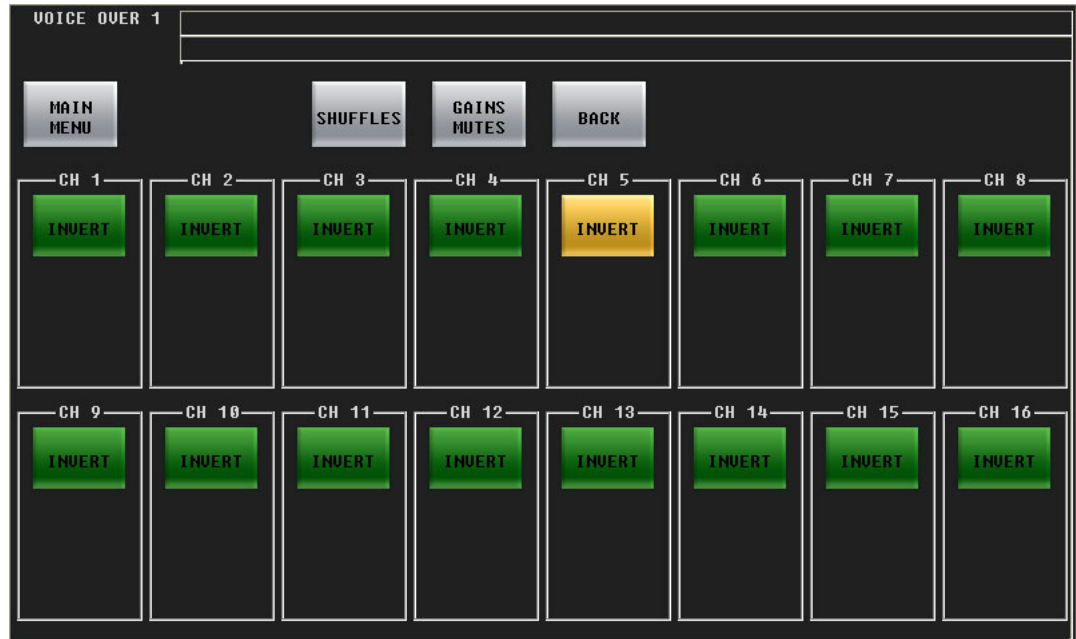

▲ The term phase is a misnomer. Phase has nothing to do with signal inversion.

When the audio channel is inverted, its PCM values are multiplied by -1 .

Pressing an invert button either inverts or un-inverts the audio samples. When the button is amber, the samples are inverted. When the button is green, the samples are normal.

Press the 'Shuffles' button to go to the 'Audio Channel Shuffles' sub-menu.

Press the 'Gains Mutes' button to go to the 'Gains and Mutes' sub-menu.

Press the 'Back' button to return to the voice-over menu.


Press the 'Main Menu' button to return to the main menu.

5. Menus

Voice-Over Menus

Audio Channel Shuffle

This is the 'Audio Channel Shuffle' sub-menu:

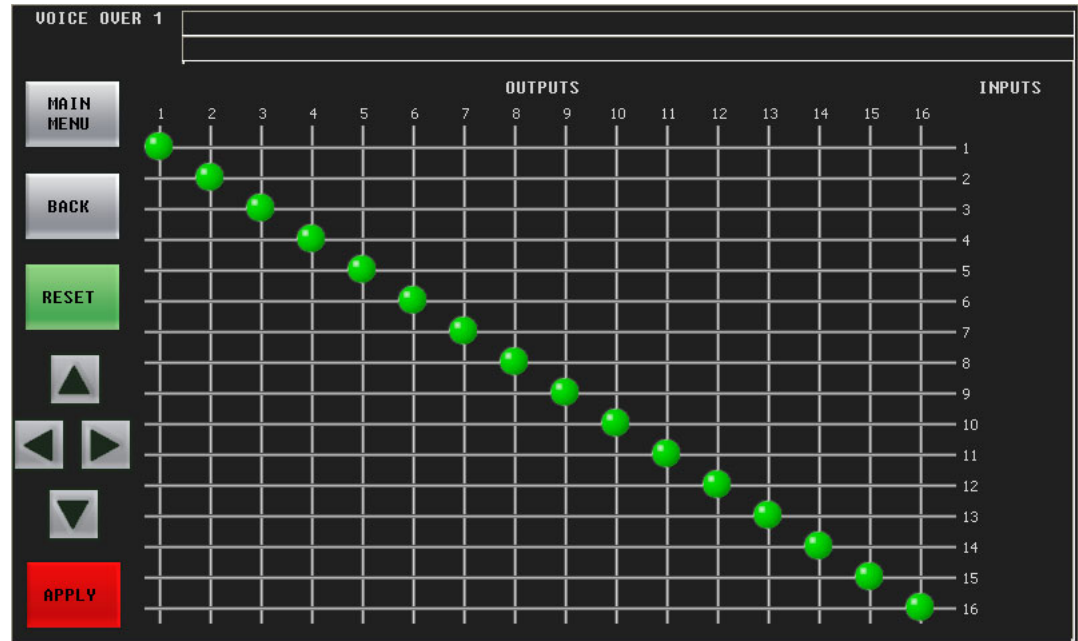

See [Shuffling Audio Channels](#) on page 129.

Press the 'Back' button to return to the voice-over menu.

Press the 'Main Menu' button to return to the main menu.

XG Keyer Layers Menu

Figure 5-19 shows the panel's XG keyer layers menu:

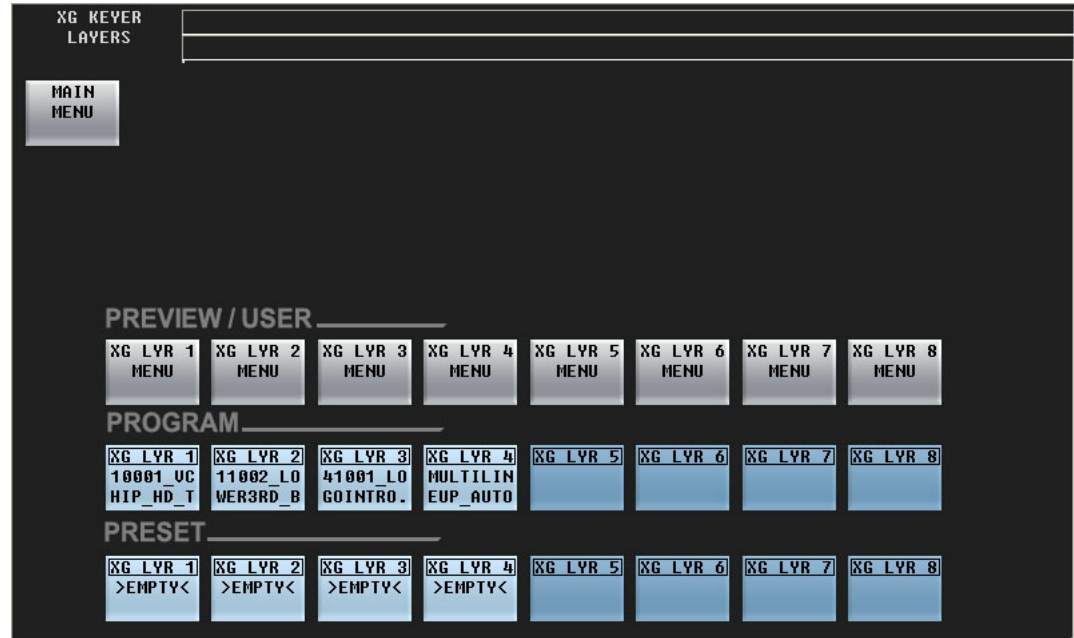


Figure 5-19. XG Keyer Layers Menu

The 'Main Menu' button returns you to the main menu.

(The large 'Intuition XG Layer Control' button in the main menu takes you to this menu.)

The buttons in the upper row—labeled 'Menu'—take you to browsers for the named XG layer (1–8). Not all Intuition XG processors provide 8 layers. Also, your panel might be configured for more or fewer layers than provided by the Intuition XG processor.

The buttons in the 'Program' row *cut* XG layers to program output (and to the program button row of the panel).

The buttons in the 'Preset' row *arm* XG layers (which become selected on the preset button row of the panel).

XG layers are handled by one of the DSKs. The relationship between XG layers and a DSK is not simple. See [Working with XG Layers](#) on page 115 for information.

5. Menus

XG Keyer Layers Menu

XG Layer Menus

Press any of the XG Layer “menu” buttons (in the XG Keyer Layers menu) to get an XG browser for that layer. This is an example for XG layer 1:



The ‘Show Selection’ button will scroll the list to the currently selected clip. This can be important if you have very many clips.

To select an XG clip, press or touch its thumbnail. You might have to scroll to find the clip you want. The clip you select is highlighted in light blue.

The scroll bars at the right have two sets of arrows. The arrows at the very top and bottom take you to the beginning and the end of the list of XG clips.

The ‘Load Disabled’ button disables selection of the clips using thumbnails. This prevents accidental selection of a clip. Press ‘Load Disabled’ again to re-enable selection of clips using thumbnails.

The ‘Clear XG Keyer Layer’ button unload the currently selected clip from the XG layer.

Press ‘XG Keyer Layers’ to return to the ‘XG Keyer Layers’ menu.

Press ‘Main Menu’ to return to the main menu.

A/B Mixer Menu

Figure 5-20 shows the panel's 'A/B Mixer' menu:

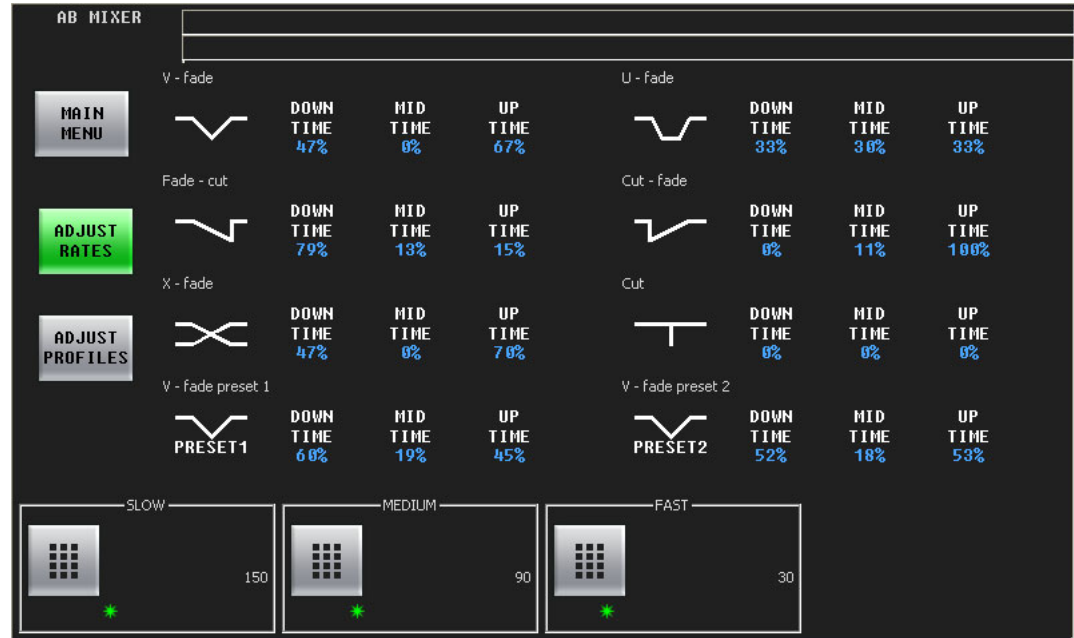


Figure 5-20. A/B Mixer (Rates Sub-Menu Shown)

This menu displays the characteristics of the transition types defined in the Imagestore 750 under control.

The 'Adjust Rates' button selects a sub-menu that lets you adjust the slow, medium, and fast rates of the A/B mixer. That sub-menu is shown in Figure 5-20.)

The controls at the bottom of the screen adjust the slow, medium, and fast transition rates. To adjust these parameter, either click the knob proxy associated with the green asterisk, and use the slider, or touch the keypad icon to access a large keypad with which to enter a number.

▲ Note that each DVE and DSK has its own slow, medium, and fast rates, independent of the A/B Mixer.

The 'Adjust Profiles' button selects a sub-menu (shown in Figure 5-21, following) that lets you adjust the down time, mid time, and up time (or rise time) of individual transition types.

The 'Main Menu' button returns you to the main menu.

Adjust Profiles

Figure 5-21 shows the A/B mixer's 'Profiles' sub-menu:

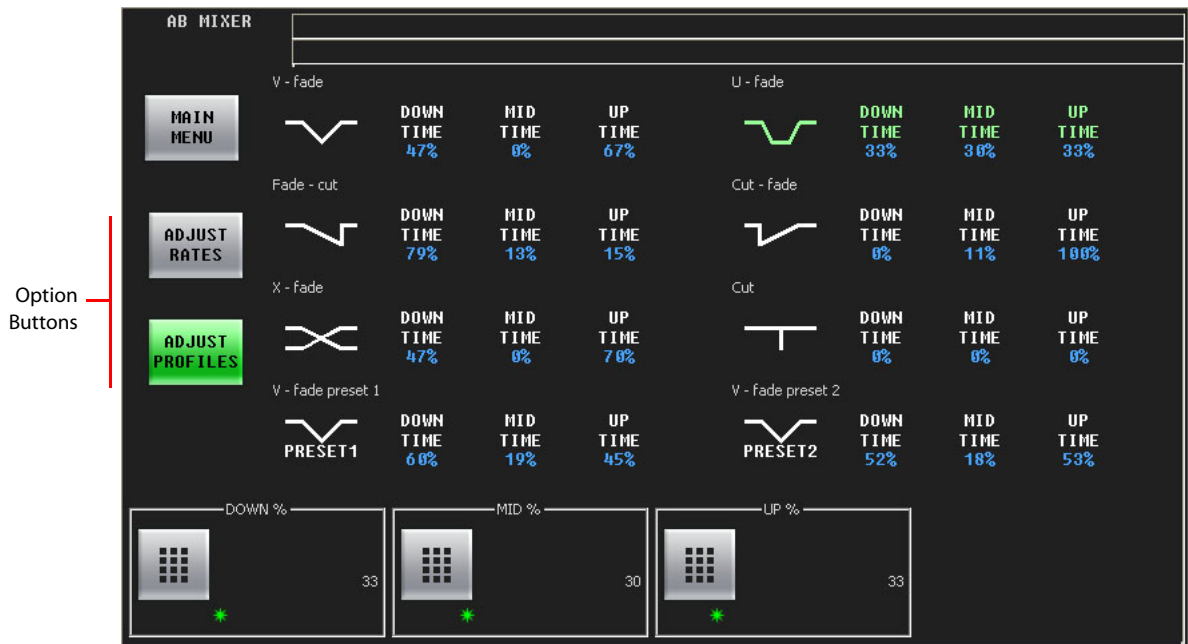


Figure 5-21. A/B Mixer (Profiles Sub-Menu Shown)

In this menu, you can adjust the down time, mid time, and up time (or rise time) of individual transition types.

Select the transition type that you want to modify. In Figure 5-21, the U-fade transition is selected and highlighted in green.

At the bottom of the menu, are 3 controls with which you can adjust the transition parameters (down time, mid time, and up time). Touch a knob proxy next to the control and use the slider that appears to change the setting. You can also touch the keypad button of the control to access a keypad in which to change the parameter numerically.

- ▲ You cannot change the parameters of the 'cut' transition type and you cannot change the mid time of the X-fade.
- ▲ A non-zero mid time for a transition type results in a dwell period in the middle of the transition (as for a U-fade).

The values for down time, mid time, and up time range from 0 to 100. They appear here as percentages, but in actuality they are integer values representing a fraction of the transition period according to the following formulas:

$$D = \text{down time} / \text{sum} \quad \text{where } \text{sum} = \text{down time} + \text{mid time} + \text{up time}$$

$$M = \text{mid time} / \text{sum}$$

$$U = \text{up time} / \text{sum}$$

and

$$D' (\text{frames}) = F \times D \quad \text{where } F \text{ is the total number of frames in the transition}$$

$$M' (\text{frames}) = F \times M$$

$$U' (\text{frames}) = F \times U$$

all rounded to the nearest integer.

For example, the values for a fade-cut (79, 13, 15) for a slow transition (150 frames) are:

$$\text{Sum} = 79 + 13 + 15 = 107$$

$$D = 79 / 107 \quad D' = 150 \times 79 / 107 = 110.747 = 111 \text{ frames}$$

$$M = 13 / 107 \quad M' = 150 \times 13 / 107 = 18.224 = 18 \text{ frames}$$

$$U = 15 / 107 \quad U' = 150 \times 15 / 107 = 21.028 = 21 \text{ frames}$$

- ▲ Up time in frames is adjusted so that total number of frames for the transition is exactly as specified.

The 'Adjust Rates' button switches to the sub-menu that lets you adjust the slow, medium, and fast rates of the A/B mixer.

The 'Main Menu' button returns you to the main menu.

Sources Menu

Figure 5-20 shows the panel's 'Sources' menu:

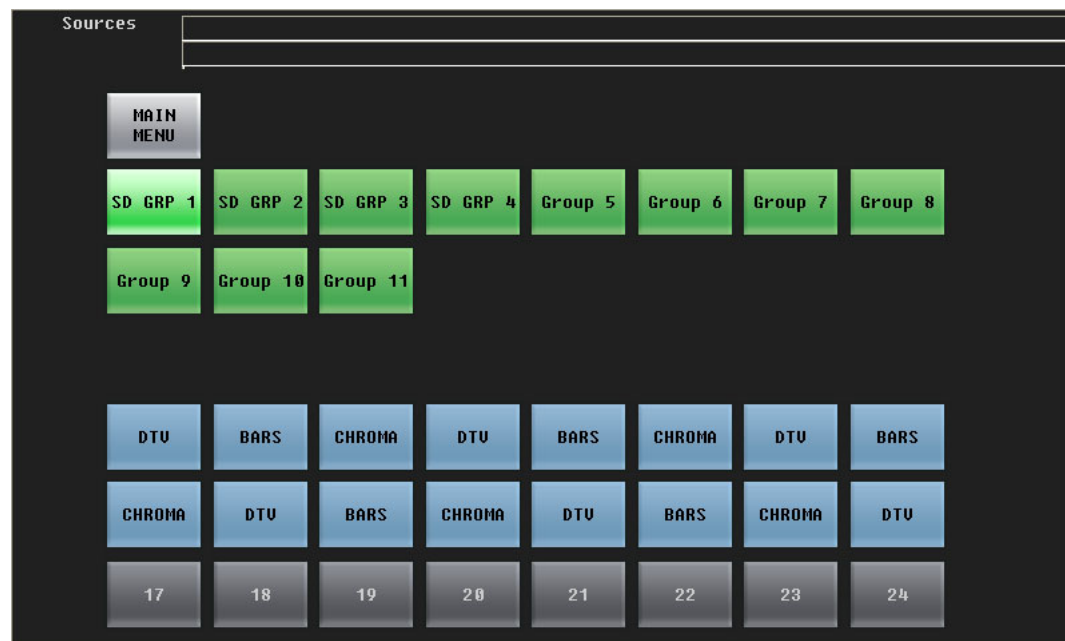


Figure 5-22. Sources Menu

This menu displays the names of source groups (on the green buttons) and displays the sources that belong to the selected source group in blue. Up to 24 sources may belong to a group. To view a different source group, press the appropriate green button.

You can

- Add sources to the selected group.
- Remove sources from the selected group.
- Change a selected source (in the selected group).

The 'Main Menu' button returns you to the main menu.

5. Menus

Sources Menu


Adding a Source to a Group

Follow these steps:

- 1 Select the source group to which you want to add a source.
- 2 Press any *grey* source button:



A dialog appears in which you can choose any router source available:

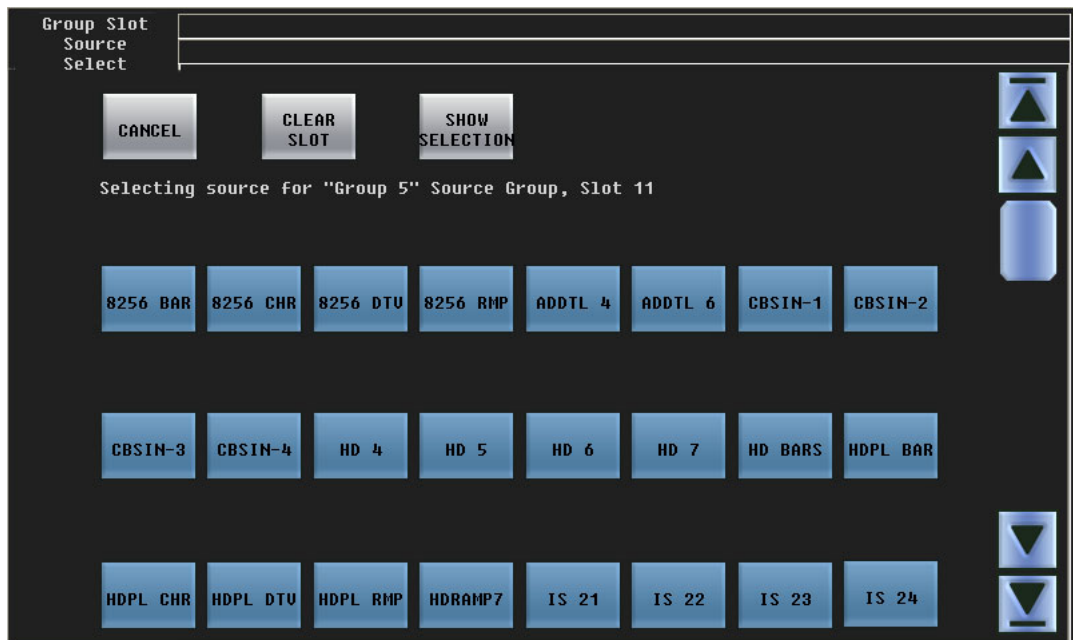

Press a source button to choose a source. Scroll, if necessary, to find the source.

Press 'Cancel' to return to the Sources menu. Press 'Show Selection' if the current selection is not visible in the window.

- 3 After you choose a source, the panel immediately returns to the 'Sources' menu. The added source selection (here, XTR206) is available:




Changing a Source within a Group

Follow these steps:

- 1 Press any blue source button. In this example, the first source (IS 69) was pressed:



A dialog appears in which you can choose any router source available:

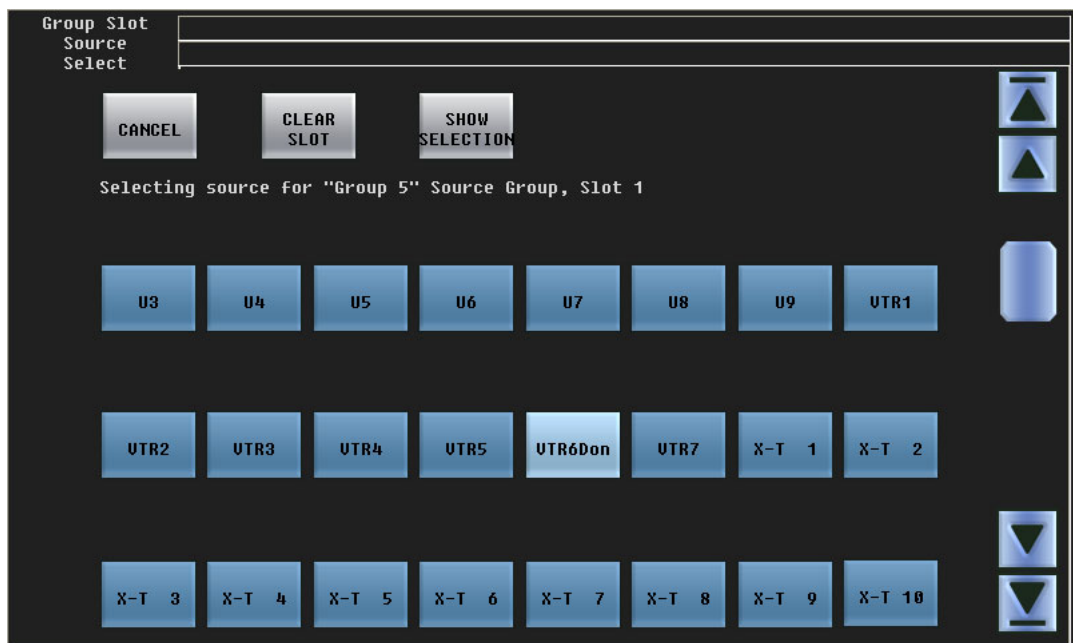

Press a source button to choose a source. Scroll, if necessary, to find the source.

Press 'Cancel' to return to the Sources menu. Press 'Show Selection' if the current selection is not visible in the window.

- 2 After you choose a source, the panel immediately returns to the Sources menu. The new source selection (here, XTR206) is available:



5. Menus

Sources Menu

Removing a Source from a Group

Follow these steps:

- 1 Press any blue source button. In this example, the first source (IS 69) was pressed:



Again, a dialog appears:



Press 'Clear Slot' to remove the source.

Or, press 'Cancel' to return to the 'Sources' menu. Press 'Show Selection' if the current selection is not visible in the window.

- 2 The panel immediately returns to the 'Sources' menu. The source has been removed and an empty slot is in its place:



Panel Menu

From the main menu, press the ‘Panel Settings’ button to access the ‘Panel Info’ menu:

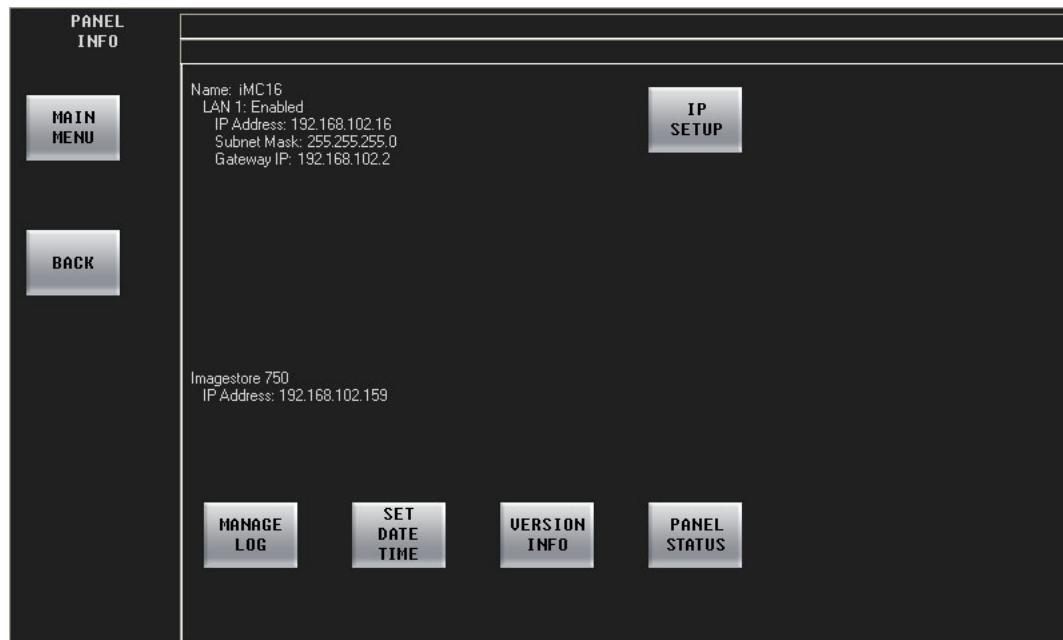


Figure 5-23. Panel Info Menu

The ‘Panel Info’ menu has 5 buttons that let you do the following:

- [IP Setup](#). Change the panel’s IP address and mask.
- [Manage Log](#). View and clear the system log.
- [Set Date Time](#). Set the time and date.
- [Version Info](#). Review software and firmware versions.
- [Panel Status](#). Restart the control panel, adjust the LCD brightness, update the panel configuration, and perform control panel tests.

The ‘Panel Info’ menu also displays the IP address of the control panel and the attached Imagestore 750.

5. Menus

Panel Menu

IP Setup

From the 'Panel Info' menu, press the 'IP Setup' button to display the 'IP Setup' sub-menu:

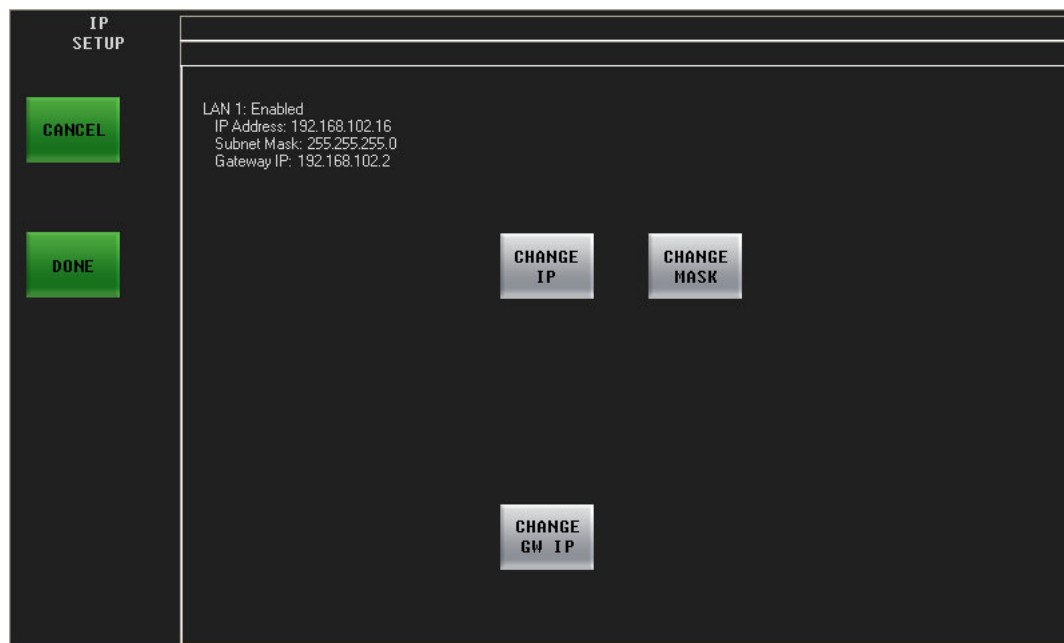


Figure 5-24. IP Setup Menu

The 'IP Setup' menu allows you to enable, disable, or change the LAN1 address pertaining to the iMC-Panel-100. LAN1 is for communication with the Imagestore 750 and its IP address should be 192.168.*aaa.bbb*, where *bbb* is different for each control panel in use and *aaa* depends on the subnet you've chosen. (For *bbb*, we suggest: 100, 110, 120...). The subnet mask should always be 255.255.255.0.

The 'Change IP', 'Change Mask', and 'Change GW IP' buttons invoke sub-menus.

Note

Panel operators should not generally modify these settings.

Use the 'Change IP' button to change the four IP address bytes. Use the 'Change Mask' button to change the four mask bytes. Use the 'Change GW IP' button to change the gateway IP address. A keypad appears after you touch the button. Use the keypad to enter values numerically. Press 'Cancel' to cancel the entry or press 'Done' to accept the entry.

- ▲ You must restart the iMC-Panel-100 when you change its IP address. LAN1 must be enabled.
- ▲ If you press any of the buttons in this menu, the menu will ask you whether you want to restart the panel even if you did not make a change.

Manage Log

From the 'Panel Info' menu, press the 'Manage Log' button to display the 'Manage Log' sub-menu:

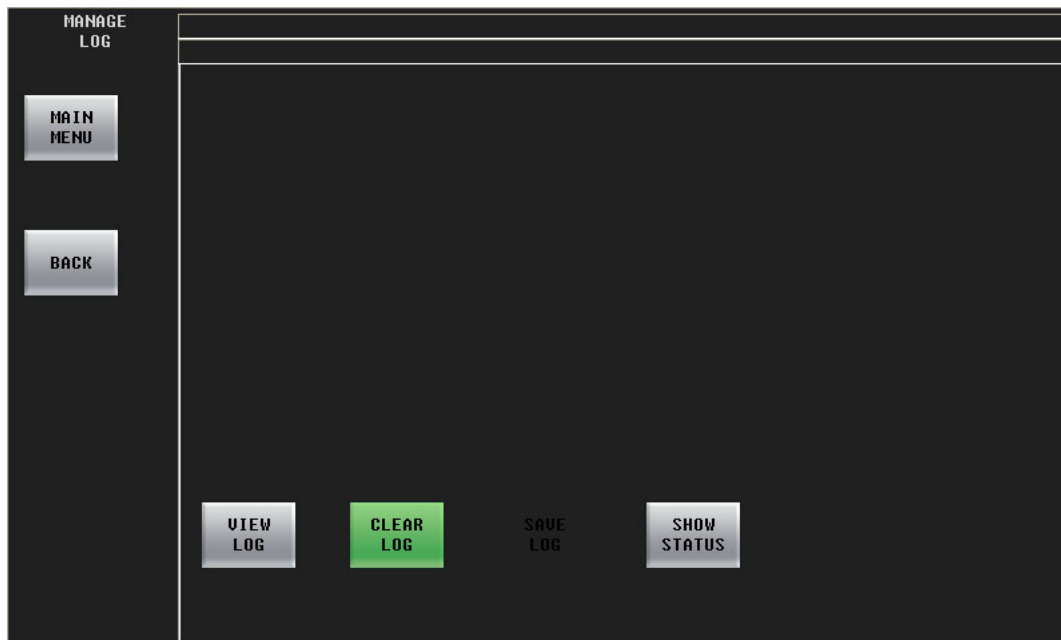


Figure 5-25. Manage Log Sub-Menu

The 'Manage Log' sub-menu allows you to view and to clear the system log.

Press 'View Log' to display the 'View Log' sub-menu, which lists all network transactions for trouble-shooting purposes.

Press 'Clear Log' to clear the contents of the system log, as required.

A person using the MCS Panel Configuration Editor can subsequently read the panel's log file.

Press 'Show Status' to display system messages. If there are no messages, the display will be blank.

5. Menus

Panel Menu

Set Date Time

From the 'Panel Info' menu, press the 'Set Date Time' button to display the 'Date and Time' menu.

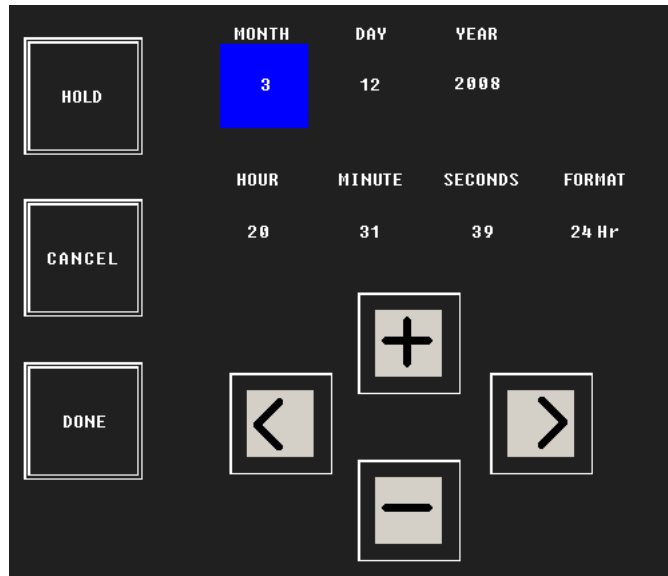


Figure 5-26. Date/Time Sub-Menu

This menu has 3 fields for date and 4 fields for time. Touch the left or right arrow buttons to select the field you want to modify. When you have selected a field, press the “+” or “-” buttons to change the value.

Press the 'Hold' button to freeze the time values. Doing this might help you synchronize to another clock. Release the hold at the moment you want the clock to start again.

Press 'Cancel' to discard your changes and return to the 'Panel Info' menu.

Press 'Done' to save your changes and return to the 'Panel Info' menu.

Version Info

From the 'Panel Info' menu, press the 'Version Info' button to display the 'Version Info' sub-menu.

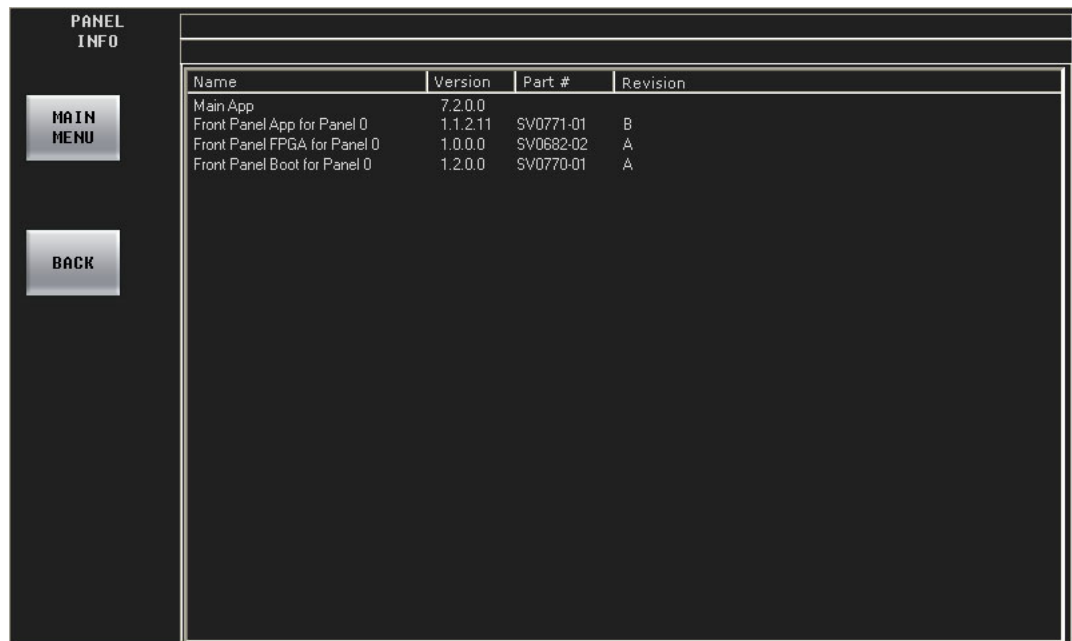


Figure 5-27. Version Info Menu

The 'Version Info' sub-menu allows you to view software and firmware revisions.

Panel Status

From the 'Panel Info' menu, press the 'Panel Status' button to display the 'Panel Status' menu:

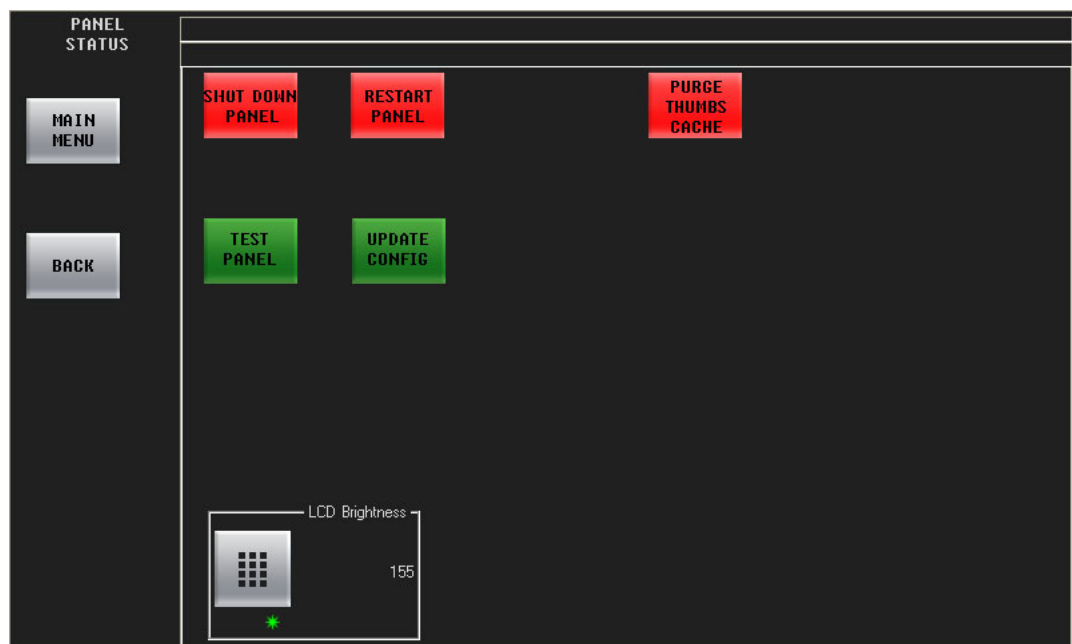


Figure 5-28. Panel Status Menu

5. Menus

Panel Menu

The ‘Panel Status’ sub-menu allows you to restart the panel, adjust the LCD brightness, update the panel configuration, and perform tests.

Five function buttons are available:

Button	Function
Shut Down Panel	Performs a “clean” shutdown. The internal software halts, the screen becomes dark, and buttons and knobs become inoperable. The power supplies shut down. Warning: never just shut off power. You risk damage to the panel’s flash memory. To start the panel after a shutdown, you must cycle power at the power cord. The front row of buttons on the panel give a ‘Shutdown Complete’ message when it is safe to cycle power.
Restart Panel	Performs a “hard” start—restarting the control panel completely. The process takes about a minute. After restart, the menu system resumes at the main menu.
Test Panel	Press the ‘Test Panel’ button to view the Panel Test Sub-Menu .
Update Config	Performs a “soft” start—restarting the control panel software only (with the current configuration). (“Update” means that the panel’s configuration is copied from local non-volatile storage to local memory.) The “Update Config” process takes only a few seconds. During this time the panel will cycle off and back on again. Use this soft start function to restart the control panel software when you have written a configuration to the panel.
Purge Thumbs Cache	Pressing ‘Purge Thumbs Cache’ causes the panel to empty its cache of Intuition XG thumbnail images.

Panel Test Sub-Menu

From the ‘Panel Status’ menu, press the ‘Test Panel’ button to display the ‘Panel Test’ sub-menu:



These are the functions of the ‘Test Panel’ sub-menu:

- View alarm status and temperature information.

- Turn (all) button LCDs on and off, verifying that they work.
- Exercise the 2 GPI output relays.
- Test any of the knobs and buttons, and observe changes in the color of the buttons.

When you press the 'Done' button in the 'Panel Test' sub-menu, the panel returns to its previous state.

- ▲ Button testing has no direct effect on the program or preview output. Those outputs continue unimpaired.

5. Menus

Panel Menu

6. Operation

Chapter 6 describes many of the operating procedures and operating characteristics of the iMC-Panel-100 when it is used to control an Imagestore 750. It presents the following topics:

- [General Information](#)
- [Performing Transitions](#)
- [Transition Options](#)
- [Working with Transition Type and Rate](#)
- [Working with DSKs](#)
- [Working with DVEs](#)
- [Working with XG Layers](#)
- [Working with Voice-Overs](#)
- [Working with Audio Monitors](#)
- [Working with Audio Meters](#)
- [Working with Audio Levels](#)
- [Shuffling Audio Channels](#)
- [Working with Multiple Channels](#)
- [Working with the Aux Buttons](#)
- [Working with a Monitor Wall](#)
- [Using the Panel Menu](#)
- [Fade to Black](#)
- [Fade to Silence](#)
- [Updating Configuration Settings](#)
- [Panel Startup and Shutdown](#)

Note

Throughout this guide, and especially in this chapter, we use *sample* source names, effect names, and menu lists for illustration. The names on your panel will differ.

General Information

About Colors

The physical buttons of the iMC-Panel-100 are large having LCD legends in several colors. Each button has 3 line of text, up to 8 characters per line. Although not physical, menu buttons also show 3 lines of 8 characters, in color.


LCD buttons are used for the configurable buttons and for the preset and program buses.

6. Operation

General Information

Colors on Physical LCD Buttons

The physical buttons of the button panel are color-coded. A button's LCD changes color to represent different states of the button. (The colors you are viewing here are approximate only).

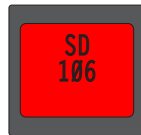

Red buttons have the following warning functions:

On the program and preset buses, red indicates that the selected source is LOS or non-sync. The error line of the menu displays the current error condition. Note that the system will put a non-sync source on air if you want it.

On the program and preset buses, red can also indicate audio LOS.

When you perform a channel change, the new channel button flashes red for a moment. That indicates that the system has acknowledged the change request. A (selected) channel that is absent, malfunctioning, or in emergency bypass mode shows red. Emergency bypass buttons are red when the selected channel is in emergency bypass mode.

A 'Panel lock' button, if present, is high-tally red when the panel is locked.



Amber buttons sometimes represent mild warnings, such as LOS on a video effect.

High-tally amber also indicates a follower channel that is "ganged" to the main channel (green). If there are multiple followers, each has an amber button.



Low-tally buttons (dark green) are *unselected* main sources, channels, or functions. Green generally indicates that there is no error.




High tally buttons (bright green) are *selected* main sources, channels, or functions.

On the program and preset buses, high tally buttons are selected main sources. Green indicates that there is no error. (High-tally violet represents an audio source in a breakaway selection.)

High-tally green represents the active channel, the main channel in a gang, or an active function on a configurable button.



'Voice-Over' buttons are violet, and high-tally when selected.

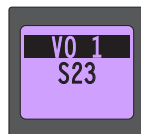



Video effect buttons are blue, and high-tally when selected.



Menu selection buttons are normally grey. When you press a menu selection button to select a menu, the button turns aqua. (Aqua is a shade of blue not very different from high-tally blue.)



Buttons that are off (dark) have no function assigned or they have disabled functions.

Colors on “Soft” Buttons

Buttons in the top row, the aux/user row and the preview/user row of the display are color-coded in the same way as the physical LCD buttons of the button panel. The colors you are viewing here are approximate only, but reasonably close if you are viewing this document on a computer screen.



Red buttons have the following warning functions:

On the program and preset buses, red indicates that the selected source is LOS or non-sync. The error line of the menu displays the current error condition. Note that the system will put a non-sync source on air if you want it.

On the program and preset buses, red can also indicate audio LOS.

When you perform a channel change, the new channel button flashes red for a moment. That indicates that the system has acknowledged the change request. A (selected) channel that is absent, malfunctioning, or in emergency bypass mode shows red.

Panel lock, if present, is high-tally red when the panel is locked.



Amber buttons sometimes represent mild warnings, such as LOS on a video effect that is not on program output.

High-tally amber also indicates a follower channel that is “ganged” to the main channel (green). If there are multiple followers, each has an amber button.

6. Operation

General Information



Low-tally buttons (dark green) are *unselected* main sources, channels, or functions. Green generally indicates that there is no error.



High tally buttons (bright green) are *selected* main sources, channels, or functions.

On the program and preset buses, high tally buttons are selected main sources. Green indicates that there is no error.

High-tally green represents the active channel, the main channel in a gang, or an active function on a configurable button.



Voice-over buttons are violet, and high-tally when selected.



Video effect buttons (DVEs, DSKs, or XG keyer layers) are blue, and high-tally when selected. (Buttons for video effects that are LOS are amber.)



Buttons that are off (dark) have no function assigned or they have disabled functions.



Menu activation buttons are gray when the menu is not activated and aqua (or turquoise) when the menu is activated.



Button Colors in the Menu Area

The menu buttons use color to represent different types of functions and give you visual feedback:



Some gray buttons are navigation buttons. (The 'Main Menu' button, for example, always takes you to the main menu. Most other navigation buttons take you to sub-menus. Some gray buttons are function buttons.



Most green buttons are function buttons. Most of these are toggles: when you press one, its function becomes active and the button turns bright green. When a button is dark green, its function is inactive.



Some green buttons are momentary functions. They turn bright green momentarily while they are performing their functions.



Dark blue buttons are *unselected* list entries.



Light blue buttons are *selected* list entries.



‘Apply’ buttons are intense red. These buttons are found in the audio channel shuffle menus. A few other buttons are brighter red because you should exercise caution when using them. (‘Load Disabled’ is an example.)




Thumbnail Color

The DSK and XG keyer layer thumbnail images in the main menu give you an indication of the state of the DSK or XG keyer layer.

The thumbnail frame is blue when the DSK or XG keyer layer is on the program bus (i.e., program output). Otherwise, the thumbnail frame is grey.

The thumbnail frame is empty when the DSK has been cleared (i.e., has no clip or key assigned). Similarly, the thumbnail frame for an XG keyer layer is empty when the layer has been cleared. Otherwise, the thumbnail frame shows an image representing the clip (or key):

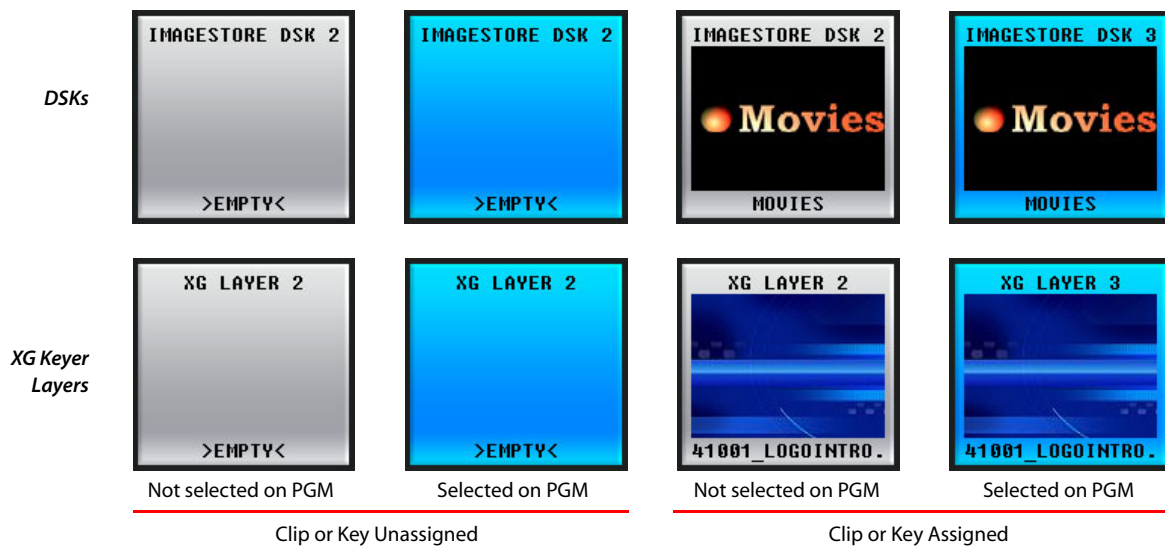

About Error Messages

Error messages that appear on the touchscreen’s error line are “stacked” in order of their effect on the on-air signal—with higher priority messages taking precedence over lower priority messages. For example:

- If you experience a video non-sync error, and simultaneously lose video reference to the Imagestore 750, the system displays the video reference loss error message.

6. Operation

General Information

- If you fix a problem with non-sync video, yet the button still remains red, a lower-priority audio format error might still be occurring (and will have moved to the top of the error stack). Always check the menu display to obtain information about current errors.

About the Button Rows

The iMC-Panel-100 has four button rows each comprising 16 buttons.

The preset and program rows have exactly the same button functions. These are rows of physical buttons on the button panel.

The aux/user and preview/user rows appear on the display unit. The aux/user row has the same source buttons as the preset and program rows. Buttons in the aux row that are not source buttons are configurable buttons.

The preview/user row comprises additional configurable buttons.

About “Layer” Buttons

The “layer” section of the preset and program rows can include video effect buttons and voice-over buttons. The layer section can vary from panel to panel. Video effects include up to 4 DVEs and up to 4 DSKs.

- ▲ Some Imagestore 750s do not have DVES.

About Configurable Buttons

When your panel is controlling an Imagestore 750, there are 4 sets of buttons that provide customer-configurable buttons:

- The 4×4 array of buttons on the upper part of the panel.
- The rightmost buttons of the aux/user button row.
- The entire preview/user button row.
- The entire front row of buttons (except the transition button).

The buttons in these sections perform functions that are chosen by the person who configured the panel.

Panels and Channels

Several panels (and automation) can control the same channel at the same time. When someone else makes a change to a channel that you are also controlling, the changes are reflected (insofar as possible) on your control panel. Similarly, changes you make are reflected on all other panels that control the same channel.

This is not an issue if your system has been configured so that channels cannot be controlled by more than one panel.

A single panel can control multiple channels. When it does, the channels are said to be *ganged*. Further, the panel can be configured so that its default channel can be the main channel of a channel gang and when the default channel is selected (by any method) the follower channels in the gang are also selected and gang selection is enabled.

(The actions you perform on the main channel are also performed for the follower channels.)

Sharing vs. Preemption

Each control panel can be configured to share or not to share channels with other control panels.

Each control panel is configured with a priority level for access non-shared access. Panels with higher priority can preempt panels with lower priority and thereby gain access to the channel.

If your panel is configured for sharing, it will attempt to share a channel that is already in use. If the channel is controlled by a panel that does not share and that has a higher priority than yours has, the sharing attempt will fail.

If the sharing attempt succeeds, the panel operates normally. If it fails, you will be notified.

If your panel is not configured for sharing, when it attempts to acquire a channel, it can preempt the other panel if yours has a higher priority. You will be asked for permission to preempt the other panel. If the other panel has higher priority, the attempt to acquire the channel will fail and you will be notified.

Using the Keypad

Follow these steps to operate a keypad:

- 1 Press the desired 'Keypad' button (within a menu) to display the keypad menu for the parameter you wish to change. A sample is shown here:



- 2 On the keypad, press the desired digits for your numeric value. The 'Entry' register shows your entry in progress:



- 3 As necessary,
Press 'Clear' to clear the Entry register.
Press 'Cancel' to return to the previous menu, without having entered a number.
Press 'Done' to accept the new entry and return to the previous menu.
- 4 If an error message appears, (e.g., Invalid Entry), press 'OK' to start the entry procedure again.
The Entry register automatically clears.

6. Operation

Performing Transitions

Performing Transitions

The iMC-Panel-100 is a master control panel that sets up and initiates program transitions in an Imagestore 750. The Imagestore 750 executes the transitions.

Setting up a transition is the primary task of the panel operator. Automation can also set up and initiate transitions but that is of little concern to panel operators, except that operators may inhibit or enable automation and must generally avoid interfering with automated transitions.

Most transition operations involve selecting a source on the preset bus, selecting a transition type and rate, and transitioning the source to program. Some transitions involve applied video effects and voice-overs.

Basic Transition

Follow these steps to perform a *basic* transition:

- 1 Select the desired source on preset.
- 2 (Optionally) select or deselect the desired video effects and voice-overs on preset.
Use the menus to choose, and possibly modify, video effect settings.
- 3 (Optionally) select the desired transition type: cut, V-fade, cross-fade, PB cut-fade, or another. Select the desired transition rate: slow, medium, or fast.
- 4 Press the transition button. At the end of the transition period, the selections on the preset bus will appear on the program bus. During the transition, the preset sources and program sources will combine according to the transition type and rate.

Please note:

- You can “hot cut” to a new source directly on the program bus *at any time*, simply by pressing the desired source on the program bus. Hot cuts are not recommended.
- Once a transition is initiated, it cannot be stopped, except by (hot) cutting to a different source directly on the program bus during the transition period.
- Automation also initiates transitions.

Transition Options

The Imagestore 750 has several configuration options that affect how transitions occur and how the preset buttons and program buttons function.

Some of the differences in behavior are subtle.

The options are identified here by their names in the configuration software. (Some of those names are cryptic.) These are the options:

- ‘Cut All from Air on Hot PGM Switch’

This option can be enabled or disabled.

When it is enabled, performing a hot cut on the program bus causes all effects (DVEs, XG keyer layers, DSKs, and voice-overs) to be removed (cut down) from the program bus.

When this option is disabled, a hot cut does not change the effects present on the program bus.

- ‘Re-arm mix on PST bus source change.’

This option can be enabled or disabled.

When it is enabled, selecting a source on the preset bus that is different from the source selected on the program bus causes the most recently selected transition type to become selected. (It does not matter why you selected that transition type—the option uses *the most recently selected transition type*.) Further, if you select a source on the preset bus that is the same as the source on the program bus, all transition types becomes de-selected.

When this option is disabled, selecting a source on the preset bus has no effect on whatever transition type is selected or not selected.

- ‘Preview Select’

Normally, this option presents the preset bus at the preset output. (Within the configuration software, this output is called either preview or preset.)

It is possible, although not likely, for the Imagestore 750 to be configured to present program output, the program A/B mixer output, the program DVE output, or the outputs of DSKs 1, 2, or 3 as the preset output.

- ‘Active Preview AB Mixer’

This option can be enabled or disabled.

When it is *enabled*, the preset (a.k.a. preview) background video depends on both the progress of the program A/B mixer and its arm state.

When you have not armed the A/B mixer (i.e., have not selected a transition type), the preset background video is the same as the program video background.

When you select a transition type, the preset background video is what you have chosen as the preset source, which will be the background video on program after the next transition (or “Take”).

When the option is *disabled*, the preset background video is independent of the A/B mixer and its arm state. The preset background video is always the preset source you have chosen.

- ‘Active Preview DVE’

When this option is activated, if you hot-cut a DVE on the program bus, it will also become active on the preset bus. And, if you hot-cut a DVE off the program bus, it will also be removed from the preset bus.

6. Operation

Working with Transition Type and Rate

- ‘Active Preview Keyers’

Some operators like the “PresStation” method of arming DVEs, DSKs, and voice-overs on the preset bus. Other operators like the traditional method (which is used for MCEs and MCPMs).

When this option—coupled with ‘Enable Traditional PST Tally’ of the MCS Panel Configuration Editor—is chosen, the panel will operate using the *traditional* method. Otherwise, the panel will use the *PresStation* method.

- ‘DSK *n* Preview Keyer Position’

This basically turns the Imagestore 750’s individual DSKs on or off.

If your panel has DSK buttons, and they are disabled in the Imagestore 750’s configuration, the buttons will be disabled on your panel. They might be enabled for another Imagestore 750.

- ‘Aux Bus Follow’

This option—although not strictly a transition option—has 3 choices: ‘none’, ‘PGM’, or ‘PST’.

When the option is ‘PGM’, the aux bus “follows” the program bus. That means that whatever source you select on the program bus is also selected on the aux bus.

When the option is ‘PST’, the aux bus “follows” the preset bus.

When the option is ‘none’, the aux bus does not “follow” either bus and operates normally.

Note that when the option is ‘PGM’ or ‘PST’, you can still use the aux buttons, normally, to switch sources to your aux output.

Working with Transition Type and Rate

It is the Imagestore 750 that stores the transition type and rate. It supports 8 transition types: cut, V-fade, cut-fade, cross-fade (or X-fade), fade-cut, U-fade, V-fade preset 1, and V-fade preset 2. (A U-fade is like a V-fade with a dwell period in the middle. The dwell period is pre-configured. The characteristics of the V-fade preset 1 and preset 2 are also pre-configured.)

Rates are ‘Slow’, ‘Medium’, and ‘Fast’. Your panel might have an ‘Automation Rate’ button which selects whatever rate is in effect in the automation system in your facility.

The Imagestore 750’s A/B mixer has its slow, medium, and fast rates. You can change these rates in the ‘A/B Mixer’ menu.

Each DSK has its own rates (slow, medium, and fast) and each voice-over has its rates. You can change a DSK’s three rates in its menu. Larger values are slower rates. The range of values is 1 to 999. You cannot change the rates of a voice-over from the panel.

By convention, transition type and rate buttons are assigned to the ‘Transition Control’ button group at the front of the panel. However, any of these functions can be assigned to any configurable button.

To select a transition type, simply press one of the transition type buttons. The button will go high-tally and other transition type buttons go low-tally. To select a rate, press one of the transition rate buttons.

A “cut” transition does not involve a rate and any rate buttons on your panel become disabled.

Notes

- When you set a transition type, it is set within the Imagestore 750. Other panels attached to the Imagestore 750 can detect, and use, its transition type.
- The transition type in the current Imagestore 750 might not be represented on your panel. In that case, all transition type buttons on your panel will be disabled.

Changing Transition Rates

To *change* the rate of the A/B mixer, follow these steps:

- 1 From the main menu, press an ‘A/B Mixer’ button to access the ‘A/B Mixer’ menu.
- 2 Use the keypad or knob proxy adjacent to the slow, medium, or fast value to change the value. The new rate is immediately available for use.

To *change* a DSK rate, follow these steps:

- 1 From the main menu, press a DSK button or press a ‘DSK Browser’ menu button to access a ‘DSK Browser’ menu.
- 2 Use the keypad or knob proxy adjacent to the slow, medium, or fast value to change the value. The new rate is immediately available for use.
- 3 Repeat steps 1 and 2 to change the transition rates for other DSKs.

No further action is required to use the new transition rate(s). A new rate remains active until you enter another rate.

Working with DSKs

Imagestore 750s used in the master control system provide 4 DSKs (downstream keyers). A key is a video effect that usually consists of two video sources, fill and key. The keyer mixes the fill, masked by the key, with upstream program video. In some cases, key values are derived from the luminance of the key’s fill values. A key can be partially or fully opaque. It is possible for an operator to control the way the key values mask the fill values.

The Imagestore 750 performs video effects in a configurable order:

DSK 1 is upstream of DSK 2, which is upstream of DSK 3, which is in turn upstream of DSK 4.

The DVE (if present) can be placed before DSK 1, before DSK 2, or before DSK 3.

The effects to the right have visual priority over effects to the left. We say the effects to the right are *downstream* and effects to the left are *upstream*. Your panel’s effect buttons, if any, might occur in any order. Your panel might not have buttons for all video effects.

▲ In an Imagestore 750 configuration, some or all DSKs can be disabled.

Keys can be external or internal. The Imagestore 750 supports up to 3 external key sources. Internal keys are generally called clips, stills, or animations. The number of internal keys is potentially large and is limited only by available memory.

The use of DSKs is affected by certain transition options. See [Transition Options](#) on page 107 for more information.

6. Operation

Working with DSKs

Performing Key Transitions

You can transition any combination of video effects (including 1 DVE and 4 DSKs) to program output.

Follow these steps to transition one or more keyers to program output:

- 1 Use the 'DSK Browser' menus to select keys and perhaps change their settings. The names of the selected keys become visible on the associated DSK buttons. See [Changing Key Settings](#), following.
- 2 Press the desired DSK button(s) on preset. Selected DSK buttons are high-tally.
On preset, the DSK buttons have 3 states: cut, fade, and off. Press the button again to cycle it to its next state. When the state is 'cut', the DSK cuts to the program bus during the next transition and when the state is 'fade', the DSK fades (at its current rate) to the program bus.
- 3 Optionally, set up other video effects, voice-overs, and transition type and rate.
- 4 Press the Transition button.

To *remove* key(s) from program, press the desired DSK button(s) on the preset bus to deselect them and perform a transition in the normal way. Here too, the DSK buttons have 3 states: cut, fade, and off. When the state is 'cut', the DSK cuts from the program bus during the next transition and when the state is 'fade', the DSK fades from the program bus.

Please note: you can "hot cut" keys directly on and off the program bus *at any time*, as required, simply by pressing the desired keyer on the program bus. Hot cuts are not recommended.

Hot cuts have side effects on the preset bus, depending on which transition options are active in the currently selected Imagestore 750.

Changing Key Settings

Go to the 'DSK Browser' menu. A list of keys appears (with scroll bars if the list includes more than 12 keys). Press a list entry to select the key of your choice. The setting now appears high-

lighted (in blue) in the list and the setting name appears on the DSK buttons in the program and pre-set button rows.



Touch the list control buttons (e.g., ‘Still’, ‘Anim’) to trim the list to the types of keys in which you are interested.

Rates, CGT, Keying

Press ‘Rates CGT Keying’ to access a menu in which to change the DSK rate, the clip, gain, transparency parameters, or key options. The ‘DSK Rates, CGT, Keying’ sub-menu appears:

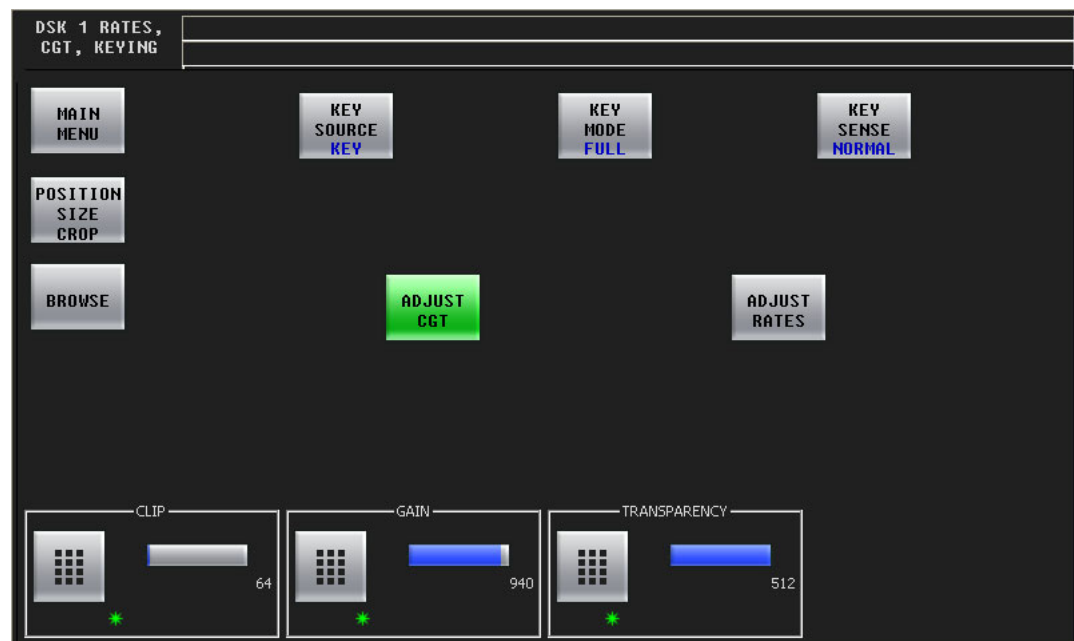


Figure 6-1. DSK Rates, CGT, Keying Settings (Sample)

6. Operation

Working with DSKs

This menu controls three things:

- DSK rates (slow, medium, and fast).
- Key parameters (clip, gain, and transparency).
- Key options (source, mode, and sense).


Clip, Gain, Transparency

Press the 'Adjust CGT' button to change the DSK's clip, gain, and transparency values. The menu will show a control at the bottom for each parameter (as shown in Figure 6-1 above):

Use the keypad icon or the knob proxy below the parameter's green asterisk to change the value.

DSK Rates

Press the 'Adjust Rates' button to change the DSK's slow, medium, and fast rates. The menu will show a control at the bottom for each rate:

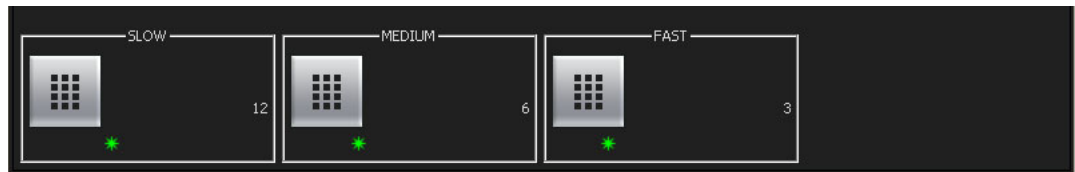

Use the keypad icon or the knob proxy below the parameter's green asterisk to change the value.

Key Options

The top 3 buttons are toggles:

- Key source—toggles between 'Key' and 'Self'. Self-keys do not use a separate key input. The key values are derived from the chroma values of the fill source.
- Key mode—full or linear.
- Key sense—normal or inverted.

Refer to the *Imagestore 750 Reference Manual* for definitions of these options.

Position, Size, and Crop

Press 'Position Size Crop' to access a menu in which to change the key's position or crop boundaries. The 'DSK Position, Size, Crop' sub-menu appears:

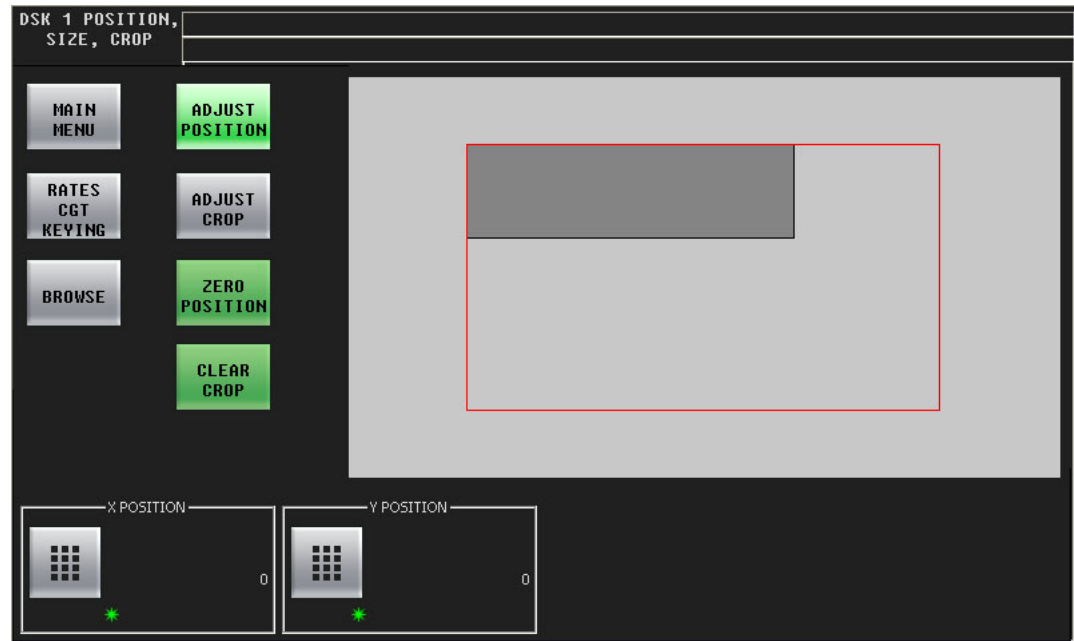


Figure 6-2. DSK Position, Size, Crop Settings (Sample)

There are 4 adjustment buttons in this sub-menu:

- Adjust position.
- Adjust crop.
- Zero position.
- Clear crop.

Position

Either (1) press 'Adjust Position' modify the position of the DSK on the screen, (2) press 'Zero Position' to reset its position to (0,0), or use the X and Y controls at the bottom of the window to enter a position. (Press the keypad icon to enter a number with a keypad or use the knob proxy next to the parameter's green asterisk.) The coordinate you choose is of the upper left corner of the DSK.

The large red outline represents the screen boundary. The darker gray rectangle represents the DSK.

Crop


Either (1) press 'Adjust Crop' modify the crop values of the DSK, (2) press 'Clear Crop' to reset its 4 crop values 0, or use the four controls at the bottom of the window to enter values. (Press the keypad icon to enter a number with a keypad or use the knob proxy next to the parameter's green asterisk.)

The crop values do not change the position value and vice versa.

6. Operation

Working with DSKs

The large red outline represents the screen boundary. The darker gray rectangle represents the *cropped* DSK while the medium gray rectangle represents the uncropped DSK:

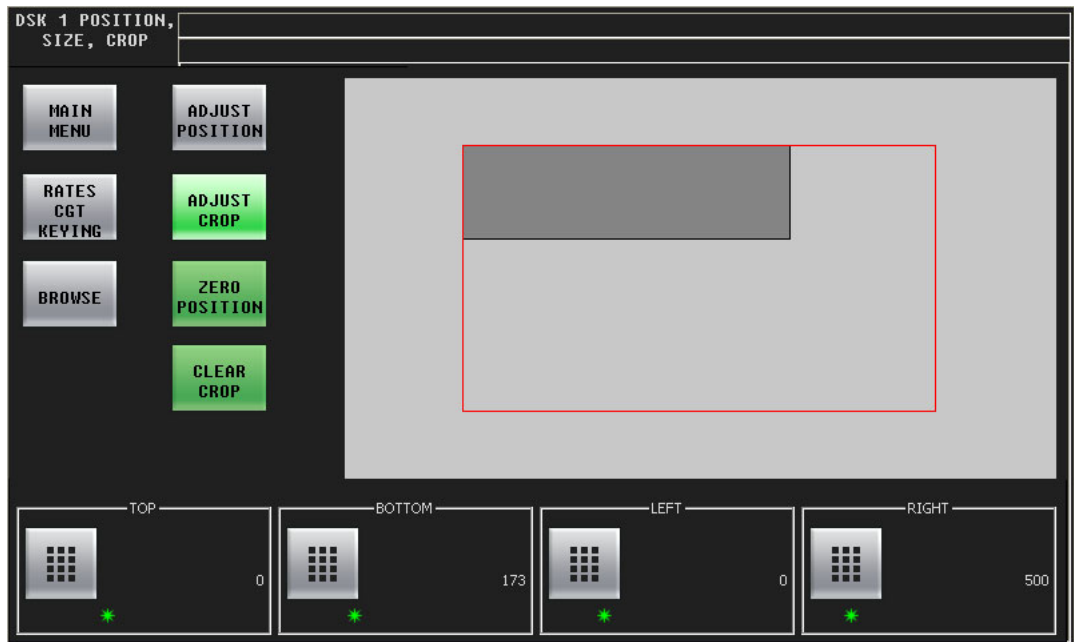

Saving DSK Settings

Press 'Options Saving' to access a sub-menu in which to save settings for the specific DSK: rate, the clip, gain, transparency parameters, or key options. The 'Options, Saving' sub-menu appears:

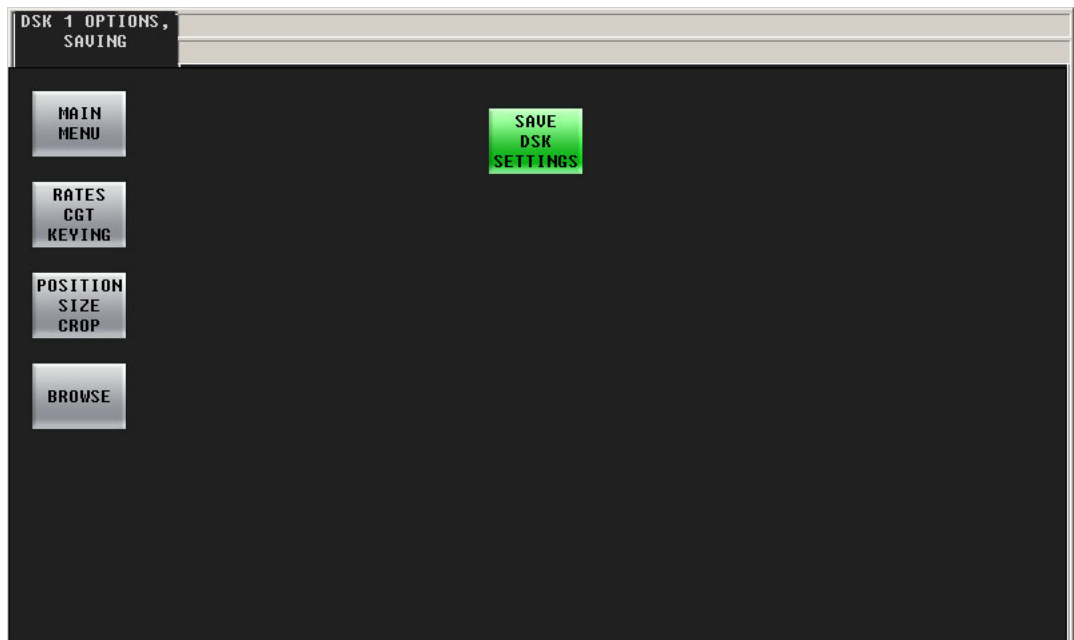


Figure 6-3. DSK Options Saving Page

Then press 'Save DSK Settings' to save the settings. Note that this button is absent if you have cleared the DSK because there are no settings to save.

Working with DVEs

There are up to 4 DVE buttons on the panel. The Imagestore 750 configuration permits the association of one DVE (of a possible 97 stored DVEs) with each button.

To use a DVE:

- 1 Press the appropriate DVE button on the preset row.
- 2 Carry out other presets as required.
- 3 Press the transition button.

You can “hot cut” DVEs to the program bus. Hot cuts are not recommended.

If your panel has a ‘PGM DVE Enable’ button, you can use it to enable or disable DVEs on the program bus.

If your panel has a ‘PST DVE Enable’ button, you can use it to enable or disable DVEs on the preset bus.

The use of DVEs is affected by certain transition options. See [Transition Options](#) on page 107 for more information.

Working with XG Layers

There are up to 8 XG layer accessible at your panel. Your panel can have some number of XG layer buttons. You can choose XG clips in the XG layer sub-menu. You can also turn the layers on and off in that menu.

XG layers are peculiar. First, XG layers are processed by one of the Imagestore 750’s DSKs. If you are using XG layers, only 3 of the 4 DSKs are available to process keys.

Second, you cannot view an XG layer merely by selecting it on PST. Doing so only arms the XG layer for transition. However, you can view XG layers by selecting XG layers on PGM and then selecting the DSK that carries it, either on PGM or on PST. If you select the DSK on PGM, the XG layer appears on air. If you select the DSK on PST, it does not.

The Imagestore 750 has several options that relate to this phenomenon and which affect the way you work with that Imagestore 750. These are the options:

- ‘Slave keyer assign’.

This option designates one of the DSKs as the default carrier for XG layer content. When you select an XG layer (on PST or PGM) the default DSK is also selected. You can always override this default.

The option can also specify that none of the DSKs is the default. In this case, you must choose a DSK carrier manually.

- ‘Slave keyer follow up’.

This option can be enabled or disabled. When it is enabled, the default DSK turns on automatically when you have selected one or more XG layers.

When this option is disabled, the default DSK is not affected by XG layer selections.

6. Operation

Working with Voice-Overs

Note that when this option is *enabled* and you select XG layers on PGM, the DSK is also selected on PGM. Consequently, the XG layers appear on air. When this option is *disabled* and you select XG layers on PGM, you can select a DSK on PST to view the XG layers.

- ‘Slave keyer follow down’.

This option can be enabled or disabled.

When it is enabled, the default DSK turns off automatically when no XG layers are selected.

 
When this option is disabled, the default DSK is not affected by XG layer selections.

Consult your system administrator to determine how your Imagestore 750s are configured.

Working with Voice-Overs

Imagestore 750s have two voice-over mixers: Over 1 and Over 2. The “layer” section of the program and preset button rows can include 0, 1, or 2 voice-over buttons.

There are two parameters that govern the use of voice-overs: the “duck” level and the over level:



Both of these values are expressed in decibels (in the range -100.0 dB to $+28.0$ dB).

Each voice-over has its own set of levels.

There is an ‘Over Ratio/Duck Level’ knob. When the panel is controlling an Imagestore, and a voice-over is selected on program, the knob controls the “duck” level of voice-over on program output. If both voice-overs are selected on program, the knob adjusts the duck level of both voice-overs. This control affects the on-air signal.

There is a ‘Program Out’ knob. When the panel is controlling an Imagestore, and a voice-over is selected on program, the knob controls the over level of the voice-over on program output. If both voice-overs are selected on program, the knob adjusts the over level of both voice-overs. This control also affects the on-air signal.

Voice-over sources are defined in the Imagestore 750 configuration. When voice-over accepts EasyPlay clips, you can select different clips using the EasyPlay menus.

The voice-over mixers can also accept input from the Imagestore 750’s AES inputs. Choosing audio clips from external media is outside the scope of this manual, but it will probably involve loading, cueing, and pre-rolling different media.

The use of voice-overs is affected by certain transition options. See [Transition Options](#) on page 107 for more information.

Performing Transitions with Voice-Over

You can transition voice-overs to (or from) program output.

Follow these steps to transition one or more voice-overs to program output:

- 1 Press the desired VO button(s) on preset. Selected VO buttons are high-tally.

On preset, the VO buttons have 3 states: cut, fade, and off. Press the button again to cycle it to its next state. When the state is ‘cut’, the VO cuts to the program bus during the next transition and when the state is ‘fade’, the VO fades (at its current rate) to the program bus.

- 2 Optionally, set up other video effects, and transition type and rate.
- 3 Press the Transition button.


To *remove* voice-over(s) from program, press the desired VO button(s) on the preset bus to deselect them and perform a transition in the normal way. Here too, the VO buttons have 3 states: cut, fade, and off. When the state is ‘cut’, the VO cuts from the program bus during the next transition and when the state is ‘fade’, the VO fades from the program bus.

Please note: you can “hot cut” VOs directly on and off the program bus *at any time*, as required, simply by pressing the desired VO on the program bus. Hot cuts are not recommended.

Hot cuts have side effects on the preset bus, depending on which transition options are active in the currently selected Imagestore 750.

Voice-Over Menu

You can exercise detailed control of an over’s audio levels in the voice-over menu. Choose the menu for voice-over 1 or voice-over 2 from the main menu or press a voice-over menu button. This is the ‘Voice-Over 1’ menu:

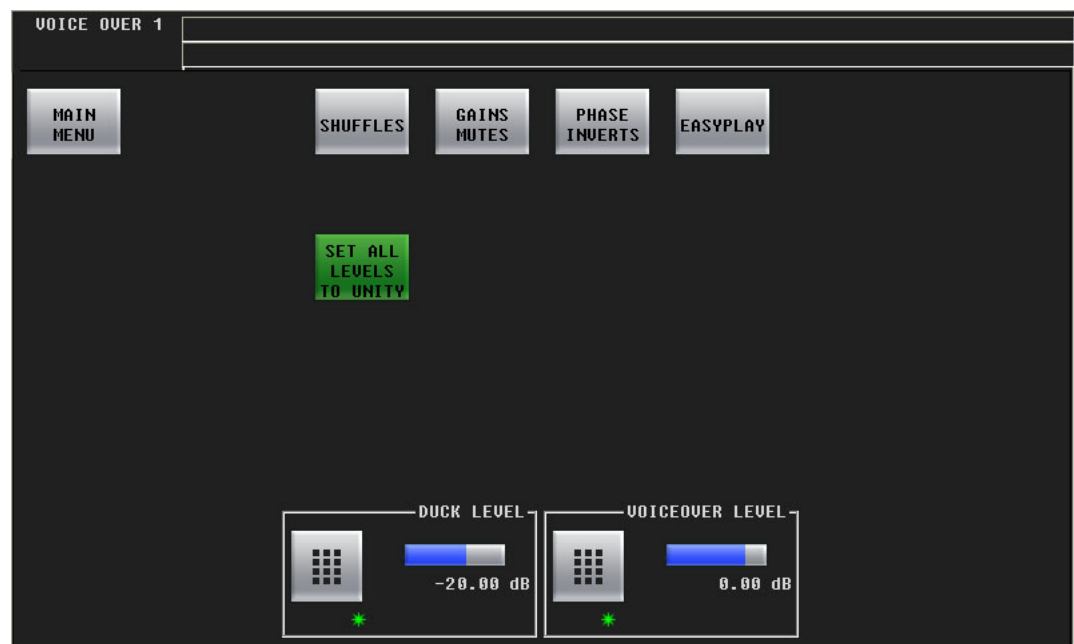

The ‘Voice-Over 2’ menu is just like it.

The controls at the bottom of the screen adjusts the “duck” level (the amount main audio is decreased) and the voice-over level of program output. To adjust these parameter, either use the knob proxy associated with the green asterisk in the control box, or touch the keypad icon to access a large keypad with which to enter a number.

The ‘Main Menu’ button returns you to the main menu. The ‘Set All Levels to Unity’ button sets all 16 audio channels of the voice over to unity gain. The ‘EasyPlay’ button takes you to the ‘Easy-

6. Operation

Working with Voice-Overs

Play' menu corresponding to voice-over 1 or 2, whichever you are using. The other 3 buttons access the sub-menus.

Gains and Mutes

This is the 'Gains and Mutes' sub-menu:



Each of the 16 audio channels has a mute button. Touch a mute button to mute or un-mute the audio channel. The mute button is amber if the channel is muted.

Each of the 16 audio channels has a keypad icon. Touch the keypad icon to access a keypad in which you can enter a numerical value for the channel's gain.

Either the top row of 8 buttons or the bottom row of 8 buttons can be associated with the 8 knob proxies. To choose the top row, touch the top row. To choose the bottom row, touch the bottom row. You can thus adjust the gain of each channel by using its knob proxy.

(The knob proxy activates the slider and the 'Scroll/Set' knob either of which you can use to adjust the level.)

The gain range is -100.0 dB to $+28.0$ dB.

Touch the 'Shuffles' button to go to the 'Audio Channel Shuffle' sub-menu.


Touch the 'Phase Inverts' button to go to the 'Phase Inverts' sub-menu.

Touch the 'Back' button to return to the voice-over menu.

Touch the 'Main Menu' button to return to the main menu.

“Phase Inverts”

This is the ‘Phase Inverts’ sub-menu:

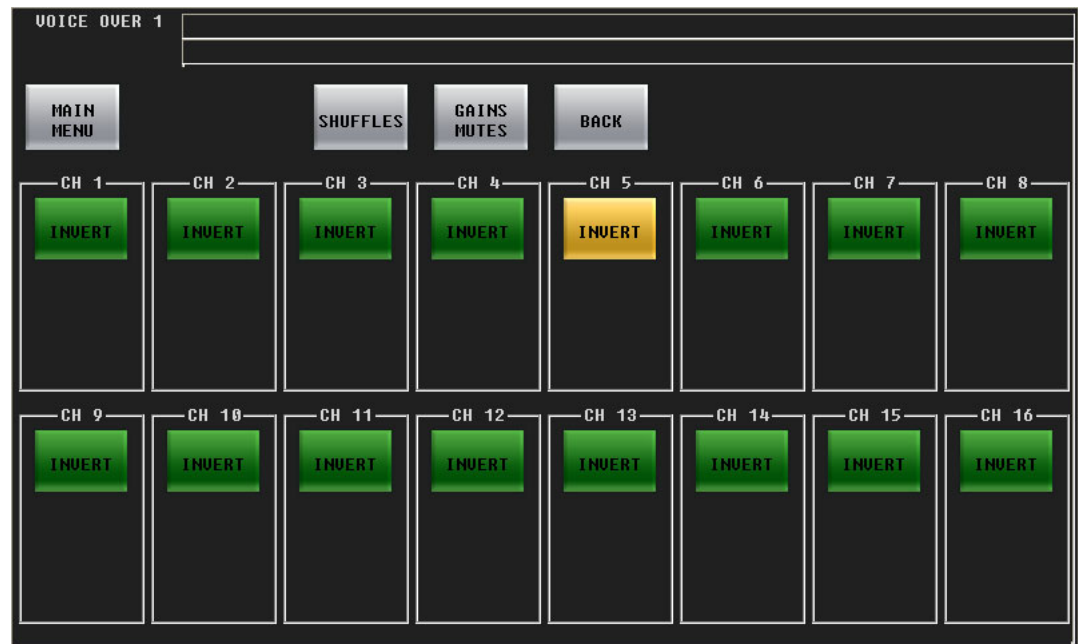

▲ The term *phase* is a misnomer. Phase has nothing to do with signal inversion.

When the audio channel is inverted, its PCM values are multiplied by -1 .

Touching an invert button either inverts or un-inverts the audio samples. When the button is amber, the samples are inverted. When the button is green, the samples are normal.

Touch the ‘Shuffles’ button to go to the ‘Audio Channel Shuffle’ sub-menu.

Touch the ‘Gains Mutes’ button to go to the ‘Gains and Mutes’ sub-menu.

Touch the ‘Back’ button to return to the voice-over menu.


Touch the ‘Main Menu’ button to return to the main menu.

6. Operation

Working with Voice-Overs

Audio Channel Shuffle

This is the 'Audio Channel Shuffle' sub-menu:

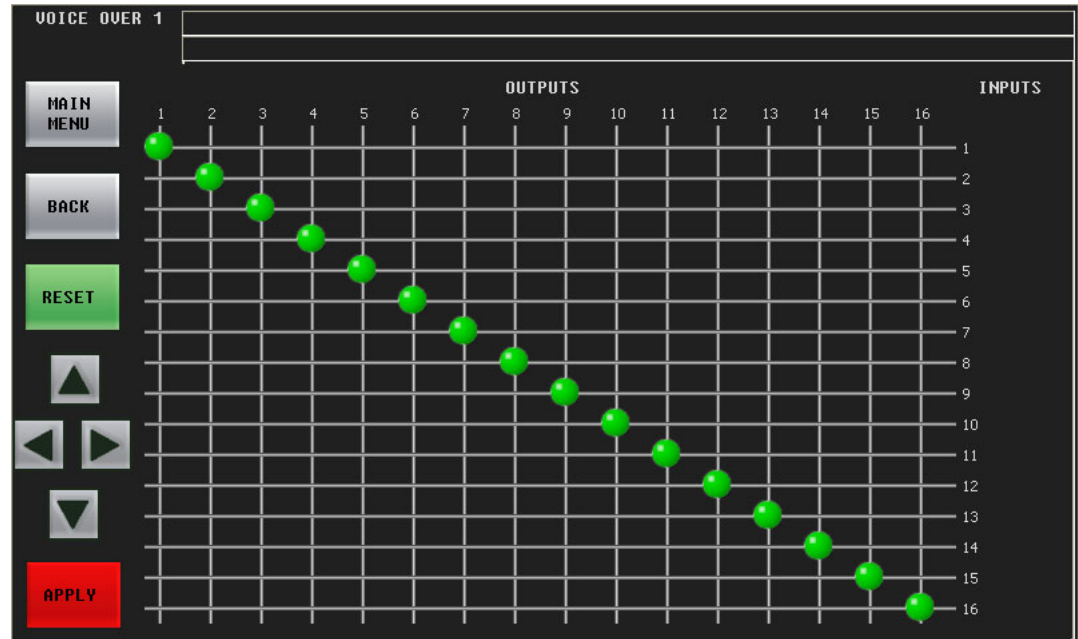

See [Shuffling Audio Channels](#) on page 129.

Press the 'Back' button to return to the voice-over menu.

Press the 'Main Menu' button to return to the main menu.

Performing Over Transitions

Follow these steps to transition a voice-over to program output. (This assumes that your panel is configured with at least one voice-over button.)

- 1 Press the desired over button on the preset bus. A selected over button is high-tally violet. It is possible to select both available overs.

The over buttons, like DSK buttons, have 3 states: cut, fade, and off. Press the button again to cycle it to its next state. When the state is 'cut', the over cuts to the program bus during the next transition and when the state is 'fade', the over fades (at its pre-configured rate) to the program bus.

- 2 If necessary, adjust the duck level, over level, and any individual audio channel parameters.
- 3 Carry out other presets as needed.
- 4 Press the Transition button.

To *remove* over(s) from program, press the desired over(s) on the preset bus to deselect them (they now appear low tally)—and perform a transition in the normal way.

Please note: you can “hot cut” overs directly on and off the program bus *at any time*, as required, simply by pressing the desired keyer on the program bus. Hot cuts are not recommended.


- ▲ When a voice-over button is selected on the program button row, the corresponding voice-over button in the main menu becomes highlighted. The voice-over buttons in the main menu also select a voice-over menu.
- ▲ You cannot change the over source. There is one source for each VO and it is preconfigured.

Working with Audio Monitors

Audio monitoring outputs are available on the CLN (clean-feed) and MON (monitor) outputs of the Imagestore 750 which provide clean and monitor video outputs respectively.

There are several taps for the CLN and MON video output and there are several taps for the audio as well.

The monitor levels section of the iMC-Panel-100 has two knobs:

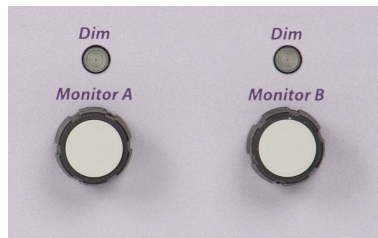

You can adjust the gain of the CLN audio output or the MON audio output simply by turning the appropriate knob.

The monitoring taps are defined during the configuration of the Imagestore 750.

6. Operation

Working with Audio Monitors

Audio Preview Menu

Figure 6-4 shows the iMC-Panel-100's 'Audio Preview' menu:

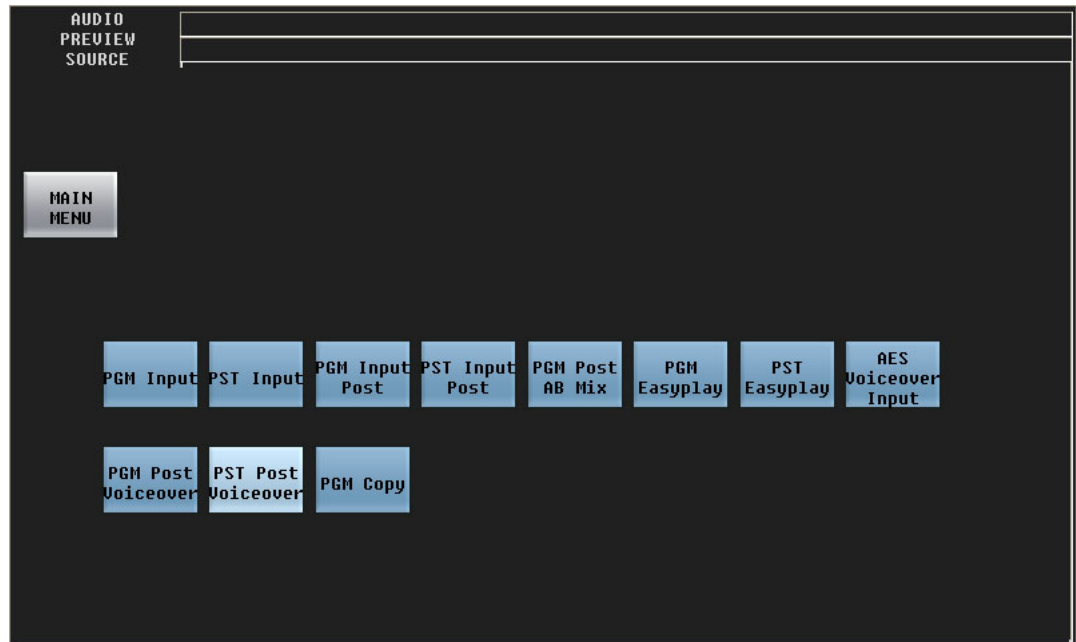


Figure 6-4. Audio Preview Menu

The 'Audio Preview' menu allows you to change the audio source for the preset monitor.

There are 11 source choices illustrated here:


PGM Input	PGM Input Post	PGM Easyplay	PGM Post Voiceover
PST Input	PST Input Post	PST Easyplay	PST Post Voiceover
PGM Copy	PGM Post AB Mix	AES Voiceover Input	

The number of sources and the names of the sources are determined by the person who configured the Imagestore 750. Consult your management if you need to know what the sources mean.

The 'Main Menu' button returns you to the main menu.

Working with Audio Meters


The iMC-Panel-100 provides an audio metering display. It shows the 16 levels of the selected audio metering source in real time:

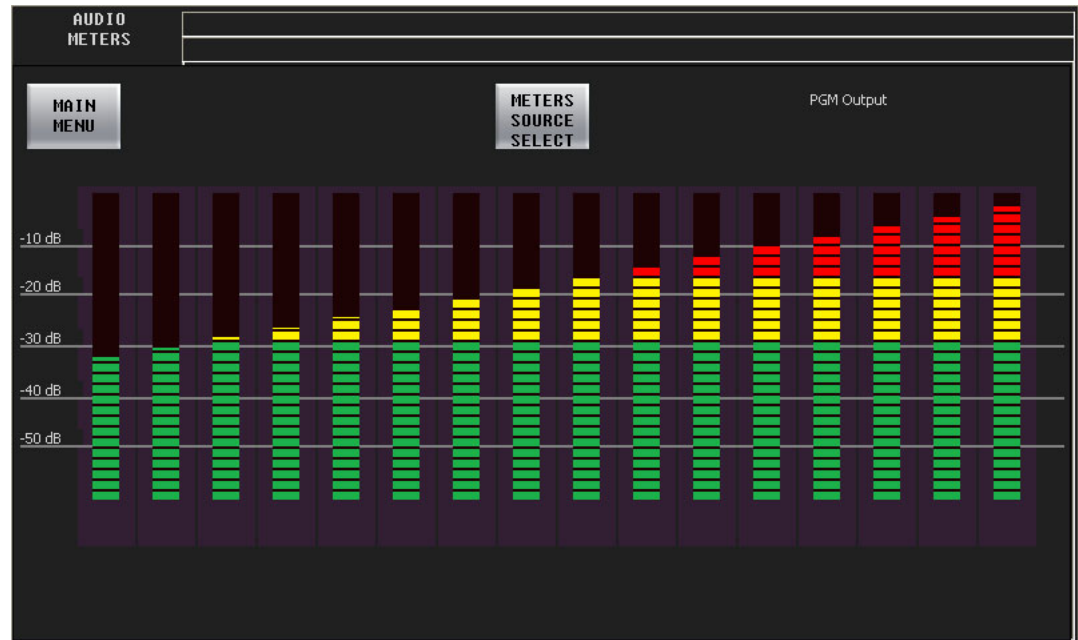

The name of the selected audio source is displayed at the upper right.

Touch the 'Main Menu' button to return to the main menu.

Touch the 'Meters Source Select' button to access the 'Meters Source Select' menu:

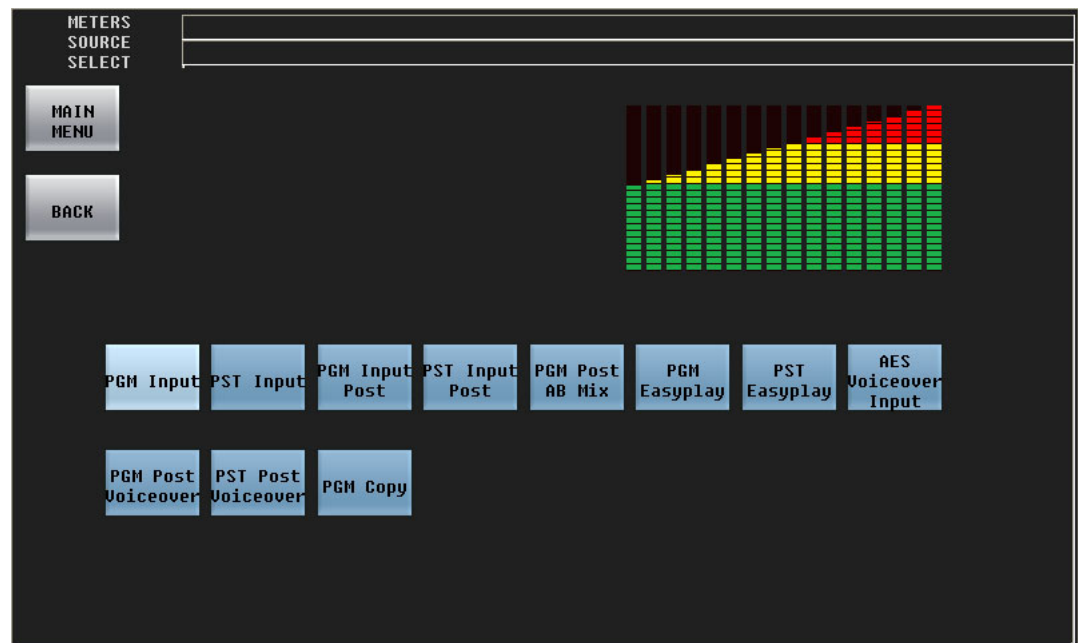

6. Operation


Working with Audio Levels

There are 11 sources illustrated here. The number of sources and the names of the sources are determined by the person who configured the Imagestore 750. Consult your management if you need to know what the sources mean.

Press the 'Back' button to return to the 'Audio Meters' menu.

Working with Audio Levels

The panel has 3 audio level knobs:

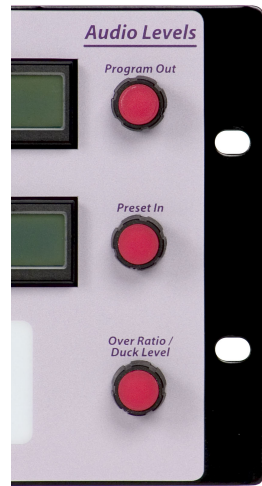

They are labeled:

- Program Out
- Preset In
- Over Ratio / Duck Level

'Program Out' Knob

This knob controls either the program output level or voice-over level.

When no voice-over is active on the program bus, the knob controls the overall program output level.

When one voice-over is active on the program bus, the knob controls the level of the selected voice-over signal.

When both voice-overs are active on the program bus, the knob controls the level of both voice-over signals. The effect is additive: a turn of the knob adds the same amount to each voice-over level.

This knob adjusts the audio level in increments of 0.5 dB, from -100.0 dB to +28.0 dB.

'Preset In' Knob

 
When the panel is controlling an Imagestore 750, this knob controls the level of preset input audio.

This knob adjusts the audio level in increments of 0.5 dB, from -100.0 dB to +28.0 dB.

‘Over Ratio/Duck Level’ Knob

Use this knob to adjust the “duck level” of program audio. (The term *over ratio* applies only when the panel is controlling an MCE or MCPM.)

As a reminder, there are two levels that govern the use of voice-overs: the “duck” level and the over level:



Both of these values are expressed in decibels (in the range -100.0 dB to $+28.0$ dB). This knob adjusts the “duck level” in increments of 0.5 dB.

When no voice-over is active on the program bus, the knob is inoperative.

When one voice-over is active on the program bus, the knob controls the audio level of the program source for the selected voice-over signal.

When both voice-overs are active on the program bus, the knob controls the level of the program source for both voice-over signals. The effect is additive: a turn of the knob adds the same amount to each voice-over level.

You can also change the duck level, as well as the over level, in the ‘Voice-over 1’ menu or the ‘Voice-over 2’ menu. There are separate duck levels and over levels for each VO.

Menus

There are 5 menus for working with audio levels:

- Program input audio and preset input audio—the Imagestore 750’s audio *inputs*.
- Program output audio—the Imagestore 750’s audio *outputs*.
- Voice-over audio (1 and 2)—the Imagestore 750’s voice-over *inputs*.


The menus all function the same way, although they affect different parts of the Imagestore 750.

- ▲ The program and preset audio inputs apply individually to main sources. You can save and restore audio settings for each source.

6. Operation

Working with Audio Levels

This is the ‘Program Input Audio’ menu:

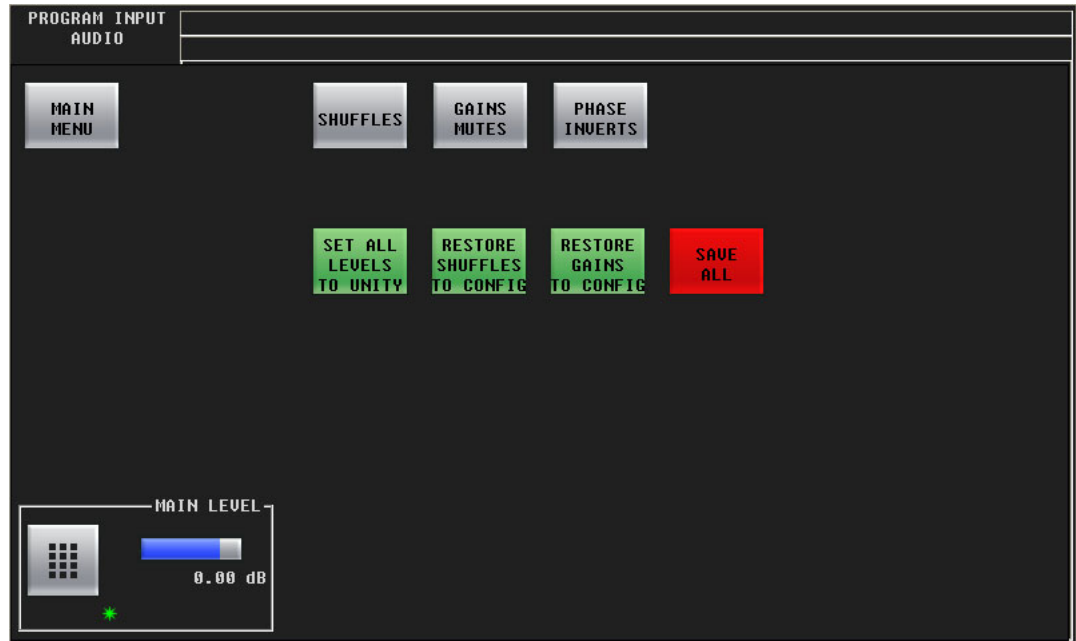

The ‘Preset Input Audio’ menu is just like the ‘Program Input Audio’ menu.

The control at the bottom of the screen adjusts the master audio level. The 16 individual audio channels are affected by the master level.

To adjust the main level, either use the knob proxy associated with the green asterisk or touch the keypad icon to access a keypad with which to enter a number.

The ‘Main Menu’ button returns you to the main menu. The ‘Set All Levels to Unity’ button sets all 16 audio channels to unity gain. The other 3 buttons in the upper row access other sub-menus.

The ‘Restore...’ buttons restore your audio settings (shuffle or gain) to what was in the Imagestore 750’s configuration. The ‘Save All’ button saves your current audio settings—for the currently selected main source—to the Imagestore 750. (These buttons are not present in the ‘Program Output Audio’ menu or the voice-over menus.)

Gains and Mutes

This is the ‘Gains and Mutes’ sub-menu:



Each of the 16 audio channels has a mute button. Touch a mute button to mute or un-mute the audio channel. The mute button is amber if the channel is muted.

Each of the 16 audio channels has a keypad icon. Touch the keypad icon to access a keypad in which you can enter a numerical value for the channel’s gain.

Either the top row of 8 buttons or the bottom row of 8 buttons can be associated with the 8 knob proxies. To choose the top row, touch the top row. To choose the bottom row, touch the bottom row. You can thus adjust the gain of each channel by using its knob proxy.

(The knob proxy activates the slider and the ‘Scroll/Set’ knob either of which you can use to adjust the level.)

The gain range is -100.0 dB to $+28.0$ dB.

Touch the ‘Shuffles’ button to go to the ‘Audio Channel Shuffle’ sub-menu.

Touch the ‘Phase Inverts’ button to go to the ‘Phase Inverts’ sub-menu.

Touch the ‘Back’ button to return to the parent-level menu.


Touch the ‘Main Menu’ button to return to the main menu.

6. Operation

Working with Audio Levels

Phase Inverts

This is the 'Phase Inverts' sub-menu:

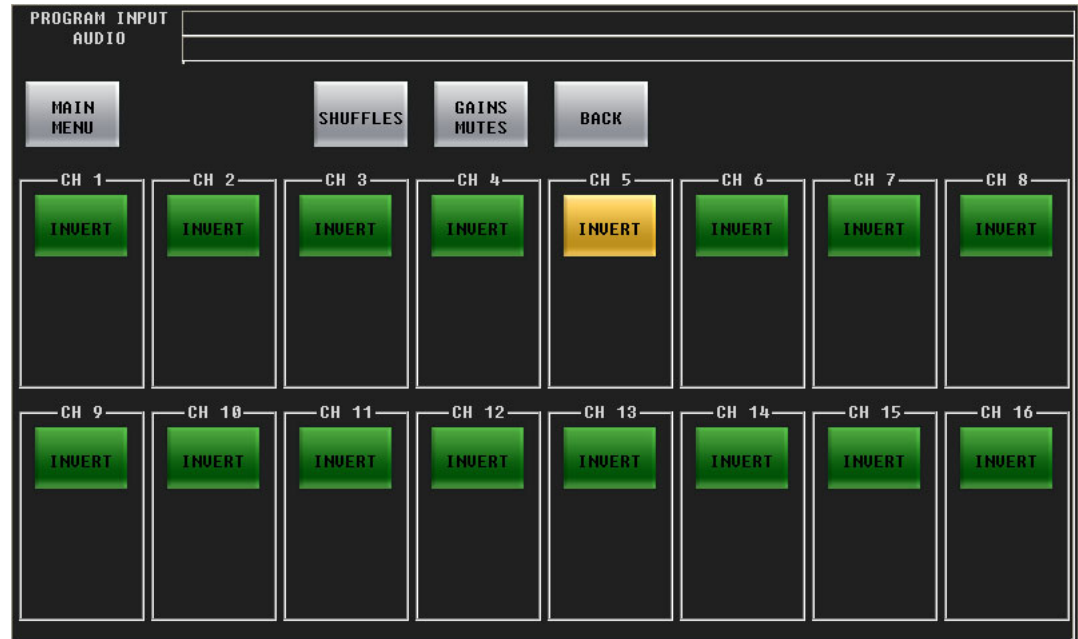

▲ The term *phase* is a misnomer. Phase has nothing to do with signal inversion.

When the audio channel is inverted, its PCM values are multiplied by -1 .

Touching an invert button either inverts or un-inverts the audio samples. When the button is amber, the samples are inverted. When the button is green, the samples are normal.

Touch the 'Shuffles' button to go to the 'Audio Channel Shuffle' sub-menu.


Touch the 'Gains Mutes' button to go to the 'Gains and Mutes' sub-menu.

Touch the 'Back' button to return to the parent-level menu.

Touch the 'Main Menu' button to return to the main menu.

Audio Channel Shuffle

This is the ‘Audio Channel Shuffle’ sub-menu:

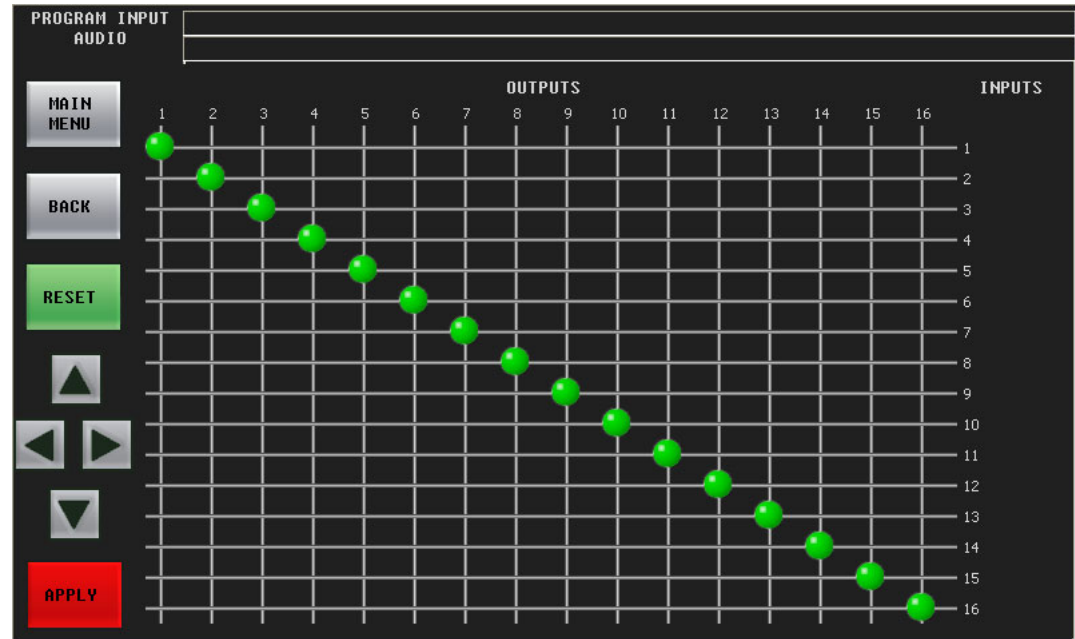

See [Shuffling Audio Channels](#), next.

Touch the ‘Back’ button to return to the parent-level menu.

Touch the ‘Main Menu’ button to return to the main menu.

Shuffling Audio Channels

There is an ‘Audio Channel Shuffle’ button in the following menus:

- PGM In Audio
- PST In Audio
- Voice-Over 1
- Voice-Over 2

Touching the ‘Audio Channel Shuffle’ button takes you to a shuffle menu. The 4 shuffle menus are functionally identical.

The shuffle menu presents a 16×16 crosspoint matrix. Inputs (rows) are mapped to outputs (columns) with a green circle.

Performing a Shuffle


Although it is not immediately evident how to perform a channel shuffle, it is not difficult. You can use the arrow buttons in the lower left part of the menu.

6. Operation


Shuffling Audio Channels

To initiate a shuffle, press one of the arrows. A red reticle (or crosshair or cursor) appears, which you can position with the arrow buttons.

Position the reticle on the crosspoint you want. In this illustration, the reticle is on the column for output 5 and will change the input for that column from 5 to 3. A faint circle appears at the new location:

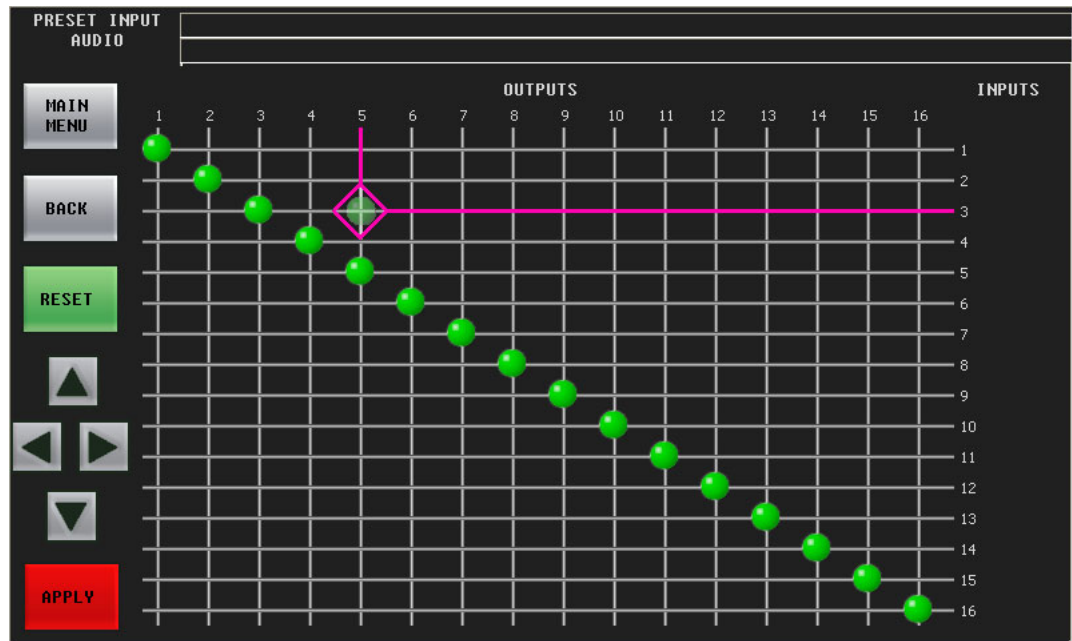

Now press the red 'Apply' button:

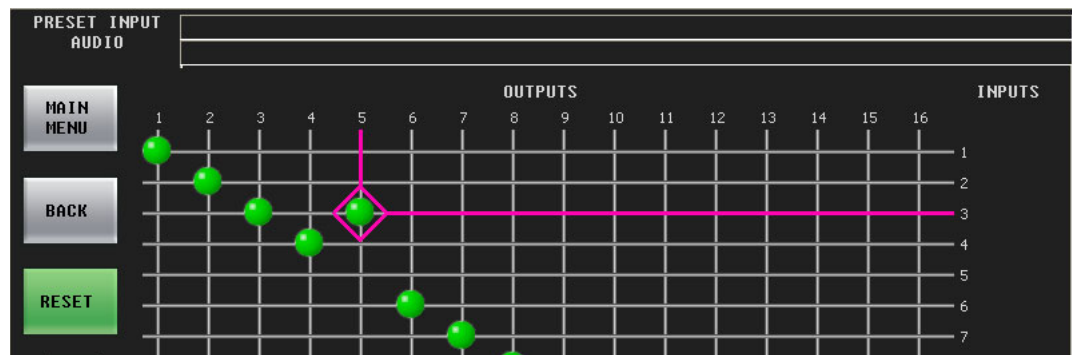

The faint circle turns solid.

You can now move the reticle to select another crosspoint to change.

It is possible to route a single input to multiple outputs. It is not possible to route multiple inputs to a single output.

Press 'Reset' to restore the default channel configuration (which is diagonal).

Press the 'Back' button to return to the parent-level menu.

Press the 'Main Menu' button to return to the main menu.

Please note:

- Shuffle changes occur immediately, letting you “hot swap” audio assignments directly on program output.
- You can save audio channel settings (including shuffles) in the Imagestore 750 or restore audio channel data from the Imagestore 750.

Working with Multiple Channels

You will probably find one or more channel buttons in the configurable button sections of your panel. (A channel is an Imagestore 750, an MCE or an MCPM.)

There are 2 types of channel buttons:

- Channel selection.
- No channel.

Channel selection can also be performed in the ‘Channel Select’ menu. However, selecting no channels or ganging channels requires the use of channel buttons. Channel selection is affected by “automatic gang mode.” See the discussion of automatic gang mode, following.

You can access the ‘Channel Select’ menu either by pressing a ‘Channel Select’ menu button or by touching the ‘Channel’ button in the main menu.

When channels are ganged, one channel is the “main” channel and other channels are “followers.” The operations you perform on the main channel are replicated on the followers.

▲ Ganged channels must either be all Imagestore 750s or a combination of MCEs and MCPMs.

A ‘No Channel’ button can be used to take the panel out of service for maintenance.

When you select a channel, all status and configuration parameters for the newly selected channel are downloaded to the panel. A channel change takes approximately one second. Buttons, main sources, video effect sources, transitions rates, and salvos can *all* change according to your specific channel configuration.

Channel changes can be programmed to trigger an NV9000 salvo. Consult your system administrator if you need to determine whether your channel selection buttons trigger salvos.

Automatic Gang Mode

Your panel might be configured for “automatic gang mode.” In this mode, the default channel is the main channel of a channel gang. Whenever the default channel is selected (by any method), all the channels in the automatic channel gang are selected and gang selection is enabled.

The button for the main channel of the gang tallies green; the buttons for the follower channels of the gang tally amber. Whatever actions you take for the main channel are applied also to the follower channels. (Your panel might not have buttons for all of the channels in the automatic channel gang.)

6. Operation

Working with Multiple Channels

Channel Selection with Buttons

To change channels, press the button (in the configurable button section) for the channel that you want to control.

When you perform a channel change, the *new* channel button flashes red for an moment, indicating that the system has acknowledged the change request. When the channel is ready, the button goes high tally green, unless there is a problem in which case the button stays red.

If the channel you select is the default channel under automatic gang mode, the panel selects all the channels in the automatic channel gang. The multiple channel selection takes a few seconds.

Channel Selection in the Menus

Follow these steps to change channels in the ‘Channel Select’ menu:

- 1 Press the ‘Channel’ button in the main menu to display the ‘Channel Select’ menu. The menu displays a list of channels. The currently selected channel is highlighted.
- 2 To select a channel, touch a list entry. You might have to scroll the list to find the entry you want. The channel change executes *immediately* although it takes approximately a second to complete.

When you perform a channel change, the *new* channel button flashes red for an moment, indicating that the system has acknowledged the change request.

If the channel you select is the default channel under automatic gang mode, the panel selects all the channels in the automatic channel gang. The multiple channel selection takes a few seconds.

No Channel Selection

To disconnect your iMC-Panel-100 from all channels, press a ‘No Channel’ button (in one of the configurable button sections). If you do not have a ‘No Channel’ button, you cannot do this.

The iMC-Panel-100 becomes partially “inert”—any button that controls a channel becomes disabled. Other buttons remain active, in particular, any channel selection buttons you have. The menus and menus also remains active.

To resume normal operations following a “no channel” period, select any channel.

Sharing Channels

Your panel can be configured to share—or not to share—channels with other panels.


If your panel is not configured to share, an attempt to acquire the channel at an other panel can preempt your use of the channel. If the other panel has a higher priority than yours has, it will preempt you and take over the channel, and you will be notified of the fact.

Conversely, if you wish to preempt another panel, and have a higher priority than that panel, you can preempt the other panel.

If your panel is configured for sharing, it is possible for you to share a channel with other panels, unless some other channel that is not configured for sharing controls that channel.

Preemption

When your panel is not configured for sharing, if the channel (or one of the ganged channels) you want to control is in use, you will see either a permission message or a denial of access message:

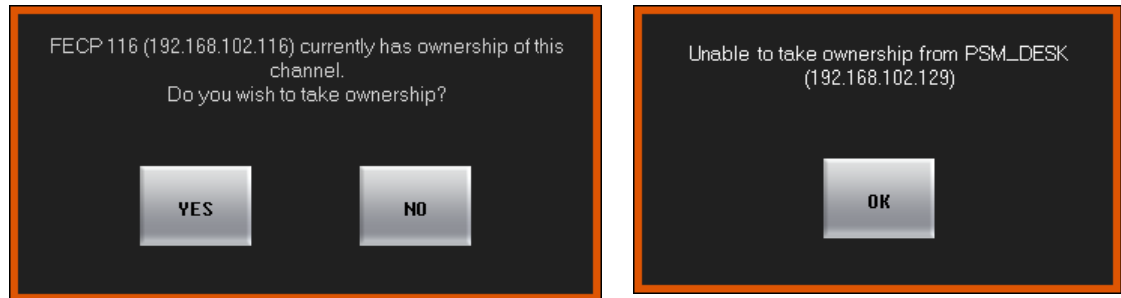


If you see a confirmation message, and you wish to preempt the other panel, press 'OK'. Otherwise press 'Cancel'.

If you see a denial of access message, press 'OK'. You may not acquire the channel. You can try again later, choose another channel, or negotiate with the other panel operator.

- ▲ If someone preempts you, your panel will immediately appear to “go dead.” What actually happens is the same thing that would happen if you pressed a ‘No Channel’ button. You will have to wait for the channel to become available again or switch to another channel.
- ▲ A panel can preempt another panel if it has been configured with a higher priority or in some cases, with the same or higher priority.

Sharing

When your panel is configured for sharing, if the channel (or one of the ganged channels) you want to control is in *exclusive* use (at a panel that does not share), you will see a failure message:

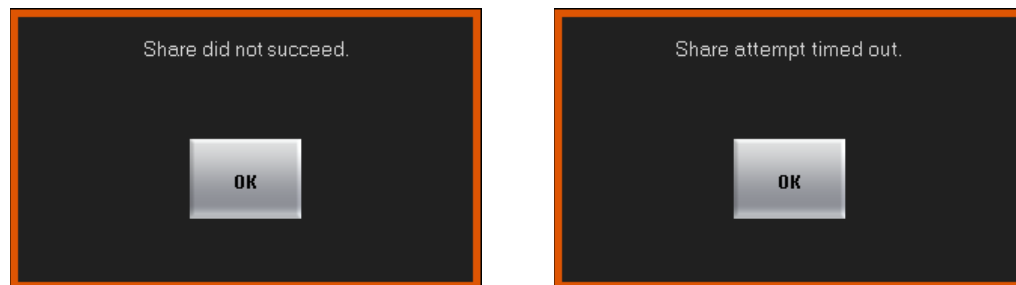

If the sharing attempt failed, your panel will revert to its previous state, control the channel it controlled prior to the sharing attempt.

Monitor Wall Re-Layout

Your panel can be configured so that a channel change triggers a monitor wall re-layout. Some or all of your channels (whether Imagestore 750s, MCEs, or MCPMs) can be set so that when they are selected, they cause the Kaleido-X multi-viewer driving the monitor wall to use a particular *room* and *layout* (defined for that Kaleido-X multi-viewer).

(Your panel might also have buttons that also trigger monitor wall changes.)

6. Operation

Working with a Monitor Wall

Working with a Monitor Wall

The master control system you are using can be set up to work with a monitor wall or a portion of a monitor wall. A monitor wall can display up to 24 sources from the master control system. The monitor can display the sources of the source group currently selected at your panel.

There are several points you should keep in mind:

- If you change the sources in a source group, those changes will be reflected at the monitor wall.
- The monitor wall can also display the program, preset, clean-feed, and monitor outputs of the currently selected Imagestore 750, and can display the aux output associated with that Imagestore 750.
- Your panel can be configured so that when you switch to a different channel, the monitor wall switches to the layout associated with the channel. Your panel can also have buttons with which you can change the monitor wall layout manually.

Different Imagestore 750s can be configured (and connected) differently and so can behave differently.

Working with the Aux Buttons

The aux/user button row comprises a number of main source buttons and some number of configurable function buttons. The main source buttons are exactly identical to the sources of the preset and program button rows. They control the router sources that can be routed to an auxiliary device such as a waveform monitor.

The auxiliary device is optional.

If your master control system has an auxiliary device, simply press any main source button of the aux/user row to direct the source signal to the device.

'Aux Bus Follow'

Imagestore 750s in the master control system have an 'Aux Bus Follow' option. This option has 3 choices: 'none', 'PGM', or 'PST':

When the option is 'PGM', the aux bus "follows" the program bus. That means that whatever source you select on the program bus is also selected on the aux bus.


When the option is 'PST', the aux bus "follows" the preset bus and whatever source you select on the preset bus is also selected on the aux bus.

When the option is 'none', the aux bus does not "follow" either bus and operates normally.

Note that when the option is 'PGM' or 'PST', you can still use the aux buttons, normally, to switch sources to your aux output.

Using the Panel Menu

From the main menu, press 'Panel Settings' to display the 'Panel Info' menu.

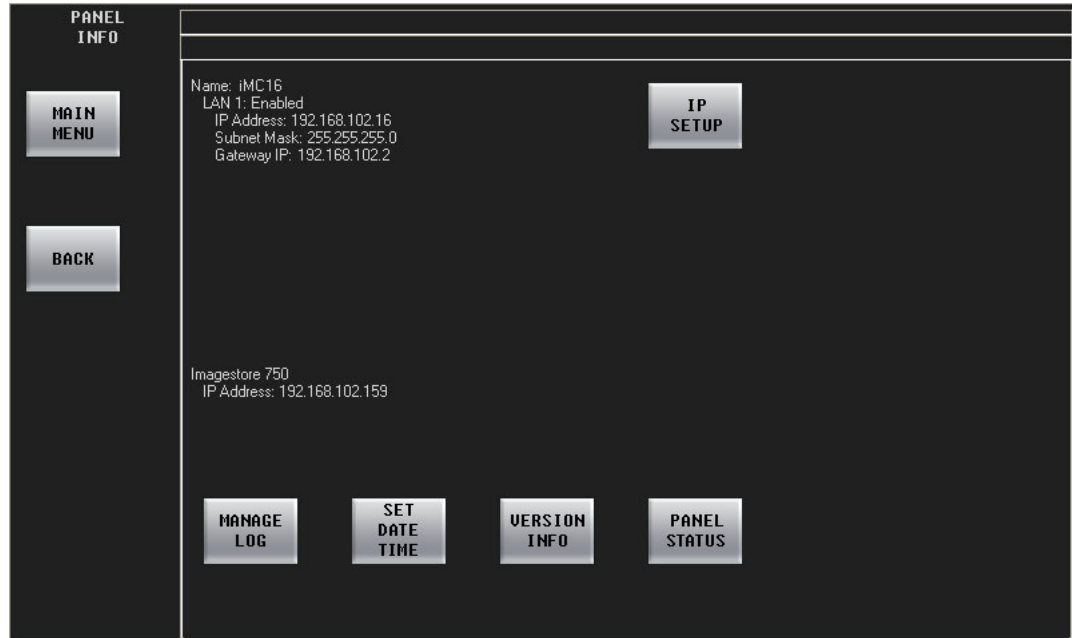

The Panel menu provides the following functions:


- Display the panel's IP address, subnet mask, and gateway address.
- Display the IP address of the currently selected channel.
- Change the IP address, subnet mask, and gateway address.
- View or clear the panel's log file.
- Set the date and time.
- Display the versions of internal software and firmware.
- Perform panel tests.
- Restart or shut down the panel.
- Adjust the brightness of the touchscreen.

6. Operation

Using the Panel Menu

Panel Status

From the main menu, press 'Panel Settings' to display the 'Panel Info' menu. Then press 'Panel Status'.

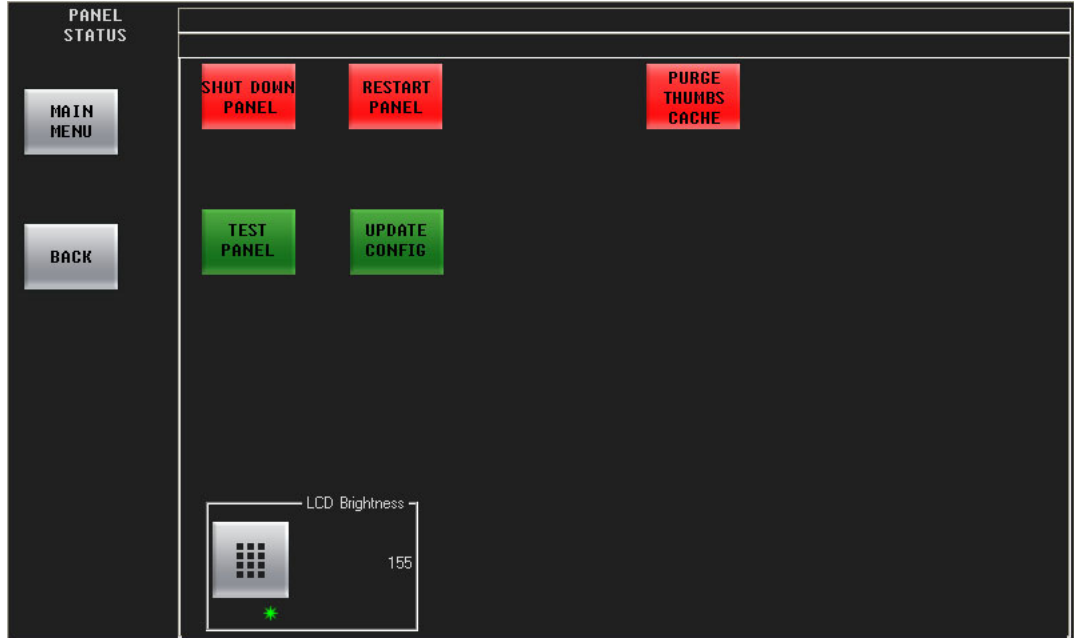

Pressing 'Update Config' causes the panel software to restart. 'Update Config' can be used to start the new configuration you have just written to the panel. The process takes a few seconds.

Pressing 'Restart Panel' causes a full, hard reboot. This is not recommended unless you are experiencing a severe problem or you are installing a new panel configuration. Automation (if present) will continue to operate any Imagestore 750s during this restart cycle. The process takes about a minute.

Pressing 'Shut Down Panel' causes the panel to stop completely. (You must cycle power to restart the panel following a shutdown.)


Pressing 'Purge Thumbs Cache' causes the panel to empty its cache of Intuition XG thumbnail images.

'Test Panel' presents a sub-menu of tests, described in [Panel Test Sub-Menu](#) on page 96.

IP Address

Follow these steps to change the panel's IP address:

- 1 From the main menu, press 'Panel Settings' to display the 'Panel Info' menu. Then press 'IP Setup'.

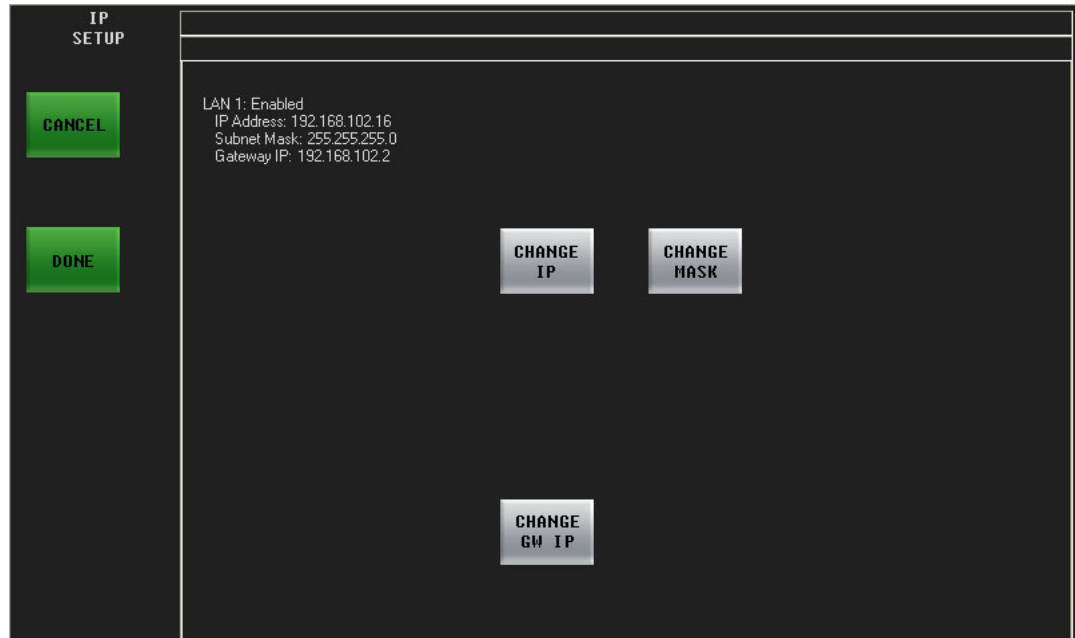


- 2 Press 'Change IP' to display the 'IP address' sub-menu. Use the keypads to enter or change the IP address.
 - 3 Press 'Change Mask' to display the 'Subnet Mask' sub-menu. Use the keypads to enter or change the subnet mask.
 - 4 Press 'Change GW IP' to display the 'Gateway IP address' sub-menu. Use the keypads to enter or change the IP address.
 - 5 In the keypad menu, press 'Done' to save the new IP address or press 'Cancel' to discard it. If you press 'Done', the menu will display a message that you must restart the panel to activate the new IP address: Press 'OK' in the alert to proceed. Press 'Cancel' to leave the IP address unchanged.
- ▲ Changing the IP address incorrectly can result in an inoperable system, although the problem can be corrected easily. This is usually the responsibility of the system administrator and done once and rarely thereafter.

6. Operation

Using the Panel Menu

View Version Information

From the main menu, press 'Panel Settings' to display the 'Panel Info' menu. Then press 'Version Info'.

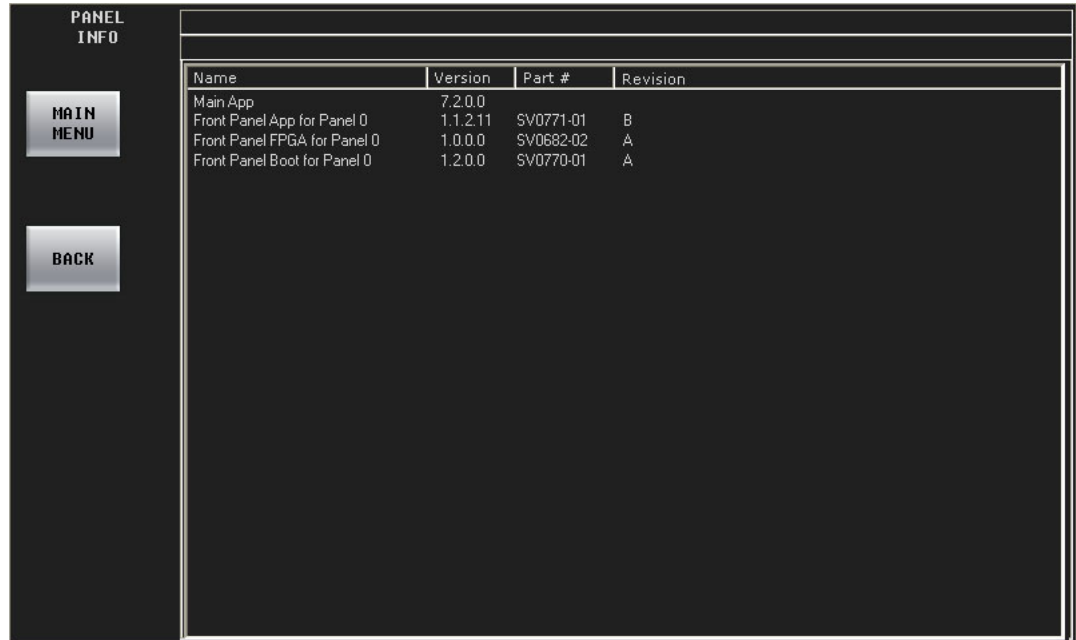

The screenshot shows the 'PANEL INFO' menu. On the left side, there are two buttons: 'MAIN MENU' and 'BACK'. The main area displays a table with the following data:

Name	Version	Part #	Revision
Main App	7.2.0.0		
Front Panel App for Panel 0	1.1.2.11	SV0771-01	B
Front Panel FPGA for Panel 0	1.0.0.0	SV0682-02	A
Front Panel Boot for Panel 0	1.2.0.0	SV0770-01	A

View or Clear the Panel's Log File

From the main menu, press 'Panel Settings' to display the 'Panel Info' menu. Then press 'Manage Log'.



Press 'View Log' to see the log file or press 'Clear Log' to erase the log file.

You (or your system administrator) can read the log file contents into a file in your configuration PC's file system using the MCS Panel Configuration Editor.

This is a sample of the log file display:

Time	Component	Severity	Message
8/20/2010 11:22:39:686	Oxtel Host	Errors	Oxtel Rcv unknown jq cmd: jq20500002;jq206000
8/20/2010 11:22:39:686	Oxtel Host	Errors	Oxtel Rcv unknown jq cmd: jq20400002;jq205000
8/20/2010 11:22:39:686	Oxtel Host	Errors	Oxtel Rcv unknown jq cmd: jq20300002;jq204000
8/20/2010 11:22:39:686	Oxtel Host	Errors	Oxtel Rcv unknown jq cmd: jq20200002;jq203000
8/20/2010 11:22:39:686	Oxtel Host	Errors	Oxtel Rcv unknown jq cmd: jq20100002;jq202000
8/20/2010 11:22:39:686	Oxtel Host	Errors	Oxtel Rcv unknown jq cmd: jq20000002;jq201000
8/20/2010 11:22:39:686	Oxtel Host	Errors	Oxtel Rcv unknown j cmd: j3103c;jq20000002;jq2
8/20/2010 11:22:39:686	Oxtel Host	Errors	Oxtel Rcv unknown j cmd: j3003c;j3 103c;jq20000
8/20/2010 11:22:33:758	Oxtel Host	Errors	Oxtel Rcv unknown j cmd: j760a;jn01030000;j770
8/20/2010 11:22:33:758	Oxtel Host	Errors	Oxtel Rcv unknown j cmd: j7509;jn0102000a;j760
8/20/2010 11:22:14:750	Config	System Events	Front Panel Boot for Panel 0 , part number = SV07
8/20/2010 11:22:14:750	Config	System Events	Front Panel FPGA for Panel 0 , part number = SV07
8/20/2010 11:22:14:750	Config	System Events	Front Panel App for Panel 0 , part number = SV07
8/20/2010 11:22:13:088	Config	System Events	Front Panel Boot for Panel 2 , part number = SV07
8/20/2010 11:22:13:088	Config	System Events	Front Panel FPGA for Panel 2 , part number = SV07
8/20/2010 11:22:13:088	Config	System Events	Front Panel App for Panel 2 , part number = SV07
8/20/2010 11:22:12:737	Config	System Events	Front Panel Boot for Panel 1 , part number = SV07
8/20/2010 11:22:12:737	Config	System Events	Front Panel FPGA for Panel 1 , part number = SV07
8/20/2010 11:22:12:737	Config	System Events	Front Panel App for Panel 1 , part number = SV07
8/20/2010 11:22:12:737	Config	System Events	Front Panel Boot for Rear I/O , part number = SV07
8/20/2010 11:22:12:737	Config	System Events	Front Panel FPGA for Rear I/O , part number = SV07
8/20/2010 11:22:12:737	Config	System Events	Front Panel App for Rear I/O , part number = SV07
8/20/2010 11:22:12:687	Next Gen HW	All Events	Reading software versions from Front Panel.
8/20/2010 11:22:08:802	Config	System Events	Front Panel Boot for Panel 0 , part number = SV07
8/20/2010 11:22:08:802	Config	System Events	Front Panel FPGA for Panel 0 , part number = SV07
8/20/2010 11:22:08:802	Config	System Events	Front Panel App for Panel 0 , part number = SV07
8/20/2010 11:22:08:672	Config	System Events	Front Panel Boot for Panel 2 , part number = SV07

Set Time and Date

From the main menu, press 'Panel' to display the 'Panel Info' menu. Then press 'Set Date Time'. The Time and Date menu appears:

	MONTH	DAY	YEAR	
HOLD	3	12	2008	
	HOUR	MINUTE	SECONDS	FORMAT
CANCEL	20	31	39	24 Hr

Navigation buttons: HOLD, CANCEL, DONE, Left Arrow, Right Arrow, +, -

This menu has 3 fields for date and 4 fields for time. Touch the left or right arrow buttons to select the field you want to modify. When you have selected a field, press the "+" or "-" buttons to change the value.

6. Operation

Fade to Black

Press the 'Hold' button to freeze the time values. Doing this might help you synchronize with another clock. Release the hold at the moment you want the clock to start again.

Press 'Cancel' to discard your changes and return to the 'Panel Info' menu.

Press 'Done' to save your changes and return to the 'Panel Info' menu.

Fade to Black

A 'Fade to Black' button is a toggle: press it once to fade program video to black. Press the button again to fade up from black to normal program output.

The FTB and FTS rates are pre-configured in the Imagestore 750. You cannot change them.

- ▲ When the Imagestore 750 has faded to black/silence, the FTB and FTS buttons of the main menu are highlighted in red.

Fade to Silence

A 'Fade to Silence' button is a toggle: press it once to fade program audio to silence. Press the button again to fade up from silence to normal program output.

The FTS rate is pre-configured in the Imagestore 750. You cannot change it.

- ▲ When the Imagestore 750 has faded to silence, the FTS button of the main menu is highlighted in red.


Updating Configuration Settings

You (or your system administrator) can create new iMC-Panel-100 configurations and then *update* the iMC-Panel-100 accordingly. The configuration software is the *MCS Panel Configuration Editor*.

Refer to the *MCS Panel Configuration Editor User's Guide* for configuration instructions.

Panel Startup and Shutdown

To shutdown or restart the panel, press 'Panel' in the main menu to go to the 'Panel Info menu. Then go to the 'Panel Status' sub-menu:

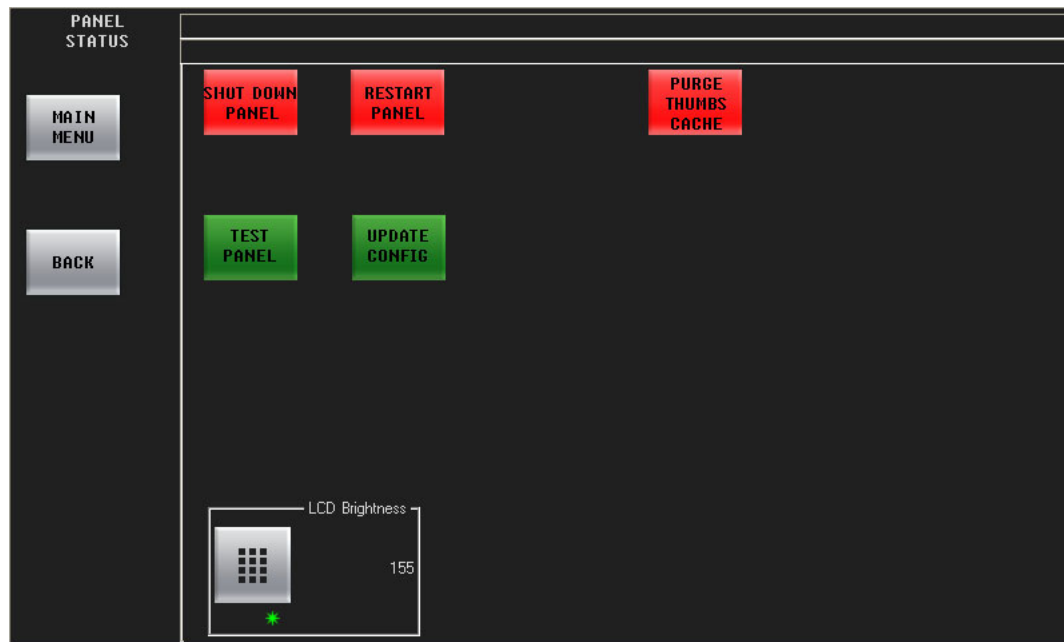

Choose 'Shut Down Panel' to perform a clean shut down. You must later cycle power to restart the panel.

▲ **Warning:** never just shut off power. You risk damage to the panel's flash memory.

Choose 'Restart Panel' to restart the panel.

Please note:

- When the panel is starting up and shutting down, all buttons and knobs are disabled and various buttons will cycle on and off.
- While the panel is shutting down, it displays a shutdown message. The front row of buttons on the panel give a 'Shutdown Complete' message when it is safe to cycle power.
- While the panel is starting up, it displays a startup message. When the panel has finished starting up, it automatically attempts to connect to its default channel.

6. Operation

Panel Startup and Shutdown

7. Misc. Topics

Chapter 7 provides the following:

- [Glossary](#)
- [Notes](#)
- [Specifications](#)
- [Drawings](#)

Glossary

Additive key mix	<p>A keyer process in which the key mix is altered:</p> <p>Non-additive: $P' = (1-K) \times P + F \times K$</p> <p>Additive: $P' = (1-K) \times P + F$</p> <p>where P = program or preset, F = fill, and K = key</p>
Animation	See “Logo.”
Breakaway	A transition that takes audio from one source and video from another source.
Channel	<p>Definition 1: A single Imagestore 750, MCE or MCPM (and, specifically, its program output).</p> <p>Definition 2: One of 16 audio channels.</p>
DARS	Digital Audio Reference Signal.
Flip-flop	A mode where program and preset states <i>swap</i> at the end a transition.
Flip-only	A mode where program and preset states <i>match</i> at the end of a transition.
GPI	General-purpose interface. The MCPM and MCE have 2 GPI inputs and 2 GPI outputs. The iMC-Panel-100 has 2 GPI inputs and 2 GPI outputs. Control panels can control MCPM-specific GPI events to some extent. You can assign a panel-specific GPI output to a configurable control panel button. (GUIs do not have panel-specific GPIs.)
Imagestore 750	The Imagestore 750 is a 1RU transition processor, also called a “channel branding processor.” It has several purchase options, including a master control option that allows it to function in the context of the combined Imagestore 750/NV5100MC master control system.
Intuition XG	Intuition XG is a combination of a graphics processor and Xmedia software.
Key, Keyer	A process that overlays a masked image—the <i>key</i> —on the program. A key comprises one or two video sources: fill and (usually) a key. The key image masks the fill image. If the keyer uses only a fill source, the key is derived from the luminance of the fill image.
Logo	<p>A logo is (1) a graphic file or (2) an animation (a sequence of numbered graphic files) produced by the <i>MasterLogo</i> application. An MCPM can store up to 64 logo images. An MCE can store up to 400 logo images. There are 3 classes:</p> <ul style="list-style-type: none"> • Static • Animation (run once) • Animation (loop).

7. Misc. Topics

Notes

For animation loops, one can define the pause length (in frames) that occurs after each loop run concludes. Refer to the *NV5128-MC MasterLogo User's Guide* for information.

Enhanced squeezeback—available in the MCPM-SDHD only—adds a second image layer and optionally its audio.

Luma filter	A low-pass filter to the luminance signal that removes the chroma information. The filter is used primarily with self keys to generate an improved keyer signal by removing the chroma information.
MCPM	Master control processing module.
MCE	Master control engine.
Self key	A process in which a keyer uses the fill to generate its own key (mask).
Squeezeback	A transition function that shrinks the program image so that a new image (the background) is revealed. <i>Basic</i> squeezeback has two forms: scaled and cropped.
S-shaping	Signal shaping is the process of smoothing signal levels (producing an “S” shaped curve) as with key values, for example. (Other signals can undergo S-shaping.)
Vertigo XG	A single- or dual-channel HD/SD graphics processor.
XG clip, XG media clip	A term used in this document to refer to one of the video and audio sequences stored in, and played by, the Intuition XG processor. An XG clip is a programmed composition of video, static and animated graphics, audio, and text (which can be derived from live data).
XG Dashboard	Configuration tool for Intuition XG.
XMedia	A collection of configuration and creative software used with Intuition XG.
Xbuilder	“Template population” and “promo timeline control” software for Intuition XG.
XPlay	A “media event sequencer” used to configure the Intuition XG and to manage clips. Xplay must be running on the Intuition XG processor for correct operation under master control.
Xstudio	“Template creation” software for Intuition XG.

Notes

Alarms

The iMC-Panel-100 produces two levels of alarm output:

- Major alarm:
 - A failure of any circuit board.
 - Failure of both power supplies.
- Minor alarm:
 - Failure of one power supply.
 - Fan failure or over temperature.

The alarm outputs appear on the GPI/Alarm connector on the rear of the panel. The alarm outputs are SPDT relay terminals (NC, NO, COM) as are the GPI output terminals on the connector. What the alarm relays operate, if anything, is determined by the customer.

Specifications

Power Supply

The power supply is an Miranda PS0001-00:

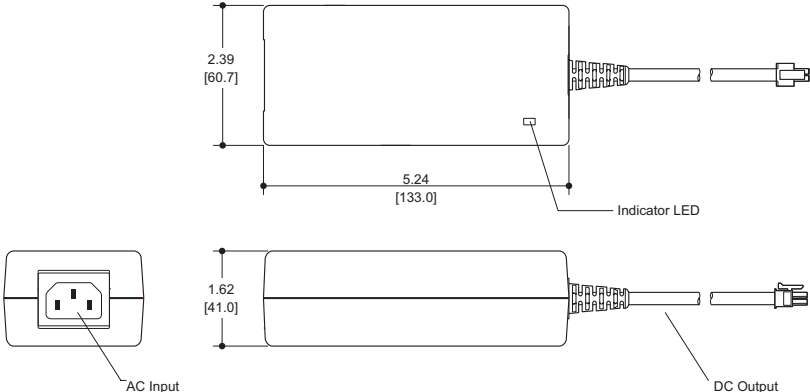


Figure 7-1. The power output has Molex 4-pin plug.

Table 7-1. Power Supply Specifications

Specification	Detail
AC power	90–264 VAC (127–300 VDC), 47–447 Hz. Inrush current < 50 A at 230 VAC, cold start, at 25°C, Input current < 2.0 A rms at 115 VAC; < 1.0 A at 230 VAC.
DC power	≤ 60 W, 12 VDC, 5 A (5.4 A peak), Regulation ± 2%. Ripple ≤ 120 mV.
Efficiency	Efficiency > 80% at full load typical, 115 VAC.
Weight	1.06 lb (0.48 kg).
Regulatory	UL listed and CE compliant.

Button Panel

Electrical

Regulatory UL listed and CE compliant.
Power consumption: 25 W.

Mechanical

Dimensions: 19.0" W × 3.70" D × 5.22" H (482.6 mm × 94.0 mm × 132.6 mm).
Weight: approx. 5.4 lb (2.45 kg)
Operating temperature: 0–40°C (32–104°F)
Humidity: 0–90%, non-condensing

Control Inputs and Outputs

Ethernet Ports:
10/100Base-T, master control network.

7. Misc. Topics

Specifications


DB25 (GPI/ALARM):

GPI inputs: 2, optically isolated, level-sensitive TTL, 5–24VDC.

GPI outputs: 2 (relays), 24VDC, 100mA, 3 terminals: COM, NC, and NO.

Alarm outputs: 2 (relays), 24VDC, 100mA, 3 terminals: COM, NC, and NO.

This is DB25 pinout:

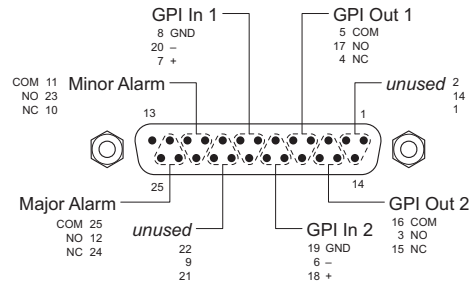

Planar PT1945R Touchscreen Display

5-wire resistive touchscreen TFT monitor with speakers.

Viewable size:	19" diagonal (14.81" h. × 11.85" v.)
Recommended resolution:	1280 × 1024
Pixel Pitch:	0.294 mm
Touchscreen type:	5-wire resistive
Touchscreen interface:	Dual serial/USB
Response time:	5ms
Viewing angle:	160° (h) / 160° (v)
Vertical refresh rate:	56–75 Hz
Tilt range:	–5° to 90°
Dimensions, with stand:	17.00" w. × 15.40" h. × 8.60" d. (nominal)
Dimensions, without stand:	17.0" w. × 14.0" h. × 2.3" d. (431.8 mm x 356.8 mm x 59.0 mm)
Weight, with stand:	14.6 lbs (6.6 kg)
Weight, without stand:	9.7 lbs (4.4 kg)
Video inputs:	VGA (analog RGB)
Audio output:	Integrated stereo speakers, 1 W/channel.
Compatibility:	Windows® 7, Vista, XP, 2000, ME, 98, NT 4.0, CE, XP embedded, Apple® Mac OS, Linux, HID compliant.
External connections:	HD15 (VGA), DE9 (RS-232), USB (type B socket), 3 mm stereo jack, AC power-in. (No DVI.)
Power supply:	Internal
Power requirements:	100–240 VAC, 50/60 Hz
Power consumption:	25 W (4 W standby)
Operating temperature:	0° to 40 °C
VESA compatible, location:	Built-in 100 mm VESA, back
Manufacturer contact:	http://www.planar.com

Also see the drawings starting on page 147.

Drawings

The following drawings identify features and provide overall and critical dimensions.

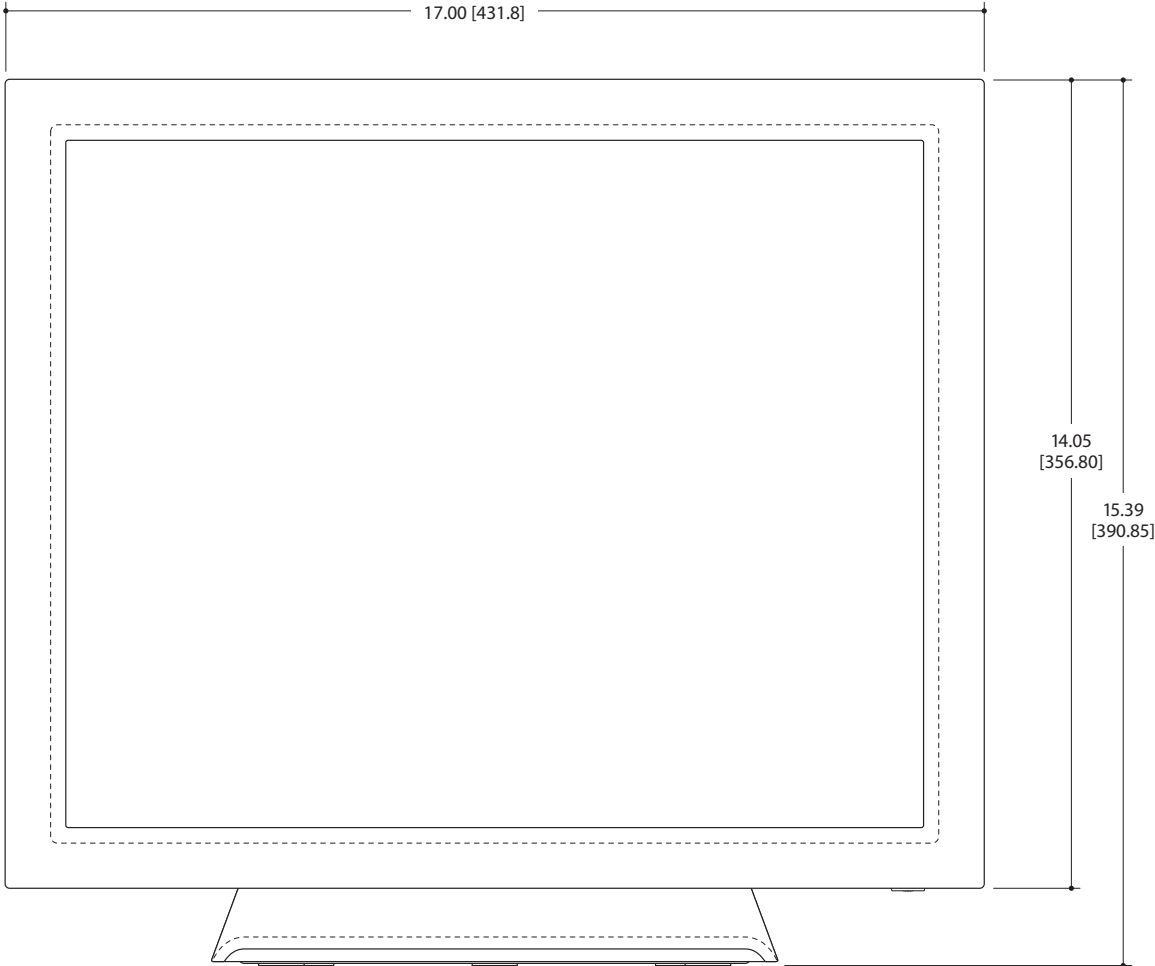


Figure 7-2. Planar PT1945R Touchscreen Display, Front View, with Stand

7. Misc. Topics

Drawings

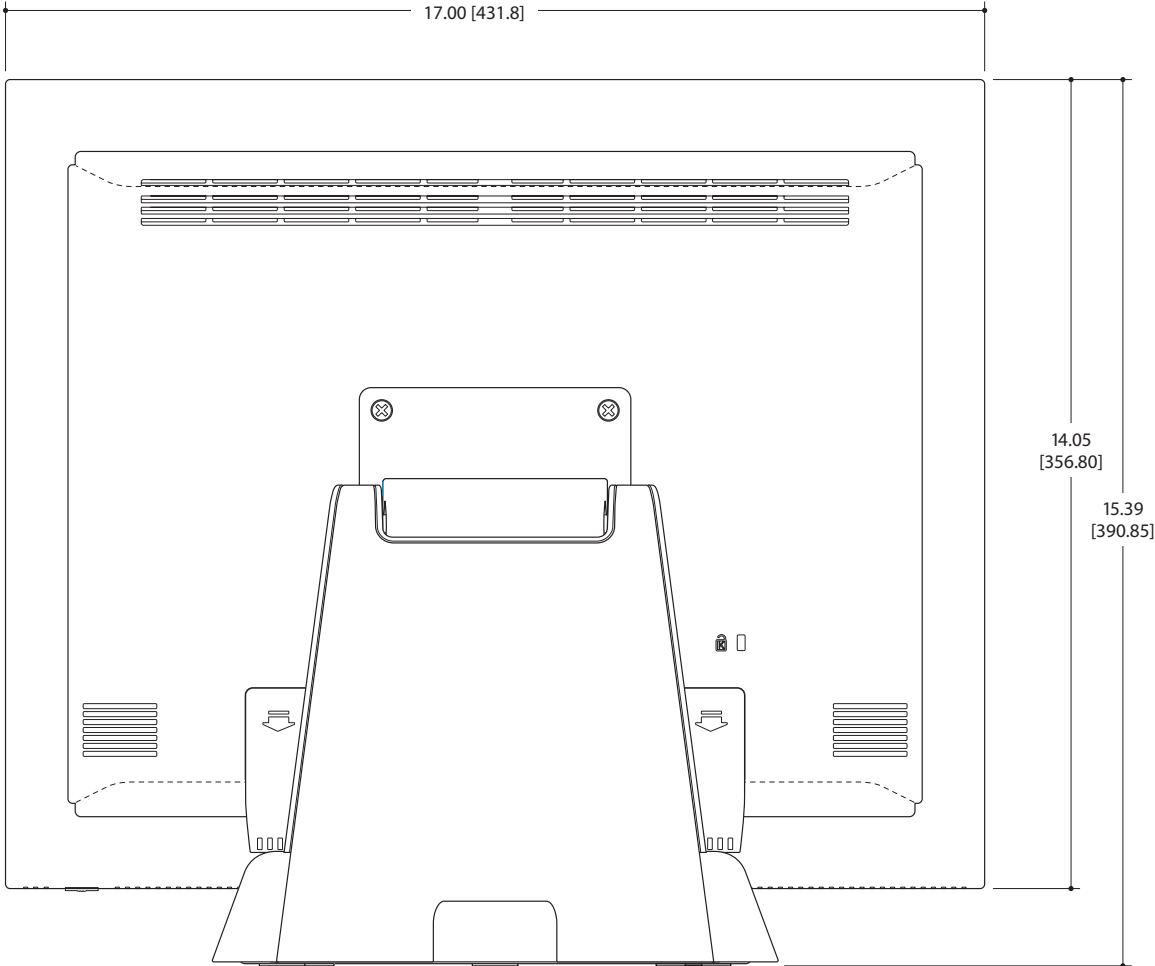


Figure 7-3. Planar PT1945R Touchscreen Display, Rear View, with Stand

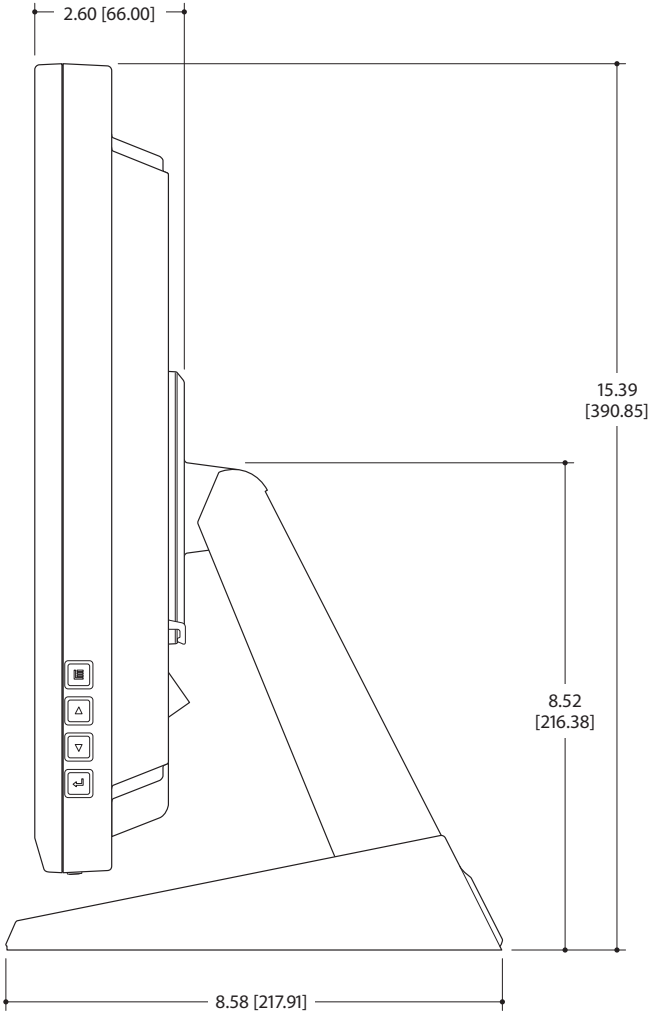


Figure 7-4. Planar PT1945R Touchscreen Display, Side View, with Stand

7. Misc. Topics

Drawings

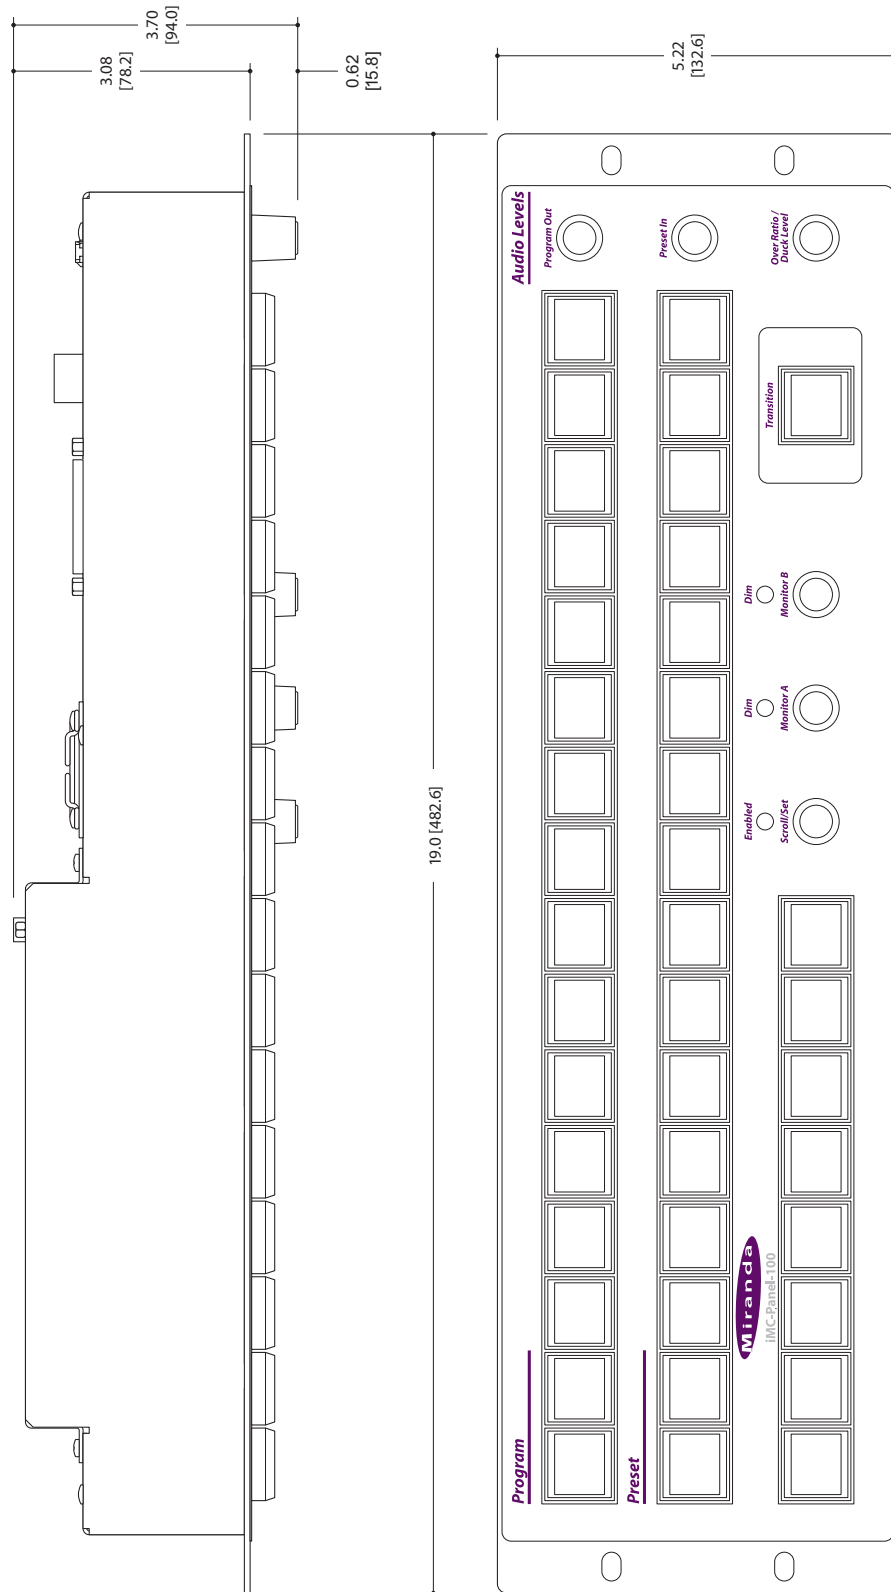


Figure 7-5. iMC-Panel-100, Front and Top Views

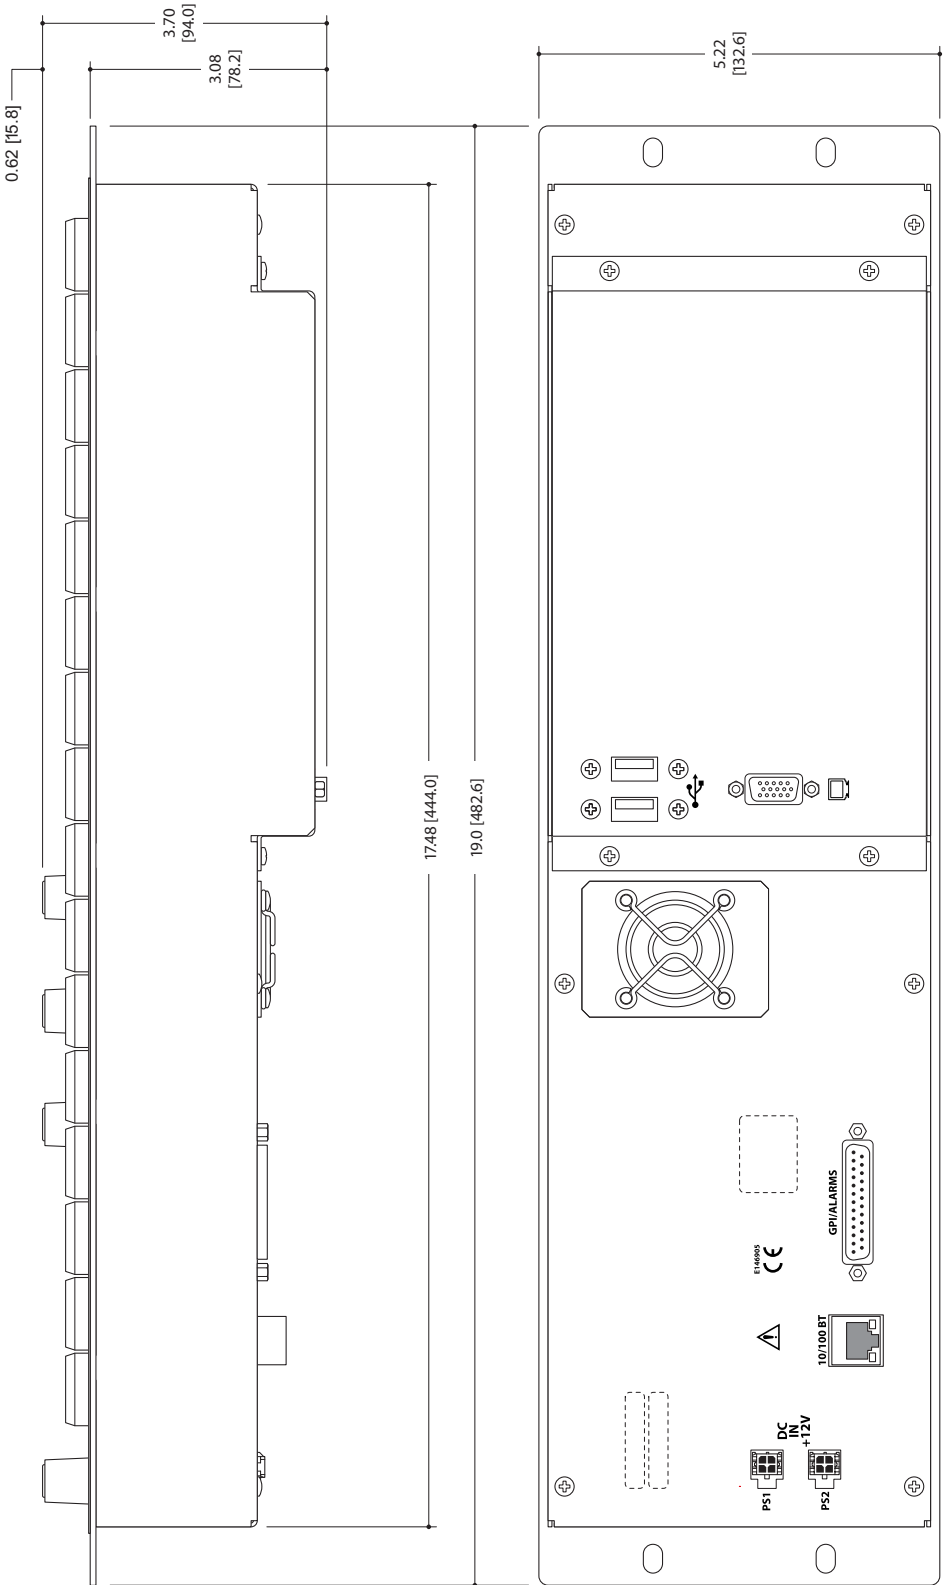


Figure 7-6. iMC-Panel-100, Rear and Top Views

7. Misc. Topics

Drawings

Index

A

A/B mixer (menu)	85–86
Abbreviations	2
Acrobat usage	1
bookmarks	1
hyperlinks	1
navigating and searching	1
Active	
keypad buttons	49
Additive key mix	143
Address	
IP	59, 91–92, 135, 137
mailing	iii
shipping	iii
Adjusting	
panel settings	135
parameters	49
Alarm	
connector	14, 36–37
outputs	37
Alarm signals	144
Amber	
buttons	101
Amber buttons	100
Animation	143
Applications	
MasterConfig	3
MCS panel configuration editor	140
Apply (button)	103
Audio	
channel matrix	129
channel shuffle	129
level control	5, 15, 19, 23, 121, 124
levels	23
levels section	124
levels, working with	124
LOS and button color	100–101
meters and monitors	12
monitors	14
monitors section, panel	121
over buttons	5, 19, 25, 29, 104
over ratio	23
overs	25–26, 106, 116
overs, working with	116
section	23

Audio lock (button)	33
Audio meters (dialog)	53
Audio monitors	
working with	121, 123
Audio preview (dialog)	55, 122
Automatic gang mode	11, 31–32, 57, 59, 131–132
Automatic salvo triggers	11
Automation	6, 12, 32, 104, 106, 136
and transitions	106
Automation (dialog)	56
Automation assist	34
Automation off (button)	32
Automation rate (button)	35
Aux bus	104
Aux bus follow (option)	18, 26
Aux buttons	134
Aux/use buttons	26

B

Back (button)	48
Bookmarks, Acrobat	1
Breakaway	143
Brightness, LCD	91, 135
Bus	
aux	104
preset	99–100, 102, 104, 106, 110, 116, 120
preview	104
program	19, 30, 99–100, 102, 104, 106
Button	
apply	103
audio lock	33
automation off	32
automation rate	35
back	48
cancel	49, 92, 94, 105, 137, 140
change GW IP	92
change IP	92, 137
change mask	92, 137
channel select	31, 131
clear	49, 105
clear log	93
colors	15
cross-fade	106
cue	34

Index

- cut 34, 106
- cut-fade 34
- done 49, 92, 94, 105, 137, 140
- drop next 34
- edit/more 48, 59, 111, 113–114
- fade to black 32
- fade to silence 33
- fade-cut 34
- fast 35
- fire macro 33
- FTB 140
- group select 26
- hold 94, 140
- hold next 34
- IP setup 91–92, 137
- Kaleido-X layout 34
- macro arm 33
- main menu 48
- manage log 91, 93
- medium 35
- menu 34
- no channel 31, 131–132
- panel lock 12, 32
- panel settings 91
- panel status 91, 95, 136
- panel test 96
- PGM DVE enable 33
- PST DVE enable 34
- purge thumbs cache 96, 136
- restart panel 96, 136, 141
- restore default 130
- salvo 32
- select channel 132
- set date time 91, 94, 139
- show status 93
- shut down panel 96, 136, 141
- slow 35
- take next 34
- test panel 96, 136
- transition 13, 20, 30, 106, 110, 117, 120
- transition hold 33
- update config 96, 136
- version info 138
- version info (channel) 59
- version info (panel) 91, 95
- v-fade 34, 106
- view log 93
- x-fade 34, 106
- Buttons
 - amber 100–101
 - audio over 5, 19, 25, 29, 104
 - aux 134
 - aux/user 26
 - color 25–27, 29, 31, 99–102, 132
 - customer-definable 26
 - function 11, 13, 22, 102

- functions 17
- high tally 100, 102
- keyer 110–111
- keypad 48
- layer 19, 25, 104
- LCD 13
- legends 22, 27, 30
- list 49
- low tally, with label 100, 102
- main source 19, 26–27
- menu 45, 50, 102
- menu conventions 49
- momentary 49
- mutually exclusive 15
- mutually exclusive sets 26, 34–35
- off, color 101–102
- physical 15
- preset 25, 106
- preview/user 26
- program 25
- red 25–26, 49, 100–101, 103, 132
- source 5, 12, 26
- toggle 33
- transition rate 35
- transition type 34–35, 108
- video effect 5, 19, 25, 29, 104
- voice-over 116
- Buttons, source 25

C

- Cancel (button) 49, 92, 94, 105, 137, 140
- CE declaration ii
- Change GW IP (button) 92
- Change IP (button) 92, 137
- Change mask (button) 92, 137
- Changing channels 6, 32, 131–132
- Changing key settings 110
- Channel
 - default 141
 - matrix, audio 129
 - selection 11, 15, 22, 30, 32, 57, 131–132
 - shuffle, audio 129
 - software versions 60
- Channel (select) menu 132
- Channel details submenu 59
- Channel select (button) 31, 131
- Channel select (dialog) 57, 131–132
- Channels 6, 30, 60, 131
 - changing 6, 32, 131–132
 - ganged 11, 59, 100–102, 104, 131
 - multiple 131
- Chapter structure 1

- Chapters
 - 1, Preface 1
 - 2, Introduction 5
 - 3, Control Panel 13
 - 4, Installation 39
 - 5, Menus 45
 - 6, Operation 99
 - 7, Misc. Topics 143
 - Clear (button) 49, 105
 - Clear log (button) 93
 - Clip (keyer property) 11
 - Color
 - button 25–27, 29, 31, 99–102, 132
 - button off 101–102
 - use of 102
 - Color, button 15
 - Configurable button section 5, 18, 22, 30, 131–132
 - Configurable function buttons 11
 - Configuration
 - iMC-Panel-100 30, 96, 136, 140
 - MCPM 131
 - Configuration editor, and log files 93
 - Connectors
 - DB25 146
 - Ethernet 36–37, 145
 - GPI/alarm 14, 36–37
 - power 14, 36
 - Contact information
 - technical support iii
 - Control panel
 - mounting 7
 - Control panels 3, 6
 - and channels 6
 - Control specifications 145
 - Controller, device (DC21) 3
 - Conventions 2
 - buttons 49
 - Copyright notice ii
 - Cross-fade 108
 - Cross-fade (button) 106
 - Cue next (button) 34
 - Customer-definable buttons 26
 - Cut (button) 34, 106
 - Cut, key 109
 - Cut-fade 108
 - Cut-fade (button) 34
 - Cuts, hot 27, 30, 106, 110, 117
- D**
- DARS (Digital Audio Reference Signal) 143
 - Dashboard 2, 144
 - DB25 connector 37, 146
 - DC21 device controller 3
 - Declaration of conformance (CE) ii
 - Default channel 11, 31, 57, 59, 104, 131, 141
 - Device controller (DC21) 3
 - Dialog
 - audio meters 53
 - audio preview 55, 122
 - automation 56
 - channel select 57, 131–132
 - DSK 1 61
 - macro 67
 - PGM out audio 72
 - preset input audio 75
 - program input audio 68
 - voice-over 1 79
 - XG keyer layers 83
 - Dialogs 45
 - Disabled
 - functions 32
 - Display 147–149
 - Document
 - part number ii
 - revision ii
 - Documentation
 - abbreviations 2
 - conventions 2
 - symbols 2
 - terms 2
 - Done (button) 49, 92, 94, 105, 137, 140
 - Downstream effects 27, 109
 - Drawings, iMC-Panel-100 147
 - front view 150
 - rear view 151
 - top view 150–151
 - Drawings, iMC-Panel-100 display
 - front view 147
 - rear view 148
 - side view 149
 - Drop next (button) 34
 - DSK 11
 - DSK 1 (dialog) 61
 - DSKs 25, 109–110
 - working with 109
 - Duck level 125
 - DVE 11, 28
 - DVEs 25
 - working with 115
- E**
- EasyPlay 116
 - EasyPlay 1 (menu) 66
 - Edit/more (button) 48, 59, 111, 113–114
 - Effects, video 15
 - Electrical specifications 145
 - power supply 145
 - Email address
 - tech support iii
 - Entry register 105

Index

Error
 bar 46, 48
 message 29, 103
 messages 15, 21, 46, 48, 105
Ethernet 6
 connector 36–37, 145
 port 14
Examples, symbol for 2

F

Fade to black 11, 140
Fade to black (button) 32
Fade to silence 33, 140
Fade to silence (button) 33
Fade-cut 108
Fade-cut (button) 34
Fan 14
Fast (button) 35
FCC statement ii
Features, iMC-Panel-100 11
Fill, key 109
Find, Acrobat 2
Fire macro (button) 33
Firmware revisions (panel) 95
First Page, Acrobat 2
Flip-flop mode 143
Flip-only mode 143
Follower (ganged) channels 131
Frame, NV5100MC 5
FTB (button) 32, 140
FTB rate 32–33
Function area 48, 59
Function buttons 11, 13, 17, 102
Functions, disabled 32

G

Gain, keyer 11
Ganged channels 11, 59, 100–102, 104, 131
Gateway IP submenu 137
General-purpose I/O (GPIO) 11
Glossary 143
Go to Next View, Acrobat 1
Go to Previous View, Acrobat 1
GPI
 inputs 37
 outputs 37
GPI (general-purpose interface) 143
 triggers 22
GPI/alarm connector 14, 36–37
GPIO 37
GPIO (general-purpose I/O) 11
Graphical user interface (GUI) 6–7

Green buttons, bright 100, 102
Group select (button) 26
Groups, source 5, 12, 26
GUI (software control panel) 6
 section, menu 21

H

High tally 2, 100, 102, 132
High-tally 15
Hold (button) 94, 140
Hold next (button) 34
Hold, transition 33
Hot cuts 27, 30, 106, 110, 117
How to
 perform a transition 106
 perform key transitions 110, 116
 perform over transitions 120
 perform transitions 106
 remove a keyer 110, 117
 remove an over 120
 start up and shut down 141
 use this guide 1
 work with audio levels 124
 work with audio monitors 121, 123
 work with audio overs 116
 work with DSKs 109
 work with DVEs 115
 work with XG layers 115
Hyperlinks, Acrobat 1

I

Imagestore 750 6, 59, 91, 106, 108, 143
iMC-Panel-100 (rack-mount control panel) 1, 5, 7, 13,
 17, 39, 92, 116, 145, 147
 configuration 30
 dimensions 13
 features 11
 front view 150
 rear view 151
 top view 150–151
iMC-Panel-200 (compact control panel) 7
iMC-Panel-300 (full-size control panel) 7
iMC-Panel-GUI (software control panel) 6–7
Inactive keypad buttons 49
Independent keyers 11
Inputs
 GPI 37
Installation 39
Introduction 5
Intuition XG 2–3, 7, 143–144
Invalid entry 105
IP address 59, 91–92, 135, 137

IP address submenu 137
 IP setup (button) 91–92, 137
 IP setup submenu 92

K

Kaleido-X layout 133
 Kaleido-X layout (button) 34
 Kaleido-X multi-viewer 34, 133
 Kaleido-X room 133
 Key
 settings 110
 transparency 28
 Key cut, fill 109
 Keyer
 additive mix 143
 buttons 110–111
 how to remove 110, 117
 independent 11
 low-pass filters 144
 opacity 11, 109
 Keyer setting submenu 111, 113–114
 Keys 28
 Keypad
 active buttons 49
 inactive buttons 49
 Keypad (in menus) 15, 45, 48–49, 105
 Keypad buttons 48
 Knob 13–14, 16, 23–24
 Knob proxies 21, 45
 Knob, program audio 124
 Knobs 5, 17–19, 21, 24, 47–48, 121, 141

L

LAN1 92
 Last Page, Acrobat 2
 Layer buttons 19, 25, 104
 Layer section 20, 104, 116
 Layout, Kaleido-X 133
 LCD
 brightness 91, 96, 135
 buttons 13
 touchscreen 14, 17, 29, 49, 135
 LED, monitor 24
 Legends, button 22, 27, 30
 Levels
 audio 5, 15, 19, 23, 121, 124
 List buttons 49
 Lists, in menus 45, 50, 57, 103, 132
 Lock
 audio 33
 panel 32
 Log, system 93

Logo 143
 LOS (loss of signal) 25–29, 100–101
 Low tally 2, 15, 22, 100, 102, 120
 Low-pass filters 144
 Luma filter 144

M

Macro (dialog) 67
 Macro arm (button) 33
 Mailing address iii
 Main (ganged) channel 131
 Main menu (button) 48
 Main source 15
 Main source buttons 19, 26–27
 Main sources 15, 106
 Manage log (button) 91, 93
 Manage log submenu 93
 Mask, subnet 92
 Master control engine (MCE) 2
 MasterConfig (application) 3
 MCE (master control engine) 2
 MCPM (master control processing module) 2, 5–6, 144
 configuration 131
 MCS panel configuration editor 93
 application 140
 user's guide 140
 Mechanical specifications 145
 Medium (button) 35
 Menu
 back button 48
 button conventions 49
 buttons 45, 50, 102
 components 46–47
 easyplay 1 66
 edit/more button 48
 error bar 46, 48
 function area 48, 59
 keypad 49, 105
 knob proxies 21, 45
 knobs 18, 21, 47–48
 lists 45, 50, 57, 103, 132
 message bar 46, 48
 momentary buttons 49
 name 46, 48
 navigation bar 48
 XG keyer layers 85–87
 Menu (button) 34
 Menu area 21
 Menu selections 15
 Menus 15, 21, 132
 channel (select) 132
 channel details 59
 Gateway IP 137
 IP address 137
 IP setup 92

Index

keyer setting 111, 113–114
keypad 15, 45, 48–49
manage log 93
panel (info) 91, 135–139, 141
panel status 95, 141
panel test 96
set date time 94
show status 93
subnet mask 137
version info (channel) 60
version info (panel) 95
view log 93
Message bar 46, 48
Messages
 error 15, 21, 29, 46, 48, 103, 105
 status 15, 21
Meters
 audio 12
Miranda
 email, tech support iii
 mailing address iii
 main number iii
 sales number iii
 shipping address iii
 technical support iii
 website address iii
Misc. topics 143
Mode
 flip-flop 143
 flip-only 143
Momentary buttons 49
Monitor
 LEDs 24
 section 20, 24
Monitor section 24
Monitor walls 133
Monitors
 audio 12, 121, 123
Monitors, audio 14
Mounting, control panel 7
Multi-channel operation 131
Multi-format router (MFR) 5
Multi-viewer 34
Multi-viewer, Kaleido-X 133
Mutually exclusive button set 15
Mutually exclusive button sets 26, 34–35

N

Navigation bar 48
Next Page, Acrobat 2
No channel (button) 11, 31, 131–132
None (a function configuration option) 30
Non-sync
 sources 25–27, 103–104
Notes 144

Numeric entry 49
NV5100MC
 frame 5
 standard features 11
NV9000
 router control system 3, 6, 11, 30, 32
 user's guide 11
NV9000-SE Utilities user's guide 11

O

Opacity, keyer 11, 109
Operation 99
 multi-channel 131
Option
 aux bus follow 18, 26
Outputs
 alarm 37
 GPI 37
Over ratio 23
Over sources 15
Overs
 audio 25–26, 106, 116
 how to remove 120
Oxtel 2

P

Panel
 configuration 136
 configuration update 96
 maintenance 15
 restart 92, 96, 136
 settings 135
 shutdown 136, 141
 startup 141
 testing 91, 96, 136
Panel (info) menu 91, 135–139, 141
Panel lock (button) 12, 32
Panel sections
 audio levels 19, 23, 124
 audio monitors 121
 configurable buttons 5, 18, 22, 30, 131–132
 label recess 20
 layer buttons 104
 menu 21
 monitors 20
 system control 32
 transition 29–30
Panel settings (button) 91
Panel status (button) 91, 95, 136
Panel status submenu 95, 141
Panel test (button) 96
Panel test submenu 96

Panels, control3, 6
Parameters, adjusting18, 21, 45, 49
Part number, documentii
PDF documents
 navigating and searching1
PDF file
 usage1
PGM DVE enable (button)33
PGM out audio (dialog)72
Planar147–149
Port, Ethernet14
Power connectors14, 36
Power specifications
 power supply145
Power supply145
Preface1
Prerequisites3
Pre-select, router6
Preset bus99–100, 102, 104, 106, 110, 116, 120
Preset buttons25, 106
Preset input audio (dialog)75
Preview bus104
Preview/user buttons26
Previous Page, Acrobat2
Processor, tally3, 7
Program audio knob124
Program bus19, 30, 99–100, 102, 104, 106
Program buttons25
Program input audio (dialog)68
PS0001 (power supply)145
PST DVE enable (button)34
PT1945R147–149
Purge thumbs cache (button)96, 136

R

Rate
 FTB32–33
 transition15, 35, 106, 108–109
Rate, transition20
Ratio, over23
Read the log file93
Red buttons25–26, 49, 100–101, 103, 132
Register, entry105
Restart panel (button)96, 136, 141
Restarting the panel92, 96, 136
Restore default (button)130
Return Material Authorization (RMA)iii
Revision, documentii
RJ-45 connector37
RMAiii
Room, Kaleido-X133
Rotary encoders (knobs)13
Router
 control system, NV90003, 6, 11, 30, 32
 multi-format5

pre-select6
sources15

S

Sales numberiii
Salvo (button)32
Salvos11, 30, 32, 131
 automatic triggers11
Sample alarm and GPI circuits37
Scroll bar15, 50
Scrolling16
Search, Acrobat2
Sections of the SCP
 audio23
 monitor24
Select channel (button)132
Selection
 channel11, 15, 22, 30, 32, 57, 131–132
 menu15
 source106
 transition type108
Self key144
Set date time (button)91, 94, 139
Set date time submenu94
Settings
 key110
 panel135
 video effect15
Shipping addressiii
Show status (button)93
Show status submenu93
Shuffling audio channels129
Shut down panel (button)96, 136, 141
Shutdown, panel141
Signal shaping144
Signals, alarm144
Slow (button)35
Software
 revisions (panel)95
 versions60
Software control panel
 see GUI
Software versionii
Source
 main15
Source buttons5, 12, 25–26
Source groups5, 12, 26
Source selection106
Sources
 main15, 106
 non-synchronous25–27, 103–104
 over15
 router15
Sources (menu)87
Special messages, symbol for2

Index

Specifications	
control	145
electrical	145
iMC-Panel-100	145
mechanical	145
power supply	145
Squeezeback	144
S-shaping	144
Standard features, NV5100MC	11
Starting the panel	141
Startup	141
Status	93
Status messages	21
Stopping the panel	136, 141
Subnet mask	92
Subnet mask submenu	137
Symbols	2
for examples	2
for special messages	2
System control section	32
System log	93

T

Tables	
power specifications, power supply	145
Take next (button)	34
Tally	
high	2, 100, 132
low	2, 22, 100, 120
Tally processor	3, 7
Tally, high, low	102
Technical support	iii
Telephone number	
main	iii
sales	iii
technical support	iii
Test panel (button)	96, 136
Testing the panel	91, 96, 136
Toggle buttons	33
Toggles	15
Touchscreen	14, 17, 29, 49, 135, 147–149
Touchscreen, PC	7
Trademarks	iii
Transition	
how to perform	106
rate	15, 20, 35, 106, 108–109
rate, buttons	35
type	20, 34, 106
type, buttons	34–35, 108
type, normal	108
type, selection	108
Transition (button)	30, 106, 110, 117, 120
Transition button	13, 20

Transition hold (button)	33
Transition section	29–30
Transitions	30, 106
and automation	106
how to perform	106, 110, 116, 120
Transparency, key	28
Trigger, GPI	22
Type, transition	20, 34, 106, 108

U

U-fade	34, 108
Update config (button)	96, 136
Update configuration settings	140
Update panel configuration	96
Upstream effects	27
Use of colors	102
User's guide, chapter structure	1
User's guide, MCS panel configuration editor	140

V

Version info (button)	59, 91, 95, 138
Version info (channel)	60
Version info submenu	60
Version info submenu (panel)	95
Version, software	ii
Vertigo XG	7, 144
V-fade	108
V-fade (button)	34, 106
V-Fade preset 1	35
V-fade preset 1	35
V-Fade preset 2	35
V-fade preset 2	35
Video effect buttons	5, 19, 25, 29, 104
Video effect settings	15
Video effects	15, 26–27, 106, 109–110
View log (button)	93
View log submenu	93
View panel software and firmware versions	95
View system log	93
Views	
iMC-Panel-100 display, front	147
iMC-Panel-100 display, rear	148
iMC-Panel-100 display, side	149
iMC-Panel-100, front	150
iMC-Panel-100, rear	151
iMC-Panel-100, top	150–151
Voice-over 1 (dialog)	79
Voice-overr	
buttons	116
Voice-overs	116

W

Website, Miranda	iii
Working with	
audio levels	124
audio monitors	121, 123
audio overs	116
aux buttons	134
DSKs	109
DVEs	115
multiple channels	131
XG layers	115

X-Y-Z

Xbuilder	2, 144
X-fade	108
X-fade (button)	34, 106
XG keyer layers (dialog)	83
XG layers	11
working with	115
XMedia	2, 7, 144
XPlay	144
Xplay	2
Xstudio	2, 144

Index