


### **VEA-1001**

#### Introduction

The VEA-1001 is an analog video distribution amplifier with 8 outputs, providing equalization and differential input. The VEA-1001 will equalize up to 300m (1000') of Belden 8281 cable. Gain and equalization can be controlled from the card edge. A clamping circuit is provided and can be set for hard or soft clamping. An input video signal status is also available indicating the input signal presence. The differential input provides rejection of hum and other artifacts on incoming signals. The VEA-1001 is housed in a Densité frame and a 'single' or 'double' rear connector panel is required.

### **Features**

- Differential 75 \_ looping input with Clamping
- Eight (8) 75 \_ outputs
- Signal presence and 525/625 detection and reporting
- Supports NTSC and PAL video signal formats
- 50 MHz analog video bandwidth
- Equalization up to 300m (1000')
- Status LED (with remote reporting)
- Control of gain and equalization on the card edge

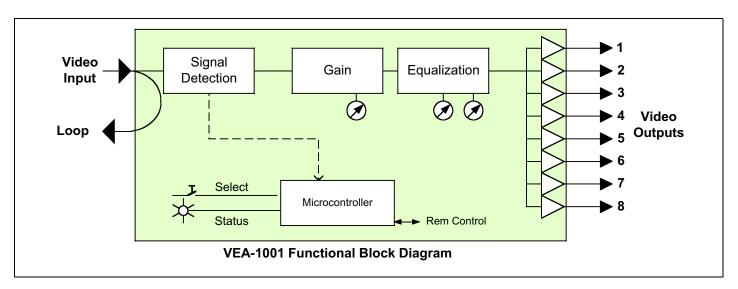

# **Specifications**

INPUT

Coupling:	> 45 dB up to 10 MHz DC or AC with Clamping (Hard/Soft/None) 0.3 to 1.5 Vp-p 75 bridging
Max. common mode signa	
Common mode rejection:	
OUTPUTS (8)	
Video signal:	1 Vp-p nominal, adjustable
	> 45 dB up to 20 MHz
Impedance:	
	tputs: .< 0.1° @ 4.43 MHz
Output isolation signal:	

Video signal:.....Any 1 Vp-p nominal signal

#### PROCESSING PERFORMANCE


Gain range:	± 3 dB
Freq. response:	
EQ range:	0-300 m Belden 8281,
-	
EQ response:	<±0.05dB up to 8MHz,
	±_0.1dB up to 10MHz,
	3 dB @ 28 MHz
Differential gain:	
Differential phase:	< 0.15° at 8 loads,
	< 0.1° at 2 loads
Horizontal tilt:	< 0.25%, DC coupling
Vertical tilt:	< 0.25%, DC coupling
Signal to noise ratio:	> 70 dB up to 15 MHz
	(rms noise/0.714 V, unweighted)
Chroma/luma delay error: .	< <u>±_</u> 1 ns
Chroma/luma gain error:	< <u>±_</u> 0.02 dB
Hum:	< 1 mV
Processing delay :	15 ns
Power:	single 2 W
	Double 2.5 W

#### Guide to Installation and Operation

Specifications are subject to change without notice

### Menu Introduction

Most parameters are accessed and changed via an easy-to-use menu. The flow chart below outlines the entire VEA-1001 menu path. Each menu is described throughout this section. The procedure and the operation mode are described in the common paragraph of the DENSITÉ manual. The menu organisation is made out of a main menu and several sub-menus. A press on the [SELECT] front panel push button of the VEA-1001accesses the menu. A lack of activity turns off the display. Default values are written with bold characters.

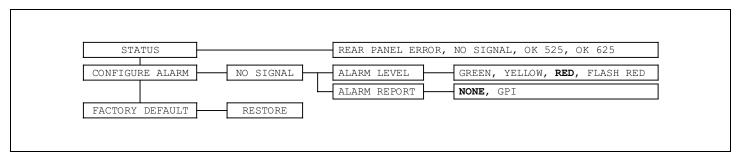

### Menu Description

### **{STATUS}**

Displays status of the different board alarms. The higher-level alarm is displayed, even if not configured to activate the STATUS led.

REAR PANEL ERROR Indicates an absence of the rear panel or

an incompatibility between the module and the rear panel. The STATUS led

turns on flashing red.

OK 525 Indicates a valid 525 lines incoming

signal

OK 625 Indicates a valid 625 lines incoming

signal

NO SIGNAL Indicates an absence of input signal

### **{CONFIGURE ALARM}**

NO SIGNAL It is possible to associate the STATUS

Led colour and/or a GPI relay activation to each detected error. Alarm relay activation depends of the ENABLE selection of the controller board menu

GPI REPORT.

ALARM LEVEL Associates to each error the STATUS

led colour: GREEN, YELLOW, RED and FLASH RED. This selection has no influence on the {STATUS} menu

display.

ALARM REPORT The default value NONE is assigned to

errors. Alarm relay activation will be associated to an error when GPI is set.

#### **{FACTORY DEFAUT}**

**RESTORE** resets the module with the factory

default parameters.

### Status and Report

This table shows the *STATUS* led colour and the report action according to the level of a given error condition. Notice that the "Flashing Yellow" indicates that the SELECT button on the front panel has been pushed, and the card is being accessed via the communication protocol.

#### Factory default. •

communication protocol.	Non requested	GPI	Green	Yellow	Red	Flashing	Flashing
	Messages	Report				Red	Yellow
No signal detected on Input	0				0		-
Card accessed via the communication protocol							Yes
Rear Panel not matching	-	-	-		•	Yes	•

Note: The non requested message affectation to an alarm status can only be accessed by the communication protocol (serial port)

#### **Calibration**

#### First-time calibration

To Calibrate the VEA-1001 for your system, you must first select the input cable length. Use jumper LK2.

#### Needed:

- Signal generator:
- Accurate measuring equipment
- Small flat head screwdriver (potentiometer adjustment).

#### 1. 100% luma adjustment

Generate a test signal with a 100 % luma level.

Using the measuring equipment to visualise the result, slowly turn the "GAIN" potentiometer (P2) situated on the card edge to adjust to obtain the correct level.

#### **Format**

100% white level

NTSC with setup 714 mV or 100 IRE

NTSC no setup 714 mV or 100 IRE

PAL 700 mV

NOTE: The output reacts slowly when the potentiometer is turned and it is constantly fluctuating when no turning is done. This is normal. The card is continually comparing the input signal to the potentiometer value.

#### 2. Equalisation adjustment

Generate a 100/75 colour bars signal.

Using the measuring equipment to visualize the result, slowly turn the 'EQ' (P3) potentiometer to adjust the peak-to-peak level of the red bar in the 100/75 colour bars signal at the output of the VEA-1001.

# Format 75% p-p red level

NTSC with setup 626 mV or 87.7 IRE


NTSC no setup 677 mV or 94.9 IRE

PAL 664 mV

Another method is to use a vector scope and make all colour vectors converge upon the center of their respective tight tolerance boxes.

Use "HF ADJ" (P4) to fine tune.


## Front edge presentation

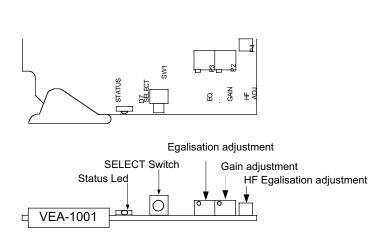

Configuration				
GAIN	Trim for gain adjustment.			
EQ	Trim for equalization adjustment.			
HF ADJ	Trim for HF equalization adjustment			
LK1	3-position jumper for clamping configuration.  1-2 None, 3-4 Hard, 5-6 Soft			
LK2	3-posit	3-position jumper for cable length configuration		
	1-2:	0 – 100 m		
	3-4:	100 – 250 m		
	5-6:	250 – 300 m.		

## **Connections**

VEA-1001 is used with the single rear panel VEA-1001-SRP that includes 1 input to 4 outputs or with a double rear panel VEA-1001-DRP that includes 1 input to 8 outputs.

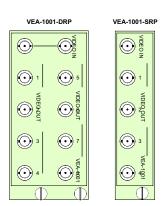

## **Board Presentation**

