



# **GV ORBIT CONTROL**

VERSION 1.7.0

## **User Guide**

13-03082-160 AH

2021-01-05

[www.grassvalley.com](http://www.grassvalley.com)

## FCC Compliance

In order to comply with FCC/CFR47: Part 15 regulations, it is necessary to use high-quality, triple-screened Media or Monitor cable assemblies with integrated ferrite suppression at both ends.

## Patent Information

This product may be protected by one or more patents.

For further information, please visit: [www.grassvalley.com/patents/](http://www.grassvalley.com/patents/)

## Copyright and Trademark Notice

Grass Valley®, GV® and the Grass Valley logo and/or any of the Grass Valley products listed in this document are trademarks or registered trademarks of GVBB Holdings SARL, Grass Valley USA, LLC, or one of its affiliates or subsidiaries. All other intellectual property rights are owned by GVBB Holdings SARL, Grass Valley USA, LLC, or one of its affiliates or subsidiaries. All third party intellectual property rights (including logos or icons) remain the property of their respective owners.

Copyright © 2018 - 2020 GVBB Holdings SARL and Grass Valley USA, LLC. All rights reserved.

Specifications are subject to change without notice.

## Terms and Conditions

Please read the following terms and conditions carefully. By using GV Orbit Control documentation, you agree to the following terms and conditions.

Grass Valley hereby grants permission and license to owners of GV Orbit Control to use their product manuals for their own internal business use. Manuals for Grass Valley products may not be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose unless specifically authorized in writing by Grass Valley.

A Grass Valley manual may have been revised to reflect changes made to the product during its manufacturing life. Thus, different versions of a manual may exist for any given product. Care should be taken to ensure that one obtains the proper manual version for a specific product serial number.

Information in this document is subject to change without notice and does not represent a commitment on the part of Grass Valley.

Warranty information is available from the Legal Terms and Conditions section of Grass Valley's website ([www.grassvalley.com](http://www.grassvalley.com)).

Title	GV Orbit Control User Guide
Part Number	13-03082-160 AH
Revision	2020-12-23, 16:23

# toc

## Table of Contents

<b>1 Introduction</b> .....	<b>7</b>
Related Documentation .....	7
<b>2 Getting Started With GV Orbit Control</b> .....	<b>9</b>
Logging in to GV Orbit Control Client .....	9
Client Server Version Check Warning .....	10
Navigating Back to Stage .....	10
Switching User Profiles .....	11
Viewing Notifications .....	13
<b>3 Configuration Tasks</b> .....	<b>15</b>
Required Permissions .....	16
Area Configurator Tasks .....	17
Accessing Areas in the GV Orbit Control Client .....	17
Adding an Area .....	18
Configuring a Controller Group .....	19
Selecting an Area .....	23
Deleting an Area .....	24
Selecting a Graph .....	24
Creating a new Graph for a Topology .....	26
Deleting a Graph .....	28
Logical Level Editor Tasks .....	30
Accessing the Logical Level Editor .....	30
Viewing the Default Logical Levels .....	32
Duplicating a Logical Level .....	33
Creating the Logical Levels for a UHD 4K Routing Setup .....	34
Editing a Logical Level .....	35
Deleting a Logical Level .....	36
Configuring a New Logical Level .....	36
Configuring the Logical Levels for the Devices in a Topology .....	37
Topology Configurator Tasks .....	39
Accessing the Topology Configurator .....	39
Refreshing the Topology .....	42
Viewing the Topology in Full Screen Mode .....	42
Adding Devices to a Topology .....	44
Using Quick Config .....	55
Methods to Link Devices in a Topology .....	58
Deleting the Connection Between Device Groups .....	65
Defining Device Properties .....	66
Deleting a Device From a Topology .....	71

Activating a Topology .....	72
Making an Active Topology Inactive.....	73
Unlocking / Relocking a Topology.....	75
Locking an Unlocked Topology .....	76
Logical Device Table Tasks .....	78
Accessing the Logical Device Table task.....	78
About the Multilevel Table and GVOP Devices.....	82
About Automatic Sources or Destinations .....	83
Setting the Logical Levels to be Displayed in the Multilevel Table .....	84
Adding a Source to the Logical Level Table.....	85
Configuring Streams for New Sources .....	86
Bulk Assigning Logical Levels in the Multilevel Table.....	90
Adding and Configuring a Destination .....	90
Using Megasource.....	90
Deleting a Source, Destination, or Virtual XPTS .....	93
Exporting a Logical Device Table.....	93
Selecting all Devices in the Logical Device Table for Export .....	93
Creating Logical Devices with Shuffled Audio .....	93
Configuring Virtual Crosspoints (XPTs) .....	95
Filtering Lists, Table Columns, Sources, and Destinations.....	104
Category Configurator Tasks .....	106
Accessing the Category Configurator .....	106
Creating Categories for the Sources and Destinations in Your Topology .....	108
Re-ordering Category Content .....	110
Assigning a Keystroke Label to a Source or Destination .....	111
Creating a Keystroke Label.....	112
Panel Configurator Tasks .....	113
Accessing the Panel Configurator .....	113
Creating a New Panel.....	114
Duplicating a Pre-Existing Panel .....	116
Configuring a Panel's Properties .....	117
Adding Actions to a Panel .....	119
Adding Resources to the Panel.....	122
Adding the New Panel to the Topology .....	129
Panel Configuration Example Using Categories with Custom Navigation .....	132
GPIO Configurator Tasks .....	143
Accessing the GPIO Configurator .....	143
Adding a GPIO Rule.....	145
Configuring a GPI to Trigger an Event .....	146
Configuring a Script to Trigger a GPO .....	148
Deleting a GPI or GPO Action Configuration .....	150
Activating / Deactivating a Rule.....	151
Duplicating a Rule.....	151
Deleting a Rule.....	152
Choosing an Alias for all Rules .....	152
Stream Configurator Tasks .....	153
Accessing the Stream Configurator .....	153
Stream Configurator Filters Tool .....	156
Pasting IP addresses from a Microsoft Excel worksheet into the Stream Configurator .....	156
Editing Unicast and Multicast IP Addresses .....	158



Setting SDP Templates for one or more Streams .....	158
Selecting Stream Configurator Rows .....	160
<b>4 Special Device Configuration Tasks .....</b>	<b>161</b>
Description of Common Device Properties .....	162
Configuring a GV Node Device .....	163
Configuring an IPG-3901 / IPG-4901 Device .....	174
Connecting an IPG-4901 device .....	178
Device properties .....	178
Example Topology Using an IPG-4901 .....	179
Configuring an IPVU Device .....	180
Configuring an IQMix or IQUCP25 Device .....	183
How to Know if a Spigot is an Input or an Output .....	184
Configuring UHD 4K Two-Sample Interleave Division IP Streams for use with an IQMix, IQUCP, or IPVU Device .....	185
Configuring UHD 4K Quad-Link SDI Streams for use with an IQMix, IQUCP, or IPVU Device .....	190
Configuring an MV-820-IP Multiviewer Device .....	194
Configuring a Kahuna IP Production Switcher Device .....	198
Configuring a K-Frame Production Switcher .....	201
Adding NMOS Devices to a Topology .....	208
To add an NMOS device to a topology .....	212
Using SDP Parameters to Take a Stream from a non-NMOS Device to an NMOS Device .....	215
Configuring Cisco DCNM Network Switch Devices .....	219
Configuring the Network Switch's Flow Policies .....	219
Configuring a DCNM Network Switch Device .....	222
Direct Flow Orchestration: How To Create a Static Flow with a Cisco Network Switch .....	225
Configuring a GV Fabric Network Switch Device .....	226
Configuring Network Switch Redundancy to Support SMPTE ST 2022-7 .....	229
Configuring an NVISION Hybrid Series Router .....	234
Configuring Router Devices .....	240
Configuring a Router's Control Port .....	243
Configuring a Device that Supports Audio Breakaway/Shuffling such as Audio Live .....	251
About Audio Live .....	251
About the Routing Path of Audio Channels .....	252
Prerequisites .....	252
Configuring an Audio Live device in GV Orbit Control .....	256
Known Audio Live limitations .....	257
Configuring an IQAMD40 Device .....	258
About IQAMD40 .....	258
IQAMD40 Integration in GV Orbit Control .....	258
Automatically Creating AES67 Audio Channels for Sources and Destinations .....	259
Overview .....	261
Path Manager Tasks .....	262
Accessing the Path Manager .....	263
Viewing Information about the Tie-lines .....	264
Viewing Information about the Streams .....	265
Viewing Information about the Destinations .....	265
Viewing Information about the Status .....	267
System Status Task .....	269

Accessing the System Status Task .....	269
Forcing the Inactive Controller to be the Active Controller .....	271
Permissions .....	274
<b>5 Control Tasks .....</b>	<b>275</b>
Overview .....	275
Alias Editor Tasks .....	276
Accessing Alias Editor Tasks .....	276
About External IDs and Northbound Control Interfaces .....	277
Adding Aliases .....	277
Renaming Source and Destination Labels .....	278
Router Control Tasks .....	280
Accessing the Router Control Task .....	280
Performing a Take in Router Control .....	281
Creating Salvos .....	284
Selecting the Name of Sources and Destinations .....	286
<b>6 Administration Tasks .....</b>	<b>287</b>
The User Management Task Overview .....	288
Creating User Profiles .....	289
Granting Access Permissions to an Area .....	291
Viewing Permissions by Role .....	294
Setting a User ID for Lock, Protect, and Release with NDAC NP0016 / NP0017 Northbound Interfaces .....	297
General commands .....	299
Device-based support .....	299
Port-based support .....	300
User ID and Lock, Protect, and Release .....	301
GV Orbit Control user external id configuration .....	301
Troubleshooting .....	302
How to... .....	302

# 1 Introduction

The purpose of this guide is to provide a brief introduction to GV Orbit Control Client and its features.

When you log in to GV Orbit Control Client you open the Stage.

The GV Orbit Control Client Stage presents a series of tiles, which are arranged in the order you would perform the tasks if you were to configure a GV Orbit Control system from start to finish. Each task builds on the last. It all begins by defining one or more areas. Once you have area, you can add logical levels. Then, you can create a topology.

These tasks are described in the chapters that follow.

## Related Documentation

Use the following related documentation to configure GV Orbit Control and to better understand the available features. You can obtain the latest product documentation from the Documentation Library section of Grass Valley's website ([www.grassvalley.com/docs/gvorbit](http://www.grassvalley.com/docs/gvorbit)).

Part Number	Document Title
GVB-2-0860A-EN-DS	GV Orbit Datasheet
13-03082-020	GV Orbit Welcome
13-03082-010	GV Orbit Release Notes
13-03082-090	GV Orbit Admin Guide
13-03082-160	GV Orbit Control User Guide (this document)
13-03082-170	GV Orbit Client User Guide
–	Dell EMC PowerEdge XR2 Installation and Service Manual



# Getting Started With GV Orbit Control

# 2

This chapter describes the following tasks:

- [Launching GV Orbit Control Client](#), on page 9
- [Logging in to GV Orbit Control Client](#), on page 9
- [Navigating Back to Stage](#), on page 10
- [Switching User Profiles](#), on page 11
- [Viewing Notifications](#), on page 13

## Launching GV Orbit Control Client

Once GV Orbit Control Client is installed on your computer, the shortcut icon appears on your desktop.


For details on installing GV Orbit Control Client for the first time, refer to the *GV Orbit Admin Guide*.

## Logging in to GV Orbit Control Client

**Tip:** Before logging in to GV Orbit Control Client ensure that you have a valid **user name** and **password**, as well as the **Management IP address** of GV Orbit Control Admin.

To log in to GV Orbit Control Client

- 1 Click the GV Orbit Control Client icon on your PC.  
The GV Orbit Control Client login screen appears.

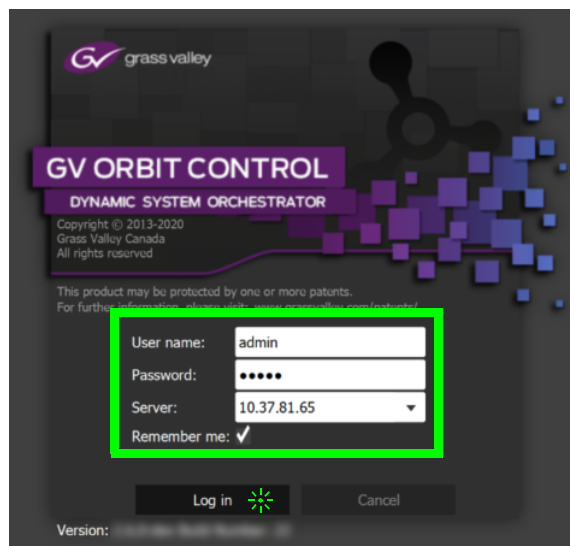


- 2 Enter your user name and password in the **User name** and **password** text boxes.

- 3 Enter the Management IP address of the GV Orbit Control Admin in the **Server** text box.
- 4 Click **Log in**.

## Client Server Version Check Warning

A warning is displayed if the GV Orbit Control Client's software version is different from the software version currently running on the connected server. In this case, it is strongly recommended that you download and reinstall the GV Orbit Control Client's software from the server so that the client and server software versions will match: for details on installing GV Orbit Control Client, refer to the *GV Orbit Admin Guide*.

If both client and server software versions are the same, no warning will be displayed and the GV Orbit Control Client opens normally.

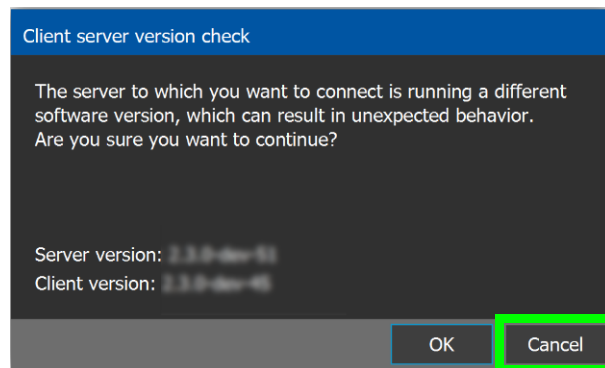

Click **OK** to continue to run the client application regardlessly: this can result in software crashes, database corruption, or other unexpected behavior. Running mismatched software versions is untested and unsupported. Click **Cancel** to go back to the login screen and then close and upgrade your GV Orbit Control Client.

## Navigating Back to Stage

The Stage is the main entry point to configure GV Orbit Control. At any time, you can return to the Stage view.


### To navigate back to Stage

- 1 Open GV Orbit Control Client to any task.
- 2 Do one of the following:
  - Click the Stage tab at the bottom of the UI.
  - Click the plus button at the bottom of the UI.


---

**Tip:** The second option is useful, if you have a lot of tasks open.

---

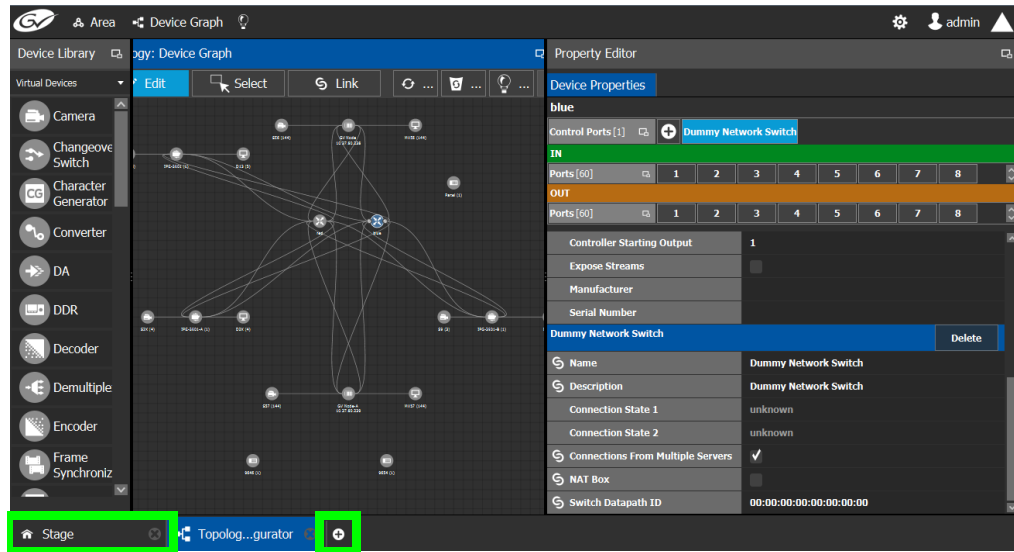

The home or Stage view appears.

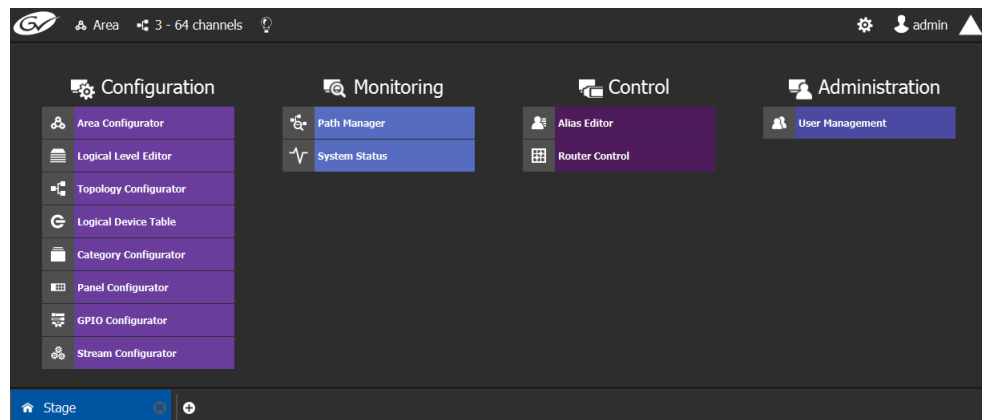

## Switching User Profiles


From the Stage or any open task, you can change to another user profile.

**Note:** Before switching to another user profile, ensure that you have the required user name, password, and Management IP address.


### To switch to another user profile

- 1 Click on the user profile name at the top right of GV Orbit Control Client.

## Getting Started With GV Orbit Control Switching User Profiles

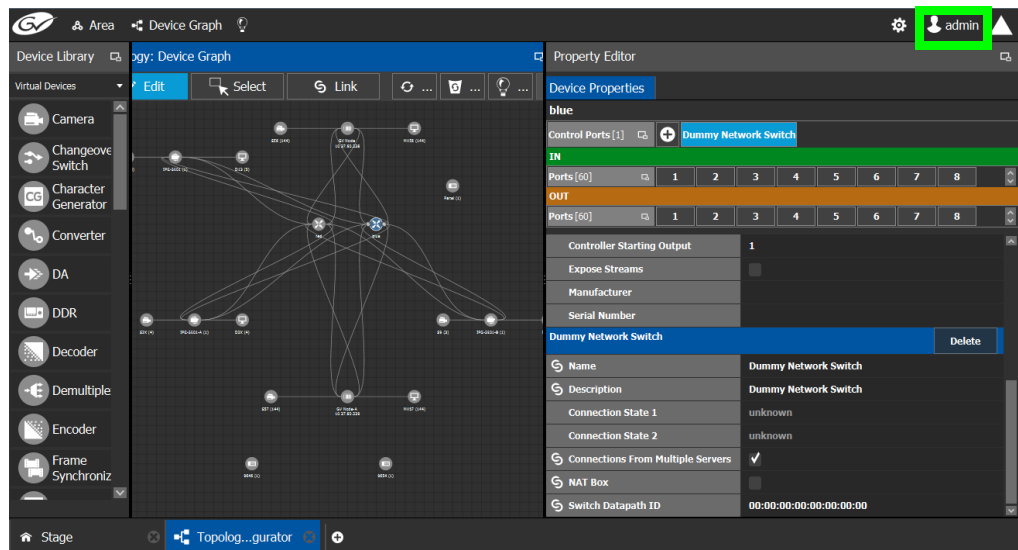

A confirmation message appears.

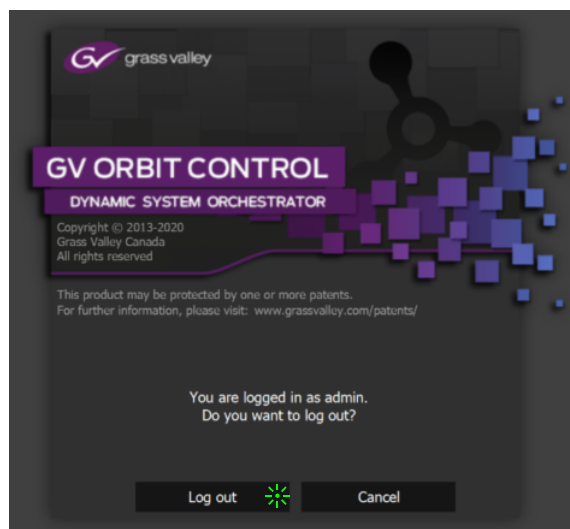


- 2 Click **Log out** to continue.  
The Log in screen appears.





- 3 Enter your login credentials in the **User name** and **Password** text boxes.
- 4 Enter the Management IP address of the GV Orbit Control server you are connecting to in the **Server** field.
- 5 Click **Log in**.

GV Orbit Control Client opens to the view applicable to the user.

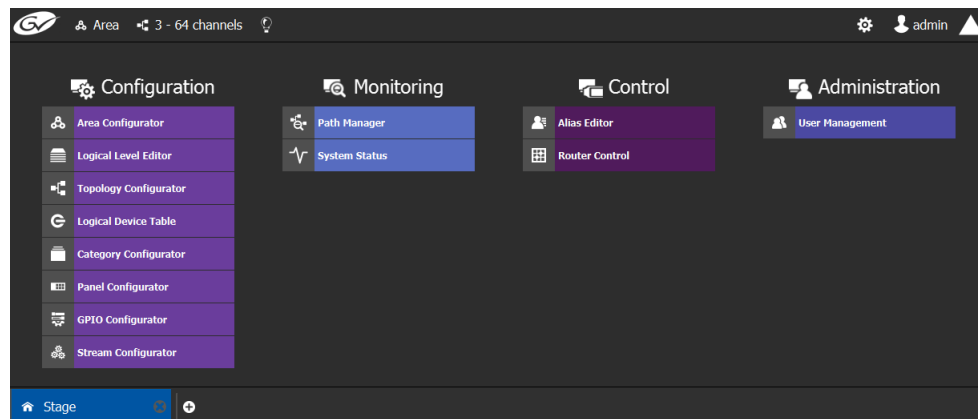

**Note:** Access permissions vary according to the permissions granted to the user's role. For further information, see [Administration Tasks](#), on page 287.

## Viewing Notifications


A notification is an indicator that an event has occurred.

### To view your notifications


- 1 Log in to GV Orbit Control Client.

## Getting Started With GV Orbit Control

### Viewing Notifications

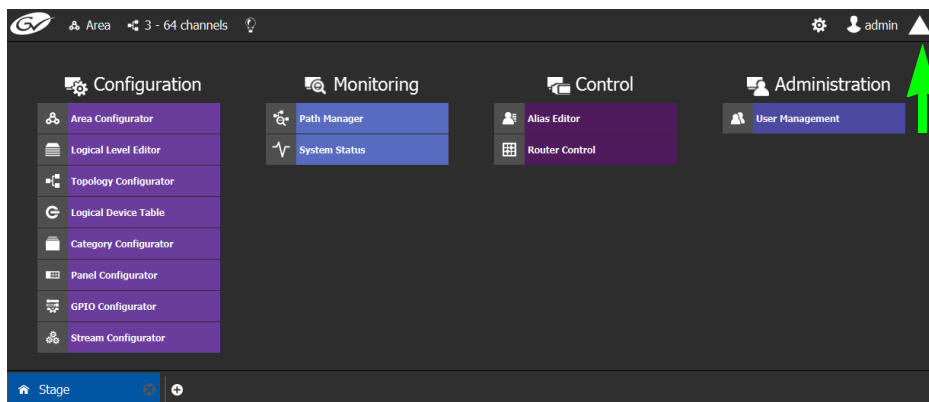


- 2 Click on the up arrow in the top right corner of the UI.  
The Notification window appears.

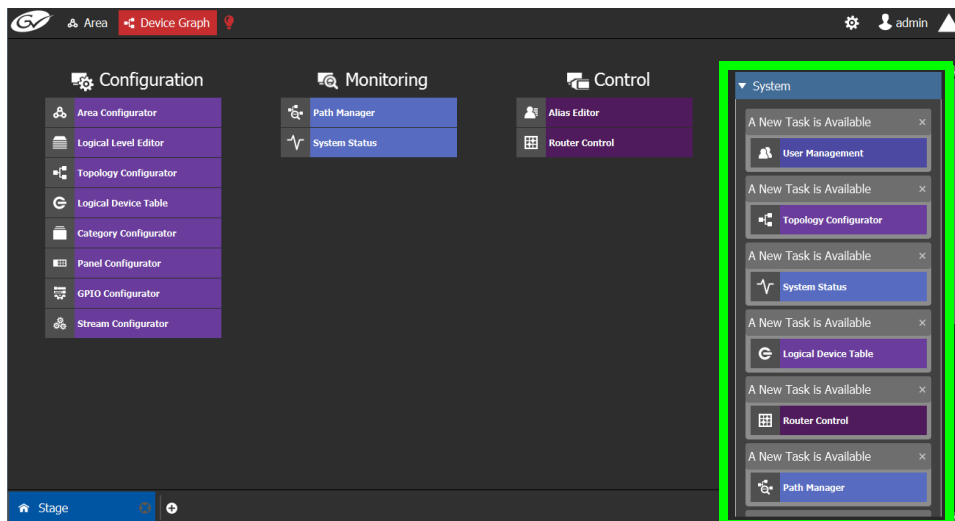

- 3 Expand the **System** list. The list of new events appears.
- 4 Click on a listed event on the right to view it in the UI.

# 3 Configuration Tasks

The Configuration tasks in GV Orbit Control Client are used for creating and maintaining areas, topologies, categories, and panels.

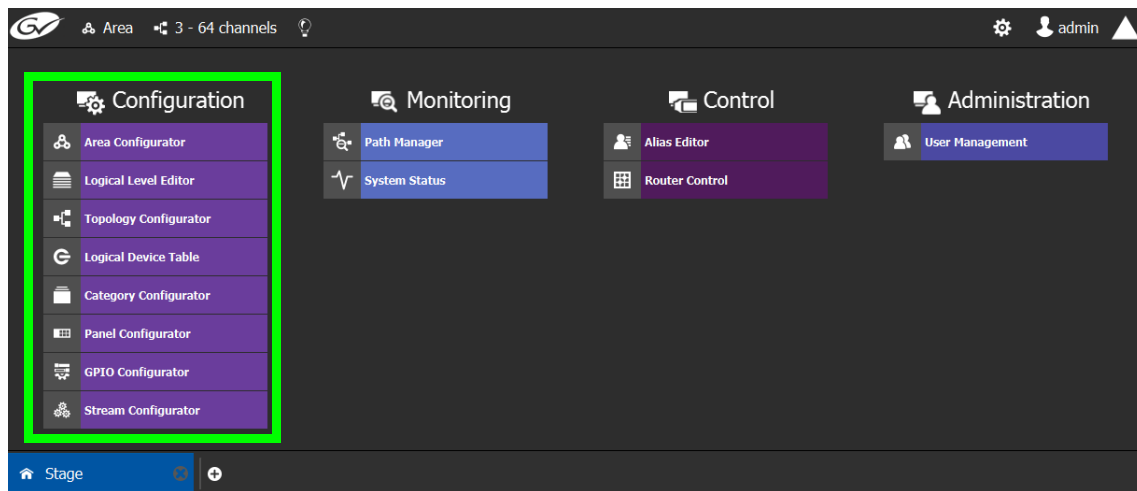

The Configuration Tasks are described under the following headings:

- [Area Configurator Tasks](#), on page 17
- [Logical Level Editor Tasks](#), on page 30
- [Topology Configurator Tasks](#), on page 39
- [Logical Device Table Tasks](#), on page 78
- [Category Configurator Tasks](#), on page 106
- [Panel Configurator Tasks](#), on page 113
- [GPIO Configurator Tasks](#), on page 143
- [Stream Configurator Tasks](#), on page 153

## Required Permissions

Only users who are assigned to the Administrators role have View, Edit, and Delete permissions in the Area task. All other configuration tasks are accessible to users with either Administrator or Engineer rights only. For more information, see [Viewing Permissions by Role](#), on page 294.

## Area Configurator Tasks

The Area Configurator task is used for configuring the *Areas* and controllers in GV Orbit Control.

An *Area* is container that is used for grouping together a subset of resources within a system. Typically, these resources are closely related, by physical location, functionality, ownership, and/or logical organization. An area is managed by a single controller group, which is made up of:

- a single controller
- or optionally, two redundant controllers to provide 1:1 fail-over protection

This section describes the following:


- [Accessing Areas in the GV Orbit Control Client](#), on page 17
- [Adding an Area](#), on page 18
- [Configuring a Controller Group](#), on page 19
- [Selecting an Area](#), on page 23
- [Deleting an Area](#), on page 24

## Accessing Areas in the GV Orbit Control Client


All configuration in GV Orbit Control Client begins by creating one or more areas. Once you have the areas defined, you can add the logical levels, the topologies, and so on.

**To configure the area in GV Orbit Control Client**

- 1 Open GV Orbit Control Client Stage. See [Navigating Back to Stage](#), on page 10.
- 2 Select **Configuration > Area Configurator**.

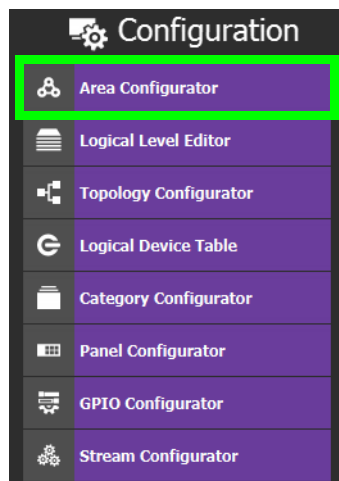

The Area Graph appears.

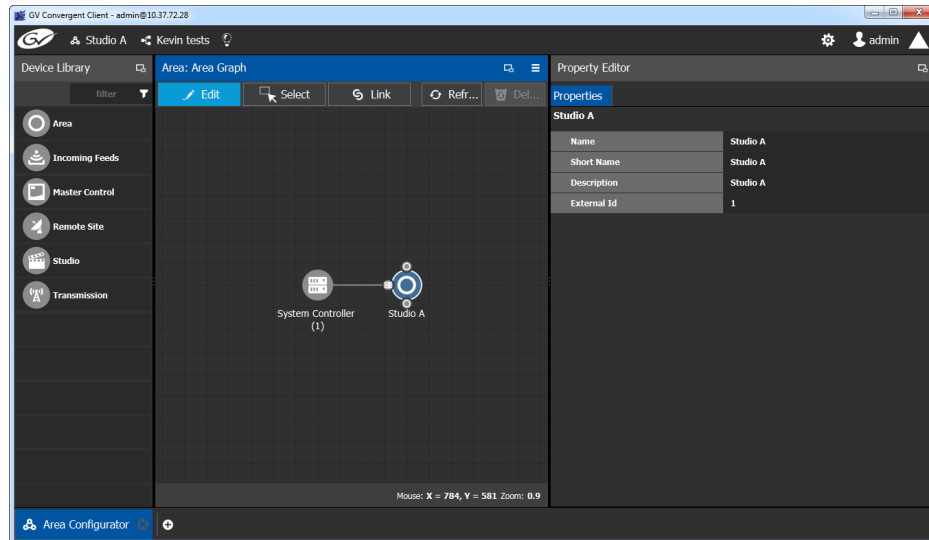

By default, there is one area, called Area. Use the **Property Editor** on the right to rename it and make it easy to identify within your system.

- 3 Select the Area to access the **Property Editor**.  
You are automatically in Edit mode. **Edit** is highlighted in the bar at the top.
- 4 Enter the required information in the **Name**, **Short Name**, **Description**, and **External ID** fields to identify the area.
- 5 Repeat the procedure for each area in your system.


## Adding an Area

You can create multiple areas for your system. This can facilitate configuration and control tasks. Smaller subsets are easier to bring into focus and manage.

### To add an area

- 1 Open GV Orbit Control Client Stage. See [Navigating Back to Stage](#), on page 10.
- 2 Select **Configuration > Area Configurator**. See [Accessing Areas in the GV Orbit Control Client](#), on page 17.

This opens the Area Graph.

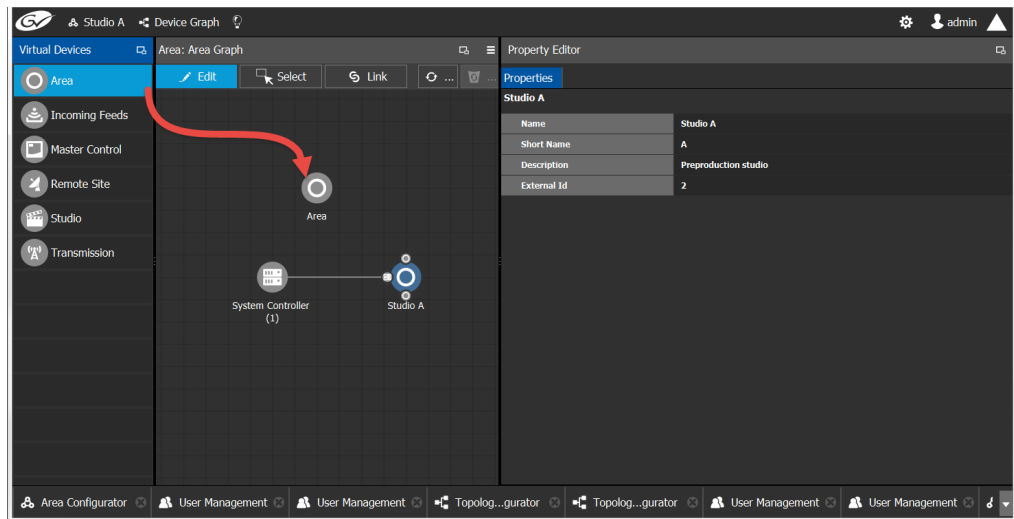

- 3 Select the area tile on the left.
- 4 Drag it to the Area Graph.
- 5 Repeat the procedure as many times as required to add all the areas you require.

---

**Note:** Currently, GV Orbit Control supports one Area. Area inter-connectivity and multiple areas (Incoming Feeds, Master Control, Remote Site, Studio, and Transmission) are not supported.

---

## Configuring a Controller Group

By default, there is one area and one System Controller group on the Area Configurator Device Graph.


A controller group can have one or more areas. The controller is a physical or virtual server that runs the GV Orbit Control software.

A Controller group can be made up of either one or two controllers. You need two controllers to implement redundancy or failover protection. In the redundant configuration, one controller is active and the other is on standby. If there is a problem, such as a network connection loss, the standby controller becomes the active controller, automatically. In addition, you can force the standby controller to become the active controller by performing a manual failover operation, at any time.


### To configure a controller group

- 1 Open GV Orbit Control Client Stage. See [Navigating Back to Stage](#), on page 10.
- 2 Select **Configuration > Area Configurator**. See [Accessing Areas in the GV Orbit Control Client](#), on page 17.

By default, there is one controller and one area on the graph.

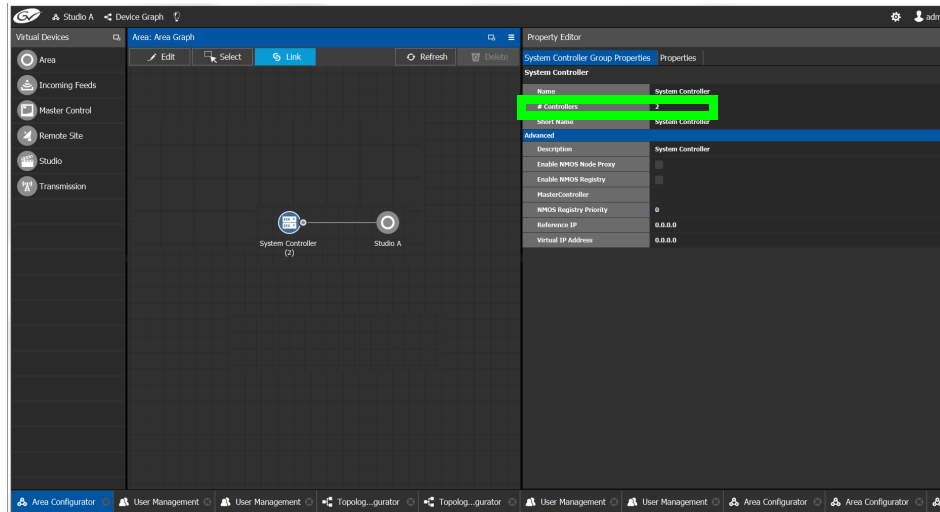

- 3 Select the bubble for the **System Controller** you are configuring.
- 4 Select the **System Controller Group Properties**.

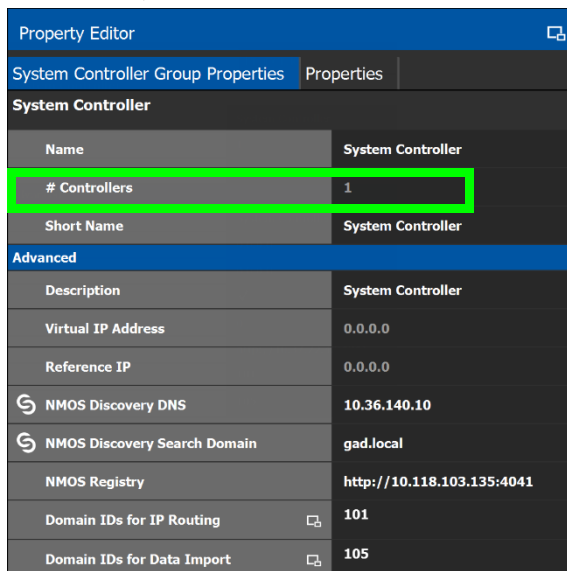


The following properties can be configured for the panel. See also [Description of Common Device Properties](#), on page 162.

Parameter	Description
Name	The name or identifier for this system controller group.
# Controllers	Enter <b>2</b> in the field if you are setting up redundancy. Otherwise, enter <b>1</b> . You can only have one or two system controllers in a group.
Description	An optional description for this system controller group.



Parameter	Description
Virtual IP Address	This is the virtual IP address to communicate with the active server in a GV Orbit Control server cluster (when a redundant configuration is used). If a GV Orbit Control server cluster is not being used, use the GV Orbit Control server administration IP address for devices instead of this IP Address. For example, in a cluster configuration, a soft panel can be configured to point to this virtual IP address. When a failover happens, control is maintained through the panel using this virtual IP address. See also <a href="#">System Status Task</a> , on page 269 for more information about server clusters and failover.
Reference IP	Set the IP of a machine that is always on. After a failover the server that can connect first to this IP will become the master.
NMOS Discovery DNS	GV Orbit Control can automatically discover an NMOS registry through DNS-SD when the <b>NMOS Discovery DNS</b> and <b>NMOS Discovery Search Domain</b> parameters are set. For more information about how to configure and use GV Orbit Control's NMOS registry, see <a href="#">To configure GV Orbit Control for use with NMOS</a> , on page 208.
NMOS Discovery Search Domain	
NMOS Registry	This shows the current NMOS Registry Query API URL (hostname / IP address and port number). For more information about how to configure and use GV Orbit Control's NMOS registry, see <a href="#">To configure GV Orbit Control for use with NMOS</a> , on page 208.
Domain IDs for IP Routing	Only applications / devices that use the same Domain IDs can communicate with each other on the network. For a list of such devices, see <a href="#">GVOP Devices</a> , on page 46. This is a comma separated list of domain IDs on which you want to discover devices and communicate with them. The default value for Grass Valley equipment is <b>101</b> . Valid range: <b>0 to 232</b> .
Domain IDs for Data Import	This is for future use.


- 5 Select the **Properties** tab.
- 6 Select **1** under **System Controller** to configure the first controller.

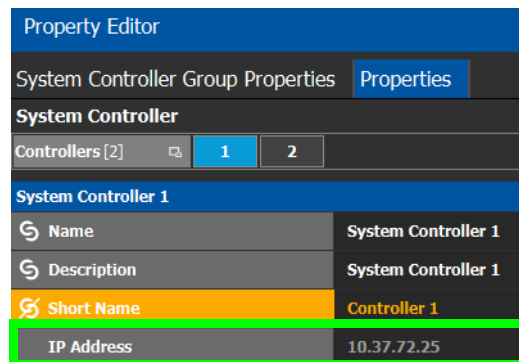

The following properties can be configured for the individual system controller that form the system controller group. See also [Description of Common Device Properties](#), on page 162.


Parameter	Description
Name	The name or identifier for this system controller instance.
Description	An optional description for this system controller instance.
Short Name	A nickname used wherever the controller is specified. This name should be limited to 8 characters or less in length. This requirement is important if you are using NVISION panels as they use the Short Name to display device names and NVISION hardware can display a maximum of 8 characters for a device name. Otherwise, a longer nickname can be used.
IP Address	The network IP address for this system controller instance. This field for <b>System Controller 1</b> is populated automatically with this system controller's Management IP address. This cannot be changed. When system controller redundancy is used ( <b>System Controller 2</b> is available), set the network IP address for System Controller 2.

- 7 Select tab **2** under **System Controller** to configure the second controller.

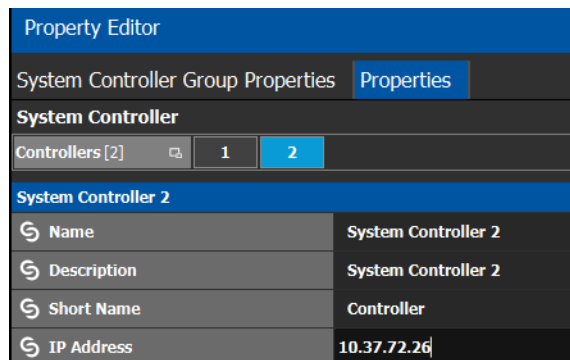

- 8 Update the identification fields for the second controller and set the network IP address for System Controller 2: see the table above.

A confirmation message is displayed:

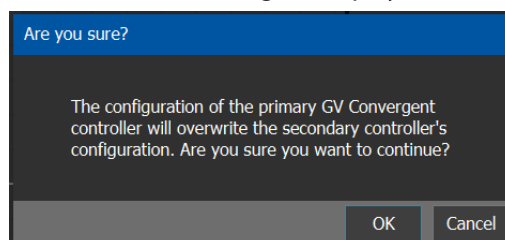

- 9 Click **OK** to continue.

#### Notes

When redundancy has been configured, System Controller 2 joins the Controller group automatically as the standby controller. It becomes the active controller in the event of an automatic or manual failover.

When you click OK, the database from Controller 1 is copied to Controller 2

You can view the health of both controllers on the System Status task. The System Status Task page will show the status of the controllers at all times, and the right hand section shows the health of devices specific to a topology. However, you must create your areas and topologies first. See [System Status Task](#), on page 269.


## Selecting an Area

You must select an area before you can create or maintain a topology within it. Only one area can be selected at a time.

### To switch from one selected area to another

- 1 Open GV Orbit Control Client Stage. See [Navigating Back to Stage](#), on page 10.


The currently selected Area is displayed at the top of the interface.

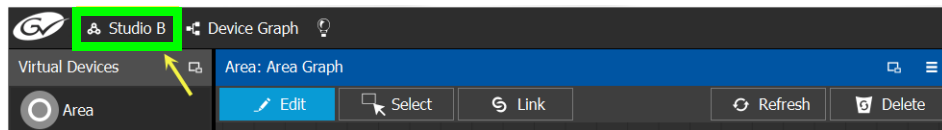

**Note:** You can perform this procedure from Stage or from any open task. You can always select an area.

- 2 Click on this area.

A secondary window appears.

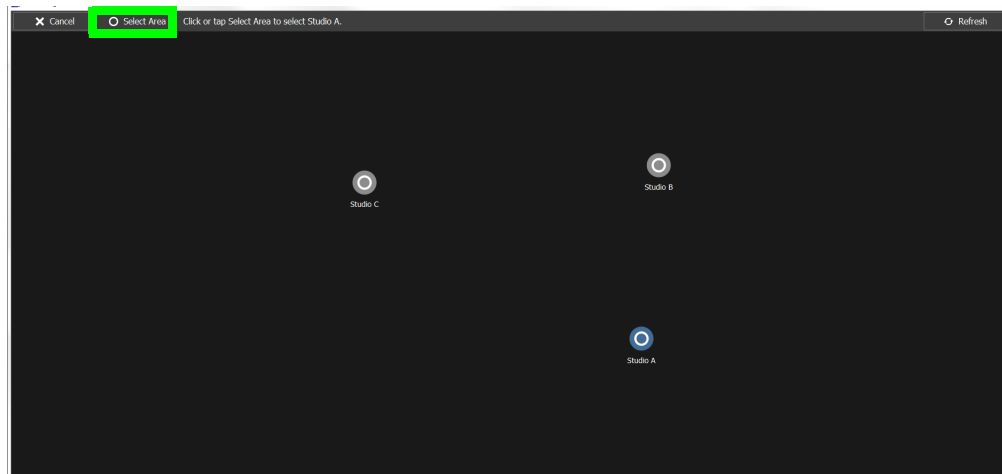

- 3 Click on the area that you to select.

In the screen shot above, this is Studio A.

- 4 Click **Select Area** at the top of the window.


## Deleting an Area


---

**Note:** You cannot delete the currently selected Area. If necessary, make another Area active first. See [Selecting an Area](#), on page 23.

---

### To delete an area

- 1 Select another Area other than the one you are going to delete. See [Selecting an Area](#), on page 23.
- 2 Open GV Orbit Control Client Stage. See [Navigating Back to Stage](#), on page 10.
- 3 Select **Configuration > Area Configurator**. See [Accessing Areas in the GV Orbit Control Client](#), on page 17.
- 4 Click on the Area you want to delete.
- 5 Click **Delete**  at the top of the logical level editor.
- 6 A confirmation message appears. It lists the topologies created in the Area.

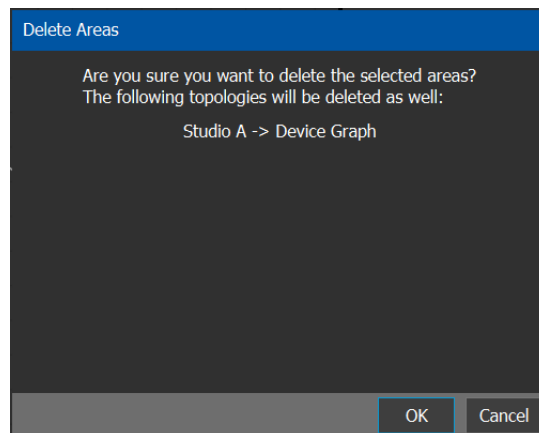

- 7 Click **OK** to continue.

## Selecting a Graph

In the Area Configurator, you define the various Areas in your system. Within each Area, you can create multiple Graphs, and each Graph contains a *Topology*. Each topology shows a part of how the various physical and logical devices are arranged and interconnected within the broadcast facility.


To work on a topology, you first need to select the Graph in which the Topology is held. You can work on only one topology at a time.


### To select a Graph

---

**Note:** A Graph must be created in an area. Then, it is available only in the area where it was created.


---

- 1 Select the required Area. See [Selecting an Area](#), on page 23.
- 2 Click the Graph icon  that holds the currently active topology at the top left of GV Orbit Control Client.

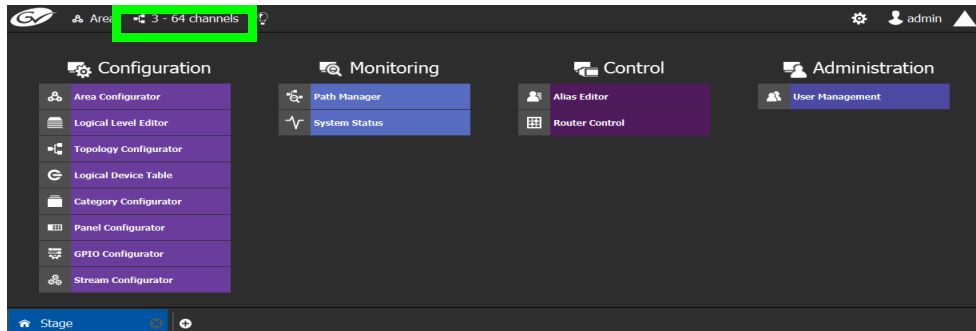


This opens the graphs window. It shows the currently-available graphs for the selected Area. Each Graph contains a Topology.

- 3 Double-click the Graph you want to update or select the Graph you want to update and then click **Load**.

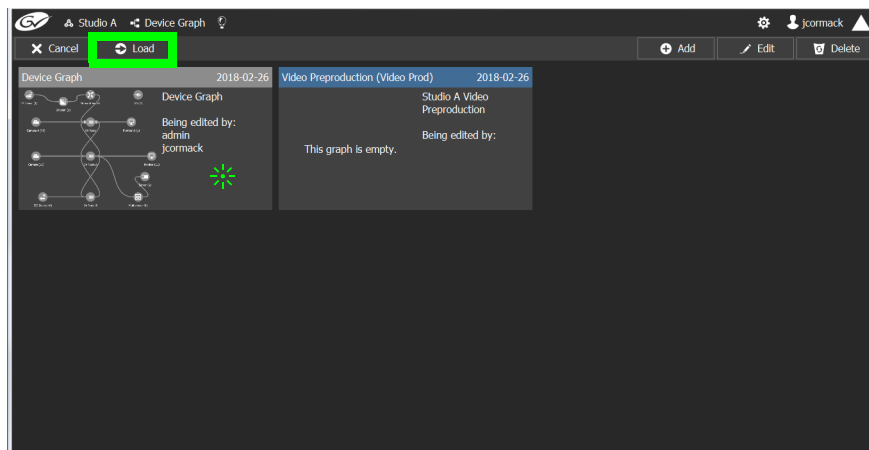

Now, any configuration work you carry out will be on this selected Graph.

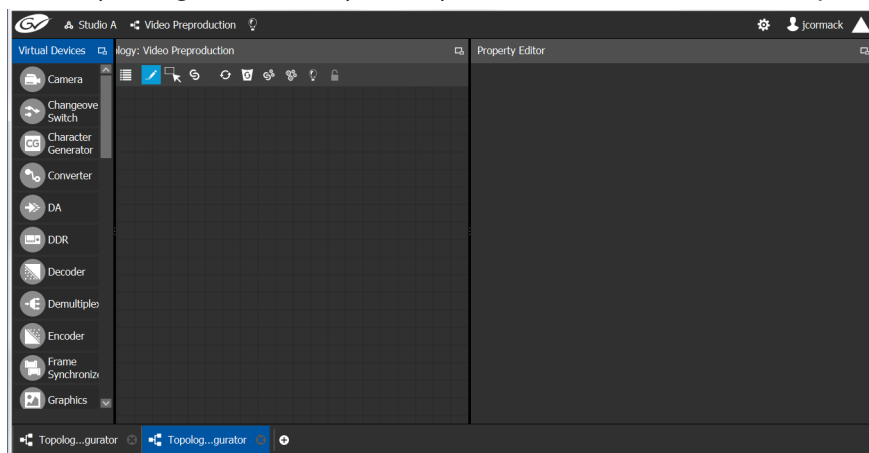



If the topology is new, the Graph is blank. The next step is to begin adding devices. See [Adding Devices to a Topology](#), on page 44.

## Creating a new Graph for a Topology


To create a new topology

- 1 Open GV Orbit Control Client Stage. See [Navigating Back to Stage](#), on page 10.
- 2 Select the required Area. See [Selecting an Area](#), on page 23.

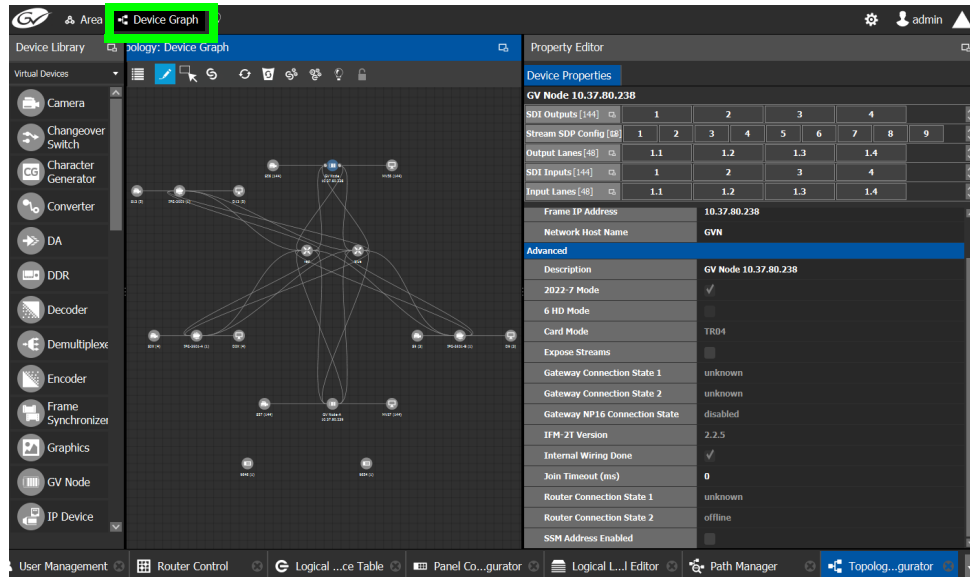


- 3 Click the Graph icon  that holds the currently active topology at the top left of GV Orbit Control Client.

This opens a secondary window.

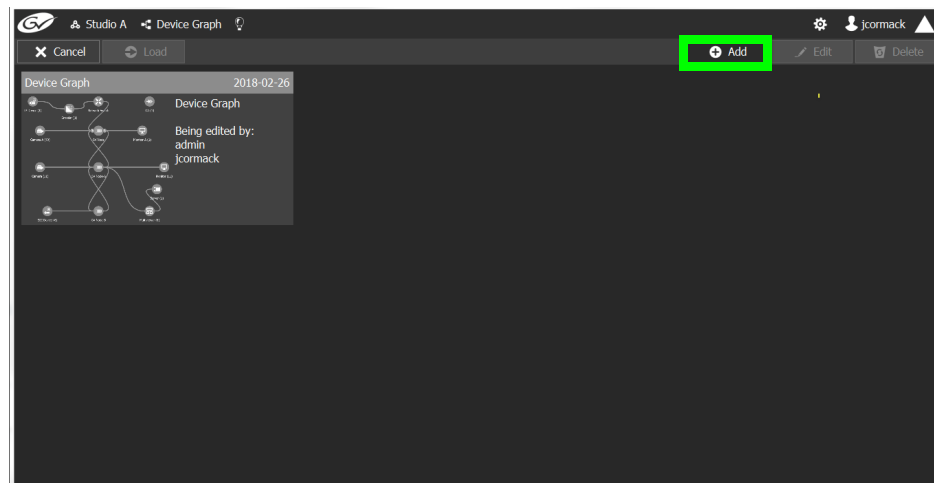


- 4 Click **Add** .

The Create New Graph window appears.

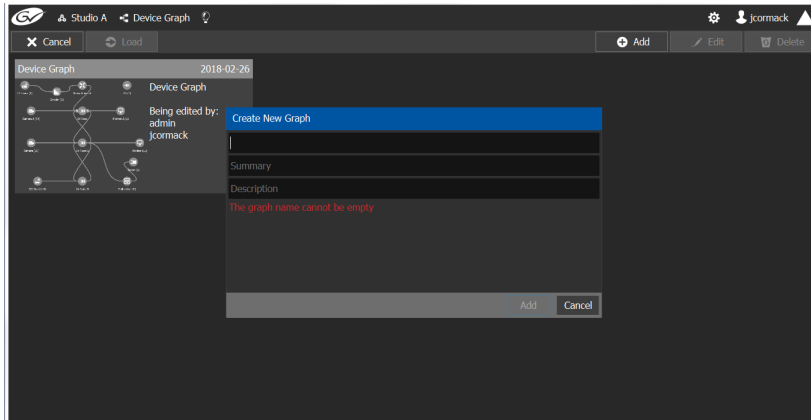


- 5 Enter a name for the new topology and enter meaningful text in the **Summary** and **Description** fields for easy identification.

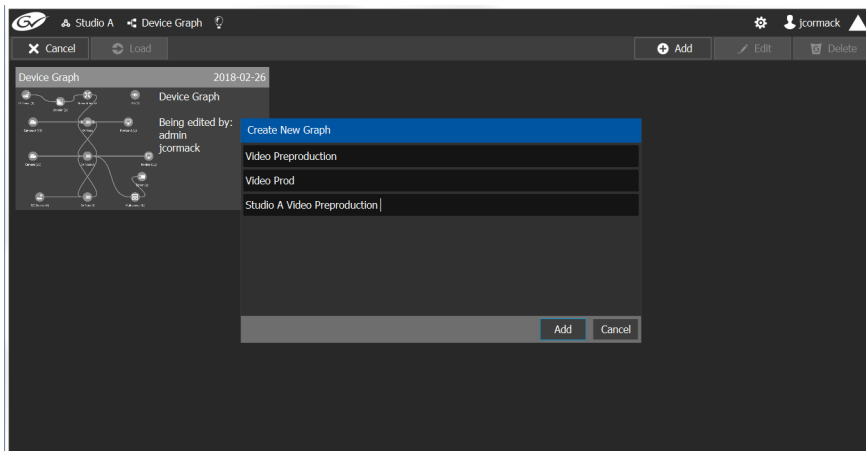


- 6 Click **Add** on the Create New Graph window.

The new topology appears in the list box with the existing topologies.

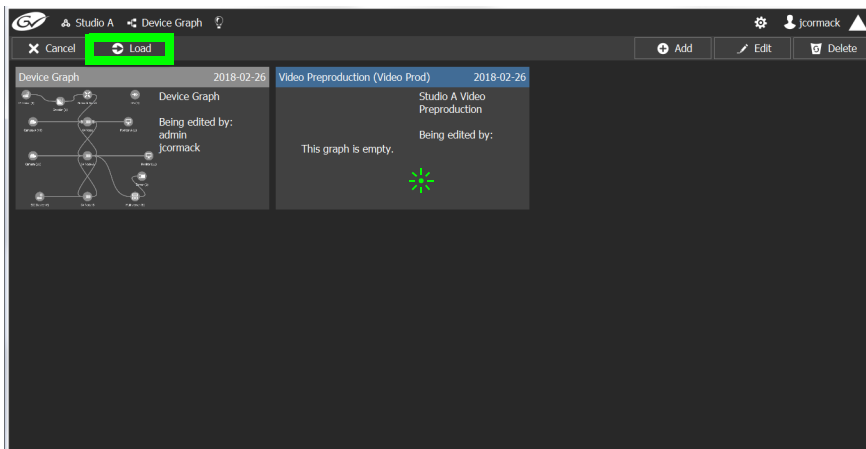

- 7 Select the new topology and click **Load**. Or double-click the topology.

The selected topology is opened.

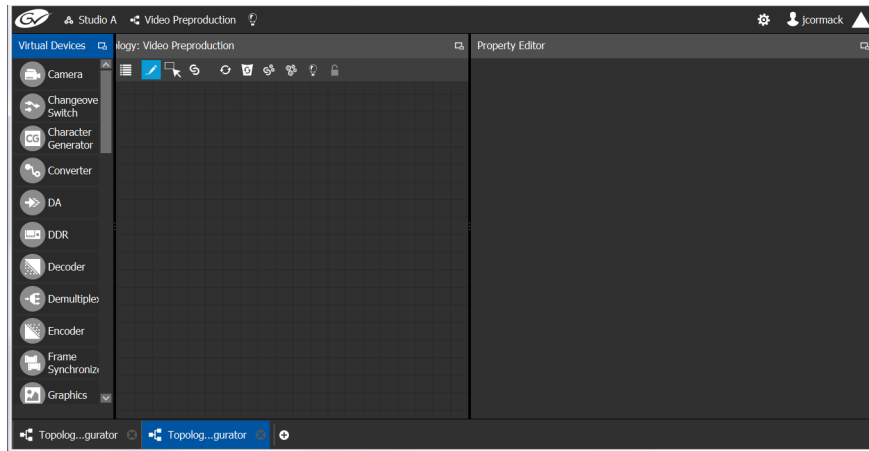


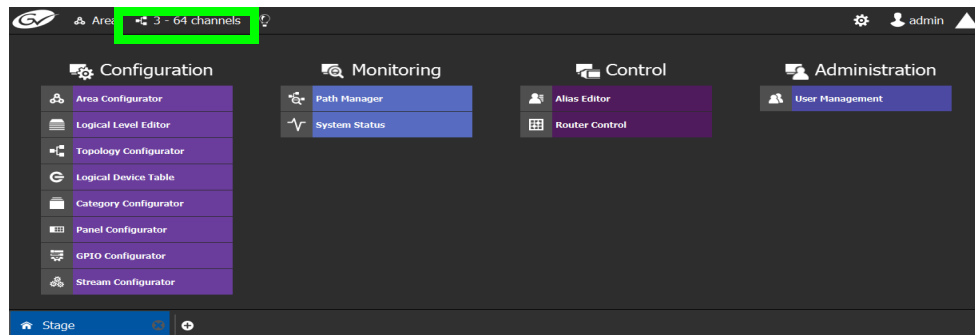
If the topology is new, the Topology is blank. The next step is to begin adding devices. See [Adding Devices to a Topology](#), on page 44.

## Deleting a Graph

Only inactive graphs / topologies can be deleted. See [Making an Active Topology Inactive](#), on page 73. You cannot delete all graphs from GV Orbit Control; at least one graph must always be present.

### To delete a Graph


- 1 Select the required Area. See [Selecting an Area](#), on page 23.
- 2 If you are deleting the active topology, you must first make it inactive. See [Making an Active Topology Inactive](#), on page 73.
- 3 Click the Graph icon  that holds the currently active topology at the top left of GV Orbit Control Client.



This opens the graphs window. It shows the currently-available graphs for the selected Area.



4 Select the Graph you want to delete and then click **Delete**.

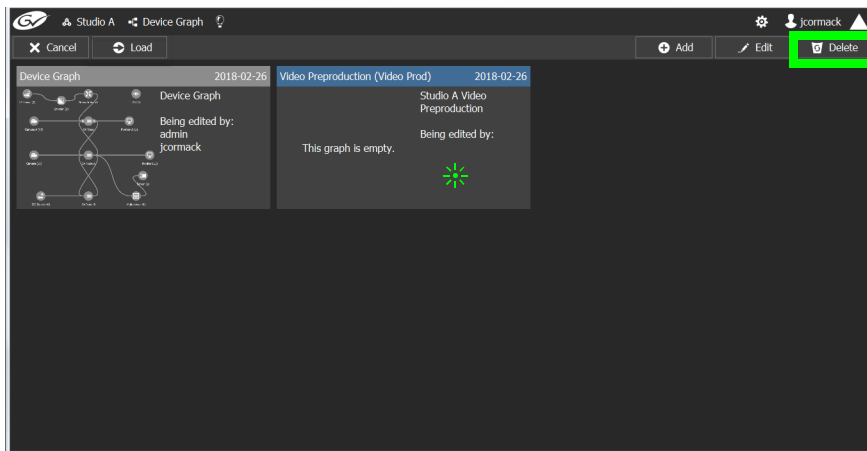

### Deleting the last Graph

You cannot delete all graphs from GV Orbit Control; at least one graph must always be present. To delete the last graph, proceed as follows.

- 1 Create a new graph (see [Creating a new Graph for a Topology](#), on page 26)
- 2 Make the new graph active ([Activating a Topology](#), on page 72).
- 3 Delete the previous graph.

## Logical Level Editor Tasks

Logical levels allow for the definition of compatibility and shuffling rules. This presents the user with complete control of the path definition to prevent routing of incompatible levels. For example, Logical levels are used to identify a stream's video resolution, the number of audio channels, ancillary data, and so on.

Every unique type of stream format in your facility should have a unique Logical Level. These levels are then assigned to sources and destinations (in the Logical Device Table; see [Logical Device Table Tasks](#), on page 78). This allows GV Orbit Control's routing system to make takes between sources and destinations with signal types that are compatible with each other, and with the underlying hardware, so that takes can be successfully made in the real world.

This section describes the following:


- [Accessing the Logical Level Editor](#), on page 30
- [Viewing the Default Logical Levels](#), on page 32
- [Duplicating a Logical Level](#), on page 33
- [Editing a Logical Level](#), on page 35
- [Deleting a Logical Level](#), on page 36
- [Configuring a New Logical Level](#), on page 36
- [Configuring the Logical Levels for the Devices in a Topology](#), on page 37

## Accessing the Logical Level Editor

Use the Logical Level Editor to define new logical levels and to view the compatibility of the default levels.


### To access the Logical Level Editor Task

- 1 Open GV Orbit Control Client Stage. See [Navigating Back to Stage](#), on page 10.
- 2 Select an area.
- 3 Select **Configuration > Logical Level Editor**.

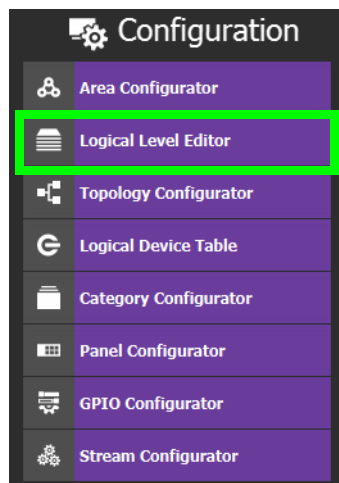

The Logical Level Editor appears.

**Note:** Only users who are assigned to the Administrators or Engineers role in the selected area have View, Edit, and Delete permissions in the Logical Level Editor task. See [Viewing Permissions by Role](#), on page 294.

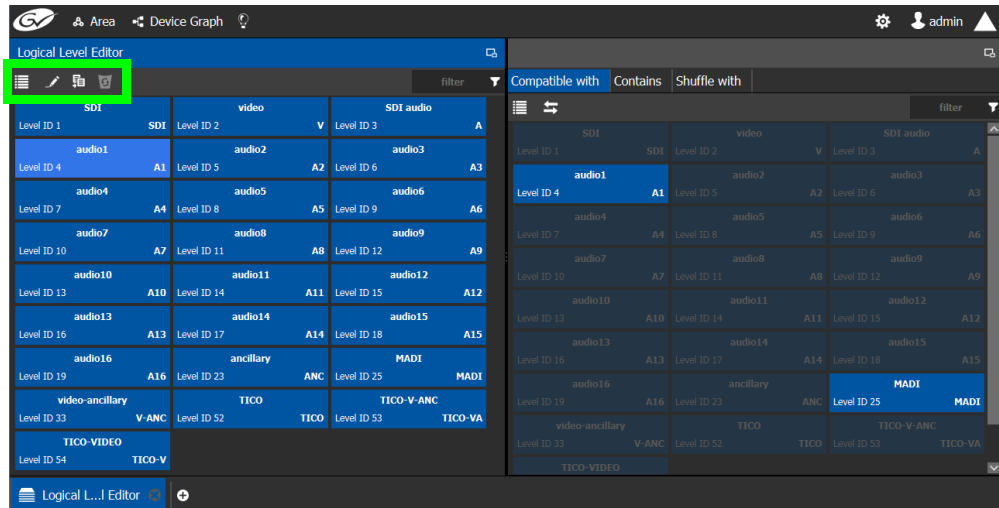

**Note:** Before you can open the Logical Level Editor, you must open an Area and a Topology. Logical levels are defined specifically for each topology.

The Logical Level Editor has two columns:

- The first column contains tiles for all default logical levels along with the logical levels you have added.
- The second column has three tabs: *compatible with*, *contains* and *shuffle with*. The *shuffle with* allows a user to configure which audio levels can be shuffled with which. See [Creating Logical Devices with Shuffled Audio](#), on page 93.


## Logical Level Editor Menu

The Logical Level Editor menu has the following menu options.

Icon	Description
	Edit a logical level's properties. See <a href="#">Editing a Logical Level</a> , on page 35.
	Make a copy of the currently-selected logical level. See <a href="#">Duplicating a Logical Level</a> , on page 33.
	Remove the currently-selected logical level. See <a href="#">Deleting a Logical Level</a> , on page 36.

## Viewing the Default Logical Levels

The default logical levels are represented by the first tiles displayed in the **Logical Level Editor** column, beginning with video, then audio, ancillary, and finally AES67. When you create new logical levels, they are added after these ones.

You can change the Short Label and Level ID of a default Logical Level, but not the Name. Click  Edit to do so. Also, you cannot delete a default level.

The Audio Live device uses AES67 audio levels. See [Logical Levels that specifically support Audio Live](#), on page 254 for more information.

## Verifying the Compatibility of the Default Logical Levels

Compatibility defines which Logical Levels are compatible when making a take. This is shown in the **Compatible with** tab shown below. When a source and destination use the same Logical Level, or the two Logical Levels are compatible with each other, then a take is possible between the source and destination.


Certain default Logical Levels are compatible with other Logical Levels. For example, **AES67-16** is compatible with **SDI audio**. That is to say, a take between an **AES67-16** source and an **SDI audio** destination is allowed by the router system.

When you create a Logical Level, you always modify the compatibility between these Logical Levels according to the required source / destination signal types.

### To verify the compatibility of Logical Levels

- 1 Open GV Orbit Control Client Stage. See [Navigating Back to Stage](#), on page 10.
- 2 Select **Configuration > Logical Level Editor**. See [Accessing the Logical Level Editor](#), on page 30.

The Logical Level Editor appears.

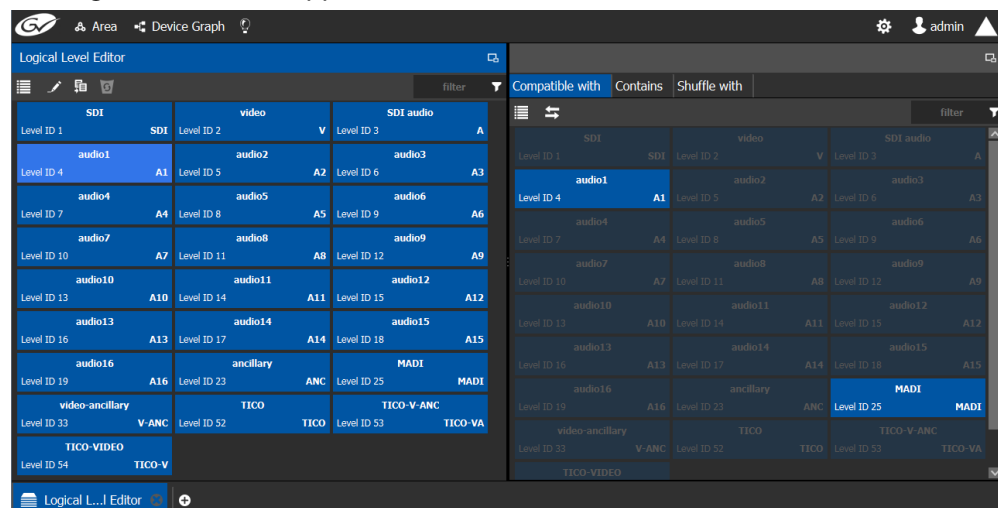

- 3 Select a logical level tile on the left.  
The tiles for the logical levels it is compatible with are highlighted in the right column.

---

**Note:** A logical level is always compatible with itself.

---

## Verifying the Component Signal Types of the Default Logical Levels

Like the compatibility, the signal types of the default logical levels is predefined and cannot be changed. When you create a Logical Level, you always modify the signal type components.

### To verify the signal types of the default logical levels

- 1 Follow the procedure under [Verifying the Component Signal Types of the Default Logical Levels](#), on page 33.
- 2 When you select a tile for a logical level in **Logical Level Editor**, the compatibility is highlighted in the **Contains** tab.

## Duplicating a Logical Level

A pre-existing logical level can be copied to reuse that logical level's configuration properties and then you only need to modify the necessary logical level properties as required for the new application.


### Notes


Logical levels are specific to topologies. In another topology, you won't see the logical levels you create in the currently selected topology.

Only SDI and TICO levels can be duplicated.

### To duplicate a logical level

- 1 Open GV Orbit Control Client Stage. See [Navigating Back to Stage](#), on page 10.
- 2 Select **Configuration > Logical Level Editor**. See [Accessing the Logical Level Editor](#), on page 30.
- 3 Select a pre-existing level on the left-hand panel that you want to duplicate.

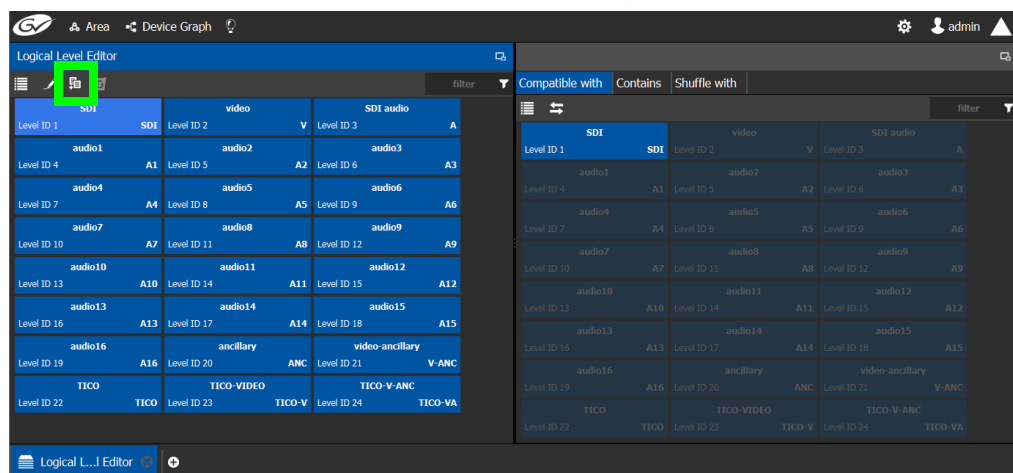

- 4 Click **Duplicate**  at the top of the interface.

The Logical Level configuration window opens.

Level To Duplicate	SDI
Name Prefix	
Name Suffix	HD
Short Label Prefix	
Short Label Suffix	HD
Starting Level ID	36
<input type="button" value="Ok"/> <input type="button" value="Cancel"/>	

- 5 Enter meaningful names to identify the level in the **Name Prefix**, **Name Suffix**, **Short Label Prefix**, and **Short Label Suffix** text boxes.
- 6 Enter a unique identifier in the **Starting Level ID** text box.
- 7 Click **OK**.

A tile for your new logical level is displayed in the left hand column.

video-ancillary		TICO-V-ANC		TICO-VIDEO	
Level ID 33	V-ANC	Level ID 34	TICO-VA	Level ID 35	TICO-V
Level ID 36	SDIHD	Level ID 37	VHD	Level ID 38	AHD
Level ID 39	A1HD	Level ID 40	A2HD	Level ID 41	A3HD
Level ID 42	A4HD	Level ID 43	A5HD	Level ID 44	A6HD
Level ID 45	A7HD	Level ID 46	A8HD	Level ID 47	A9HD
Level ID 48	A10HD	Level ID 49	A11HD	Level ID 50	A12HD
Level ID 51	A13HD	Level ID 52	A14HD	Level ID 53	A15HD
Level ID 54	A16HD	Level ID 55	ANCHD	Level ID 56	V-ANCHD

See [Configuring the Logical Levels for the Devices in a Topology](#), on page 37.

## Creating the Logical Levels for a UHD 4K Routing Setup

For an example of how to create the logical levels for UHD routing when a quad-link signal path is used, see:

- [Configuring UHD 4K Two-Sample Interleave Division IP Streams for use with an IQMix, IQUCP, or IPVU Device](#), on page 185.
- [Configuring UHD 4K Quad-Link SDI Streams for use with an IQMix, IQUCP, or IPVU Device](#), on page 190.

## Editing a Logical Level


Use the following procedure to modify a logical level's identification information. The **Audio** setting marks that the level is an audio level.

### To edit a logical level

- 1 Open GV Orbit Control Client Stage. See [Navigating Back to Stage](#), on page 10.
- 2 Select **Configuration > Logical Level Editor**. See [Accessing the Logical Level Editor](#), on page 30.
- 3 Select a level on the left-hand panel that you want to edit.

**Note:** For the default logical levels, you can modify the Short Label and Level ID. You cannot modify the Name.

- 4 Click **Edit** at the top of the logical level editor.

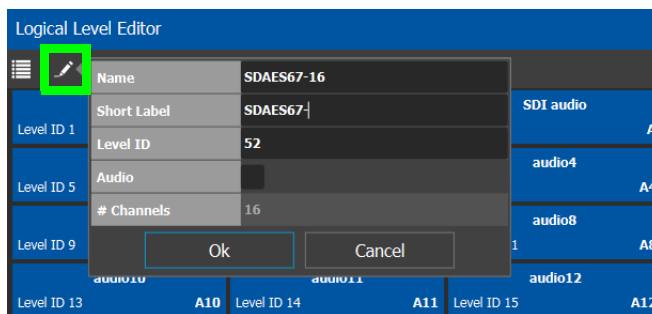

- 5 Modify the properties as required.

Parameter	Description
Name	The level's name.
Short Label	A shortened name for the level.
Level ID	A unique identifier for this level.
Audio	When set, this level will appear in the <b>Shuffle with</b> tab of the right pane for shuffling rules. See <a href="#">Creating Logical Devices with Shuffled Audio</a> , on page 93.
# Channels	When available, this shows the number of audio channels supported by this level. The Audio Live device uses a range of levels, each one supporting a different number of audio channels. See <a href="#">Configuring a Device that Supports Audio Breakaway/Shuffling such as Audio Live</a> , on page 251.

- 6 Click **OK**.

## Deleting a Logical Level

Use the following procedure to delete a logical level you have created that is no longer required in the selected topology.

**Note:** You cannot delete the default logical levels. The Delete button is disabled when you click on these levels.

### To delete a logical level

- 1 Open GV Orbit Control Client Stage. See [Navigating Back to Stage](#), on page 10.
- 2 Select **Configuration > Logical Level Editor**. See [Accessing the Logical Level Editor](#), on page 30.
- 3 Select the tile for the logical level you want to delete.



- 4 Click **Delete** at the top of the logical level editor.

**Note:** There is no confirmation for the deletion.

## Configuring a New Logical Level


Use the following procedure to configure a new logical level. This determines which signal types are compatible with this level.

### To configure a new logical level

- 1 Open GV Orbit Control Client Stage. See [Navigating Back to Stage](#), on page 10.
- 2 Select **Configuration > Logical Level Editor**. See [Accessing the Logical Level Editor](#), on page 30.



- 3 Select the tile for the logical level you want to configure.

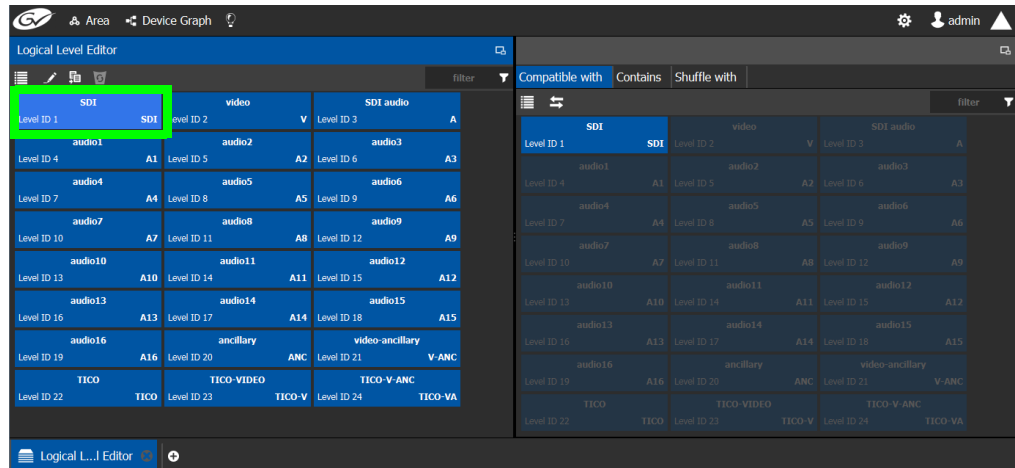

The tile for your new logical level is automatically highlighted in the right hand column.


- 4 Select the tiles for the signal types in the right hand column that are compatible. Click a tile a second time to deselect it.

## Configuring the Logical Levels for the Devices in a Topology

Use the following procedure to set the logical levels for the device's sources and destinations in your topology. Logical levels can be used to define the type of signal carried on a physical connection between physical devices. If compatibility is not an issue, the default logical levels may be utilized.

### To configuring an area in GV Orbit Control Client

- 1 Select the required topology in the area. See [Accessing the Topology Configurator](#), on page 39.

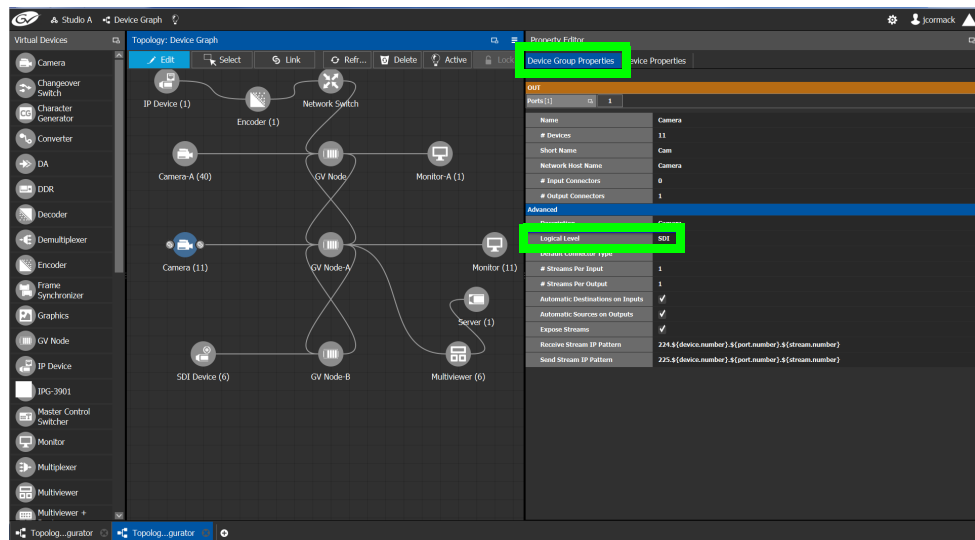


- 2 Select the device for which you want to configure its logical level.  
In the above example, the camera bubble is selected. SDI is the default logical level for cameras.

## Configuration Tasks

### Configuring the Logical Levels for the Devices in a Topology

- 3 Select Device Group Properties.
- 4 Select the **Logical Level** parameter in the **Property Editor**.  
This opens the Logical Level list.

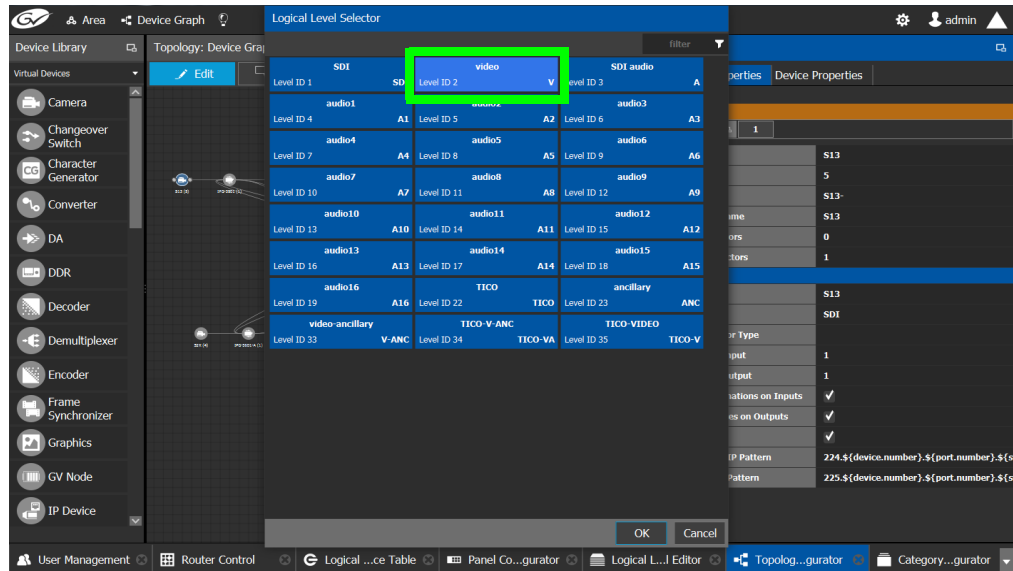

- 5 Select the required logical level for the device group.

## Topology Configurator Tasks

In the Area Configurator, you define the various Areas in your system. Within each Area, you can create multiple Graphs, and each Graph contains a *Topology*. The topologies show how the various physical and logical devices are arranged and interconnected within the broadcasting facility. See [Area Configurator Tasks](#), on page 17 and [Selecting a Graph](#), on page 24.

These sections describes the following:

- [Accessing the Topology Configurator](#), on page 39
- [Selecting a Graph](#), on page 24
- [Refreshing the Topology](#), on page 42
- [Creating a new Graph for a Topology](#), on page 26
- [Adding Devices to a Topology](#), on page 44
- [Methods to Link Devices in a Topology](#), on page 58
- [Defining Device Properties](#), on page 66
- [Deleting a Device From a Topology](#), on page 71
- [Activating a Topology](#), on page 72
- [Making an Active Topology Inactive](#), on page 73
- [Unlocking / Relocking a Topology](#), on page 75
- [Locking an Unlocked Topology](#), on page 76


Certain devices require a detailed procedure to configure them; see [Special Device Configuration Tasks](#), on page 161 for more information about these devices.

## Accessing the Topology Configurator


You can access the Topology Configurator from Stage or from any open task. Access permissions are required. See also [Selecting a Graph](#), on page 24.

### To access the Topology Configurator from Stage

- 1 Open GV Orbit Control Client Stage. See [Navigating Back to Stage](#), on page 10.
- 2 Select **Configuration > Topology Configurator**.

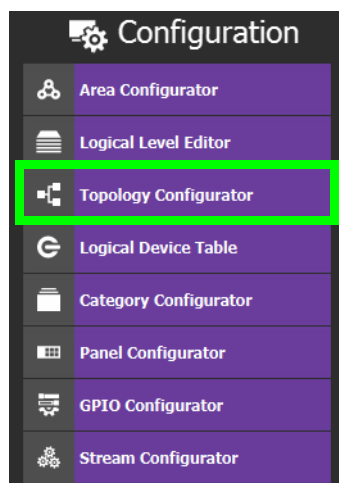

The Topology Configurator appears. The Topology Configurator comprises three sections. The left hand column has a list of bubbles, representing the device groups, such as cameras, routers, and monitors. You drag these onto to the Topology (middle column) and create connections between them. Then, you can configure the properties for the Device Groups in the **Property Editor** (right-hand column).

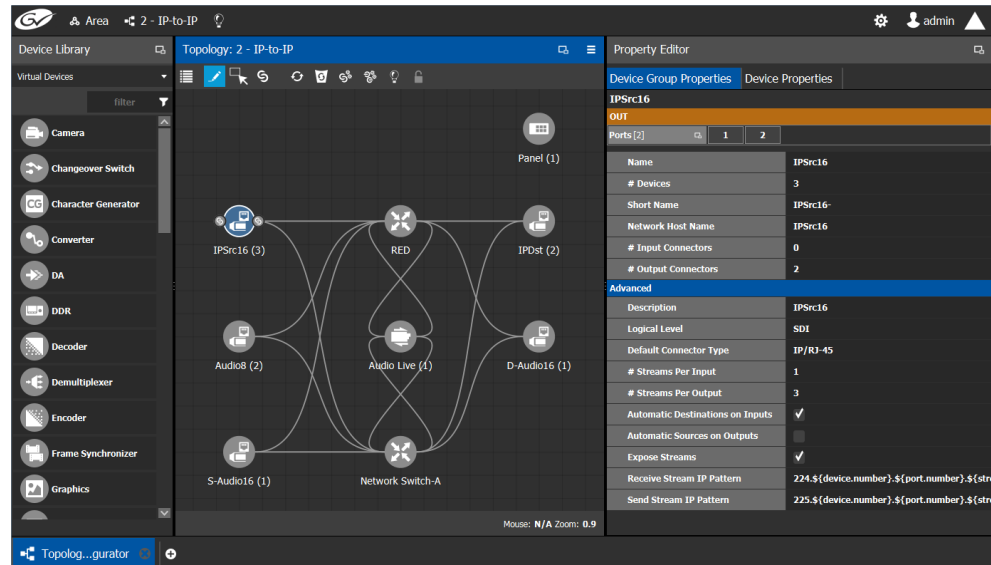

If an Area is open, the Topology Configurator opens in that area. You can switch areas from anywhere in GV Orbit Control Client. See [Selecting an Area](#), on page 23.

### Access Permissions








Access permissions to the Topology Configurator vary according to role. Only users who are assigned to the Administrators or Engineers role can View, Edit, and Delete topologies and device properties. Operators have the right to view topologies and device properties. Maintenance staff and Guests have no access. See [Viewing Permissions by Role](#), on page 294.

### Topology Configurator Menu






The Topology Configurator has the following menu options.

Icon	Description
	<b>Edit</b> Use this editing mode to select a device on the topology to edit its properties. See <a href="#">Defining Device Properties</a> , on page 66.
	<b>Select</b> Use this editing mode to select one or more devices on the topology (by drawing a square with your mouse cursor) to move the selected devices around on the topology as a group, or to delete them. Press the <Ctrl> key to temporarily enable this option.

Icon	Description
 Link	Use this editing mode to connect a device's sources to the destinations of another device. See <a href="#">Methods to Link Devices in a Topology</a> , on page 58. This editing mode is also used to break the connection between two devices. See <a href="#">Deleting the Connection Between Device Groups</a> , on page 65.
 Refresh	Reloads the Topology's contents. See <a href="#">Refreshing the Topology</a> , on page 42.
 Delete	Remove the currently-selected device from the topology. See <a href="#">Deleting a Device From a Topology</a> , on page 71.
 Quick Connect	This automatically connects the unconnected ports of devices on the topology. See <a href="#">Methods to Link Devices in a Topology</a> , on page 58 and <a href="#">Using Quick Connect to Link all Devices in a Topology</a> , on page 58.
 Quick Config	This sets the configuration of the selected devices on the topology. See <a href="#">Using Quick Config</a> , on page 55.
 Deactivate / Active	Activating a topology makes GV Orbit Control connect to and activate all drivers to devices in the topology. This is important for GV Orbit Control to learn a device's current configuration. See <a href="#">Activating a Topology</a> , on page 72 and <a href="#">Making an Active Topology Inactive</a> , on page 73.
 Lock / Unlock	Lock a Topology to prevent you from inadvertently making edits on an active topology. See <a href="#">Unlocking / Relocking a Topology</a> , on page 75 and <a href="#">Locking an Unlocked Topology</a> , on page 76.

## How to Identify if a Device Bubble is Selected or Not

A device bubble has the following selection states.


	Description	Device Bubble State	Device properties are shown in the Property Editor
	Gray, no white circle	Not selected	
	Gray with white circle	Selected	
	Blue with white circle	Selected	•

## Refreshing the Topology

If you have added a lot of devices to a topology or made many modifications to it, you may need to refresh the Topology. You can refresh topology regardless of whether it is active or inactive.

### To refresh the Topology

- 1 Open a topology in the Topology Configurator.

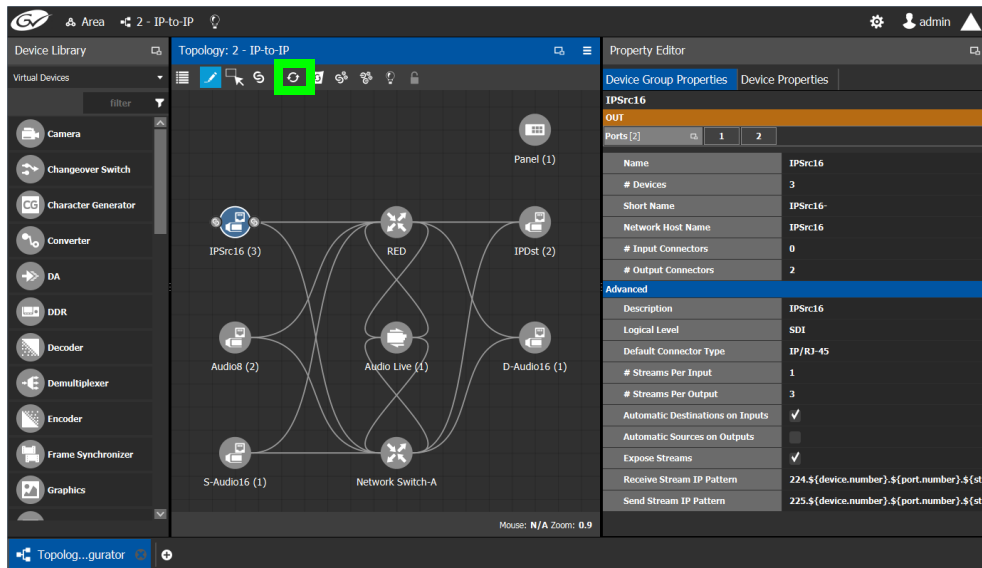

- 2 Click the Refresh button at the top of the interface.  
The topology is inaccessible during the brief time it takes to refresh the window.


## Viewing the Topology in Full Screen Mode

By default, the selected topology is displayed in the center of the Topology Configurator task. The devices are displayed on the left and the **Property Editor** is displayed on the right.


### To view the topology in fullscreen mode

- 1 Open GV Orbit Control Client Stage. See [Navigating Back to Stage](#), on page 10.
- 2 Select the required Area. See [Selecting an Area](#), on page 23.

- 3 Select the required topology. See [Selecting a Graph](#), on page 24.

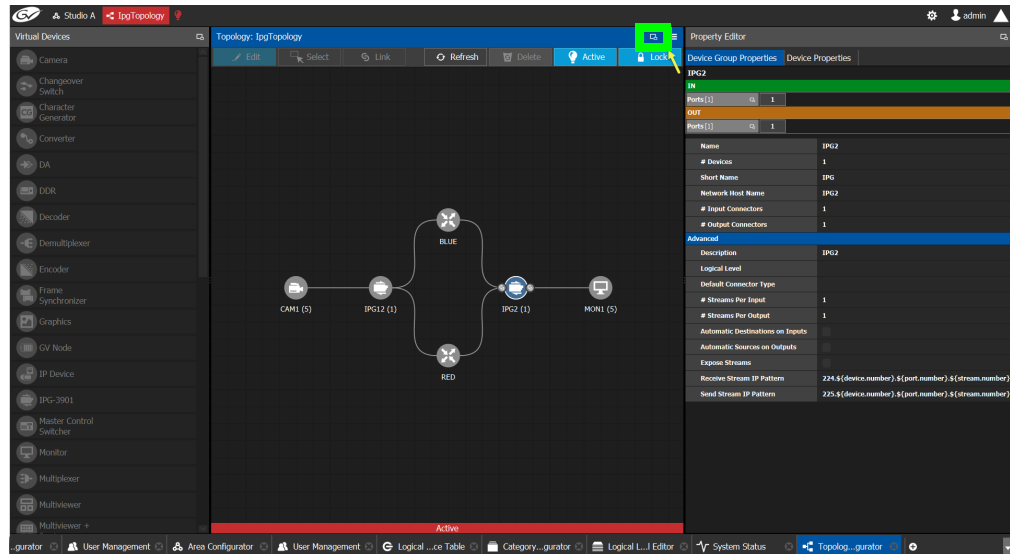

- 4 Click the Fullscreen toggle button at the top of the interface.  
The Topology expands across all three columns in the Topology Configurator.

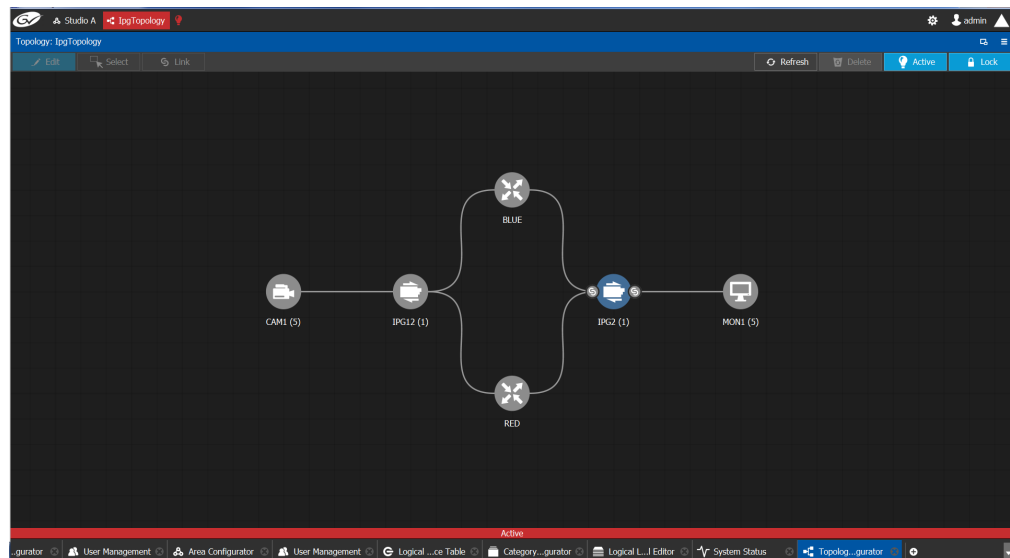

#### TIP

To zoom and center the topology view:

- click the Refresh button.
- double-click an empty space.

#### To return to default mode

- 1 When the Topology is in fullscreen mode, click Fullscreen to toggle the display back to the default mode.

## Adding Devices to a Topology

By adding devices to a topology, you are making a representation in GV Orbit Control of the real world equipment you are using, and the physical interconnections made between this equipment.


There are two types of devices in GV Orbit Control.

- **Virtual Devices:** These are devices that GV Orbit Control does not need to know any of the device's configuration parameters in order to use the device. Therefore, the device can be offline when configuring it in GV Orbit Control. See [To add a Virtual Device to a topology](#), on page 44. Certain devices may require advanced configuration procedures; see [Special Device Configuration Tasks](#), on page 161.
- **Discovered:** These are devices that GV Orbit Control needs to know the device's configuration parameters in order to know which of the device's spigots have been configured as sources or destinations, the levels, and so on. These devices must be online when configuring them in GV Orbit Control. For more information about discovered devices, see [About Discovered Devices](#), on page 45.

### To add a Virtual Device to a topology

Certain Virtual Devices require advanced configuration procedures; see [Special Device Configuration Tasks](#), on page 161 for more information about the specific device you are adding to the Graph, if necessary.

- 1 Select the required Area. See [Selecting an Area](#), on page 23.
- 2 Select the required topology. See [Selecting a Graph](#), on page 24.
- 3 The topology must be currently:
  - Activated (see [Activating a Topology](#), on page 72).
  - Unlocked (see [Unlocking / Relocking a Topology](#), on page 75).
- 4 From the **Device Library**, **Virtual Device** on the left, select **Virtual Devices** from the drop-down list.

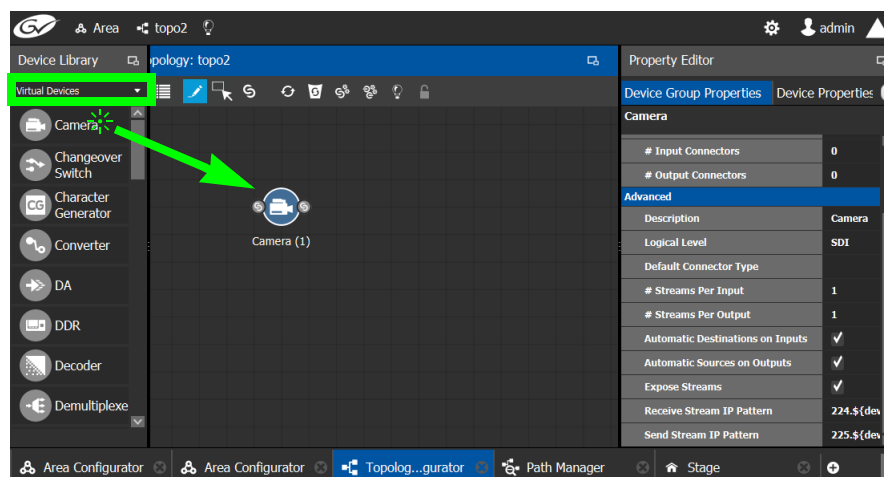

- 5 From the **Device Library**, **Virtual Device**, find the device that represents a piece of equipment you want to control: select the device bubble and drag it into position on the Topology and release the mouse button.




Initially, the device bubble represents a single device, such as a single camera. However, a bubble is a device group that can represent one or more devices. See [To name a device and set the number of devices in the group](#), on page 45.

- Repeat [step 5](#) to and the following procedure ([To name a device and set the number of devices in the group](#), on page 45) until you have added all the required devices to the topology.

### To name a device and set the number of devices in the group

A device group is a collection of devices of the same type that can be configured together. All bubbles in a Topology are automatically device groups with the exception of the following devices: IPVU, IPG-3901 / IPG-4901, IQMIX / IQUCP25, MV-820-IP, Kahuna-IP, NMOS devices, Audio Live, IQAMD, Network Switch, Router, and GV Node.

- Click on the name of the device underneath the bubble to create a device group. The Device Group configuration window appears.

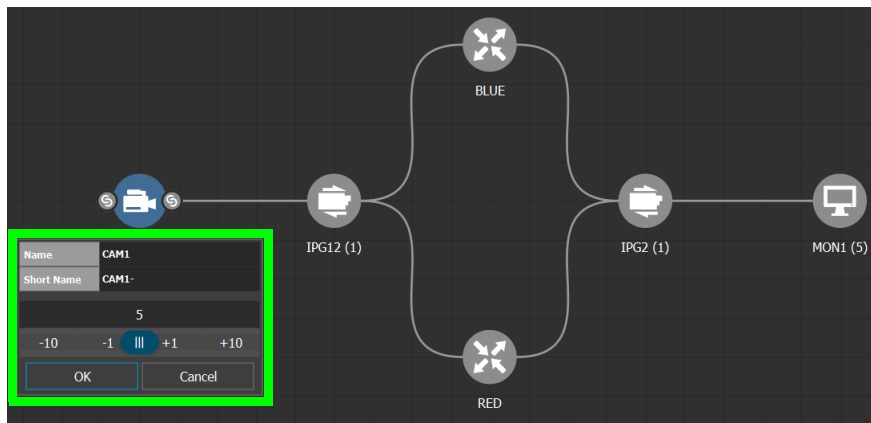

- Enter meaningful names to identify the device group in the **Name** and **Short Name** fields.

In this case, the Camera device group is named CAM1 to identify the cameras controlled by Controller 1. These parameters can also be set in the **Property Editor**.

- Use the plus and minus buttons to enter the number of device instances are in the device group.
- Click **OK**.

Each device instance is shown and can be individually configured in the **Property Editor**, under **Devices**, by clicking an instance.

In the above example, five monitors, two IPGs, two network switches, and five cameras have been added to the Topology.

### About Discovered Devices

There are two different types of discovered devices:

- NMOS devices discovered with IS-04, that can be senders, receivers or both. For more information, see [Adding NMOS Devices to a Topology](#), on page 208.
- Grass Valley devices discovered with GVOP; see below for a list of these devices.

## GVOP Devices

In order to use discovered GVOP devices in GV Orbit Control, the discovered devices must first be configured through GV Orbit Client. GV Orbit Control needs to know the device's configuration parameters in order to know which of the device's spigots have been configured as sources or destinations, the levels, and so on. These devices must be online when configuring them in GV Orbit Control.

The following Devices Use GVOP to be discovered by GV Orbit Control.

Discovered Device Type	For more information, see
IPG-3901 / IPG-4901	<a href="#">Configuring an IPG-3901 / IPG-4901 Device</a> , on page 174
IPVU	<a href="#">Configuring an IPVU Device</a> , on page 180
IQMIX	<a href="#">Configuring an IQMix or IQUCP25 Device</a> , on page 183
IQUCP	
MV-820-IP	<a href="#">Configuring an MV-820-IP Multiviewer Device</a> , on page 194
Kahuna-IP	<a href="#">Configuring a Kahuna IP Production Switcher Device</a> , on page 198
Audio Live	<a href="#">Configuring a Device that Supports Audio Breakaway/Shuffling such as Audio Live</a> , on page 251
IQAMD	<a href="#">Configuring an IQAMD40 Device</a> , on page 258
Other devices that use GVOP for Configuration	These are device that can be configured through GV Orbit Client.

When the **IP Friendly Name** service is running on the GV Orbit Server, and the device uses GVOP for Configuration:

- In GV Orbit Control, GVOP device properties are automatically filled in from when the devices were configured through GV Orbit Client. Changes to those devices' properties in GV Orbit Client are updated in GV Orbit Control in real time. See [Synchronization of Discovered GVOP Devices, Source, Destination, and Spigot Names made in GV Orbit Client](#), on page 49 for more information.
- The device's current source and destination configuration is read in real time and is updated in the Logical Device Table's Multilevel Table when the **Automatic Sources and Destinations** parameter is set in the device's properties. See [Logical Device Table Tasks](#), on page 78, [About Automatic Sources or Destinations](#), on page 83, [Device Properties Definitions](#), on page 69, and [Synchronization of Discovered GVOP Devices, Source, Destination, and Spigot Names made in GV Orbit Client](#), on page 49.
- There is no need to use Camera and Monitor devices to create the logical sources/destinations for these devices. Furthermore, Camera and Monitor devices are not created anymore when using the Quick Connect tool. See [Using Quick Connect to Link all Devices in a Topology](#), on page 58.


To add a Discovered device to a Topology, see below.

## To add a Discovered Device to a Topology

Discovered devices typically require advanced configuration procedures; see [Special Device Configuration Tasks](#), on page 161 for more configuration information about the specific device you are adding to the Graph.


### Adding a discovered device to a topology

- 1 Select the required Area. See [Selecting an Area](#), on page 23.
- 2 Select the required topology. See [Selecting a Graph](#), on page 24.
- 3 The topology must be currently:
  - Activated (see [Activating a Topology](#), on page 72).
  - Unlocked (see [Unlocking / Relocking a Topology](#), on page 75).
- 4 From the **Device Library**, on the left, select **Discovered** from the drop-down list. In the example below, an IQMix was discovered on the network.

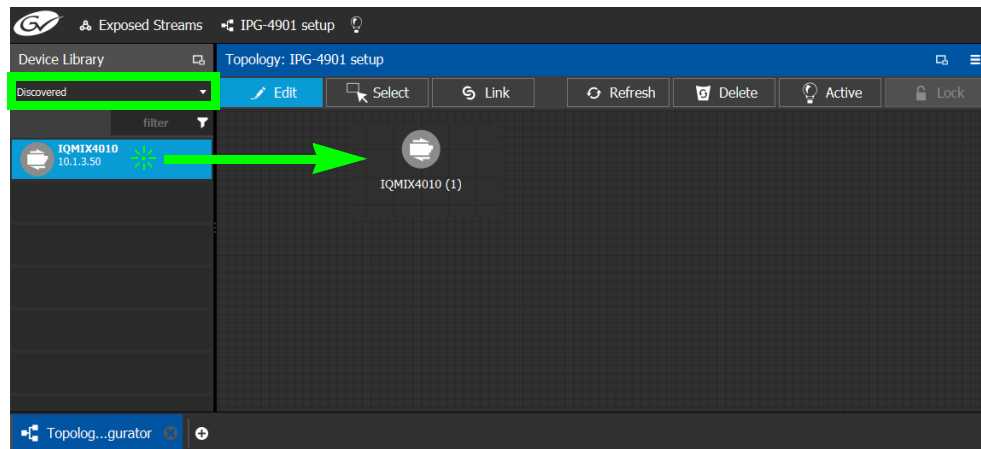


- 5 From the **Device Library**, **Discovered** find the device that you want to control: select the device bubble and drag it into position on the Topology and release the mouse button.  
The device pulled from the **Device Library**, **Discovered** becomes grayed out and another instance of the same device instance cannot be added again to the Topology. However, multiple device instances found in the Device Library can be used to create a device group.

- 6 To create a device group:
  - a From the **Device Library, Discovered**, find the device that you want to control: select the device bubble and drag it into position on the Topology and release the mouse button.
  - b From the **Device Library, Discovered**, find another identical device that you want to control: select the device bubble and drag it on top of the first device instance already on the Topology and release the mouse button.

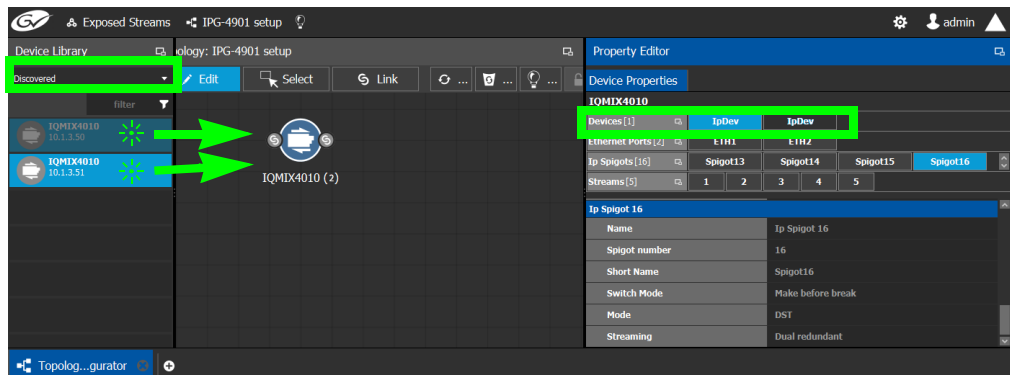


The two device instances are shown and can be individually configured in the **Property Editor**, under **Devices**, by clicking an instance.

- 7 Click on the name of the device underneath the bubble to name the device or device group.

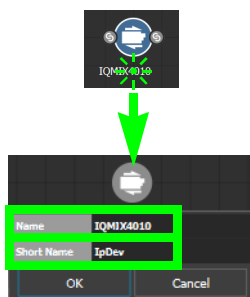

These parameters can also be set in the **Property Editor** when the device bubble is selected.

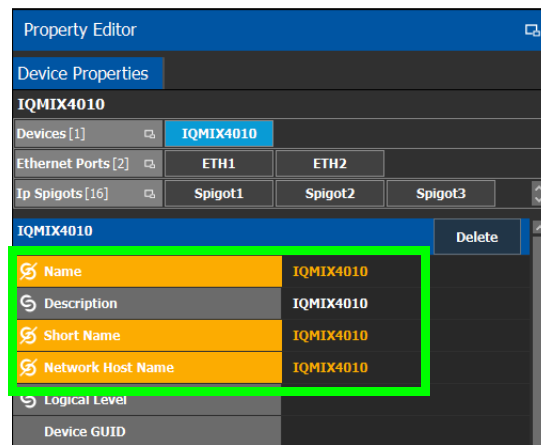

## Using GVOP Devices

As of GV Orbit Control Client version 2.8.0 or higher, the way devices that use GVOP are configured has changed. To identify a device that uses GVOP, see [GVOP Devices](#), on page 46. These changes bring powerful new features such as:

- Tighter integration with GV Orbit Client to:
  - Automatically synchronize certain configuration parameters in GV Orbit Control.
  - Allow a spreadsheet import to set many GVOP device parameters in bulk in both GV Orbit Client and GV Orbit Control.

See [Synchronization of Discovered GVOP Devices, Source, Destination, and Spigot Names made in GV Orbit Client](#), on page 49.

- Devices that Use GVOP for Configuration no longer use the SDI camera/monitor bubble.
- Logical sources/destinations related to those GVOP devices will be automatically created using the spigot name (Port Name), once the configured device is added to the topology, even before making the appropriate connections. Those logical sources/destinations are created using the appropriate streams. For gateway devices, the SDI streams will be used and for IP devices, the IP streams will be used.
- The operating method of any GVOP device configured in GV Orbit Control Client version 2.7.X or earlier will remain unchanged after project migration to version 2.8.0 or higher. However, GVOP devices can be migrated to use this new function model of operation. See [To migrate GVOP Devices for IP routing](#), on page 54.

### Synchronization of Discovered GVOP Devices, Source, Destination, and Spigot Names made in GV Orbit Client

When the **IP Friendly Name** service is running on the GV Orbit Server, this service pushes certain configuration parameters made in GV Orbit Client to the same discovered GVOP device in GV Orbit Control. Changes to configuration parameters can result from having used the spreadsheet import feature in GV Orbit Client. See also [GVOP Devices](#), on page 46.

This service uses a common device identifier, the device's GUID. A device's GUID is like a serial number that uniquely identifies individual GVOP devices. Through a device's GUID, the IP Friendly Name service:

- Provides persistence to the GV Orbit system for the naming of discovered GVOP devices. If the **IP Friendly Name** service is not running, Device and Spigot values from the configuration will not be available to GV Orbit Control and in such a case, GV Orbit Control will use the default values for device, spigot and logical source/destination labels. See [Troubleshooting](#), on page 55.
- Updates made to GVOP devices in GV Orbit Client are dynamically reflected to those same devices in GV Orbit Control topology.

For example, by setting the device name in GV Orbit Client, the device name of the same GVOP device in GV Orbit Control will be updated in real time.

The intended workflow is to first configure the device in GV Orbit Client and then integrate the device for routing in GV Orbit Control.


When a discovered GVOP device is added to a Topology in GV Orbit Control, and the device's name is subsequently updated in GV Orbit Client, the device name and the Device Group name will also be automatically updated. However, once a second or more discovered devices have been added to this Device Group, then the name of the Device Group will no longer be updated due to changes made in GV Orbit to the name of any device found in the Device Group. The names of the individual devices, regardless of how many of them are in a device group, will always be updated.

Likewise, the device's current source and destination configuration is read in real time and is automatically updated in the Logical Device Table's Multilevel Table when the **Automatic Sources and Destinations** parameter is set in the device's properties. For more information, see [About Automatic Sources or Destinations](#), on page 83 and [Device Properties Definitions](#), on page 69.

Logical sources and destinations are created using the appropriate streams. For gateway devices, the SDI streams will be used and for IP devices, the IP streams will be used.

You can still manually create custom logical sources / destinations using the streams of your choice; see [Configuring Streams for New Sources](#), on page 86.

For gateway devices, the Stream Configurator allows you to expose any stream of your choice, including the device's IP streams. In such a case, the logical sources / destinations created using the SDI streams from the same spigot as the exposed IP streams will not be reachable anymore by GV Orbit Control's pathfinding, since the newly exposed IP streams become the device's edge. See [Stream Configurator Tasks](#), on page 153. The following diagram shows that when IP streams are exposed, the SDI streams are no longer reachable.

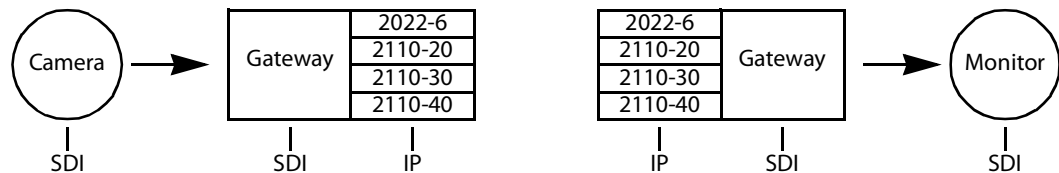

---

**Note:** When replacing a failed GVOP device, you will have to replace the device with the new one in the Topology of GV Orbit Control. The swapping of a GVOP device for a replacement one is not supported.

---


### To Configure Device Information in GV Orbit Client

The following device parameter values are pushed from GV Orbit Control Client to GV Orbit Control. As a result, in GV Orbit, these parameters are read only. The IP Friendly Name service persists this data in the GV Orbit Server. For more information, see [About Automatic Sources or Destinations](#), on page 83 and [Device Properties Definitions](#), on page 69.

GV Orbit Control Device Property (read only)	GV Orbit Client Parameter	Comment	See
Name	Device Name	This is the device's <i>Friendly Name</i> . If no friendly name has been set, the device type (product's model number) is shown.	To Configure Device Information in GV Orbit Client, on page 51
Network Host Name	Host Name		
Description	Description	This is also the <i>Friendly Name</i> value. If the <b>Description</b> value is set in GV Orbit Client, then this value is used as the description in GV Orbit Control. Otherwise, if no friendly description has been set in GV Orbit Client, the device's product model number is shown.	
Short Name	Short Name	If a friendly short name is set in the GV Orbit Client, then this is the value set as the short name in GV Orbit Control. If no friendly short name is set, then the value for this GV Orbit Control will be derived from the Name parameter.	—
Source and Destination For example, found in the <b>Sources / Destinations</b> tab of the <b>Multilevel Table</b> in the <b>Logical Device Table</b> . See <a href="#">Logical Device Table Tasks</a> , on page 78.	The Logical Source / Destination gets its name as follows: <ul style="list-style-type: none"> <li>The spigot port name (if this value has been set in GV Orbit Client), OR</li> <li>The device's short name plus "." plus spigot number.</li> </ul>	When the <b>Automatic Sources and Destinations</b> property is set for a GVOP device (this is the default setting, see <a href="#">GVOP Devices</a> , on page 46), the name of the spigot's source or destination set in GV Orbit Client is applied, when the topology is activated (see <a href="#">Activating a Topology</a> , on page 72).	To Configure Source and Destination Information in GV Orbit Client, on page 52

Proceed as follows.

- 1 In GV Orbit Client, open the **Devices** tab.

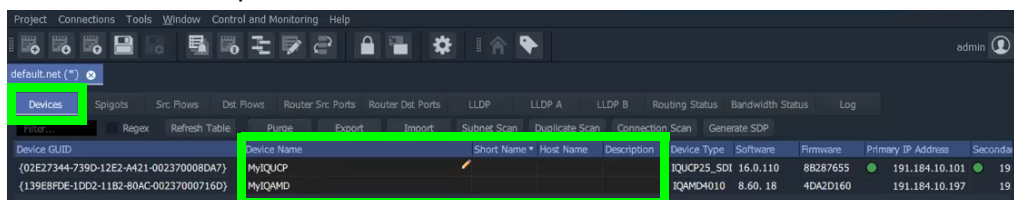

- 2 Identify the device you want to configure.
- 3 Set the **Device Name**, **Short Name**, **Host name**, and **Description** parameters for the device.

This information is immediately updated for the same device in GV Orbit Control.


### To Configure Source and Destination Information in GV Orbit Client

The following source and destination spigot parameter values are pushed from GV Orbit Client to GV Orbit Control. As a result, in GV Orbit Control, these parameters are read only. The IP Friendly Name service persists this data in the GV Orbit Server. For more information, see [About Automatic Sources or Destinations](#), on page 83 and [Device Properties Definitions](#), on page 69.

GV Orbit Control Spigot Property (read only)	GV Orbit Client Parameter	Comment	See
Name	Port Name	The name or identifier for this input or output port. The Port Name in GV Orbit Client is used as the label to generate sources and destinations. If no value is specified in GV Orbit Client, GV Orbit Control will use a combination of device name plus spigot number for the sources and destinations.	
Short name	Short Name	This is the spigot name commonly used in the GV Orbit Control interface.	
Port Number	Port Number	Uniquely identifies any source or destination across all devices. A source and a destination can have the same port number. However, two sources / destinations cannot have the same port number.	

These values can be assigned automatically; see [To Automatically Assign Port Numbers, Short Names, and Port names in GV Orbit Client](#), on page 53. Proceed as follows.

- 1 In GV Orbit Client, open the **Devices** tab.
- 2 Select the device you want to configure.
- 3 Select the **Spigots** tab.

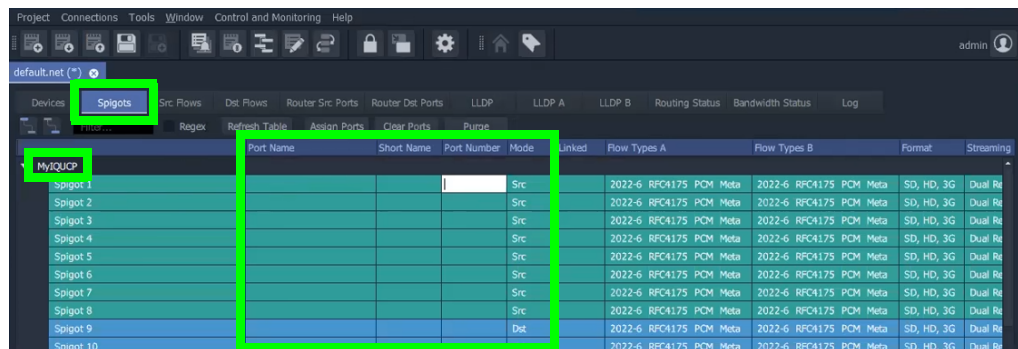


- 4 Identify the device's source (**Src**) and destination (**Dst**) spigots in **Mode**. This reflects the device's current configuration.
- 5 Set the **Port Number**, **Short Name**, and **Port Name** parameter for the spigot. Enter the **Port Number** FIRST before entering other values. If you try to set a **Short Name** or **Port Name** parameter for a spigot that doesn't have a **Port Number**, then the value you enter is not saved.



This information is immediately updated for the same device in GV Orbit Control.

**To Automatically Assign Port Numbers, Short Names, and Port names in GV Orbit Client**

- 1 Select the **Spigots** tab.

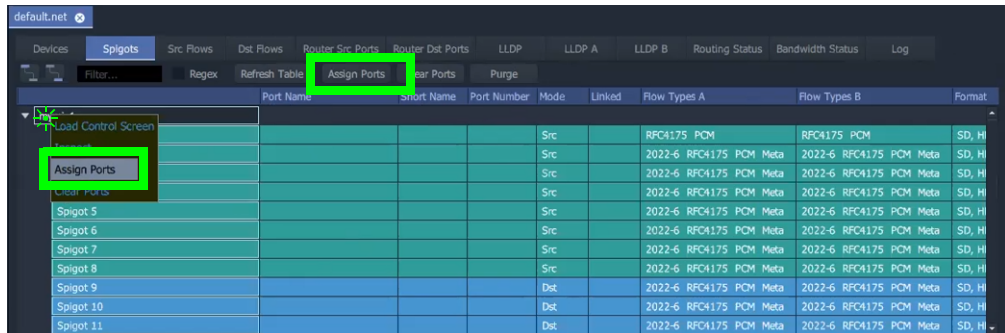

- 2 Right-click the device's name and select **Assign Ports**. Or click **Assign Ports** above the table to assign ports to all devices.
- 3 Set the following parameters in the **Assign Port Mappings** screen.



Parameter	Description
Spigot Selection	Select the scope of this screen. <b>Sources and Destinations:</b> Apply automatic assignment changes to both sources and destinations. <b>Sources:</b> Apply automatic assignment changes to sources only. <b>Destinations:</b> Apply automatic assignment changes to destinations only.

Parameter	Description
Source Ports / Base port number	This tool uses a counter to assign a number to a port. This setting allows you to individually set the starting number for the first source and destination port from which the count will start.
Destination Ports / Base port number	
Assignment Mode	Select the way port numbers are assigned: <b>Synchronize source and dest assignments in discrete blocks:</b> Assign port numbers such that the next highest available number is used to start numbering the first source and destination ports together in unison. <b>Ad hoc - use next free source or destination port:</b> Separately assign port numbers, individually to sources and destinations, in sequence such that the next available port number is always used.
Options	Automatically generate the parameter values for port and short names. <b>Create default port names:</b> Set to automatically generate the value in the <b>Port Name</b> column as follows: [device name] + [S = source, D = destination] + [Port Number] <b>Create default short names:</b> Set to automatically generate the value in the <b>Short Name</b> column as follows: [Port Number] + [S = source, D = destination] + [Port Number]

4 Click **OK**.

This information is immediately updated for the same device in GV Orbit Control.

**To migrate GVOP Devices for IP routing**

As of GV Orbit Control Client version 2.8.0 or higher:

- GVOP devices newly added to a Topology will no longer need to be connected to Camera and Monitor devices and the logical sources/destinations will be automatically created when: the device is added to the topology, the topology is activated, and the status of the device's control port is Online.
- The spigots of these devices can be re-named in GV Orbit Client. See [Synchronization of Discovered GVOP Devices, Source, Destination, and Spigot Names made in GV Orbit Client](#), on page 49.

GVOP devices configured in GV Orbit Control Client version 2.7.X or earlier are not automatically updated to use this new routing method when a project is migrated to GV Orbit Control Client version 2.8.0 or higher. If you want to use the new behavior available to GV Orbit Control Client version 2.8.0 or higher, then you must manually migrate the devices.

To migrate GVOP for IP routing, choose one of the following methods.

- Delete The Camera and Monitor linked to the GVOP device and then set the **Automatic Sources and Destinations** parameter in the device's properties. See [Device Properties Definitions](#), on page 69.
- Delete the GVOP device, the associated Camera and Monitor devices and then add only the GVOP device back to the Topology.

### Troubleshooting

Verify that the IP Friendly Name service is running; if:

- A device's friendly name disappears from the GV Orbit Client.
- The device Name, Short Name and Network Host Name show the device's primary IP address.

Ensure the IP Friendly Name service is installed and running on the GV Orbit Server. Refer to [Application Maintenance](#) in the GV Orbit Admin Guide. See [Related Documentation](#), on page 7.


## Using Quick Config


Quick Config is used to make bulk configuration changes to the selected devices. See [How to Identify if a Device Bubble is Selected or Not](#), on page 41. It can:

- Change a device's logical level.
- Expose or un-expose the device's streams.

Switches allow the changes to apply only to IP streams, SDI streams, inputs, or outputs. For example, Quick Config can be used multiple times: the first time to set the logical level for the device's inputs, and then a second time to set another logical level for the device's outputs.

### To set the Quick Config options for the selected devices

- 1 Select the devices on the Topology you want to configure.
- 2 Click  in the Topology Configurator's toolbar.

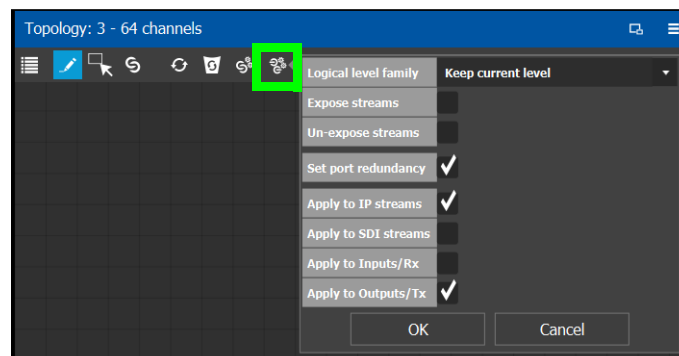

3 Set the following options.

Parameter	Description
Logical level family	Select the logical level to assign to the device's source and destination streams. See also <a href="#">Duplicating a Logical Level</a> , on page 33. <b>Keep current level:</b> leaves the device's currently-assigned source and destination logical levels untouched.
Expose streams	Only certain devices support this property. When Expose Stream is set, it displays the streams for this device in the Logical Device Table. See <a href="#">Logical Device Table Tasks</a> , on page 78.
un-expose streams	
Set port redundancy	Certain third-party devices that support port redundancy are not automatically recognized by GV Orbit Control to support redundancy. When devices have been configured with two or more ports, set this option to make the ports redundant in GV Orbit Control. See <a href="#">Setting Port Redundancy for Many Devices at Once</a> , on page 56.
Apply to IP streams	Set to apply the above settings to IP network connections between devices.
Apply to SDI	Set to apply the above settings to SDI connections between devices.
Apply to Inputs/Rx	Set to apply the above settings to device destinations.
Apply to Outputs/Tx	Set to apply the above settings to device sources.

4 Click **OK**.

### Setting Port Redundancy for Many Devices at Once

Redundancy associates a port with another port to create a redundant network traffic flow path for failover protection. The associated port will not be available to carry other traffic. For example, this is a requirement of a SMPTE ST 2022-7 network topology. See also [Configuring Network Switch Redundancy to Support SMPTE ST 2022-7](#), on page 229.

---


**Note:** This feature is to only be used with third-party devices.

---

Certain third-party devices that support port redundancy are not automatically recognized by GV Orbit Control to support redundancy. For such devices, once they have been configured with two or more input / output connectors, use the **Set port redundancy** option in **Quick Config** (see [Using Quick Config](#), on page 55) to make the ports redundant in GV Orbit Control. When completed, the **Redundancy Port** parameter in the **Device Properties** for *in / out 1* is *in / out 2* and the **Redundancy Port** parameter for *in / out 2* is *in / out 1*. If there are 4 ports, then the **Redundancy Port** parameter for *in / out 3* is *in / out 4* and the **Redundancy Port** parameter for *in / out 4* is *in / out 3* and so on.

For more information about **Device Properties**, see [Defining Device Properties](#), on page 66.

Use other **Quick Config** options to focus the redundancy on the required ports and port direction. For example, to make the selected device's output IP streams redundant, set the Quick Config as shown below.

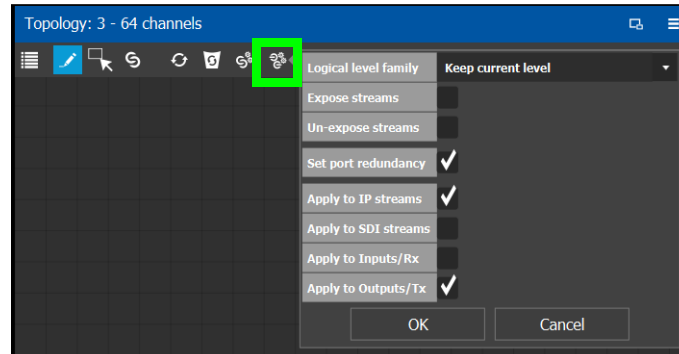


Once these devices have been configured, use the Stream Configurator to set the IP address for a large number of devices in an efficient way. See [Stream Configurator Tasks](#), on page 153.

#### Example of how to set port redundancy for many devices at once

This procedure is an example for the following scenario:

- 100 IP analog-to-digital audio devices have been connected to the network switches with redundant connections.
- Each audio device supplies IP outputs for 16 channels of AES67 audio.

This example makes the IP output connections 1 and 2 redundant for each audio device in a device group of 100 generic IP Devices.

- 1 Open the Topology Configurator. See [Accessing the Topology Configurator](#), on page 39.
- 2 From the Device Library, drag an **IP Device** onto the Topology Configurator. See [To add a Virtual Device to a topology](#), on page 44.
- 3 Select the **IP Device**. See [How to Identify if a Device Bubble is Selected or Not](#), on page 41.
- 4 Set the device group's properties as follows (see [Defining Device Properties](#), on page 66 and [Device Properties Definitions](#), on page 69):
  - Set the number of output connections in **# Output Connections** to **2**.
  - Set the logical levels for the device in **Logical Level** to **AES67-16**.
  - For a SMPTE ST 2110 device with three output streams, set the number of streams in **# Streams Per Output** to **3**.
    - Set the logical levels for each of these streams to video, audio, and ancillary found under the individual stream properties.
    - Set the IP address for each stream (video, audio, and ancillary) found under the individual stream properties.
- 5 Set the number of **IP Device** instances to 100 and set a name for the devices. See [To name a device and set the number of devices in the group](#), on page 45.
- 6 Click  in the Topology Configurator's toolbar while the device group is selected. See [To set the Quick Config options for the selected devices](#), on page 55.

7 Set the following Quick Config options:

- Set port redundancy
- Apply to IP streams
- Apply to outputs / Tx

8 Click **OK**.

When complete, the **Redundancy Port** parameter in the **Device Properties** for *out 1* is *out 2* and the **Redundancy Port** parameter for *out 2* is *out 1* for all device instances. The IP address for these devices can be efficiently set with the Stream Configurator. See [Stream Configurator Tasks](#), on page 153.

## Methods to Link Devices in a Topology

Once two or more devices have been added to the Topology Configurator (see [Adding Devices to a Topology](#), on page 44), devices can be linked together using the following methods. Using one method does not prevent you from using another method in the future.

Linking Method	Description	See Procedure
Quick Connect	Automatically connects all unconnected ports of devices currently in the Topology Configurator. Quick Connect options can limit automatic connections by stream, source, or destination type.	<a href="#">Using Quick Connect to Link all Devices in a Topology</a> , on page 58.
Manual Linking	Create the links between devices manually. Manual linking allows precise control over link parameters. You must also set the link's physical connection parameters (sources and destinations) for each link.	<ol style="list-style-type: none"> <li>1 <a href="#">Manually Linking the Devices in a Topology</a>, on page 60.</li> <li>2 <a href="#">Manually Setting the Link's Physical Connection Parameters (Sources and Destinations)</a>, on page 62.</li> </ol>

### Using Quick Connect to Link all Devices in a Topology

Quick Connect automatically connects all unconnected ports of:

- All devices currently in the Topology Configurator when no devices are selected.
- The currently selected devices in the Topology Configurator.

See [How to Identify if a Device Bubble is Selected or Not](#), on page 41.

When necessary, it reads the device's configuration to learn:

- Which ports / spigots have been configured as sources or destinations.
- The available IP ports, including control and management ports.

If a NMOS node has been added to the topology and has been configured and is working (see [Adding NMOS Devices to a Topology](#), on page 208), Quick Connect will connect the NMOS node's management ports.

 
Quick connect also automatically connects the link's physical connection parameters (sources and destinations) for each link.

Once more devices have been added to the topology, or if a link has been cut, Quick Connect can be run again to automatically connect those devices. Quick Connect will ignore pre-existing connections between devices.

Quick Connect has an option to automatically create sources and destinations for SDI inputs and outputs. SDI inputs are connected to Camera device groups, and outputs are connected to Monitor device groups. As a result, these SDI Camera and Monitor devices become available in the Logical Device Table as the device's inputs and outputs. See [Logical Device Table Tasks](#), on page 78.

However, as of GV Orbit Control Client version 2.8.0 or higher, for devices that use GVOP (see [GVOP Devices](#), on page 46), the sources and destinations of such a device newly added to a Topology will no longer be connected to Camera and Monitor devices by Quick Connect. The sources and destinations of the GVOP device become immediately available in the Logical Device Table when it is added to the Topology and the topology is activated. See [Synchronization of Discovered GVOP Devices, Source, Destination, and Spigot Names made in GV Orbit Client](#), on page 49 for more information.

Quick Connect is found in the Topology Configurator's toolbar.




**PREREQUISITES:** The following must have been configured:

- If the system requires physical IP connections to be made, make sure you have at least one network switch device in your topology. If your network uses a second network switch to support redundancy (for example, to support SMPTE ST 2022-7), then you must have at least two network switch devices in your topology. See also [Configuring Network Switch Redundancy to Support SMPTE ST 2022-7](#), on page 229.
- Ensure that core devices such as those listed in [Special Device Configuration Tasks](#), on page 161 have been added to the topology using drag-and-drop from the Virtual or Discovered devices libraries and have been configured before using this tool. For example, GV Nodes, IPG-X901, IQMix / IQUCP25 cards, Audio Live, and Routers. See [Special Device Configuration Tasks](#), on page 161 for specific configuration information about these devices.
- Add the remaining devices to the topology. See [Adding Devices to a Topology](#), on page 44.
- The topology must be currently:
  - Activated (see [Activating a Topology](#), on page 72).
  - Unlocked (see [Unlocking / Relocking a Topology](#), on page 75).
- All devices must be currently online. That is, no device should be shown in red in the System Status. See [System Status Task](#), on page 269.
- The required logical levels have been created. See [Accessing the Logical Level Editor](#), on page 30.

### Using Quick Connect

Set the Quick Connect options before using Quick Connect. See [Using Quick Config](#), on page 55.

- 1 Click  in the Topology Configurator's toolbar.

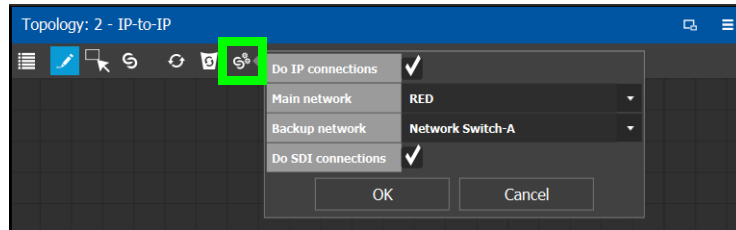

- 2 Set the following options.

Parameter	Description
Do IP connections	Set to automatically create IP network connections between devices.
Main network	Select the name of the primary switch in your network.
Backup network	If your network uses two network switches to support redundancy (for example, to support SMPTE ST 2022-7), then select the name of the secondary switch in your network. See also <a href="#">Configuring Network Switch Redundancy to Support SMPTE ST 2022-7</a> , on page 229.
Do SDI connections	Set to automatically create SDI connections between devices. As of GV Orbit Control Client version 2.8.0 or higher, this option no longer applies to devices that use GVOP (see <a href="#">GVOP Devices</a> , on page 46). See <a href="#">Synchronization of Discovered GVOP Devices, Source, Destination, and Spigot Names made in GV Orbit Client</a> , on page 49 for more information. Topologies created in a previous GV Orbit Control version will not be changed to reflect this new behavior, unless the device is added again to the Topology.

- 3 Click **OK**.

## Manually Linking the Devices in a Topology

Once the device groups are added to the Topology, the next step is to create links between them using the Link mode which allows you to link bubbles with a touch-based device. Otherwise, if you are using a mouse and keyboard interface, you can link devices together using the following procedure while in the Edit mode as well.


### To link devices or device groups in a topology

Open the required topology.

- 1 Select the required Area. See [Selecting an Area](#), on page 23.




- 2 Select the required topology. See [Selecting a Graph](#), on page 24.

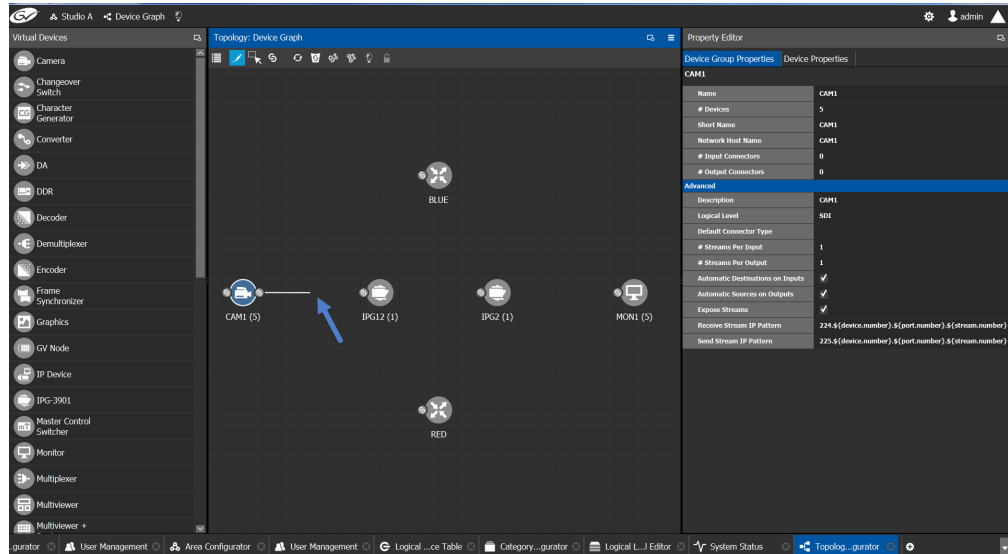

- 3 Click the **Link** button at the top of the interface.
- 4 Select the first bubble in the pair you want to connect.  
When the bubble is selected, the device is highlighted in blue and both the bubble's input and outputs ports become available. Input ports are on the left side of the bubble. Output ports are on the right side of the bubble.
- 5 Select an input or output port on the bubble.  
If the input port was selected, the output ports of all the available devices appear. If the output port was selected, the input ports of all the available devices appear.
- 6 Draw a line, with your mouse, between the ports of the two devices to make the connection between them. Or if you are using a touch-based device, the Link mode allows you to link bubbles together by dragging a bubble over others so that the connectors touch each other and then pull them apart to their final position.

## Manually Setting the Link's Physical Connection Parameters (Sources and Destinations)

When a link is selected, the **Physical Connection Table** appears. It is in this table where you create the connections between device ports. When you add devices to a Topology and you then link two devices, you are indicating that the two devices in two groups are virtually connected. Therefore, you need a place to specify how these devices are actually (physically) connected. This is achieved through the Physical Connections Table. It is in this table where you will actually specify that port1 of device1 that is part of group1 is connected physically with port1 of device1 of group2, for example.

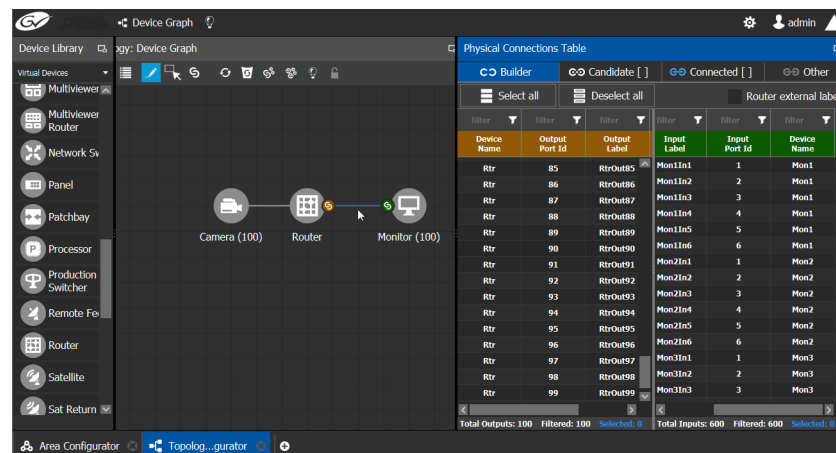

To make a connection, you must start in the Builder tab, and then complete the action in the Candidate tab.

The **Physical Connection Table** uses connection icons as follows.

Icon	State (status)	Action
	The stream is ready to be connected as it has been selected in the Builder tab.	—
	The stream is connected.	Connect: make the connection between the source and destination devices.
	—	Disconnect: break the connection between the source and destination devices.


The **Physical Connection Table** uses port type icons as follows. A source's output port type must be linked to the same input port type at the destination.

Port Type Icon	Description
	The connection type is SDI.
	The connection type is IP.
	The connection type is MADI.

In the **Physical Connection Table**, more than one table row can be selected at a time; to add to a selection, use *Shift* or *Ctrl* to select a range of table rows or to add another row to the selection.

### Builder Tab

The Builder tab shows all the outputs and the inputs available for connections. The output streams are shown on the left and the inputs are shown on the right for the selected link. By selecting streams in the Builder tab makes them available in the Candidate tab where they are then linked. For extra information about an input or output, set **Router external labels**. The Router external labels are only available for router ports and not all device ports.

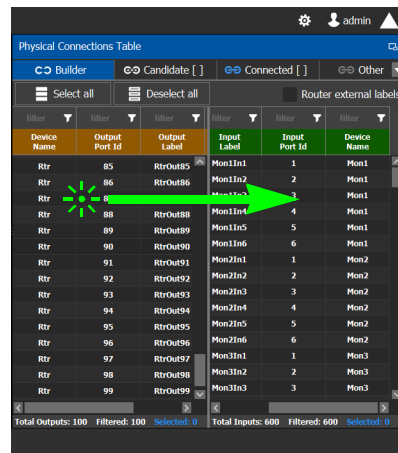


### To associate a device's output stream to another device's input

- 1 Select one or more source output stream table rows that you want to link to destination's input.
- 2 Drag the source output stream table rows onto the destination input(s).  
The selected items become available in the Candidate tab.

You can bypass the Candidate tab as follows: you select all your destination, and all your sources and then with your right mouse button held down you drag the destinations over the sources. With this method, the only way to review your connections is by going into the Connected tab and disconnecting the wrong/unwanted ones.

## Candidate Tab

Once a device's output stream has been associated to another device's input in the Builder tab, you can review these associations to then select the ones you want to link together.

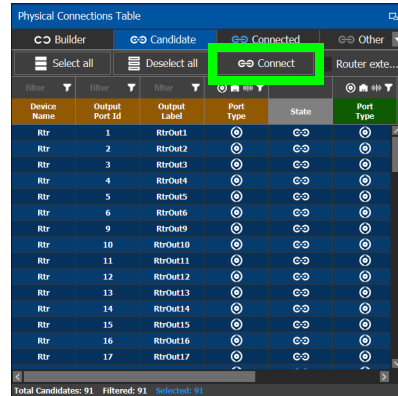


### To link a device's output stream to another device's input

- 1 Select one or more table rows that you want to link the source's output stream to the destination's input.
- 2 When satisfied with your selection, click Connect at the top of the table.

## Connected Tab

This tab shows the currently linked streams between the source's output and the destination's input. Links can be disconnected in this tab.

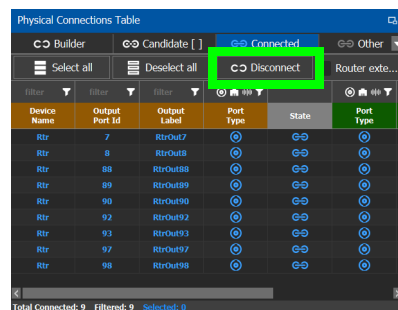

### To disconnect a device's output stream from another device's input

- 1 Select one or more table rows that you want to disconnect the source's output stream to the destination's input.
- 2 When satisfied with your selection, click Disconnect at the top of the table.

## Other Tab


This tab will show you all the other connections that a device's ports has on another links. For example, you have device1 with 20 ports, 10 are connected to device2 and 10 to device3. You select the first link and you connect the 10 ports. You select the second link on the Other tab you will see the first 10 ports that you connected.

## Deleting the Connection Between Device Groups

To delete the connection between devices

Open the required topology.

- 1 Select the required Area. See [Selecting an Area](#), on page 23.
- 2 Select the required topology. See [Adding Devices to a Topology](#), on page 44.

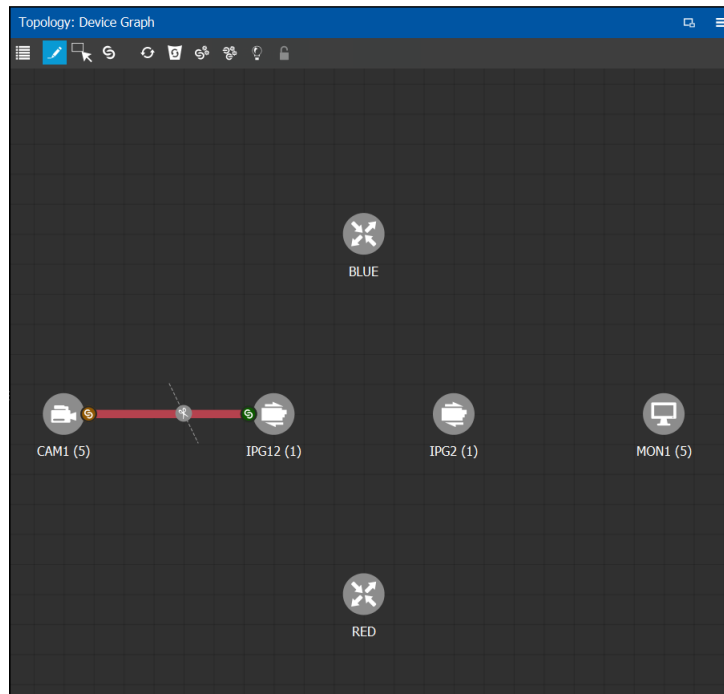

- 3 Select the **Link** button at the top of the interface.
- 4 Draw a line across the connection.  
The scissor icon appears on the line and the link turns red.
- 5 Release the mouse.  
The connection link is removed.


## Defining Device Properties

You set the parameters for the selected device in the **Property Editor**.


- The configuration parameters for most devices is intuitive and no further explanation is required. See [Device Properties Definitions](#), on page 69 for a primer.
- The configuration of certain devices requires advanced knowledge; see [Special Device Configuration Tasks](#), on page 161 for more information about these devices.

### Inheritance of Property Values from the Device Group Properties Tab

Certain parameter values in the **Device Properties** tab inherit their values from the corresponding parameter values in the **Device Group Properties** tab. This allows you to configure common parameters for a large number of devices at once with a default value.

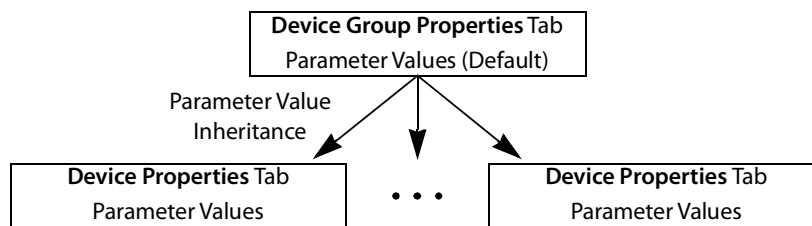

When you change the value of a parameter in the **Device Properties** tab such that it is now different from the corresponding value set in the **Device Group Properties** tab, the parameter will be displayed with an orange background. This is shown below.

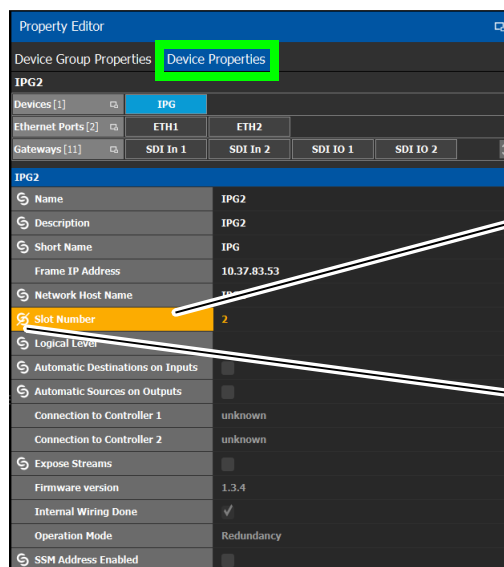


The parameter's value is a non-default value (indicated by the orange highlight)

Click to reset the parameter's value back to the default value set in the **Device Group Properties**

### To define properties for a device


- 1 Open the required topology. See [Selecting a Graph](#), on page 24.
- 2 Select the device you want to configure.

The **Property Editor** is displayed on the right.

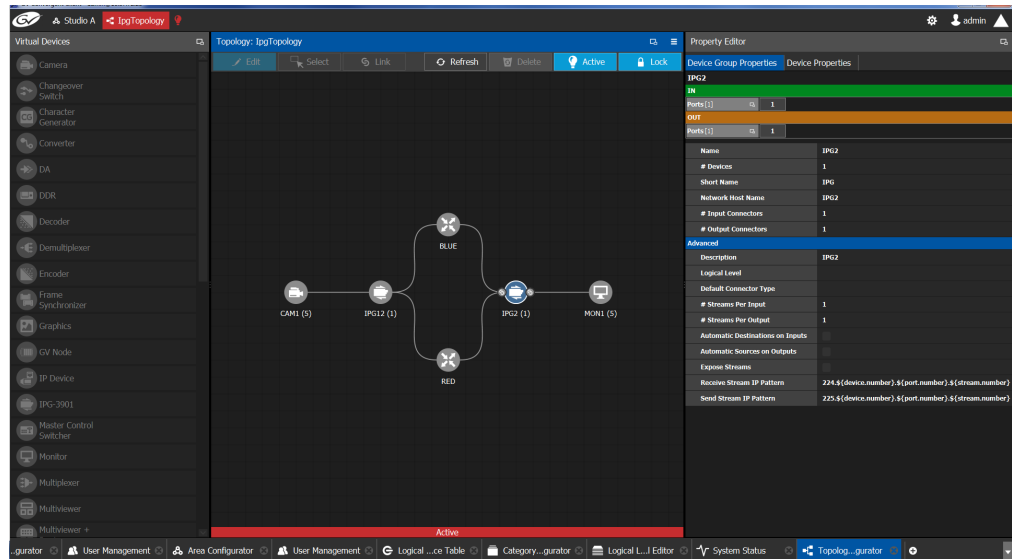

In this case, the IPG2 bubble is selected and the Device Group Properties tab is selected in the **Property Editor**.

- 3 Select the **Device Properties** tab to view the properties for the individual device. See also [Description of Common Device Properties](#), on page 162.

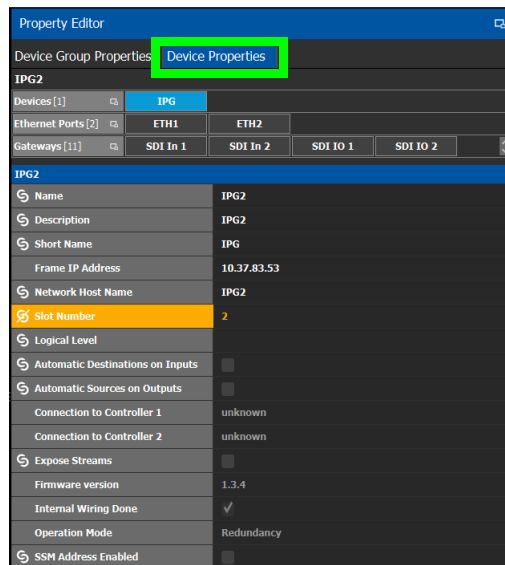

For example, for the Cameras, there is a **Device Group Properties** tab for the camera group and a **Device Properties** tab for each of the five cameras.

### Camera Device Group Properties

The **Device Group Properties** tab sets the default parameter values to be passed down to each individual device in the **Device Properties** tab to save time. These default values can be overridden in the at the device level in the **Device Properties** tab.

The screenshot shows the 'Property Editor' window with the 'Device Group Properties' tab selected. The device group is 'CAM1'. The 'OUT' section shows 'Ports [1]' with a value of 1. The main properties table is as follows:

Device Group Properties	
Name	CAM1
# Devices	5
Short Name	CAM1-
Network Host Name	CAM1
# Input Connectors	0
# Output Connectors	1
Advanced	
Description	CAM1
Logical Level	SDI-HD
Default Connector Type	
# Streams Per Input	1
# Streams Per Output	1
Automatic Destinations on Inputs	<input checked="" type="checkbox"/>
Automatic Sources on Outputs	<input checked="" type="checkbox"/>
Expose Streams	<input checked="" type="checkbox"/>
Receive Stream IP Pattern	224.\${device.number}.\${port.number}.\${stream.number}
Send Stream IP Pattern	225.\${device.number}.\${port.number}.\${stream.number}

### Camera Device Properties

The screenshot shows the 'Property Editor' window with the 'Device Properties' tab selected. The device group is 'CAM1' and the selected device is 'CAM1-1'. The 'Devices [5]' section shows buttons for CAM1-1, CAM1-2, CAM1-3, CAM1-4, and CAM1-5. The 'OUT' section shows 'Ports [1]' with a value of 1. The main properties table for the selected device is as follows:


Device Properties	
Devices [5]: CAM1-1, CAM1-2, CAM1-3, CAM1-4, CAM1-5	
Control Ports [0]: +	
OUT: Ports [1] = 1	
CAM1 1	
Name	CAM1 1
Description	CAM1 1
Short Name	CAM1-1
Network Host Name	CAM1-1
Logical Level	SDI-HD
# Input Connectors	0
# Output Connectors	1
Default Connector Type	
# Streams Per Input	1
# Streams Per Output	1
Automatic Destinations on Inputs	<input checked="" type="checkbox"/>
Automatic Sources on Outputs	<input checked="" type="checkbox"/>
Expose Streams	<input checked="" type="checkbox"/>

**Note:** All devices, device groups, and connections have properties.



## Device Properties Definitions

This is a non-exhaustive overview of the device properties parameters.

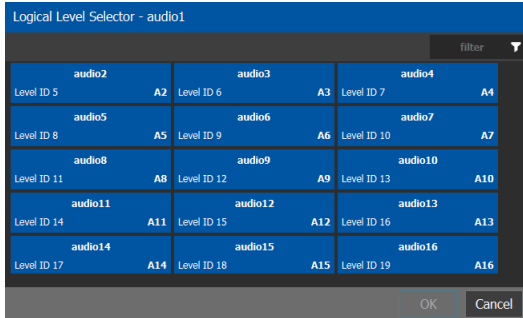Parameter	Description
Name <sup>a</sup>	The name or identifier for this device instance. The name or identifier for this input or output port. For devices that use GVOP to configure them, see <a href="#">Synchronization of Discovered GVOP Devices, Source, Destination, and Spigot Names made in GV Orbit Client</a> , on page 49.
Description <sup>a</sup>	An optional description for the related input, output, or device. For devices that use GVOP to configure them, see <a href="#">Synchronization of Discovered GVOP Devices, Source, Destination, and Spigot Names made in GV Orbit Client</a> , on page 49.
Short Name <sup>a</sup>	The nickname by which the input, output, or device is referred to everywhere in the system. For devices that use GVOP to configure them, see <a href="#">Synchronization of Discovered GVOP Devices, Source, Destination, and Spigot Names made in GV Orbit Client</a> , on page 49.
# Devices	The number of device instances in this device group.
Network Host Name <sup>a</sup>	The hostname is the unique name by which the device is known on the network. For devices that use GVOP to configure them, see <a href="#">Synchronization of Discovered GVOP Devices, Source, Destination, and Spigot Names made in GV Orbit Client</a> , on page 49.
Logical Level	<p>The logical level for this input or output. Click to change the logical level through the Logical Level Selector.</p>  <p>Select a logical level and click <b>OK</b> to change the level. For more information about logical levels, to create, or modify logical levels, see <a href="#">Logical Level Editor Tasks</a>, on page 30.</p>
# Input Connectors	The number of physical input port connections made to the device.
# Output Connectors	The number of physical output port connections made to the device.
# Streams Per Input	The typical number of streams available on each physical input connection.
# Streams Per Output	The typical number of streams available on each physical output connection.
# Streams	The actual number of streams available on the selected physical input / output connection.

Parameter	Description
Port Identifier	This is the generic identifier of the port within GV Orbit Control.
IP Address	The port's IP Address.
Automatic Sources and Destinations	<p>This parameter is for GVOP devices (see <a href="#">GVOP Devices</a>, on page 46) only: set to automatically use the names and the flow type configured for sources and destinations for this same device in GV Orbit Client in real time when the Topology is activated (see <a href="#">Activating a Topology</a>, on page 72).</p> <p>This can be set for the device as a whole, or for individual spigots. When a GVOP device is newly added to the topology, this parameter is now set by default.</p> <p>For more information, see <a href="#">Synchronization of Discovered GVOP Devices, Source, Destination, and Spigot Names made in GV Orbit Client</a>, on page 49 and <a href="#">About Automatic Sources or Destinations</a>, on page 83.</p> <p>For topologies created prior to GV Orbit Control Client version 2.8.0 or higher, this parameter is deselected for all pre-existing GVOP devices. If you set this parameter, then connected camera / monitor groups will no longer work. See also <a href="#">To migrate GVOP Devices for IP routing</a>, on page 54.</p> <p>When deselected, the streams will be unexposed for the device. You can create custom logical sources/destinations by exposing the required streams first, using are the Stream Configurator. See <a href="#">Stream Configurator Tasks</a>, on page 153.</p>
Automatic Destination Automatic Destinations on Inputs Automatic Destinations on Outputs	Set to automatically create a destination by the system for the specified streams. See also <a href="#">About Automatic Sources or Destinations</a> , on page 83.
Automatic Source Automatic Sources on Outputs Automatic Sources on Inputs	Set to automatically create a source by the system for the specified streams. See also <a href="#">About Automatic Sources or Destinations</a> , on page 83.
Expose Streams	<p>When set, it displays the streams for this device in the Logical Device Table. See <a href="#">Logical Device Table Tasks</a>, on page 78.</p> <p>The following methods are available to set or clear this parameter at once:</p> <ul style="list-style-type: none"> <li>• Quick Config; see <a href="#">Using Quick Config</a>, on page 55.</li> <li>• The Stream Configurator; see <a href="#">Stream Configurator Tasks</a>, on page 153</li> </ul>
SSM Address Enabled	Shows if the source specific multicast address is enabled.

Parameter	Description
SDP	See <a href="#">Using SDP Parameters to Take a Stream from a non-NMOS Device to an NMOS Device</a> , on page 215.
Redundancy Port	Associates a port with another port to create a redundant network traffic flow path for failover protection. The associated port will not be available to carry other traffic. This is usually a requirement of a SMPTE ST 2022-7 network topology. See also <a href="#">Configuring Network Switch Redundancy to Support SMPTE ST 2022-7</a> , on page 229. See also <a href="#">Setting Port Redundancy for Many Devices at Once</a> , on page 56.


a. When an asterisk (\*) is shown, parameter cannot be edited in GV Orbit Control. To edit this value, it must be done GV Orbit Client. For more information about this, see [Synchronization of Discovered GVOP Devices, Source, Destination, and Spigot Names made in GV Orbit Client](#), on page 49.

## Deleting a Device From a Topology

You must open a topology in the Topology Configurator before you can delete it.

### To delete a topology

- 1 Select the Area. See [Selecting an Area](#), on page 23.
- 2 Select the topology. See [Selecting a Graph](#), on page 24.
- 3 Select the device you want to remove.  
The device is highlighted on the Topology.
- 4 Click **Delete**.

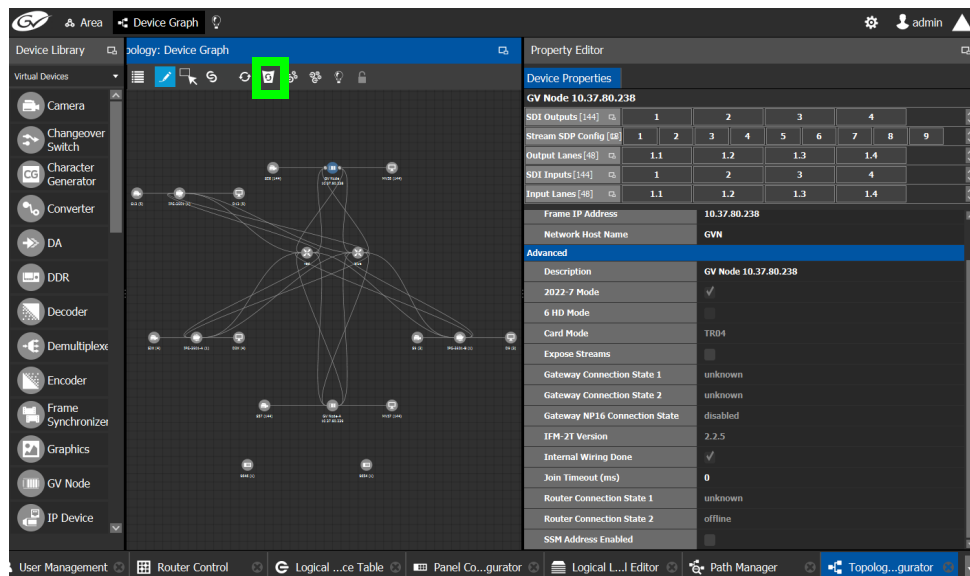

## Activating a Topology

By activating a topology makes GV Orbit Control connect to and activate all drivers to devices in the topology. For example, for a GV Node it means initiating the Densité and NP0016 connections and being able to control them. By activating a topology, panels will become active and light up.

You must select a topology and open it in the Topology Configurator before you can make it active.


---

**Note:** Only one topology can be active at a time for each area.


---

### To make a topology active

- 1 Select the required Area. See [Selecting an Area](#), on page 23.
- 2 Select the required topology. See [Selecting a Graph](#), on page 24.

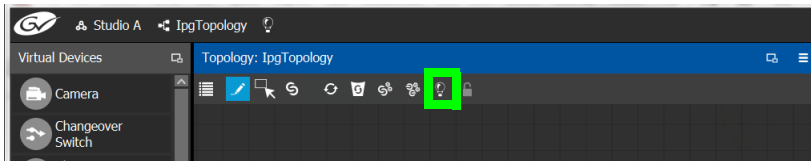


- 3 Click **Active** at the top of the Topology Configurator.  
A confirmation message appears.

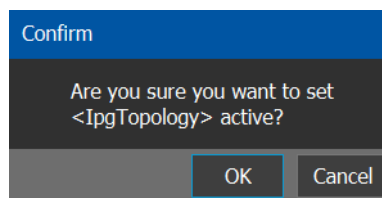


- 4 Click **OK** to continue.

The following changes occur.

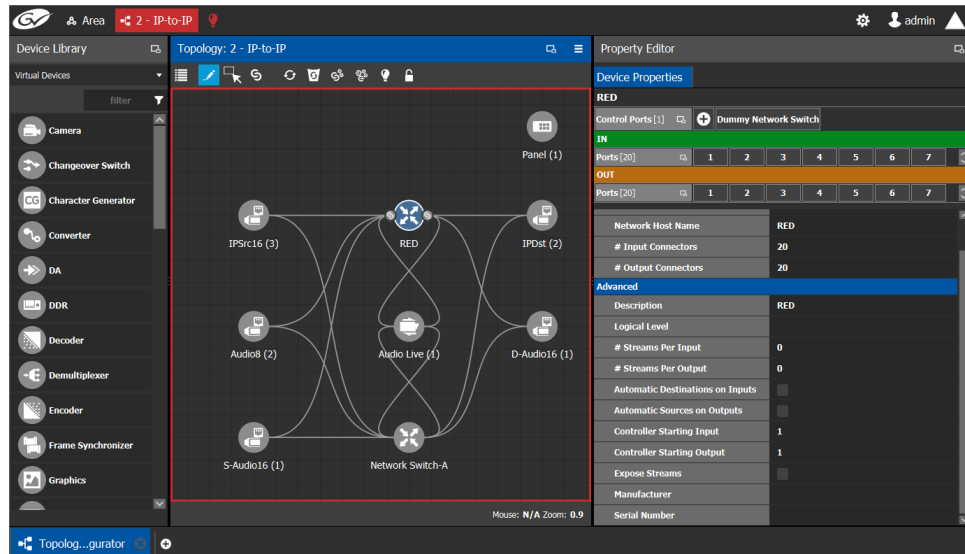

- The topology name is displayed in red at the top of the Topology Configurator.
- A red lightbulb is displayed beside the topology name.
- A red box appears around the topology.
- Active is written on the bar.
- The topology is locked.
- The red Active bar is displayed on the thumbnail for the active topology.

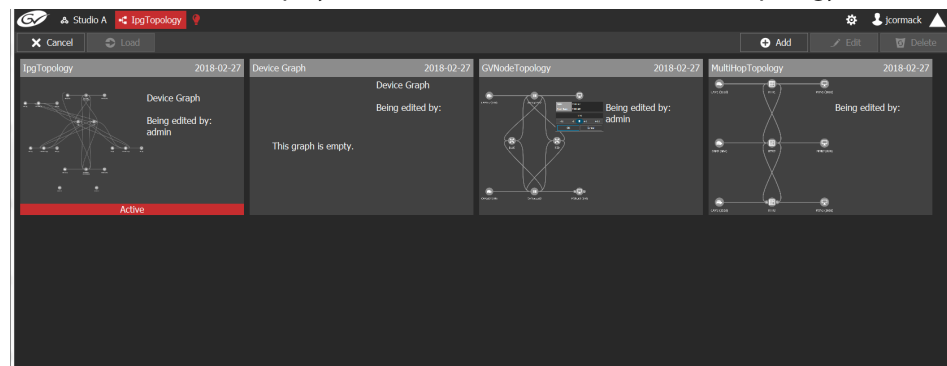


## Making an Active Topology Inactive

Only one topology can be active at a time for each area. You must open the active topology in the Topology Configurator before you can make it inactive.


### To make an active topology inactive

- 1 Select the required Area. See [Selecting an Area](#), on page 23.


- 2 Select the required topology. See [Adding Devices to a Topology](#), on page 44.

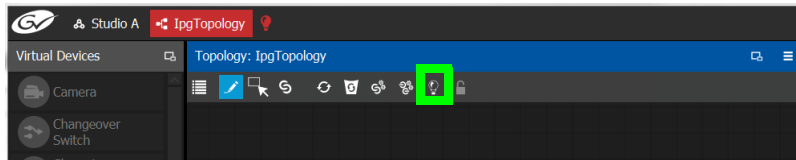

- 3 Click the **Active** button at the top of the Topology Configurator.  
A confirmation message appears.

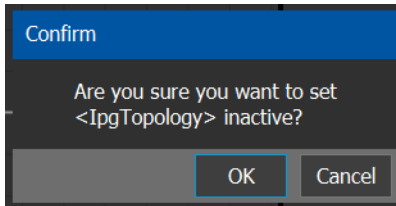

- 4 Click **OK** to continue.  
The following changes occur.

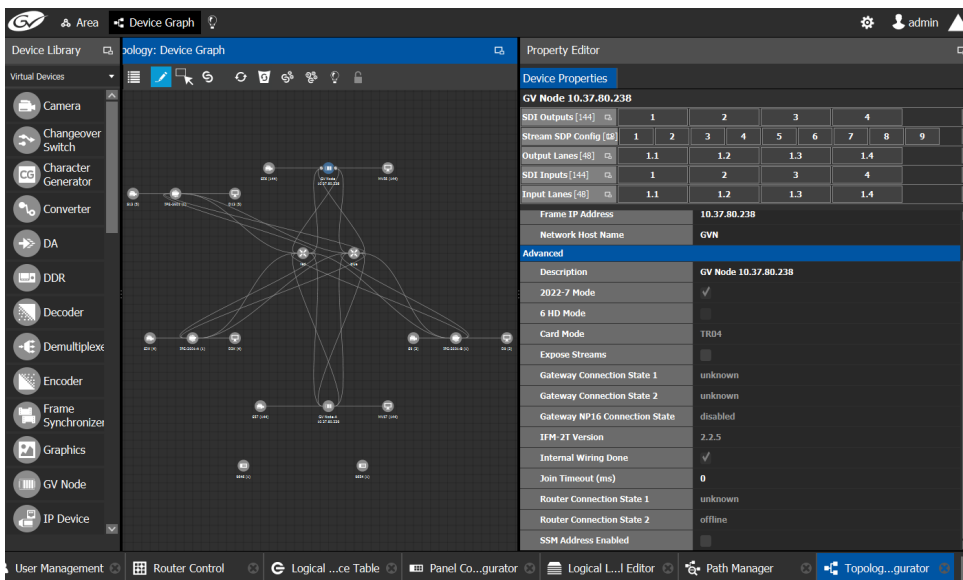

- The topology name no longer appears in red at the top of the Topology Configurator.
- The red bar no longer appears at the base of the Topology.
- The topology is unlocked.
- The red Active bar is no longer displayed on the thumbnail for the active topology in the secondary window.


## Unlocking / Relocking a Topology

A topology is locked automatically when you make it active. The lock only affects the current GV Orbit Control Client application. If multiple users have the same topology open, then each user can lock/unlock their client to do edits; this setting is not global to all open clients.


### To unlock an active topology

- 1 Select the required Area. See [Selecting an Area](#), on page 23.
- 2 Select the required topology. See [Selecting a Graph](#), on page 24.


This opens the topology in the Topology Configurator.

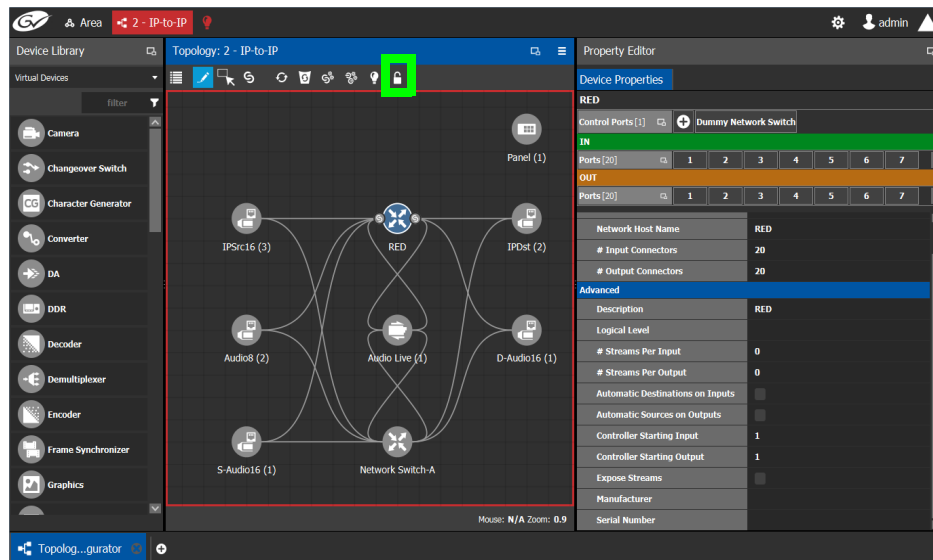

- 3 Click the **Lock** button.  
A confirmation message appears.

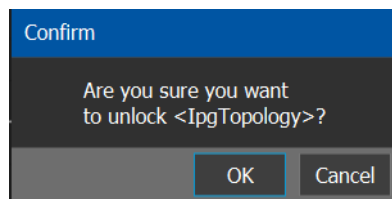

4 Click **OK** to continue.

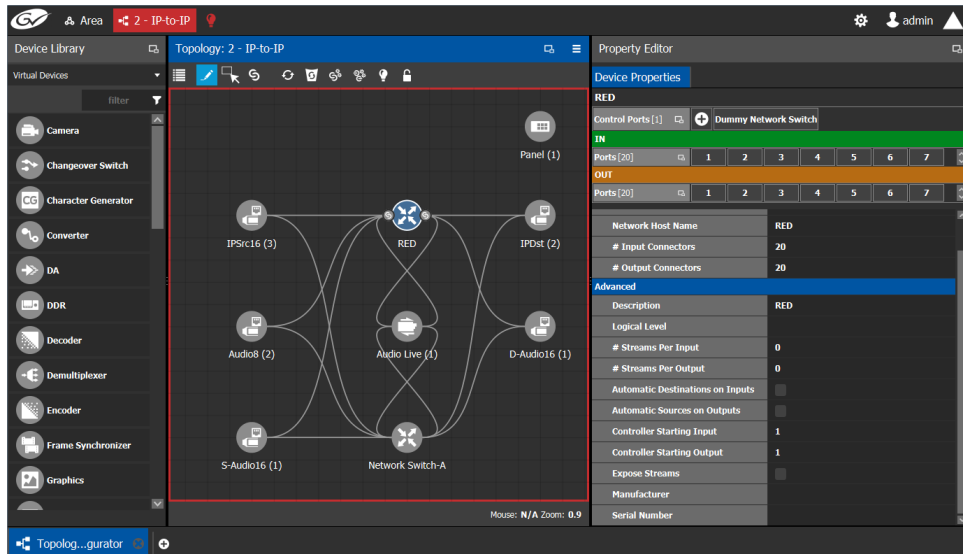

When a topology is unlocked

- The lock icon is unlocked.
- If you have Edit permissions to the Topology Configurator for the selected area, you can modify the active topology.

## Locking an Unlocked Topology

It is recommended to relock an unlocked topology, when you have finished your edits. This prevents you from inadvertently making edits on an active topology, such as selecting an object and pressing delete by accident.

---

**Note:** You can only lock an unlocked active topology. Inactive topologies cannot be locked or unlocked.


---

### To lock a unlocked active topology


- 1 Select the required Area. See [Selecting an Area](#), on page 23.
- 2 Select the required topology. See [Selecting a Graph](#), on page 24.



This opens the topology in the Topology Configurator.

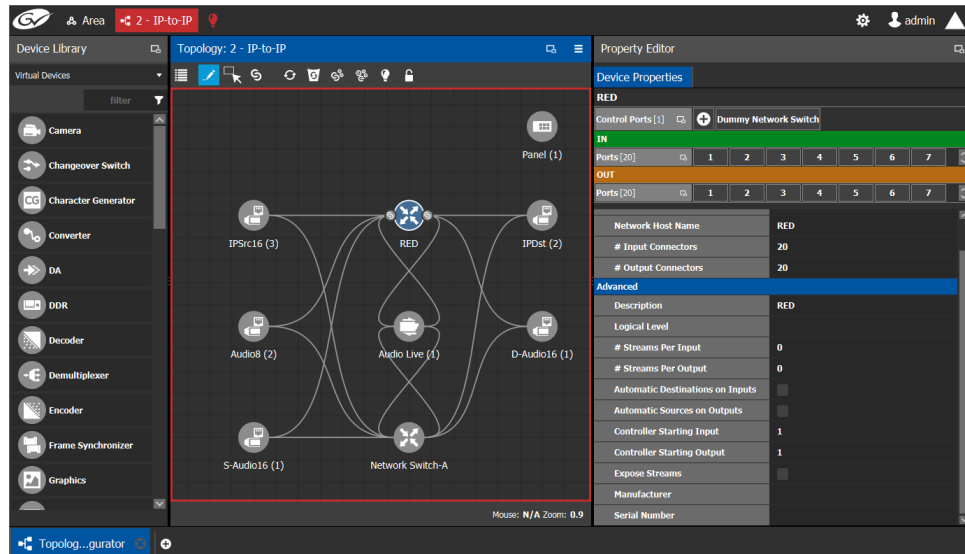

- 3 Click the unlocked Lock button at the top of the Topology Configurator.  
No confirmation message appears.

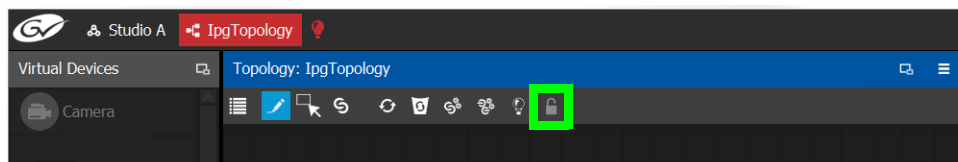

The **Lock** icon switches to the locked state.  
No one can edit the topology.

## Logical Device Table Tasks

Use the Logical Device Table task to view and configure the streams for the logical levels. Audio shuffling and breakaway can also be configured to create multiple streams with different audio channels (for example, for multi-language support).


The Logical Device Table task is also where you create virtual crosspoints (XPTs) and to configure logical destination devices that are related to these virtual XPTs. See [Configuring Virtual Crosspoints \(XPTs\)](#), on page 95.

Megasource is a logical source device that is defined with multiple streams, under multiple logical levels, that can be routed to a logical destination with at least one matching logical level. This allows the definition of a source device with multiple locations in the topology, where the destination devices' logical levels will determine which streams to route. For example, the user may connect Bars to two different routers, the destination logical level will determine which of these two source streams are to be used. This is usually the source stream that is local to the destination. Megasource also allows for UHD quad-link sources to share a single stream of 16 channel audio and ancillary data with the 4 video streams. See also [Using Megasource](#), on page 90 for more information.


## Accessing the Logical Device Table task

### To access the Logical Device Table Task

- 1 Open GV Orbit Control Client Stage. See [Navigating Back to Stage](#), on page 10.
- 2 Select an area. See [Selecting an Area](#), on page 23.
- 3 Select a topology. See [Selecting a Graph](#), on page 24.
- 4 Select **Configuration** > **Logical Device Table**.

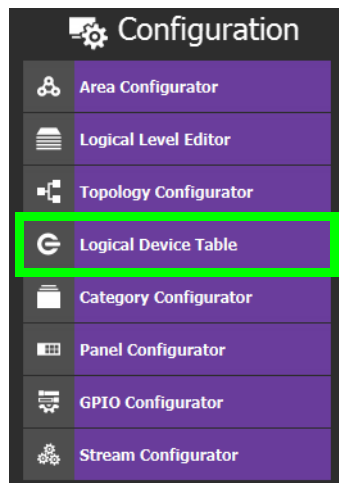

The Logical Device Table task appears.

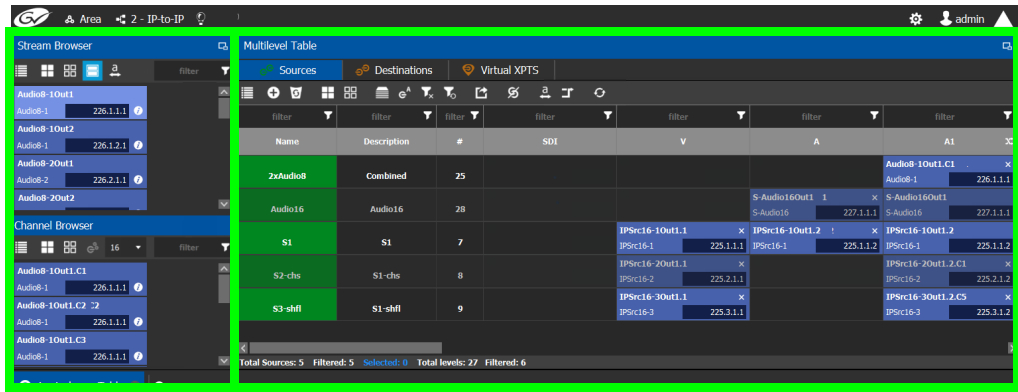

The default streams for your topology, are displayed in the left hand column under **Stream Browser**.

The following tabs are found in the right hand column under **Multilevel Table**.

Tab	Description
Sources	Show the currently configured sources. Sources are the available outputs for all the devices on your topology. See <a href="#">Adding a Source to the Logical Level Table</a> , on page 85.
Destinations	Show the currently configured destinations. Destinations are the available inputs for all the devices on your topology. See <a href="#">Adding and Configuring a Destination</a> , on page 90.
Virtual XPTS	Show the currently configured virtual crosspoints. See <a href="#">Configuring Virtual Crosspoints (XPTs)</a> , on page 95.


Items in the **Multilevel Table** may be shown as grayed out and they cannot be edited. These devices' configuration properties come from GV Orbit Client. See [Synchronization of Discovered GVOP Devices, Source, Destination, and Spigot Names made in GV Orbit Client](#), on page 49.

- 5 Select the **Sources** tab to view the streams from the sources.  
The Logical Level associated with the source are displayed. For information on the logical levels, see [Logical Level Editor Tasks](#), on page 30.
- 6 Scroll down in the **Sources** view to see all the levels for the selected source.

### Stream Browser / Channel Browser

 

The Stream Browser shows all currently available steams. When a stream has two or more channels, the Channel Browser gives you access to the individual audio channels in a stream thereby allowing you to implement audio breakaway and audio shuffle for independent audio routing. See [Creating Logical Devices with Shuffled Audio](#), on page 93.

To make use of this feature, streams will need to pass through a device that supports audio breakaway/shuffling, such as GV Node or Audio Live. See [Configuring a GV Node Device](#), on page 163 and [Configuring a Device that Supports Audio Breakaway/Shuffling such as Audio Live](#), on page 251.

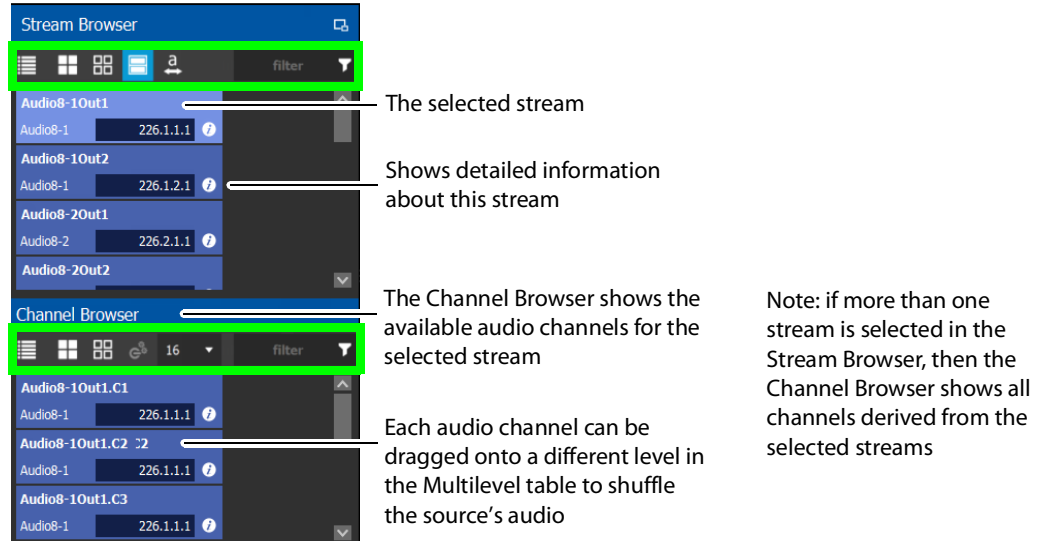





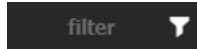







The Stream Browser and Channel Browser menu have the following menu options.



Icon	Description
	Select All
	Clear All
	Channel Browser
	Show Long Names
	Automated Sources / Destinations
Channels per Device	<p>Set how many channels are assigned per logical device when you have enabled the <b>Automated Sources</b> or <b>Automated Destinations</b> options. For example, if you select 64 streams in the channel browser, and you set <b>Channels per Device</b> to 16, and then you click the <b>Automatic Sources</b> option, it will automatically create 4 logical sources for you. The first 16 streams are assigned to A1-16 of the first source, the next 16 are assigned to A1-A16 of the second source, and so on.</p> <p>Likewise, if you select 64 streams in the channel browser, and you set <b>Channels per Device</b> to 8, and then you click the <b>Automated Sources</b> option, it will automatically create 8 logical sources for you. The first 8 streams assigned to A1-A8 of the first source, the next 8 assigned to A1-A8 of the second source, and so on.</p> <p>Similarly, if you select 64 streams, and set <b>Channels per Device</b> to 2, it will create 32 sources.</p>

Icon	Description
 Filter	Filters the list. Note that the filter operates on the currently shown list items according to the <b>Show Long Names</b> setting. See <a href="#">Filtering Lists, Table Columns, Sources, and Destinations</a> , on page 104.
 Information	Shows detailed information about the stream / channel.

## Multilevel Table Menu

The Multilevel Table menu has the following menu options.

Icon	Description
 New	Creates a new Source / Destination / Virtual XPTS in the Logical Device Table. See <a href="#">Adding a Source to the Logical Level Table</a> , on page 85, <a href="#">Adding and Configuring a Destination</a> , on page 90, and <a href="#">Configuring Virtual Crosspoints (XPTs)</a> , on page 95.
 Delete	Removes the currently-selected Source / Destination / Virtual XPTS in the Logical Device Table. See <a href="#">Deleting a Source, Destination, or Virtual XPTS</a> , on page 93.
 Select All	Selects all rows in the Multilevel table.
 Clear All	Deselects all rows in the Multilevel table.
 Levels	Shows the Logical Level Selector. This allows you to set the logical levels that are to be shown in the Multilevel Table. See <a href="#">Setting the Logical Levels to be Displayed in the Multilevel Table</a> , on page 84.
 Hide automatic sources / destinations	Shows or hides automatic sources / destinations in the Logical Device Table.
 Virtual Destinations	Shows the available destinations available from previously-configured virtual XPTS.
 Reset all filters	The columns of the Logical Device Table have filters. These buttons clear all filters and restores the previous filters.
 Reload all filters	See <a href="#">Filtering Lists, Table Columns, Sources, and Destinations</a> , on page 104.
 Export	Exports the Logical Device Table to a CSV file. See <a href="#">Exporting a Logical Device Table</a> , on page 93 or <a href="#">Selecting all Devices in the Logical Device Table for Export</a> , on page 93.
 Restore default label	When a source or destination has been renamed, this resets the name to its original label.
 Show Long Names	Toggles between the display of the long name or short name of the stream and device names.

Icon	Description
 Show Redundant Streams	For each stream in the Multilevel Table: <ul style="list-style-type: none"><li>• When a source or destination has redundant IP streams (as may be the case with an SMPTE ST 2022-7 network for example), for each stream in the Multilevel Table, this toggles between the display of the IP address for the primary stream and the display of the IP address for the secondary stream.</li><li>• When this option is selected, and the stream has a secondary IP address to be shown, the stream's secondary IP address is shown with a blue background to identify that the secondary stream's IP address is currently being shown.</li></ul> Streams that have no redundancy (no secondary IP address) are unaffected by this option.
 Refresh	Reloads the Logical Device Table's contents.

## About the Multilevel Table and GVOP Devices

When a device uses GVOP (see [GVOP Devices](#), on page 46), and the **Automatic Sources and Destinations** parameter is enabled in the device's properties (this is the default setting; see [Device Properties Definitions](#), on page 69), GV Orbit automatically creates sources and destinations for the GVOP device. When the device is online, the device's configuration is read from the GVOP device in real time and updates the sources and destinations in the Logical Device Table's Multilevel Table.

For example, if the Flow Type for a video flow is assigned to SMPTE2022 in a GVOP device, then in the Multilevel Table, this flow appears as an SDI flow for this device and the SMPTE ST 2110-20, 2110-30, and 2110-40 flows are not used. Likewise, if an SMPTE ST 2110-30 audio flow is set to None, then in the Multilevel Table, this flow is no longer applied to the audio level for the given source or destination.

In addition, if the IP Friendly Name service is running on the GV Orbit Server, the custom naming configuration for the device and its spigots<sup>1</sup> is read in real time and it updates the names and descriptions of the sources and destinations in the Logical Device Table's Multilevel Table.

See also [About Automatic Sources or Destinations](#), on page 83 and [Synchronization of Discovered GVOP Devices, Source, Destination, and Spigot Names made in GV Orbit Client](#), on page 49.

---

1. Custom naming for the device and its spigots is carried out in GV Orbit Client.

 
## About Automatic Sources or Destinations

Certain sources and destinations are created automatically by GV Orbit Control, such as edge devices: cameras, monitors, and so on. Automatic sources or destinations are created when the following properties (as applicable) have been set in the device's property editor:

- Automatic Sources and Destinations
- Automatic Destination
- Automatic Destinations on Inputs
- Automatic Destinations on Outputs
- Automatic Source
- Automatic Sources on Outputs
- Automatic Sources on Inputs

See also [Device Properties Definitions](#), on page 69.

The **A** icon is shown next to the name for the row in the Multilevel Table to indicate that the source or destination was automatically created by GV Orbit Control.




Source or destination was automatically created by GV Orbit Control

This yellow bar indicates that the name is no longer the automatically-generated name

 
---

**Note:** You cannot delete a default source from the Logical Level Table. However, you can modify the levels associated with the source. Also, you can modify or delete the sources that you create.

---

Automatically created sources' and destinations' name can be re-named by double-click the name field. A yellow bar indicates that the name of the source or destination is no longer the automatically-generated name. Click  **Restore default label** to revert back to the automatically-generated name.

If you try to delete an automatic source or destination from the Logical Device Table, the following message is displayed at the bottom of the task.




To remove an automatic source or destination, you must deselect the following properties (as applicable) in the device's Property Editor:

- Automatic Sources and Destinations
- Automatic Destination
- Automatic Destinations on Inputs
- Automatic Destinations on Outputs
- Automatic Source
- Automatic Sources on Outputs
- Automatic Sources on Inputs


## Setting the Logical Levels to be Displayed in the Multilevel Table

You can show or hide the Logical Level shown in the Multilevel Table. For example, once you have created custom levels in the Logical Table Editor, you might want to show those levels while hiding others that are not of interest for the moment. Showing or hiding Logical Levels in the Multilevel Table is used to facilitate bulk assignment of sources and destinations in the Multilevel Table. See [Bulk Assigning Logical Levels in the Multilevel Table](#), on page 90.

### To modify the logical levels associated with a source

- 1 Select a Source in the Logical Device Table. See [Accessing the Logical Device Table task](#), on page 78.
- 2 Click the Logical Levels icon  at the top of the table.

A secondary window opens displaying the levels for the selected source.

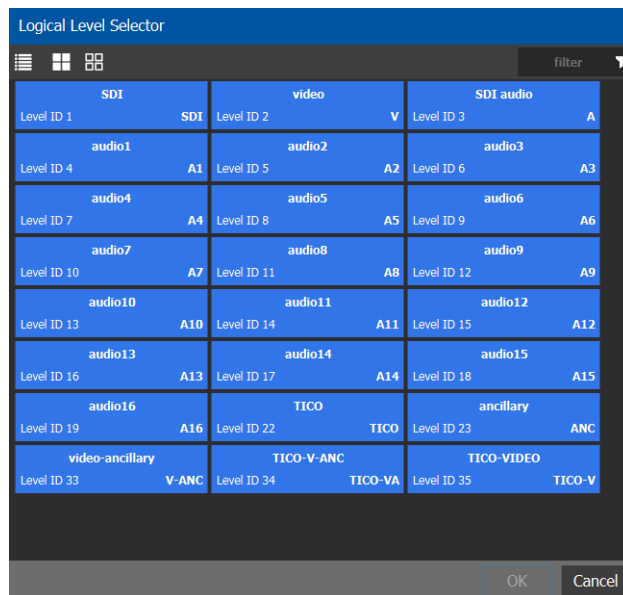

- 3 Select one or more levels you want to use for the selected source.
- 4 Click **OK**.

The columns in the Multilevel Table adjust to add the ones you have selected.




## Adding a Source to the Logical Level Table

By default, the logical device table displays the sources in the selected topology. You can add a logical device to the table that is not on the topology. You would then have the option of switching to the new logical device in place of the existing device.

### To add a source to the logical level table

- 1 Open the logical level table for the required topology.

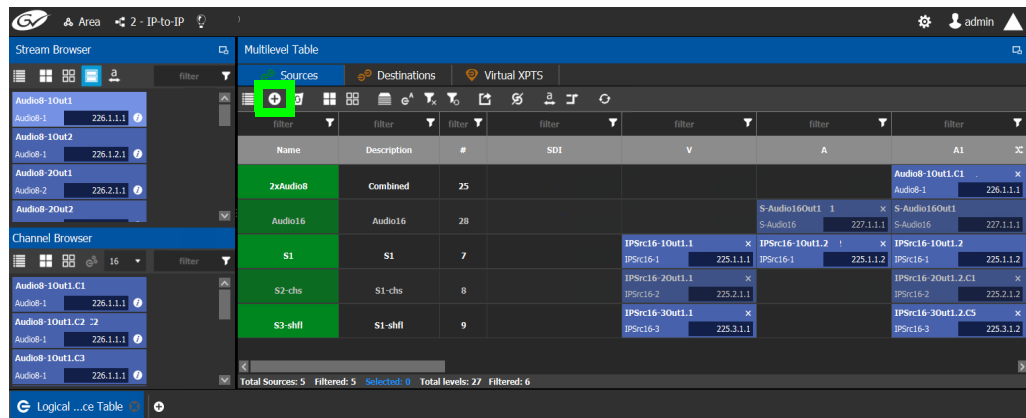

- 2 Click **New**  at the top of the **Multilevel Table**.

A secondary window appears.

Base Name:	CAM100
Start Index:	1
Count (Max 200):	5
<input type="button" value="OK"/> <input type="button" value="Cancel"/>	

- 3 Enter the required information in the **Base Name**, **Start Index**, and **Count** fields.
- 4 Click **OK**.

New sources are created. The **Base Name** is displayed under the **Name** and **Description** fields. The number of new sources created corresponds to the number you enter in the **Count** field.

Name	Description	#	SDI	V	A
Cam1001	Cam1001	302			
Cam1002	Cam1002	303			
Cam1003	Cam1003	304			
Cam1004	Cam1004	305			
Cam1005	Cam1005	306			
SZX-1	SZX 1 Out 1	294	SZX-1	SZX-1	SZX-1
SZX-2	SZX 2 Out 1	297	SZX-2	SZX-2	SZX-2
SZX-3	SZX 3 Out 1	295	SZX-3	SZX-3	SZX-3
SZX-4	SZX 4 Out 1	296	SZX-4	SZX-4	SZX-4
S9-1	S9 1 Out 1	298	S9-1	S9-1	S9-1


Total Sources: 305 Filtered: 305 Selected: 5 Total levels: 24 Filtered: 0

In the example, five new sources are created. The name for each device begins with the base name CAM100. A number is appended to the base name. This begins with the starting index and increases by one for every number in the count.

## Configuring Streams for New Sources

After creating new sources, the next step is to configure the streams for them. Different streams can be assigned to different levels, so that a source is composed of streams from different devices (to do implicit breakaway).

For example, the column you drop a stream on in the Multilevel table selects the part of the stream to use to create the logical device. This is shown below for a stream from the Stream Browser.

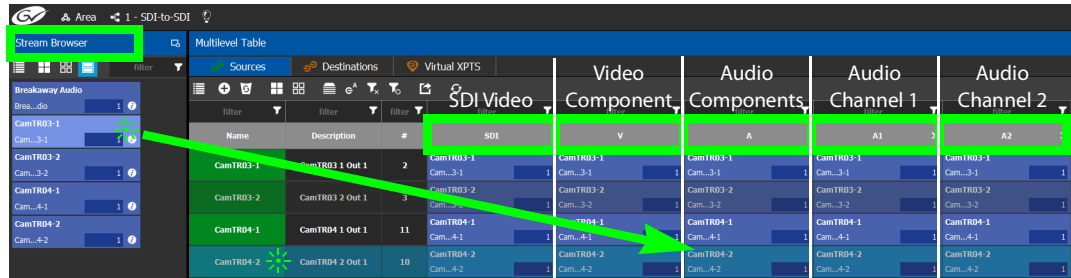

Select the row before dropping a destination onto it


Stream Drop onto Multilevel Table Column	Description
SDI	This fills all levels (video, 16 audio channels (A1 to A16), ANC, and V-ANC) with the equivalent levels from the SDI video stream.
V	This takes the video level only from the SDI stream.
A	This takes the audio levels only from the SDI or audio stream for all 16 audio channels (A1 to A16).
A1 to A16	This takes the first audio channel from the SDI or audio stream.
ANC	This takes the ANC level only from the SDI stream.
V-ANC	This takes the V-ANC level only from the SDI stream.

For instance, you could create a source with Video from a GV Node and the audio from an IPG-3901, or IPG-4901. You do this by assigning the GV Node stream under the **SDI** column, and the IPG-3901, or IPG-4901 stream under the **Audio (A)** column. If audio breakaway/shuffling is required to complete the path, GV Orbit Control will automatically choose a route through Audio Live for example.

### Configuring Streams for Audio Live Audio Channels


When using Audio Live in your topology (see [Configuring a Device that Supports Audio Breakaway/Shuffling such as Audio Live](#), on page 251), you can:

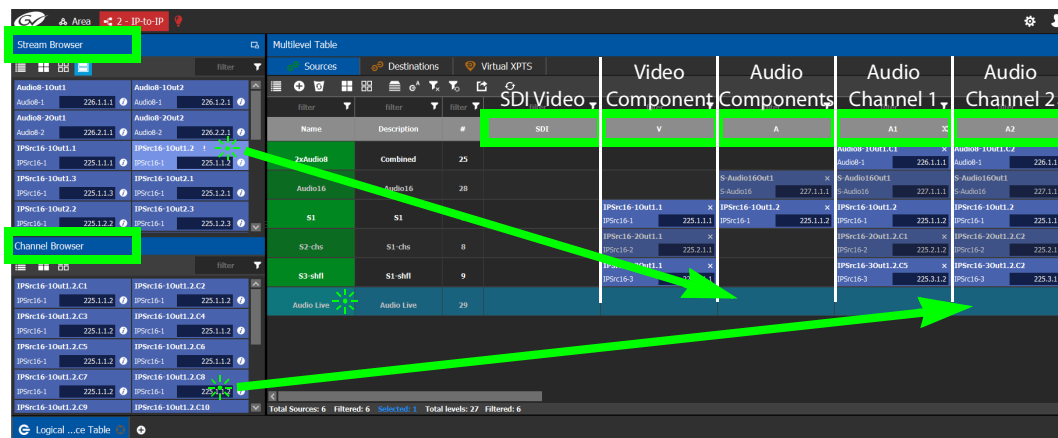

- From the Stream Browser, drop the audio stream onto the audio (A) column. This is shown above.
- From the Channel Browser, drop one or more audio channels from the stream onto the A1 to A16 column(s). To open the Channel Browser, see [Stream Browser / Channel Browser](#), on page 79.



### Symbols for currently active Audio Breakaway and Shuffle

 Symbols are used in the name of a logical device to identify if the audio has been shuffled or there is an audio breakaway currently active.




Symbol	Description
 Breakaway	This icon appears next to the name for the row to indicate that the audio comes from another stream source.
 Shuffle	This icon appears next to the name for the row to indicate that one or more audio levels have been exchanged for another audio level from the same stream. To shuffle the audio, see <a href="#">Creating Logical Devices with Shuffled Audio</a> , on page 93.


### To configure streams for the new sources

- 1 Open the Logical Device Table for the required topology.  
 In the left hand column under **Stream Browser**, the default streams for your topology are displayed.

- 2 Add sources to the Logical Level Table. See [Adding a Source to the Logical Level Table](#), on page 85.
- 3 Select a source's row to which you want to add a stream.

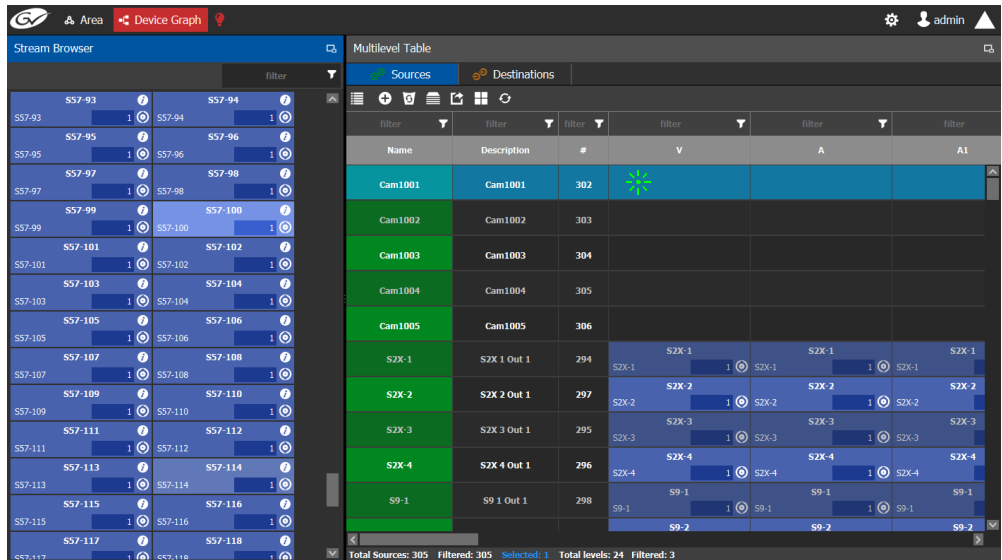

- 4 Drag a stream onto the source.

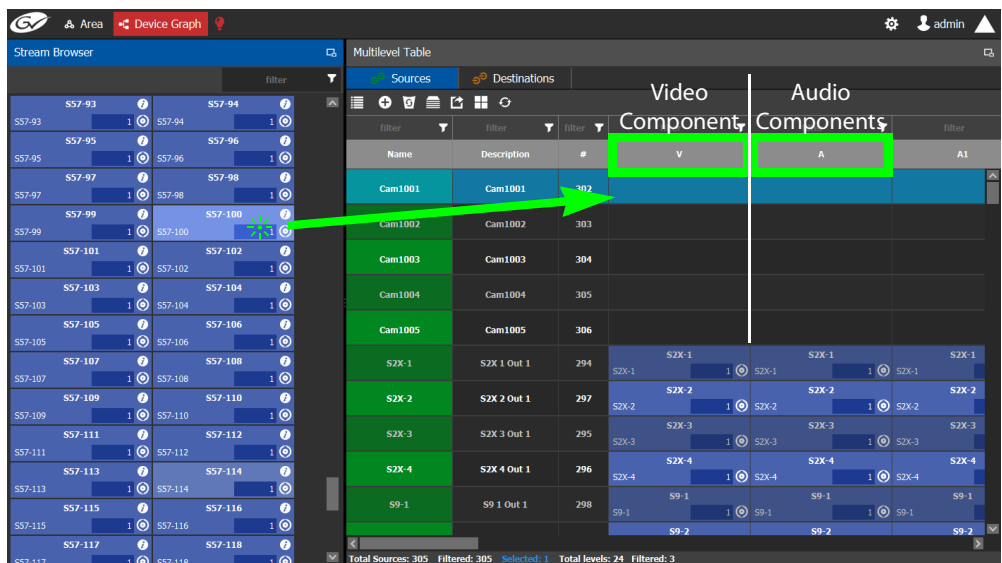


In the above image, a stream is added to a source for its video component. Drag the same stream or another stream from the **Stream Browser** to a source to add its audio components.

## Bulk Assigning Logical Levels in the Multilevel Table

The Stream Browser and Channel Browser have filters that allow you to refine the stream selection shown. See [Filtering Lists, Table Columns, Sources, and Destinations](#), on page 104. It is often possible that by using filtering, streams can be grouped together so that they can be dropped in bulk onto the Multilevel Table, on a row or a column.

- To bulk drop streams on to a row, select one row first and then select two or more streams to drop onto the row.

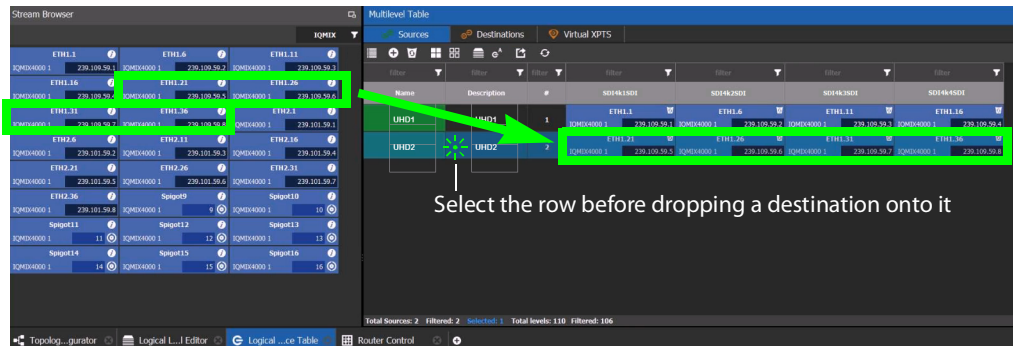

- To bulk drop streams on to a column, select two or more rows first and then select two or more streams to drop onto the column.

## Adding and Configuring a Destination

The procedures for adding and configuring destinations are the same as for adding and configuring sources. For details, see [Adding a Source to the Logical Level Table](#), on page 85 and [Configuring Streams for New Sources](#), on page 86.

The **IP Clean Switch** option enables routing of an IP source to a local GV Node destination for a vertically accurate switch.

## Using Megasource

Megasource changes GV Orbit Control's pathfinding rules to match exact logical levels before applying best match logic. This allows you to create logical sources where the same or different streams can be added to the logical level columns that share the different custom logical levels. Megasource only applies to sources with multiple stream/level pairings and the filtering happens when a normal destination is used in a route.

When doing a take, the GV Orbit Control's pathfinding algorithm will attempt to find an exact level match between the logical source and the logical destination. Failing to find an exact match, it attempts to find a compatible level match as it currently does. If there is more than one possible compatible match (ambiguous take), it will fail the take because we don't know which stream should be used on the logical destination.


Note that a UHD 4K take is a subset of this feature where there are four SDI levels per logical source and logical destination (one SDI level for each quad-link or two-sample interleave division substream component). See [Creating the Logical Levels for a UHD 4K Routing Setup](#), on page 34 for more information.



For example, you have three SDI signals from the same source. One signal is full resolution 1080p video, the second signal is 720p video, and the third is 480p video. One destination is for the full resolution 1080p video, the second destination is for the 720p video, the second destination is for the 480p video, where the destination devices' logical levels will determine which streams to route.

The following is an example of how to do this.


### Using Megasource

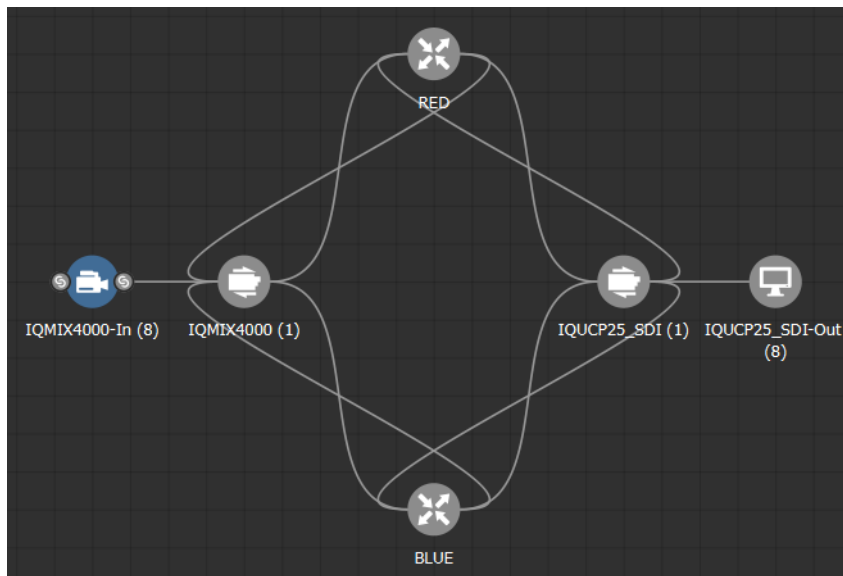- 1 Create the following Topology to use for this example. See [Adding Devices to a Topology](#), on page 44.




- 2 Create three copies of the **SDI** Logical Level called **SDI-A**, **SDI-B**, and **SDI-C** in the **Logical Level Editor**. See [Duplicating a Logical Level](#), on page 33.
- 3 Click  in the **Multilevel Table, Sources** tab, of the **Logical Device Table** to hide the automatically-generated sources. See [Multilevel Table Menu](#), on page 81.
- 4 Click  in the **Multilevel Table, Sources** tab, of the **Logical Device Table** to create a new source (shown in this example as *Megasource*). See [Adding a Source to the Logical Level Table](#), on page 85.
- 5 In the Logical Device Table, select a source's row to which you want to add the streams. See [To configure streams for the new sources](#), on page 88.

- From the Stream Browser of the **Logical Device Table**, drag the three source streams onto the Multilevel Table. The first stream represents 1080p video, the second stream represents 720p video, and the third stream represents 480p video.

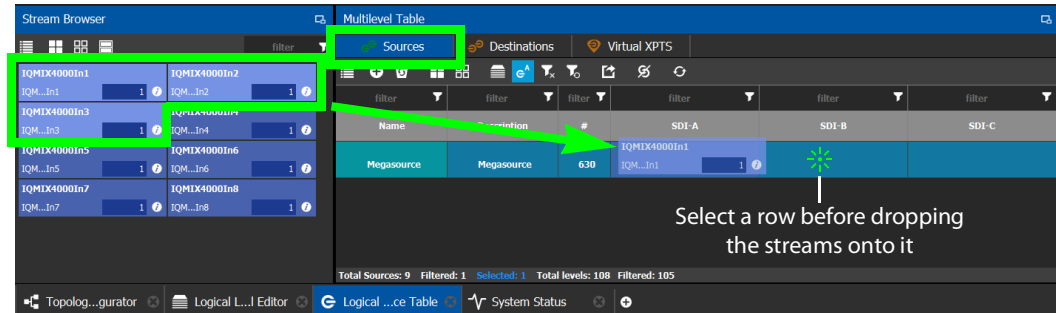

- Click in the **Multilevel Table, Destinations** tab, of the **Logical Device Table** to hide the automatically-generated destinations. See [Multilevel Table Menu](#), on page 81.
- Click in the **Multilevel Table, Destinations** tab, of the **Logical Device Table** to create new destinations, one for each level (1080p, 720p, and 480p video). See [Adding a Source to the Logical Level Table](#), on page 85.
- In the Logical Device Table, select the first source's row to which you want to add the streams.
- From the Stream Browser of the **Logical Device Table**, drag the first destination stream onto the Multilevel Table.
- In the Logical Device Table, select the second source's row to which you want to add the streams.
- From the Stream Browser of the **Logical Device Table**, drag the second destination stream onto the Multilevel Table.
- In the Logical Device Table, select the third source's row to which you want to add the streams.
- From the Stream Browser of the **Logical Device Table**, drag the third destination stream onto the Multilevel Table.

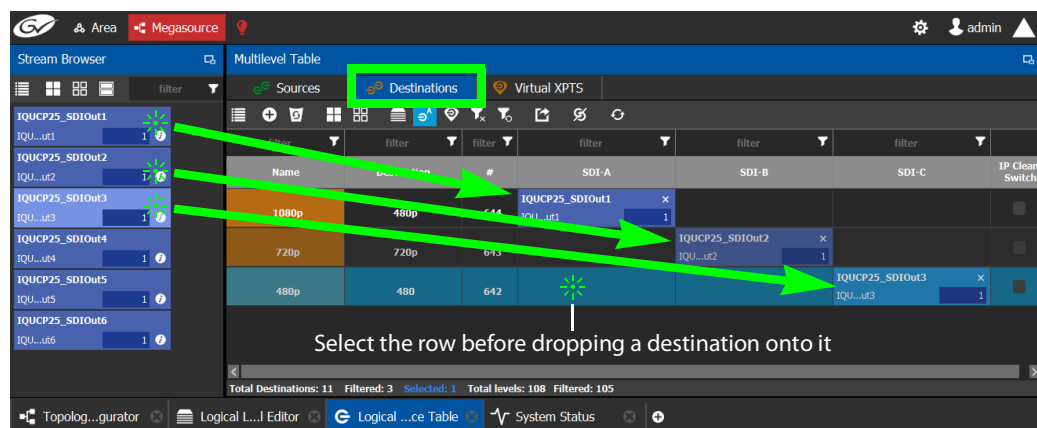

- Test the configuration by making takes between a logical source and destination that use the *Megasource* source. See [Performing a Take in Router Control](#), on page 281. See in Pathfinder that the correct source resolution is received by each destination. See [Viewing Information about the Destinations](#), on page 265.



## Deleting a Source, Destination, or Virtual XPTS

You can delete any source, destination, or virtual XPTS that you have created.

### To delete a source, destination, or virtual XPTS

- 1 Open the Logical Device Table task for the required topology.
- 2 Select the Sources tab, the Destination tab, or virtual XPTS tab according to what you are deleting.
- 3 Select the sources, destinations, or virtual XPTS in the table.

---

**Note:** You can delete one or more sources or destinations at the same time.


---

- 4 Click the **Delete** icon .

## Exporting a Logical Device Table

You can export the data in your logical device table in a csv file.



### To export a logical device table

- 1 Open the Logical Device Table task for the required topology.
- 2 Select the rows you want to export.
- 3 Click the **Export** icon .
- 4 Navigate to the folder where you want to save the file.
- 5 Click **Save**.

## Selecting all Devices in the Logical Device Table for Export

You can select all devices in the logical device table, for example, to export the Device Table's configuration data to a csv file.

### To select all the devices and save their configuration data

- 1 Open the Logical Device Table task for the required topology.
- 2 Click the **Select All** icon .
- 3 Click the **Export** icon .
- 4 Navigate to the folder where you want to save the file.
- 5 Click **Save**.

## Creating Logical Devices with Shuffled Audio

You can define the audio configurations for logical sources by selecting any audio sub-stream (from a MADI stream or an AES67 stream from an Audio Live device for example) in the Logical Device Table and change its pre-assigned level directly in the table.


Audio live permits the breakaway of audio feeds. To do this, add an Audio Live device to your network and to your topology. See [Configuring a Device that Supports Audio Breakaway/Shuffling such as Audio Live](#), on page 251. The audio channels for the sources become available under the Channel Browser for those streams (see [Stream Browser / Channel Browser](#), on page 79).

For example:

- You may have audio embedded on the first 8 audio channels for English-language program and the last eight channels for French-language program. In this scenario, the first logical source would have the implicit stream for audio in only the first 8 audio logical levels (that is, associated to audio levels 1 to 8) and the second logical source would have those same first 8 logical levels of audio explicitly defined with the same stream, but the audio logical levels are associated to audio levels 9 to 16.
- A user defined destination logical device may include MAD1 audio. In order to define the destination as utilizing the logical source audio from logical levels audio 1 and audio 2 onto logical levels audio 11 and audio 12, it is necessary to place the destination device stream under logical levels audio 11 and audio 12, but define the source audio of the stream as coming from source logical levels audio 1 and audio 2, respectively.


**To create logical devices with shuffled audio**

- 1 Create one or more new logical devices. See [Adding a Source to the Logical Level Table](#), on page 85.
- 2 Drag a stream from the stream browser (for example, an audio stream) and drop it on its corresponding level on the newly created logical device (audio level, A). Once the steam is dropped on its level, all the corresponding sub-levels will be automatically filled in (A1 to A16). The table will show the main stream on the audio level and up to 16 other sub-levels contained in this level.

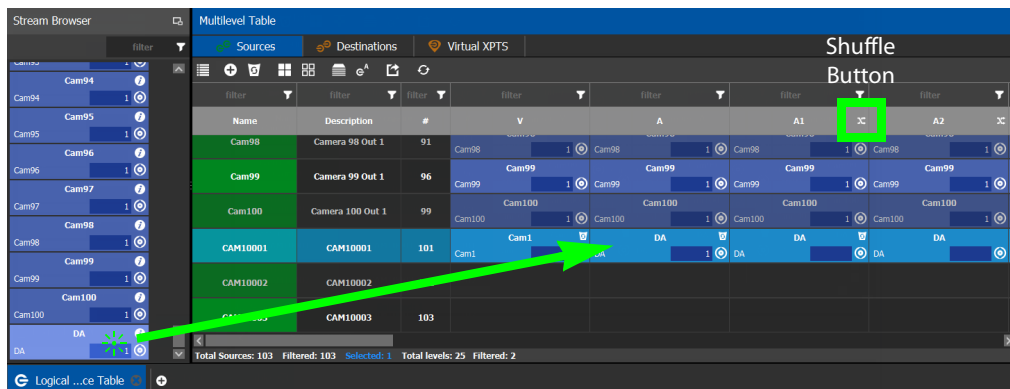

If the selected row/cell is eligible for shuffling, a shuffle button will appear in the column header.

- 3 Select the row and click the shuffle button to open a logical level selector with the filtered compatible levels available for selection.

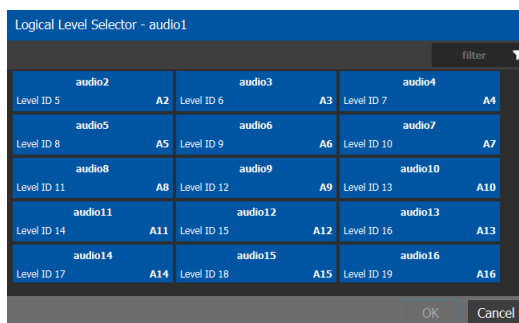


- 4 Select a new level to assign to the stream. If for example, the stream is on audio1 and you want to change it to audio9, select the **audio9** level from the stream. Click **OK**.

See also [Symbols for currently active Audio Breakaway and Shuffle](#), on page 88.

## Configuring Virtual Crosspoints (XPTs)

Without virtual XPTs, only one route can be made for each task. Virtual XPTs are used when multiple outputs are required to be switched to the same source *in a single take*.

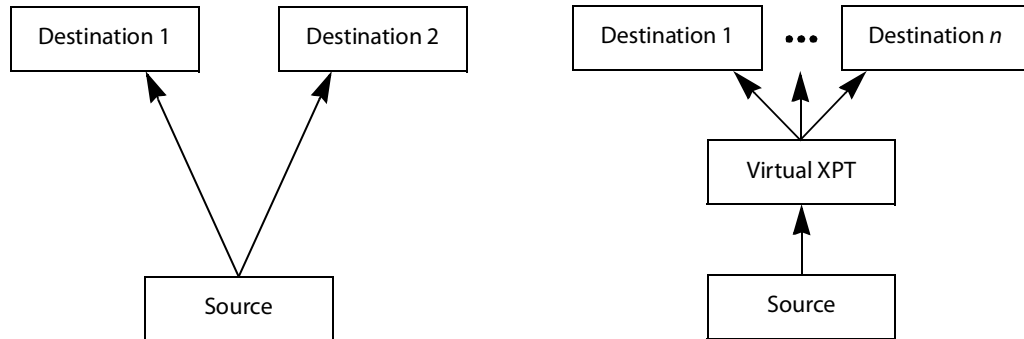

Virtual XPTs can be used to:


- Show user-friendly device names on the operators' control panels. For example, the name of the virtual XPT is shown on control panels when used.
- Hide implementation details from the operator(s). For example, in a transparent fashion, an output signal is also sent to a monitor.

Virtual XPTs are used for the following two primary applications:

- Monitoring: to follow the source routed to a given destination and to route that same source to other destinations as needed.
- Utility DA (distribution and amplifier): to allow for a configurable virtual destination/source that can be routed to other real destinations.

The following virtual XPT functional behaviors are by design:

- A take with a virtual XPT will fail if the path to the source does not exist and as a consequence the virtual source will fail. The status (Tally) will not reflect this.
- A take with a virtual XPT's destination will be ignored if the take fails.
- A logical destination can only be added to one virtual XPT destination at a time. Once a real destination has been added to a virtual XPT, it is no longer available to be used with other virtual destinations. A pop-up message is shown if you try to add a logical destination that has already been added to another virtual XPT. Click **OK** to remove the logical destination from the previous virtual XPT and add to it the new virtual XPT.
- You can only route virtual sources to unrelated virtual destinations that are not associated with the same virtual XPT. This allows you to increase the number of logical destinations devices that can be switched with a single route. Routing a logical source device to the virtual destination of another virtual XPT will route said source to all logical destination devices that the virtual source is routed to. Routing that virtual source to another virtual destination, will mean routing the original logical source device to all destination devices that the corresponding virtual source was routed to, as well.

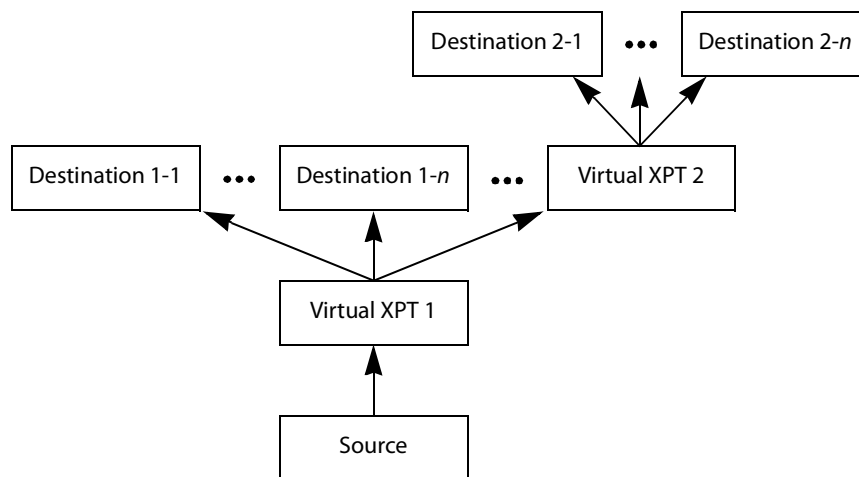


*Routing a logical source device to the virtual destination of another virtual XPT*

- A virtual XPT can have up to 100 real logical destinations.
- The status of a virtual XPT is shown in the Path Manager. See [Accessing the Path Manager](#), on page 263.
- Adding a logical destination device to a virtual XPT changes the status of the destination to the virtual source - with the logical source device content being routed to the logical destination device(s). Removing the logical destination device from a virtual XPT, will change the status of that destination to the logical source device.

### Virtual XPT Use Scenario 1

In this scenario, the physical level is set up so that any source routed to destination Z will be taken to the following destinations: R, S, and T.

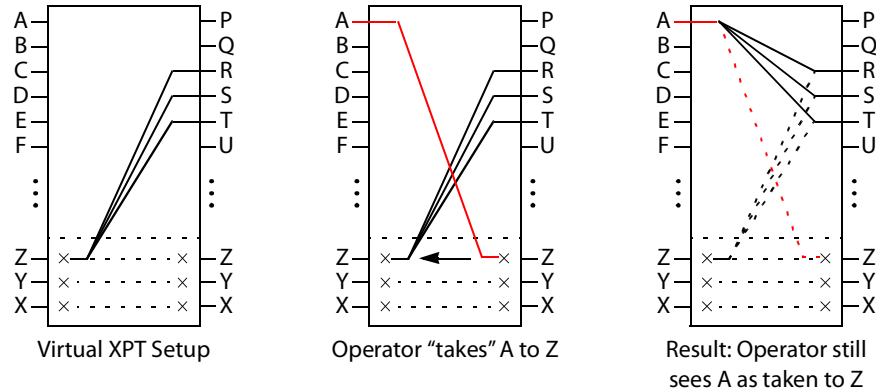


If the operator takes A to Z, the software "discovers" that source Z is virtually routed to R, S, and T. Therefore, it routes A to R, S, and T as real routes.

Here, a source was taken to multiple destinations with a single take, and that fact was concealed from the operator. The operator's control panel reports that A was taken to Z. The Path Manager can be used to know the actual path that was internally used by the router; see the [Path Manager Tasks](#), on page 262.

Other inputs can be taken to Z with a similar result: that source will be taken to destinations R, S, and T.

### Virtual XPT Use Scenario 2

In this scenario, the virtual XPT setup is the same as for scenario 2.

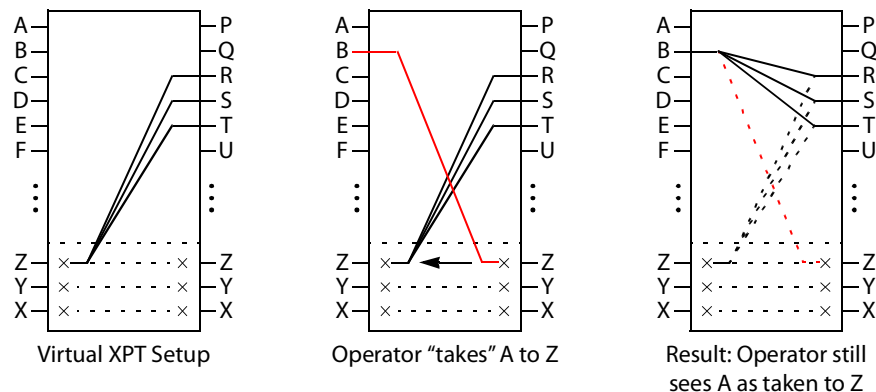

If the operator takes B to Z, the software "discovers" that source Z is virtually routed to R, S, and T. Therefore, it routes B to R, S, and T as real routes.


The operator's control panel reports that A was taken to Z. The operator executed a single take.

This scenario illustrates that any time an operator takes a source to virtual XPT destination  $n$ , the router actually takes the source to the real destinations “connected” to virtual XPT source  $n$ .


### To create Virtual XPTs

Virtual XPTs are created in the Logical Device Table task.

- 1 In the Topology Configurator, activate the topology. See [Activating a Topology](#), on page 72.
- 2 Open the Logical Device Table task. See [Accessing the Logical Device Table task](#), on page 78.
- 3 Select the **Virtual XPTs** tab.

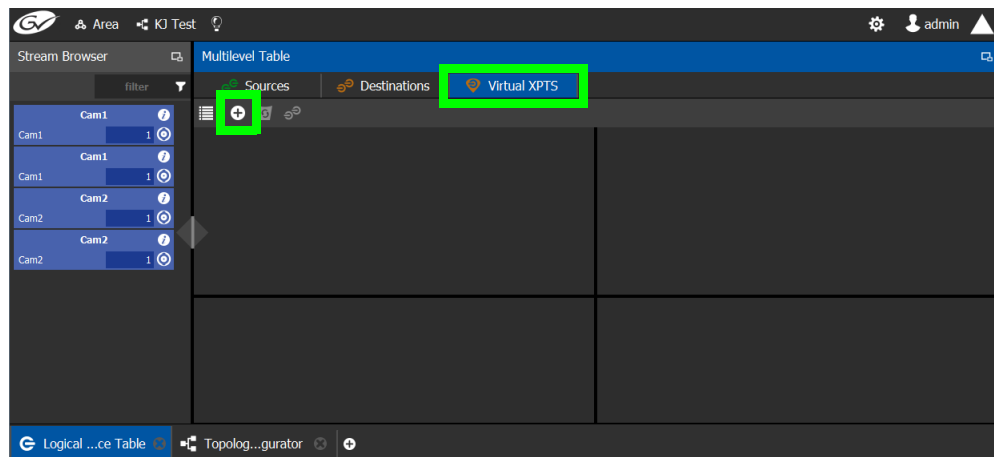


- 4 Click **New** 

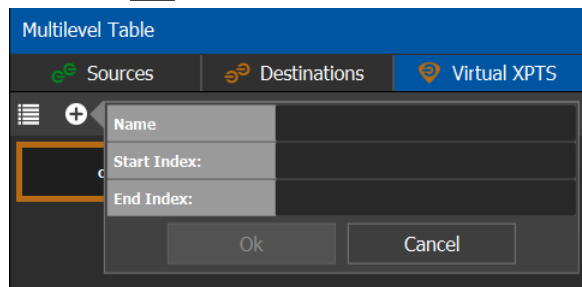

- 5 Enter a name for the new virtual XPT and click **OK**.  
Optionally, a range of virtual XPTs can be created: The **Name** parameter is the prefix for the generated virtual XPTs. The **Start Index** is the index starting value, and the **End Index** is the last index value for the virtual XPT range.


The new virtual XPT is added to the **Multilevel Table** under the **Virtual XPTS** tab.

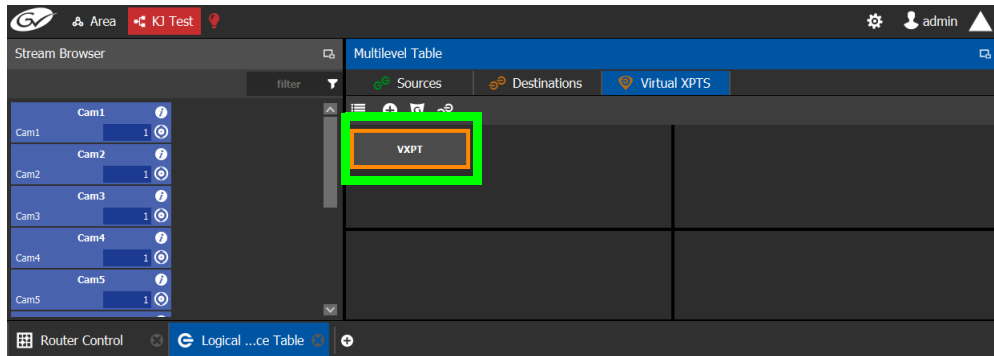


A new logical source and a new logical destination are created automatically in the system with the name of the virtual XPT.





Virtual source and destination filters are available for you to filter on virtual XPTs when configuring the panel, categories, and router control user interfaces. See [Filtering Lists, Table Columns, Sources, and Destinations](#), on page 104

- 6 Add the default destinations for the virtual XPT. Select the virtual XPT and then click Destinations .

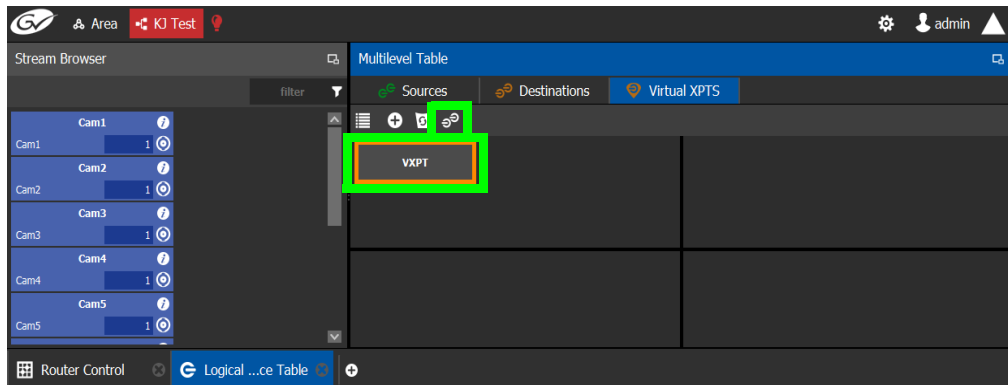

A list of all currently available destinations appears.

- 7 Select the default destinations the virtual XPT will use and click OK.

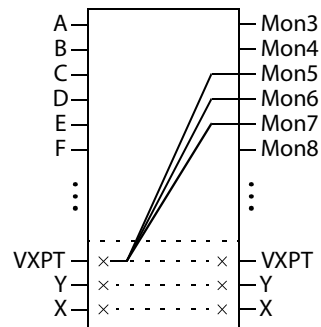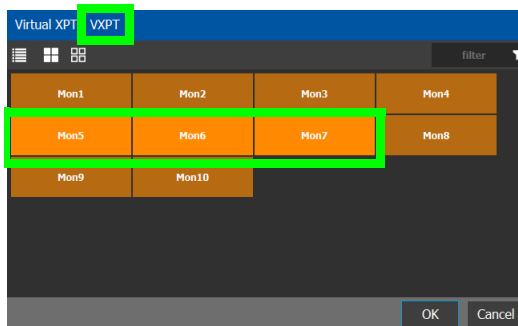


In this scenario, the physical level is set up so that any source routed to destination **VXPT** will be taken to the following destinations: **Mon5, Mon6, and Mon7**.

Once you have created one or more Virtual XPTs, you can start using them in Router Control.

**To perform a take with a Virtual XPT**


You must first create and activate the topology in the Topology Configurator. You perform takes with a Virtual XPT in Router Control. See also [Performing a Take in Router Control](#), on page 281.

- 1 In the Topology Configurator, activate the topology. See [Activating a Topology](#), on page 72.
- 2 Create a virtual XPT in the Logical Device Table task. See [To create Virtual XPTs](#), on page 98. As an example, in this procedure, the name of the virtual XPT is **VXPT**.
- 3 Open Router Control. See [Accessing the Router Control Task](#), on page 280.

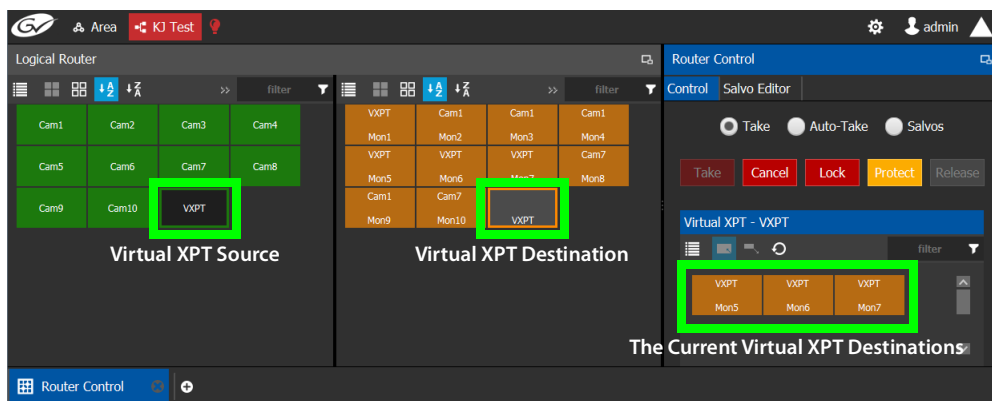


The default virtual XPT destinations that were configured in the Logical Device Table are shown by selecting the virtual XPT destination. See [To create Virtual XPTs](#), on page 98.

- 4 To route Cam1 to Mon5, Mon6, and Mon7 using the virtual XPT VXPT, perform a take **Cam1** to destination **VXPT**.

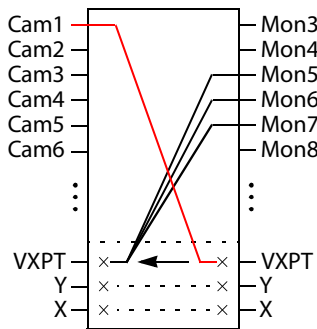



First click the destination virtual XPT **VXPT** and then click **Cam1** and finally click **Take**.

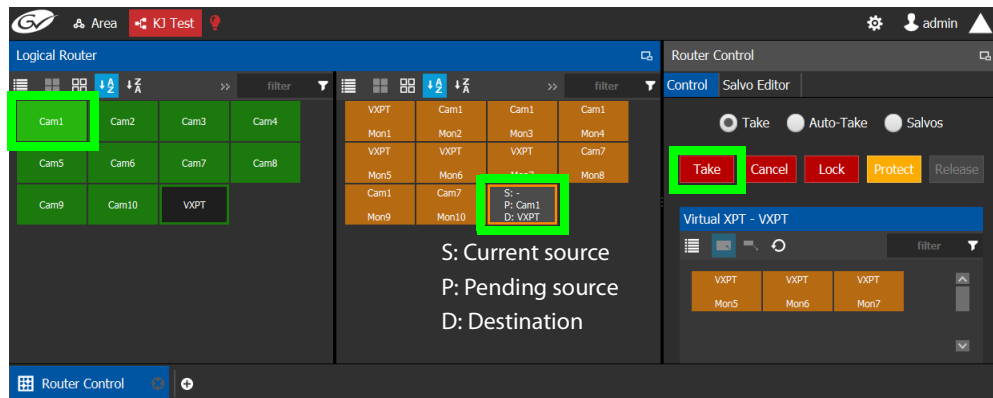

The destination virtual XPT **VXPT** button shows the current source.




The Path Manager can be used to know the actual path that was internally used by the router; see the [Path Manager Tasks](#), on page 262.


### To dynamically add a Virtual XPT destination

Destinations can dynamically be added to a virtual XPT. In this example, **Mon8**, and **Mon9** are added to the virtual XPT **VXPT**'s destination.

- 1 In the Topology Configurator, activate the topology. See [Activating a Topology](#), on page 72.
- 2 First click the source virtual XPT and then click **Mon8** and finally click **Take**.
- 3 First click the source virtual XPT and then click **Mon9** and finally click **Take**.

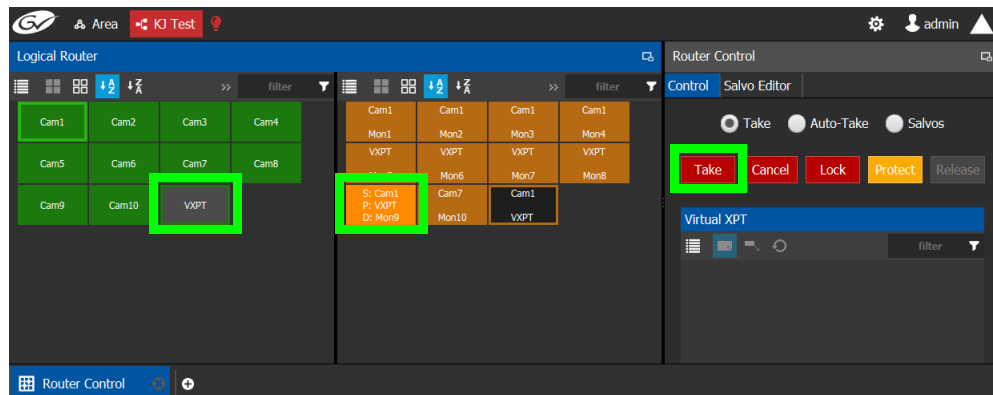

The current destinations for the selected virtual XPT are updated.

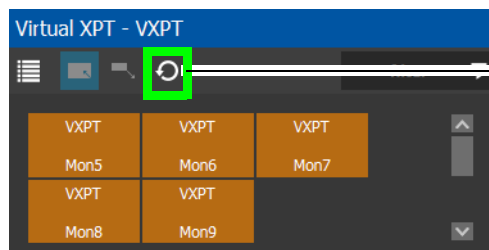


Click to revert to the default virtual XPT destinations configured in the Logical Device Table

See also [Performing a Take in Router Control](#), on page 281 for more information about how to use the controls available in this window. The Path Manager can be used to know the actual path that was internally used by the router; see the [Path Manager Tasks](#), on page 262.

### To dynamically remove a Virtual XPT destination

Destinations can dynamically be removed from a virtual XPT. In this example, **Mon9** is removed from the virtual XPT **VXPT**'s destinations. This is done by assigning the destination to be removed to another source.


- 1 In the Topology Configurator, activate the topology. See [Activating a Topology](#), on page 72.
- 2 First click the destination **Mon9** then click **Cam9** and finally click **Take**.

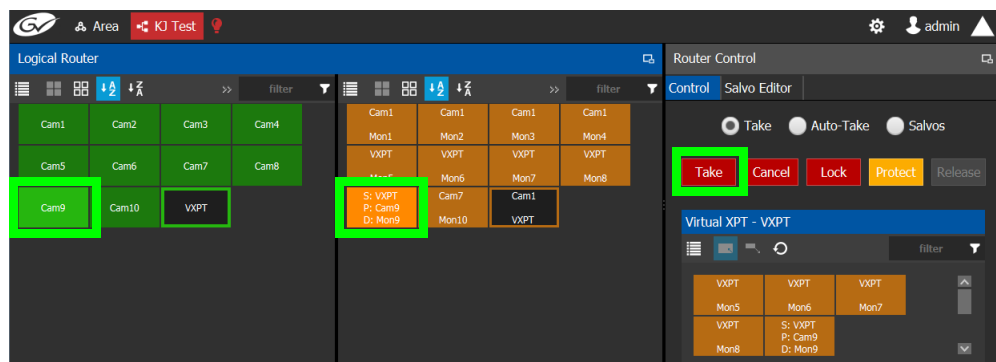


### Minimize and Expand Virtual XPT Destinations

In the Router Control Task, when a virtual XPT is routed to another virtual XPT, the second virtual source is nested in the first virtual XPT. See [Routing a logical source device to the virtual destination of another virtual XPT](#), on page 96.

As shown below, when **Minimize Virtual XPT**  is selected, the VXPT2 virtual XPT is shown minimized.

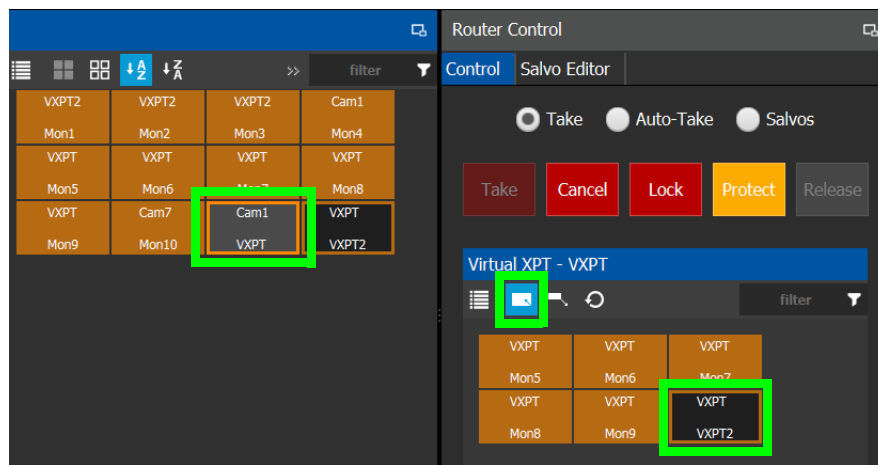


As shown below, when **Expand Virtual XPT**  is selected, all destinations are shown, including the nested destinations of all other virtual XPTs.

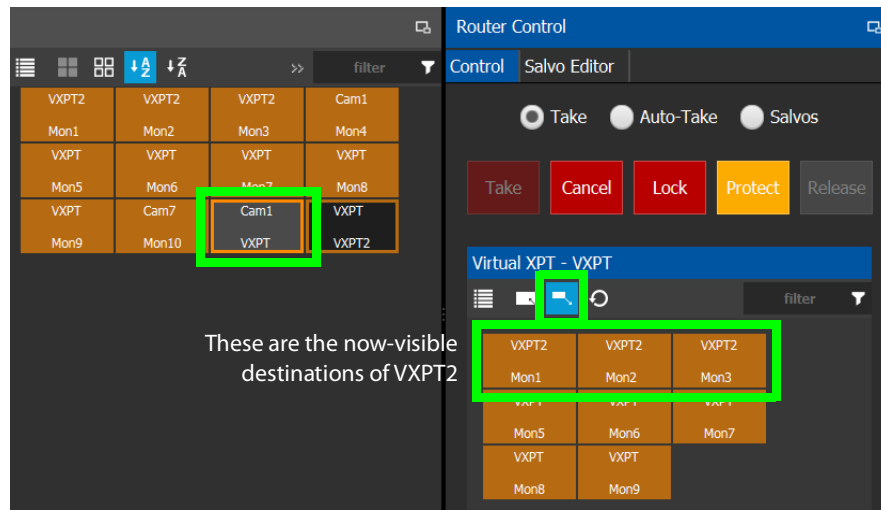


See also [Performing a Take in Router Control](#), on page 281 for more information about how to use the other controls available in this window.

## Filtering Lists, Table Columns, Sources, and Destinations

Virtual source and destination filters are available for you to filter on virtual XPTs when configuring the panel and category configurator user interfaces. To show virtual XPT sources or destinations only, enable the **Show virtual** setting in the filters dialog only.

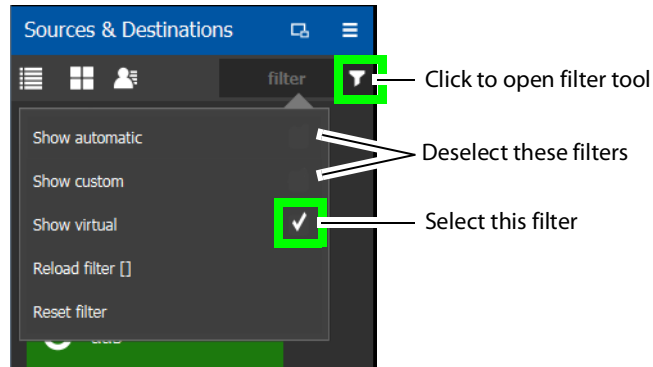

The functions available in a filter adapt to the screen in which the filter is found. For example, the Stream Browser has filters to allow you to filter streams that come from either input or output ports.

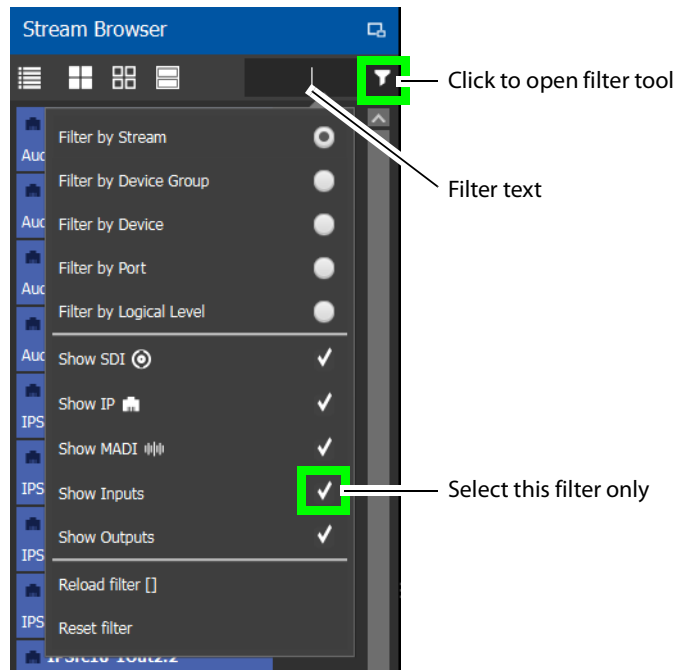

Filter Parameter	Description
Reload filter []	Reloads the previously-used filter.
Reset filter	Clears the text in the filter function.
Filter by Stream	Filter by the stream's name.
Filter by Device Group	Filter by the device group's name.
Filter by Device	Filter by the device's name.
Filter by Port	Filter by the port's name.

<b>Filter Parameter</b>	<b>Description</b>
Filter by Logical Level	Filter by the Logical Level's name.
Show SDI	Show results where the connection type is SDI.
Show IP	Show results where the connection type is IP.
Show MADI	Show results where the connection type is MADI.
Show Inputs	Show results where the connection direction is an input.
Show Outputs	Show results where the connection direction is an output.
Show automatic	Show automatically-created sources and destinations.
Show custom	Show user-created sources and destinations.
Show virtual	Show virtual XPTS.

## Category Configurator Tasks


Use the Category Configurator to make it easier to manage the sources in your topologies. Creating groups of categories, based on type or use, is useful when you have multiple resources.

Categories are used to group sources and destinations together thereby allowing them to be accessed quickly on a panel, either by adding a category button or by using keyboard shortcuts. See also [Panel Configuration Example Using Categories with Custom Navigation](#), on page 132.


## Accessing the Category Configurator

To access the Category Configurator Task

- 1 Open GV Orbit Control Client Stage. See [Navigating Back to Stage](#), on page 10.
- 2 Select an area. See [Selecting an Area](#), on page 23.
- 3 Select a topology. See [Selecting a Graph](#), on page 24.
- 4 Select **Configuration > Category Configurator**.

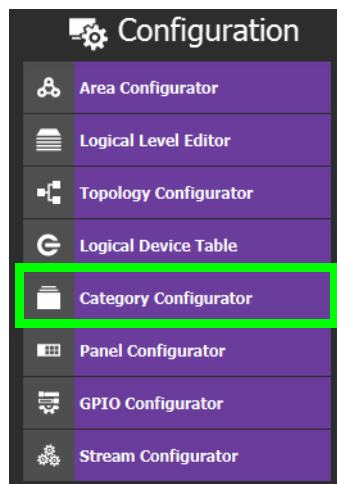

The Category Configurator task opens:

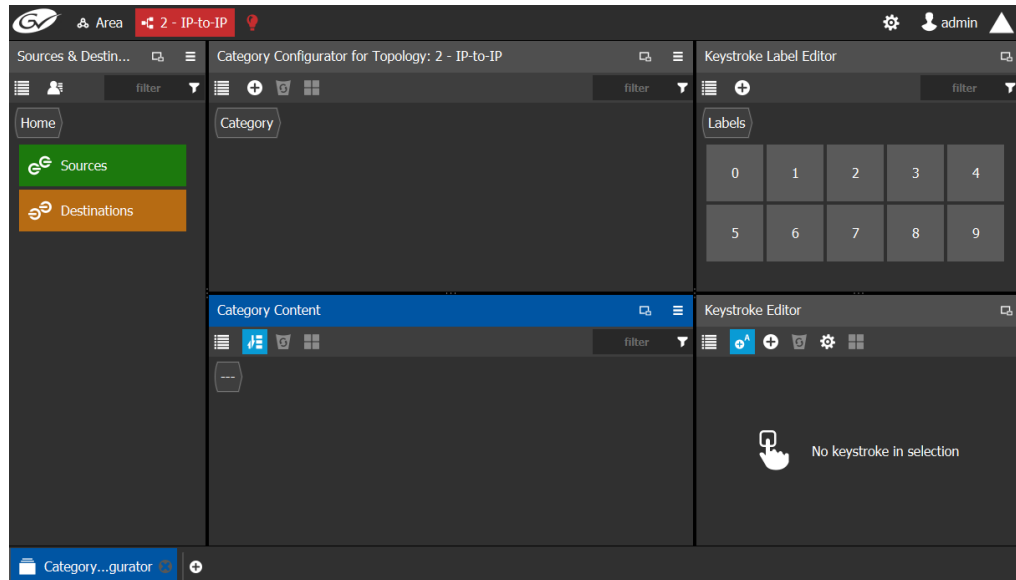



See the following Category Configurator procedures:

- [Creating Categories for the Sources and Destinations in Your Topology](#), on page 108
- [Assigning a Keystroke Label to a Source or Destination](#), on page 111
- [Creating a Keystroke Label](#), on page 112

### Sources & Destinations Menu

The Sources & Destinations menu has the following menu options.

Icon	Description
 Select All	Select / deselect all source or destination items.
 Select Alias	Select the Alias you want to use to identify Source and Destination streams in GV Orbit Control's interface.


Aliases are created in the Alias Editor. See [Adding Aliases](#), on page 277.


## Creating Categories for the Sources and Destinations in Your Topology

When you first open the Category Configurator, the Home tab appears in the Sources and Destinations tab.




### To create a category for your sources

- 1 Open the Category Configurator task for the required topology. See [Accessing the Category Configurator](#), on page 106.
- 2 Click **Add** .

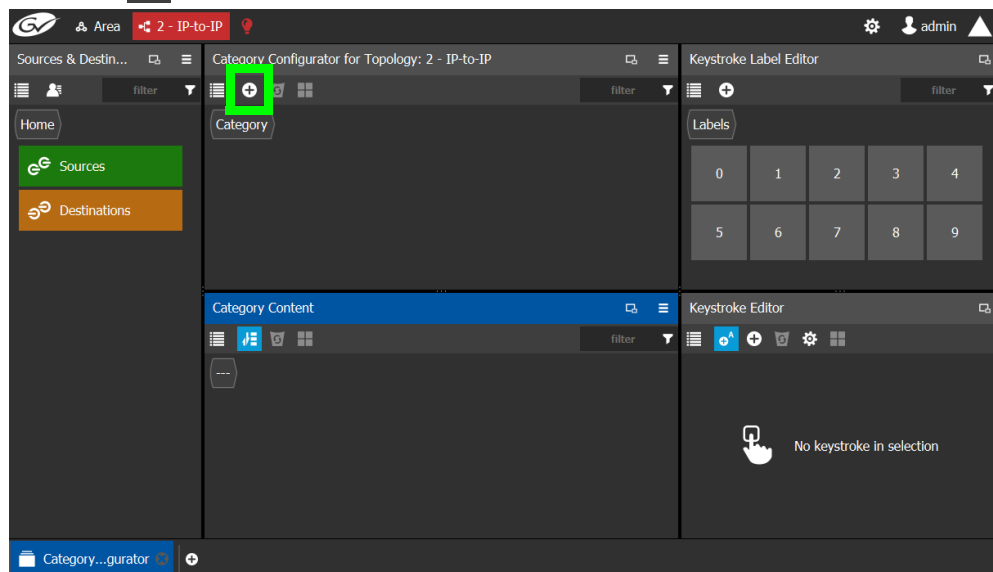


- 3 The **Enter a name for the new category** window appears:

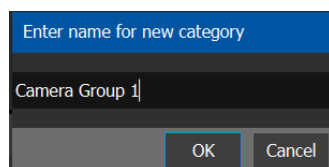

- 4 Enter a name for the new category and click **OK**.  
The new category is added to the top of the **Category Configurator** column.
- 5 Click **Sources** or **Destinations** to view the available sources / destinations.  
All the sources / destinations in the selected topology are displayed. This includes the logical sources you created in the Logical Device Table task. See [Logical Device Table Tasks](#), on page 78.




6 Select the newly created category.

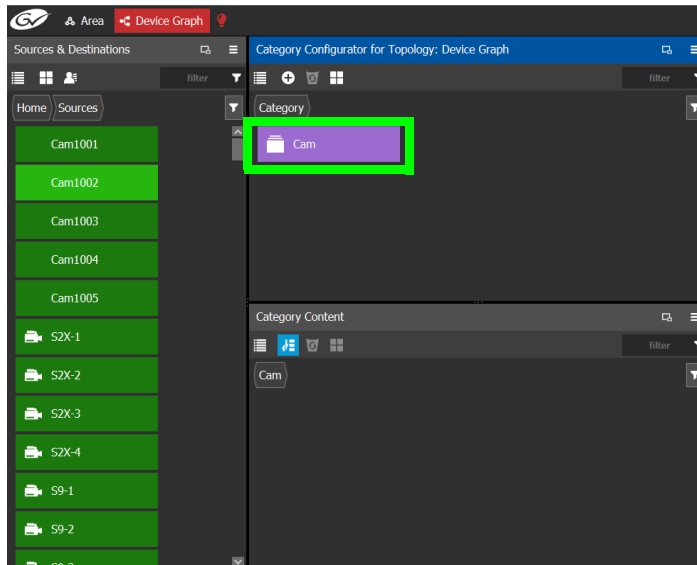




The category is added to the lower part of the center column under Category Content.

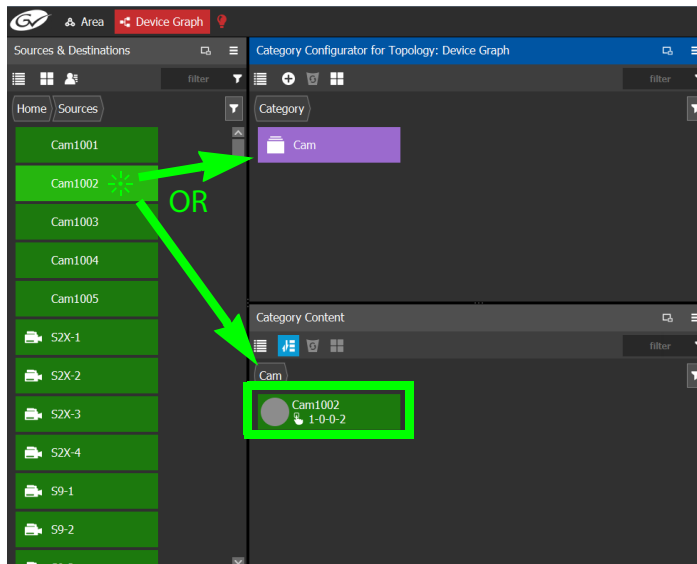7 Drag the sources / destinations from the **Sources & Destinations** column to the Category Content area.




Alternatively, you can drag a source/destination to the created Category button. When a Category contains only Sources or it contains only Destinations, the Category's symbol will change accordingly to show the type of content. For example, this allows

you to have two Categories with the same name where one only has Sources and the other Category only has Destinations and you can still distinguish them.

Icon	Description
	The category: <ul style="list-style-type: none"><li>• Is empty (contains no Sources or Destinations).</li><li>• Contains a mix of Sources and Destinations.</li></ul>
	The category only contains Sources.
	The category only contains Destinations.


- 8 Click Home to toggle between **Sources** (Green) or **Destinations** (Orange) as necessary.

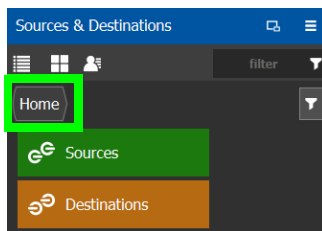

## Re-ordering Category Content

The sequence of category content (Sources and Destinations) can be re-ordered so that when a category is used on a panel, the Sources and Destinations will be shown in the order that you want it to be.

- 1 Add Sources and Destinations to a Category. See [Creating Categories for the Sources and Destinations in Your Topology](#), on page 108.
- 2 Re-order the Sources and Destinations in a Category: in the Category Content, drag the Source and Destination tiles into the order you want them to be.

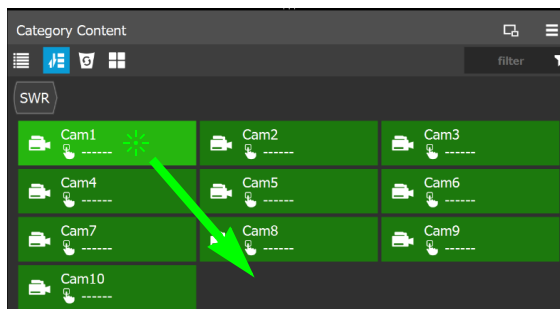


- 3 In the Panel Configurator, add a panel and configure it. See [Panel Configurator Tasks](#), on page 113.
- 4 Add the Category to a panel button. See [Adding Resources to the Panel](#), on page 122.
- 5 For each panel button you have added a Category to, select the panel button individually and set the **Sort Mode** property to **Manual** in the button's Property Editor. See [Setting the Properties for Panel Resources](#), on page 124.

## Assigning a Keystroke Label to a Source or Destination

A keystroke label can be added to sources and destinations once they have been added to a category. Assigning a keystroke label to a source or destination allows a user to bring up categories by using a keypad on a panel. For example, if you have 100 categories in your system, a panel can bring up category 37 by pressing 3 then 7 instead of browsing through dozens of panel pages. This also applies to selecting sources or destinations. For instance, Cam17 can be directly accessed by pressing 1 then 7 on the panel instead of searching for the Cam17 button.

### To add a keystroke label to a source or destination


- 1 Open the Category Configurator task for the required topology. See [Accessing the Category Configurator](#), on page 106.
- 2 Click a **Category** to show sources and destinations that have been configured for that category, shown in **Category Content**.
- 3 From the Keystroke Label Editor drag one or more labels onto a source or destination to create a unique sequence for that source or destination.

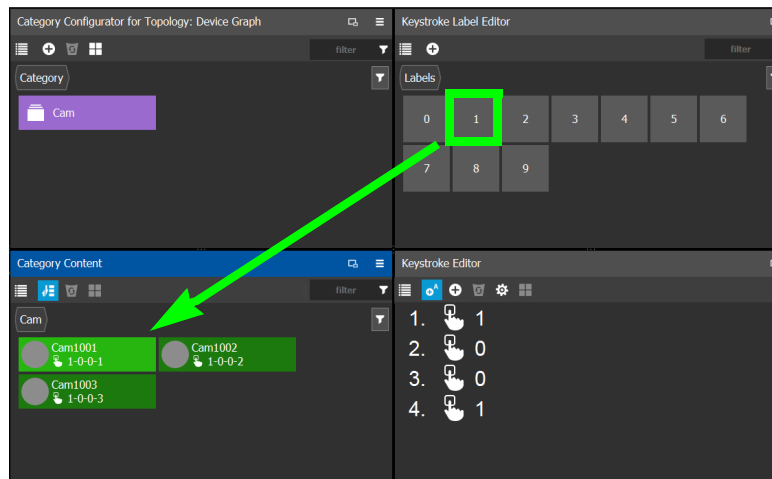

The **Keystroke Editor** shows the current keystroke label for the selected source or destination.

### Edit a Source or Destination Keystroke Sequence

The **Keystroke Editor** allows you to change the selected source or destination's keystroke label. Setting for automatically assigning keystroke labels to a source or destination can also be set.

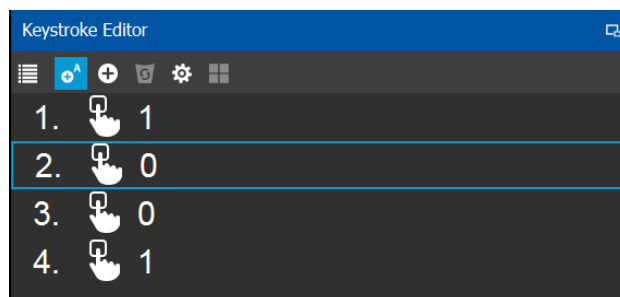

Set **Auto Add** to automatically assign a keystroke to a source or destination as it is added to a category. Click **Options** to configure this feature.

**Proceed as follows to delete a keystroke.**

- 1 Select a source or destination shown in **Category Content**.
- 2 Select a keystroke in the **Keystroke Editor** and click Delete.


**Proceed as follows to delete all keystrokes.**


- 1 Select a source or destination shown in **Category Content**.
- 2 Click **Clear All** in the **Keystroke Editor**.

## Creating a Keystroke Label

You can assign custom keystrokes to a source or destination. Create a keystroke label to do so.

**To creating a keystroke label**

- 1 Open the Category Configurator task for the required topology. See [Accessing the Category Configurator](#), on page 106.
- 2 In the Keystroke Label Editor, click **New** .  
The Create a new keystroke label window opens.

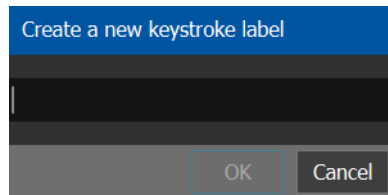

- 3 Set the keystroke label as required and click **OK**.

## Panel Configurator Tasks


This allows you to add buttons and behaviors to a panel. Those buttons represent sources, destinations, levels, groups and various operations that can be saved under specific configurations and then pushed to a software or hardware panel.

For an example of how to setup and use a panel, see [Panel Configuration Example Using Categories with Custom Navigation](#), on page 132.


## Accessing the Panel Configurator

To access the Panel Configurator Task

- 1 Open GV Orbit Control Client Stage. See [Navigating Back to Stage](#), on page 10.
- 2 Select an area. See [Selecting an Area](#), on page 23.
- 3 Select a topology. See [Selecting a Graph](#), on page 24.
- 4 Select **Configuration > Panel Configurator**.

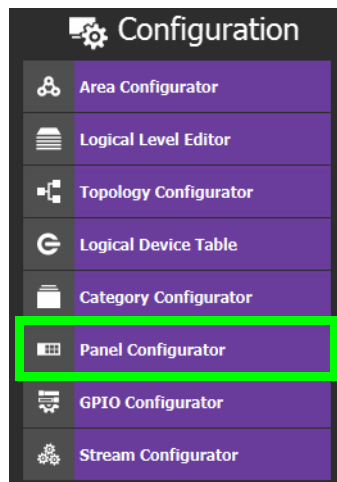



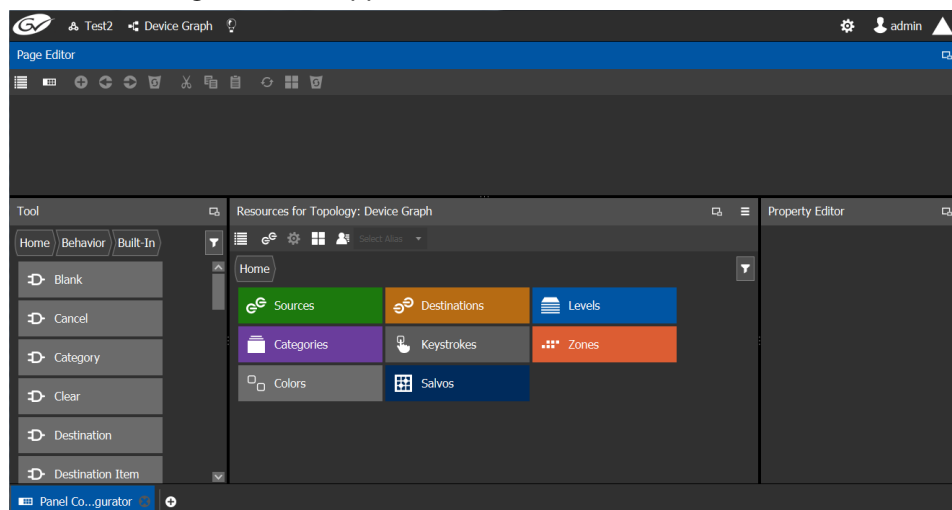










The Panel Configurator task appears:



## Page Editor Menu

The Page Editor menu has the following menu options.

Icon	Description
 Manage	Creates multiple templates for hardware or software panels of various models. Then, you can add the template to a panel that you have added to the topology. A pre-existing panel can be duplicated; see <a href="#">Duplicating a Pre-Existing Panel</a> , on page 116.
 Add Page	Adds a page to the panel's layout.
 Previous Page	Returns to the panel's previous page, when the panel configuration has two or more pages.
 Next Page	Goes forward to the panel's next page, when the panel configuration has two or more pages.
 Delete Page	Removes the currently-selected page from the panel's configuration.
 Cut	Cuts the contents from the panel's currently selected button(s).
 Copy	Copies the contents from the panel's currently selected button(s).
 Paste	Pastes the clipboard contents to the panel's currently selected button.
 Copy Category Properties	Copies the properties of another category to the panel's currently selected category. First configure a category's properties according to your needs, and then copy the properties to other categories using this feature as needed. See <a href="#">Copying the Properties from one Category to Another</a> , on page 126.
 Refresh	Reloads the Panel's contents.
 Select All	Selects all the panel's contents.
 Clear All	Deselects all the panel's contents.
 Clear	Removes all the selected panel's contents.


## Creating a New Panel

You can create multiple templates for hardware or software panels of various models. Then, you can add the template to a panel that you have added to the topology. A pre-existing panel can be duplicated; see [Duplicating a Pre-Existing Panel](#), on page 116.


### To create a new panel


- 1 Open GV Orbit Control Client Stage. See [Navigating Back to Stage](#), on page 10.
- 2 Select an area. See [Selecting an Area](#), on page 23.
- 3 Select a topology. See [Selecting a Graph](#), on page 24.


- 4 Select **Configuration > Panel Configurator**. See [Accessing the Panel Configurator](#), on page 113.

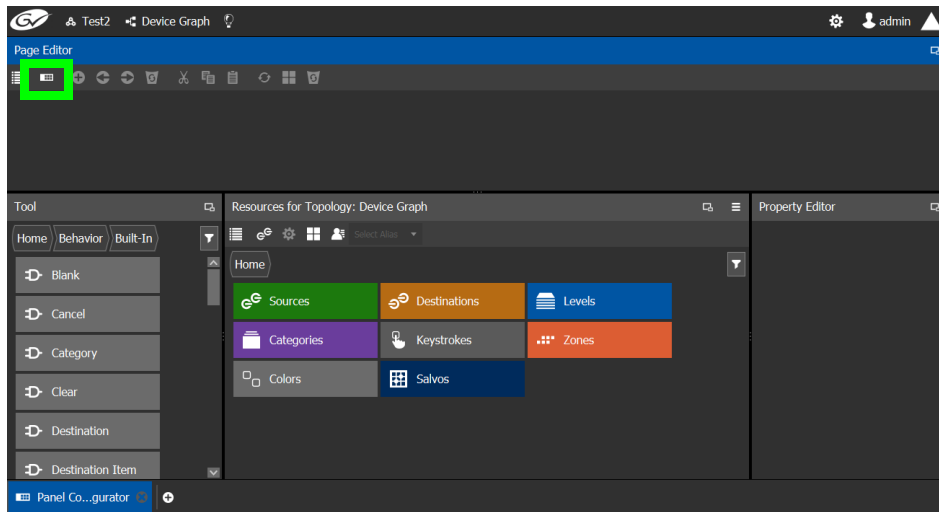

- 5 Click **Manage**.  
A secondary window opens.

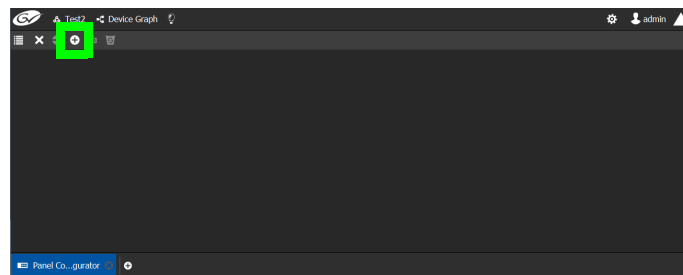


- 6 Click **New** .  
The **New** window appears.

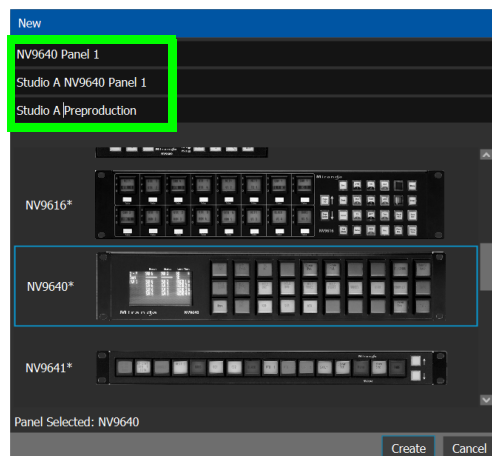

- 7 Enter meaningful text in the **Name**, **Summary**, and **Description** fields to identify the panel.
- 8 Select the required model from the list.
- 9 Click **Create**.

The new panel is added to GV Orbit Control.

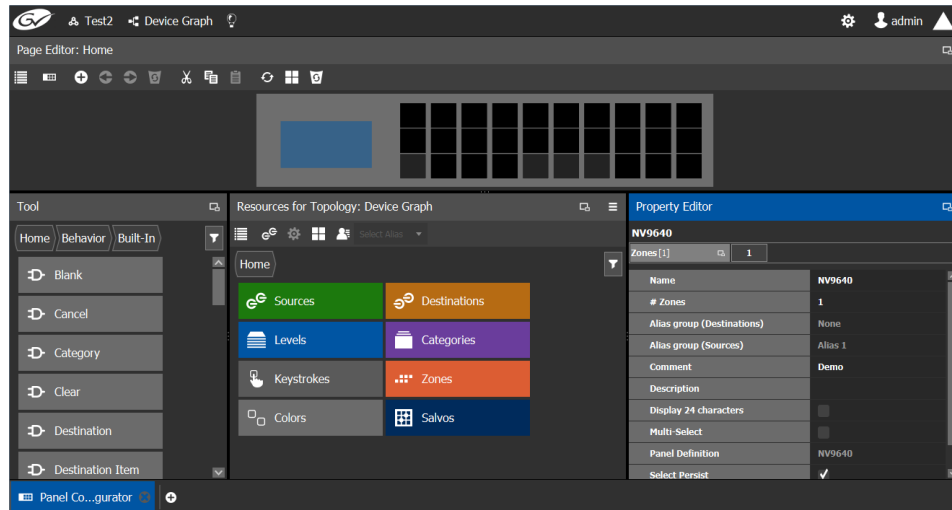


- 10 Configure the panel's properties; see [Configuring a Panel's Properties](#), on page 117.

## Duplicating a Pre-Existing Panel

A pre-existing panel can be copied to reuse that panel's configuration properties and then you only need to modify the necessary panel properties as required for the new application. The new panel configuration will have a new name and any changes to that configuration will not affect the original panel configuration that you chose to base its configuration on.

### To duplicate a Pre-Existing Panel


- 1 Open GV Orbit Control Client Stage. See [Navigating Back to Stage](#), on page 10.
- 2 Select an area. See [Selecting an Area](#), on page 23.
- 3 Select a topology. See [Selecting a Graph](#), on page 24.
- 4 Select **Configuration > Panel Configurator**. See [Accessing the Panel Configurator](#), on page 113.

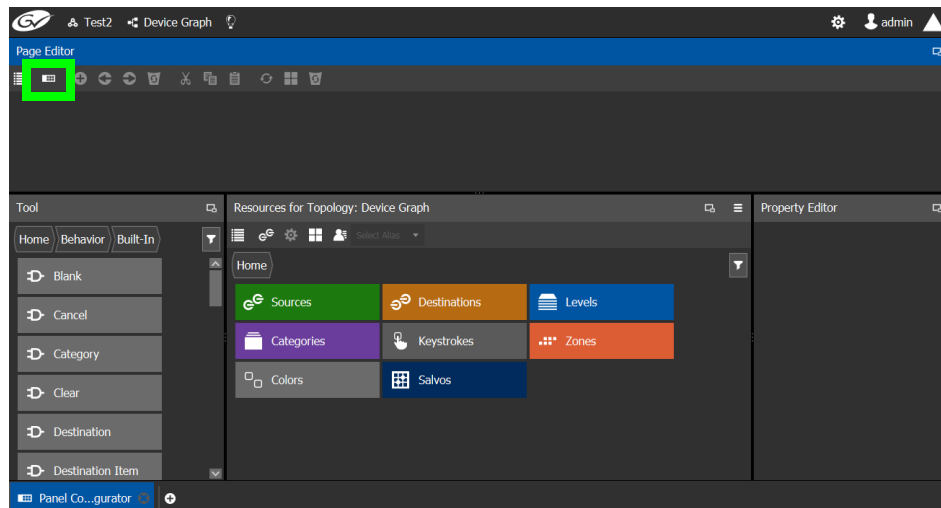


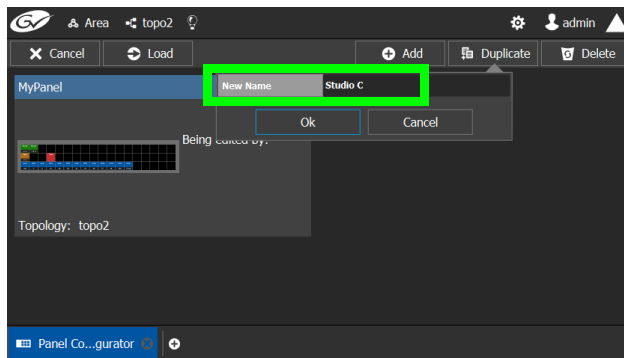
- 5 Click **Manage**.



A secondary window opens.

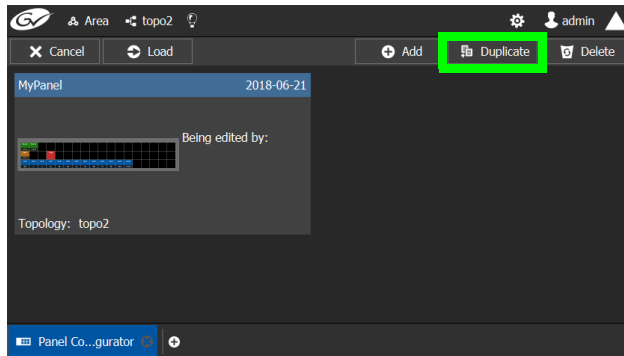

- 6 Click on a pre-existing panel that you want to duplicate and then click **Duplicate**  .  
The **New Name** window appears.




- 7 Enter a name to identify the panel.
- 8 Click **Ok**.
- 9 Configure the panel's properties; see [Configuring a Panel's Properties](#), on page 117.

## Configuring a Panel's Properties

Set the basic parameters to configure the panel.

### To Configure a Panel's Properties

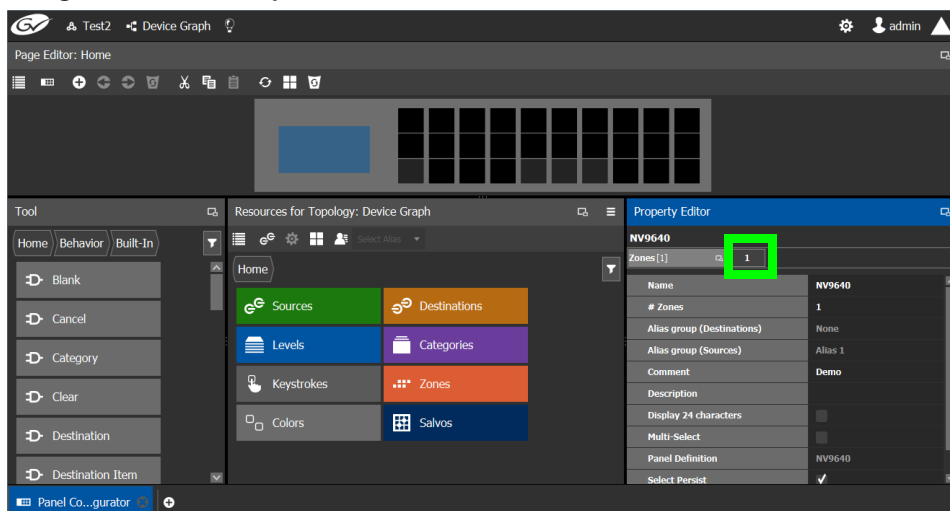

1 Click **1** next to **Zones** [1].

The following properties can be configured for the panel. See also [Description of Common Device Properties](#), on page 162.


Parameter	Description
Name	The name or identifier for this panel
# Zones	Sets the number of zones available for the selected panel. The default is 1, however you can add more as needed. Buttons can be assigned to any zone. Each zone can then act as an separate panel. For example, you can have two zones on a panel, and each zone has its own sources, destinations, and take button. Selection and take in one zone will not affect the other zone. Zones can be assigned to the button in the <i>Property Editor</i> when the button is selected in the <i>Resources for Topology</i> .
Alias group (Destinations)	Shows the currently selected destination / source alias to use on the panel button's / interface to use in place of the short labels. See <a href="#">Using Source and Destination Aliases with a Panel</a> , on page 123.
Alias group (Sources)	
Comment	An optional comment about this panel.
Description	An optional description for this panel.
Display 24 characters	When deselected, panel button labels are limited to a maximum length of 8 characters. When selected, panel button labels are limited to a maximum length of 24 characters. This option is useful when using source / destination aliases that usually are longer than 8 characters. This will disable the destination status on the destination buttons. The display will only show the system names. The level buttons will only show the system names. To create source / destination aliases, see <a href="#">Alias Editor Tasks</a> , on page 276. See also <a href="#">Using Source and Destination Aliases with a Panel</a> , on page 123.
Multi-select	When deselected, the panel will allow multiple selection of destination buttons. This enables an operator to take a single source to multiple destinations at once. When selected, only one destination can be selected at a time.
Panel Definition	The current panel's model number that was added in <a href="#">step 6</a> on page 115.
Select Persist	When deselected, the source and destination selections are cleared when a take is complete. When selected, the source and destination selections are maintained when a take is complete. This parameter is selected by default. This parameter is not zone-specific.

See also [Setting the Properties for Panel Resources](#), on page 124.

## Adding Actions to a Panel

A panel can support a number of actions that must be added to it before the action becomes available to the user. For example, add a Take button to a panel as follows.

- 1 Open the Panel Configurator task for the required topology. See [Creating a New Panel](#), on page 114.
- 2 Select the required Panel.
- 3 Drag the **Take** tool from the **Tools** column onto a panel button.

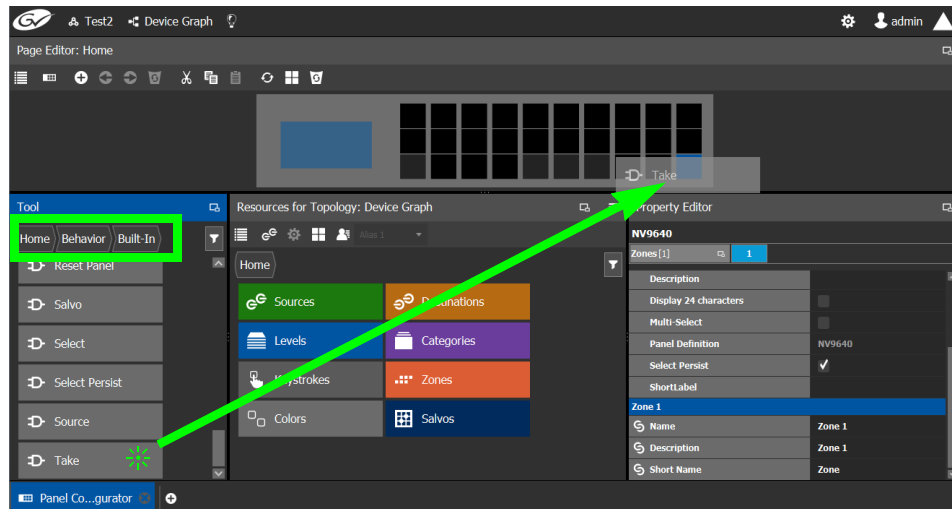

- 4 If the panel has a display, drag the **Page Up** and **Page Down** tools from the **Tools** column onto panel buttons (some panels have two dedicated buttons set apart for this purpose next to the display).

See the panel's documentation for more specific details about the behavior of panel buttons. The following table provides summary information.


 


Built-in Panel Actions	Description
Blank	Some buttons can span multiple pages. This is use to force a button to appear on a higher-level page only.
Cancel	Cancels a Keystroke. Removes all keystrokes in the selection.
Category	This either (1) displays a category's device list or (2) displays a "suffix page." A category button is associated with either a source category or destination category. The button text is normally the category name and is short as space is limited.
Clear	Clears the Keystroke. Removes the last key stroke.
Destination	Select a destination.
Destination Item	This is used to do an indexed take. Use Multiple destination items to preset a multiple take. Each destination item will have a different index.
Destination Status	Provide the status of the selected destination.
Indexed Take	Make a take on the Destination item.
Keystroke	Create a Keypad to select Source or Destination by their numbers.

Built-in Panel Actions	Description
Level	<ul style="list-style-type: none"> <li>• Used to display the level of the destinations.</li> <li>• Used to display the preset of a selected level.</li> <li>• Used for audio Break away and audio shuffling.</li> </ul>
Level Map	This cross-connects levels. The function is typically used to shuffle audio channels, for example, to connect AES1/2 to AES3/4.
List Item	Used in conjunction with the Category list button to create an area where the source or destination will be displayed in a list.
Load Page	Loads any panel page. To add a panel page, see <b>Add page</b> in <a href="#">Page Editor Menu</a> , on page 114
Lock	<p>This prevents changes to the panel settings, especially router crosspoints. When the panel is locked, the button array becomes blank except for the 'Panel Lock' button which becomes high-tally red. The button is a toggle: press the 'Lock' button to lock the panel. Press it again to unlock the panel. The button text is either "Lock" or "Unlock."</p> <p>See also <a href="#">About Lock, Protect, and Release</a>, on page 282 for more information about the use and limitations of this feature.</p>
Multi-Select	Allows the selection of multiple destinations.
Next	Continue forward to browse down a category list (this does not change the page). Normally you would not use this button directly but let the category list place it automatically, unless you need to map to a special button on a panel.
Page Down	This scrolls the alphanumeric display down.
Page Up	This scrolls the alphanumeric display up.
Previous	Browse backwards to move up a category list (this does not change the page). Normally you would not use this button directly but let the category list place it automatically, unless you need to map to a special button on a panel.
Protect	<p>This is a toggle that sets or clears a protect on the current destination device. The protect can be removed at the panel that originally set the protect, at any panel that has the same user ID, or by a forced release at any panel.</p> <ul style="list-style-type: none"> <li>• Note: a protect prevents others from routing to a destination; a lock prevents anyone—even the user who issued the lock—from routing to the destination.</li> <li>• You may lock a protected destination, but you cannot change a locked destination to a protected destination directly. You must first unlock it. The 'Destination Protect' button text is normally <b>Dest Protect</b> and when a selected MD destination is protected, the button legend becomes <b>Dest Unprotect</b>.</li> </ul> <p>See also <a href="#">About Lock, Protect, and Release</a>, on page 282 for more information about the use and limitations of this feature.</p>
Reset Panel	Reset the panel to its initial state and go to the home page.

<b>Built-in Panel Actions</b>	<b>Description</b>
Salvo	<p>This executes a system salvo. A salvo is a pre-defined set of commands. The button text is the salvo's mnemonic. Pressing the salvo button puts the panel in "salvo" mode. To confirm that you want to execute the salvo, press a 'Take' button. When you press the take button, the salvo begins executing immediately. Salvos are typically short in duration. If you want to cancel the salvo before it executes, press the salvo button again. If you press an 'Information' button while the panel is in salvo mode, the panel presents the salvo commands on the display. You may scroll the display to view the entire salvo.</p> <p>See <a href="#">Creating Salvos</a>, on page 284.</p>
Select	<p>After selecting Source or Destination from a Keypad, the user presses Select. This confirms the choice.</p>
Select Persist	<p>The destination stays selected after a Take.</p>
Source Quick Source	<p>This selects a source. (Note that a quick source button selects a source and also performs an immediate take.) Quick source and source buttons are similar, except that the quick source performs a take. Be aware of which buttons are quick sources so you do not perform an accidental take.</p>
Take	<p>In X-Y mode, a take button routes the preset source device(s) on selected levels to the selected destination device. In MD mode, a take button routes the preset source device(s) to the selected destination device(s) on all levels.</p>

## Adding Resources to the Panel


The Resources for Topology menu has the following menu options.

Icon	Description
 Quick Source	This is shown only when <i>Sources</i> is selected. When enabled, the sources that are dragged onto the panel are quick sources, meaning the operator does not need to press the take button to do the take. The take is done as soon as the source is selected on the panel.
 Select All	Selects all the available resources.
 Clear All	Deselects all the available resources.
 Select Alias	Select the Alias you want to use to identify Source and Destination streams in GV Orbit Control's interface.

Aliases are created in the Alias Editor. See [Adding Aliases](#), on page 277.

### To add panel resources


- 1 Open the Panel Configurator task for the required topology. See [Creating a New Panel](#), on page 114.
- 2 Select the required Panel.

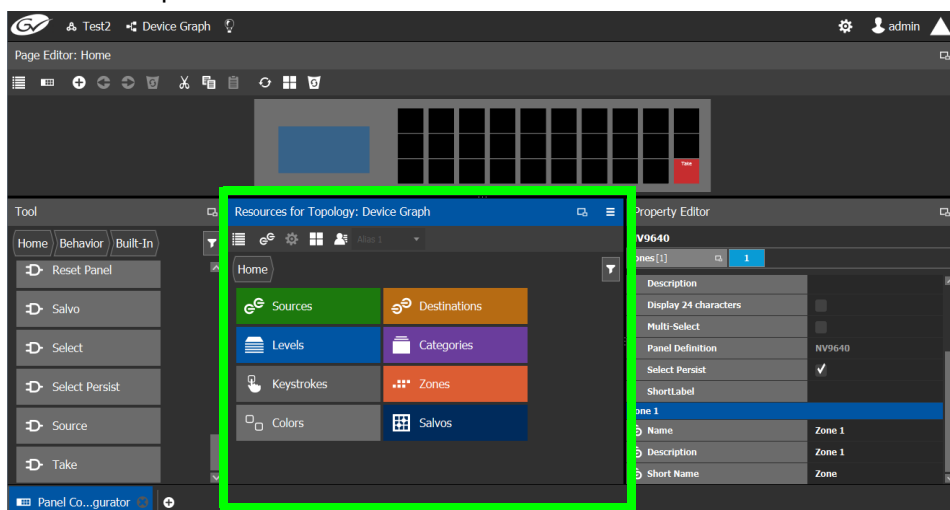

The resources that can be added to the panel are displayed in the lower section of the center column under **Resources for Topology**.


- 3 Click on resource type to begin adding individual resources to the panel such as **Sources**, **Destinations**, or **Levels**.

For example, click **Sources** to add cameras and other types of sources.

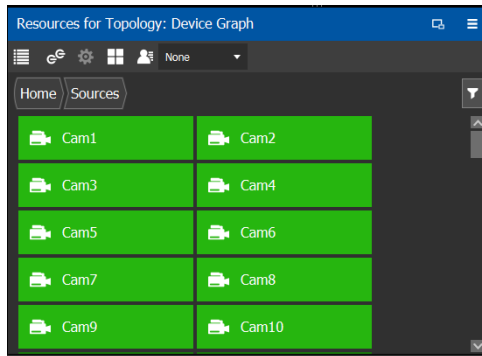

All the sources available in the topology are listed. This includes the logical sources you created in the Logical Device Table task. See [Logical Device Table Tasks](#), on page 78.

- 4 Select a resource and drag it to one of the panel buttons at the top of the column. More than one resource can be added at a time; to add to a selection, use *Shift* or *Ctrl* to select a range of resources or to add another resource to the selection.

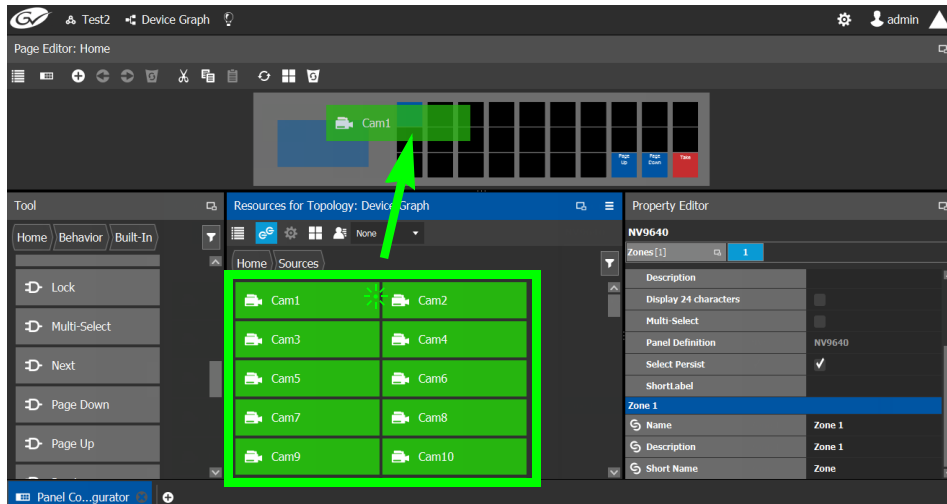

- 5 For each panel button you have added a resource to, select it individually and set the properties for it in the Property Editor. For a Category, see [Setting the Properties for Panel Resources](#), on page 124.
- 6 Add resources from **Destinations**, **Levels**, and **Keystrokes** to the panel as required.

**Note:**


Only use the video+ancillary (V-ANC) logical level button unless you are routing in SMPTE ST 2110 mode. For SMPTE ST 2110 mode, you can individually use the Video or the Ancillary logical level buttons.

To directly control a GV Node's internal matrix, you must use the video + ancillary logical level button for video breakaway.

### Using Source and Destination Aliases with a Panel

Aliases can be used for a panel to change the name of sources and destinations from short labels to the labels of the corresponding alias. First you must create one or more source and destination aliases; to create an alias, see [Alias Editor Tasks](#), on page 276.


- 1 Under **Resources for Topology**, click **Sources** or **Destinations**.
- 2 Select from the **Select Alias** drop-down list the alias to use for this panel instance.

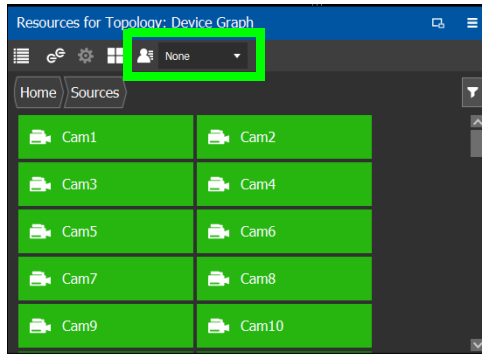

- 3 If the aliases are longer than 8 characters, consider setting the **Display 24 characters** option for the panel in the Panel's **Property Editor**. See [Creating a New Panel](#), on page 114.

### Setting the Properties for Panel Resources

When a resource has been added to a panel's button, you can select the button to then configure the properties for it.

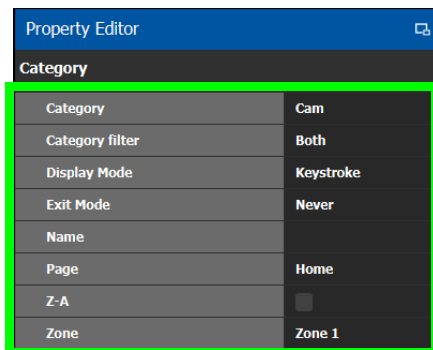

Parameter	Description
Category	Selects the category instance for the selected button. Typically this should be the category that was dragged onto the panel in Resources for Topology. It can be changed here for another category.
Category filter	A category can contain sources and/or destinations. Select the ones you want to be displayed. <b>Both</b> : display sources and destinations. <b>Destinations</b> : display destinations only. <b>Sources</b> : display sources only.
Display Mode	<b>Keystroke</b> : if the category item has keystrokes assigned to it, you can select this option. <b>List</b> : if not select List; this will list all sources/destinations in the category.




Parameter	Description
Exit Mode	<p>Select how the panel user will be returned once they have made a category item selection or Take. The category item selection is displayed once the panel user has pressed the category selection button.</p> <p><b>Never:</b> The panel user will remain in the same page where the category item selection is made. Other navigation buttons must be added to the page so that the panel user can navigate from the page. With this option, the <b>Exit Page</b> parameter below is not applicable.</p> <p><b>Preset:</b> Once the panel user has made a selection in the category items, the panel user is immediately returned to the previous page (where the category selection button is located). This is the default. With this option, the <b>Exit Page</b> parameter can send the panel user to any other page (see below).</p> <p><b>Take:</b> When the category items page has a Take button, the panel user is returned to the previous page (where the category selection button is located) once they select a category and then click Take. With this option, the <b>Exit Page</b> parameter can send the panel user to any other page (see below).</p> <p>See <a href="#">Panel Configuration Example Using Categories with Custom Navigation</a>, on page 132 for an example of how to use this parameter.</p>
Exit Page	<p>In conjunction with the <b>Exit Mode</b> parameter, this parameter changes the <b>Preset</b> and <b>Take</b> return navigation to any other panel page. This can be used to save the panel user from making extra panel presses to navigate back to the <b>Home</b> page, for example.</p> <p>In order to use this feature the <b>Exit Mode</b> must be set to <b>Preset</b> or <b>Take</b>. See above.</p> <p>When the value for this parameter is blank (empty), the <b>Exit Page</b> parameter has no effect. This is the default.</p> <p>When the value for this parameter is a panel's page, the panel behavior is to take the panel user to the selected panel page once they have pressed the category item selection or Take button. See <a href="#">Panel Configuration Example Using Categories with Custom Navigation</a>, on page 132 for an example of how to use this parameter.</p>
Name	<p>Set the name that will appear in the category button instead of the category name.</p>
Page	<p>Sets the page to display when the category button is pressed. It should typically contain either List Item buttons or Keystroke buttons.</p>
Sort Mode	<p>If the list display mode is selected, this will:</p> <p><b>A-Z:</b> show the sources/destinations in alphabetical order.</p> <p><b>Manual:</b> show the sources/destinations in the order you have set for the Category. see <a href="#">Re-ordering Category Content</a>, on page 110.</p> <p><b>Z-A:</b> show the sources/destinations in reverse alphabetical order.</p>


Parameter	Description
Next	These options are present for the List Item buttons. If the list of sources/destinations in the category is greater than the number of list item buttons added to the page, some buttons will be used as next or previous buttons. This is determined automatically by GV Orbit Control, but you can override the default by specifying that a button can be used as a next or previous button if need be.
Previous	
Keystroke	This parameter is available with the Keystroke button. It specifies the keystroke associated with the button.
Zone	Select the zone for the category button. Buttons can be assigned to any zone. Each zone can then act as an separate panel. For example, you can have two zones on a panel, and each zone has its own sources, destinations, and take button. Selection and take in one zone will not affect the other zone. Zones can be assigned to the button in the <i>Property Editor</i> when the button is selected in the <i>Resources for Topology</i> .


### Copying the Properties from one Category to Another



Copies the properties of the panel's currently selected category to one or more other categories used on the panel. The scope (the type of parameters) of the copy can be controlled.

#### To copy the Properties from one Category to Another

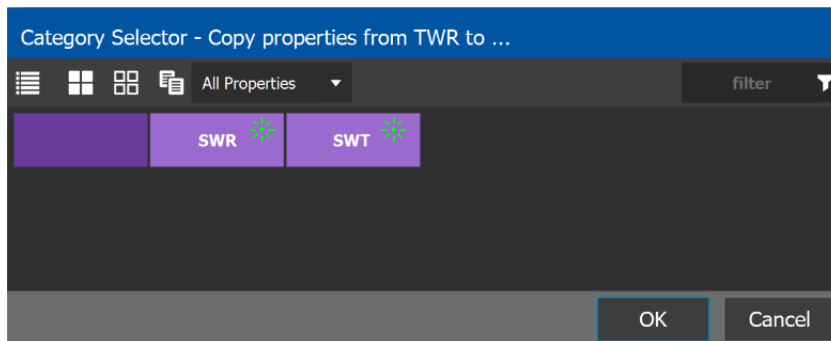- 1 Add two or more categories to the panel. See [Adding Resources to the Panel](#), on page 122.
- 2 Configure the properties of one of the categories according to your needs. See [Setting the Properties for Panel Resources](#), on page 124.
- 3 Select the category from which you want to copy the properties from.
- 4 Click  **Copy Category Properties** to copy the properties of the selected category to other categories.



Icon	Description
	Select All
	Selects all the available categories.


Icon	Description
 Clear All	Deselects all the available categories.
 Property to copy	<p>Select from the dropdown list the property parameter field you want to copy.</p> <ul style="list-style-type: none"> <li>• <b>All Properties:</b> Copy all the following properties to the selected categories: <b>Display Mode, Exit Mode, Page, Category Filter, Zone, and Sort Mode.</b></li> <li>• <b>Display Mode, Exit Mode, Page, Category Filter, Zone, and Sort Mode:</b> This allows you to copy only a specific property parameter while leaving the remaining property parameters for the categories untouched.</li> </ul> <p>For more information about these category property parameters, see <a href="#">Setting the Properties for Panel Resources</a>, on page 124.</p>

5 Select one or more categories to which you want to copy the properties to. Click **OK**.


### Changing a Button's Color used to Represent a State

Some panel buttons support the display of more than one color. For buttons that support colors, the button's color is used to show the current operating state. The color used for a button to represent any one of the given states can be changed as follows.

- 1 Click a button that has a behavior previously associated to it (a blank button will not work). See [Adding Actions to a Panel](#), on page 119 and [Adding Resources to the Panel](#), on page 122.

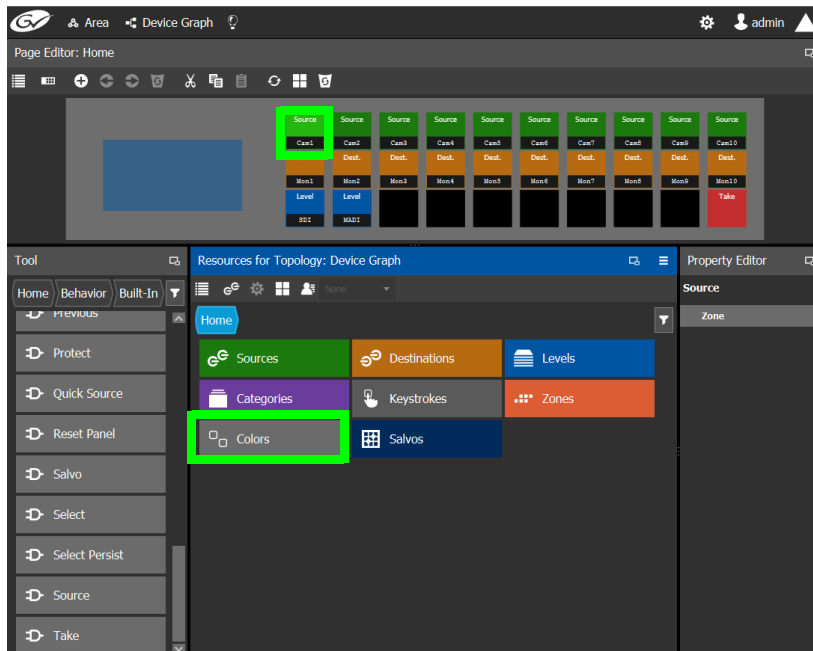


- 2 Click on the **Colors** resource type.

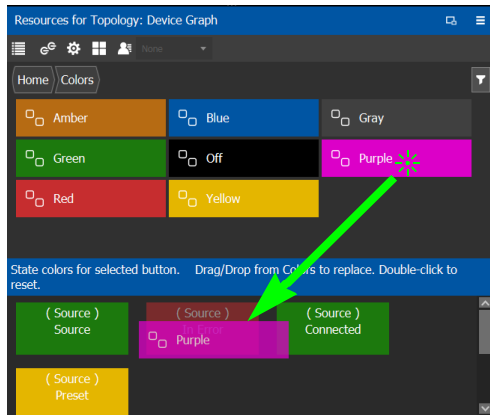

All available state colors for the selected button are shown on the lower half.


- 3 Drag a color from the color pallet (shown on the upper half) onto any one the state colors on the lower half.

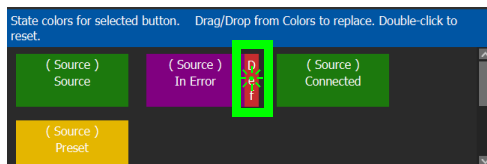


A *Def* bar appears on the state color which indicates the default color. Double-click the state color to revert to this default color.

## Changing a Button's Default Color used to Represent a State

The default color used by all buttons for a behavior state can be changed when an across the system change is necessary.

- 1 Click the Custom Color Settings icon .
- 2 Click a behavior that you want to configure, for example, *Destination*.

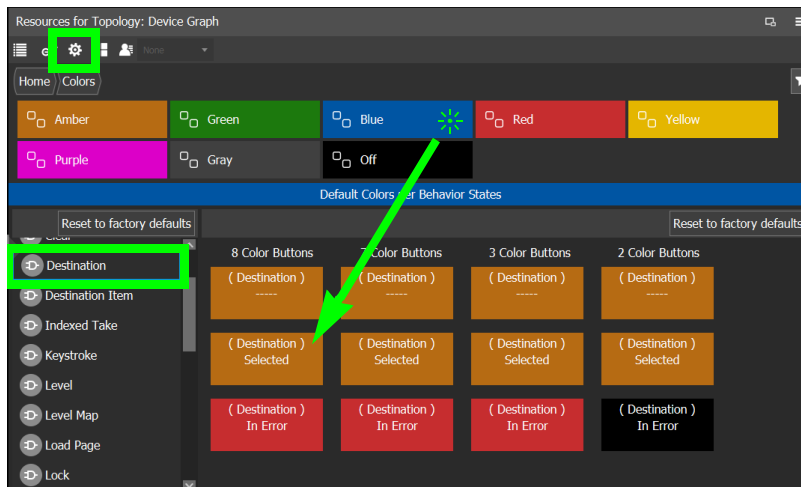

- 3 Drag a color from the color pallet (shown on the upper half) onto any one the state colors on the lower half.


Certain panel buttons support fewer colors. The 7, 3, and 2 Color Buttons columns will show how your color choice will be implemented for these reduced color-range buttons.

## Adding the New Panel to the Topology

After you have configured one or more templates for your software or hardware panels, you can add a panel to your topology.

### To add a panel to the topology

- 1 Add the Panel to the Topology: from the **Device Library, Virtual Device**, find the Panel bubble. See [To add a Virtual Device to a topology](#), on page 44.

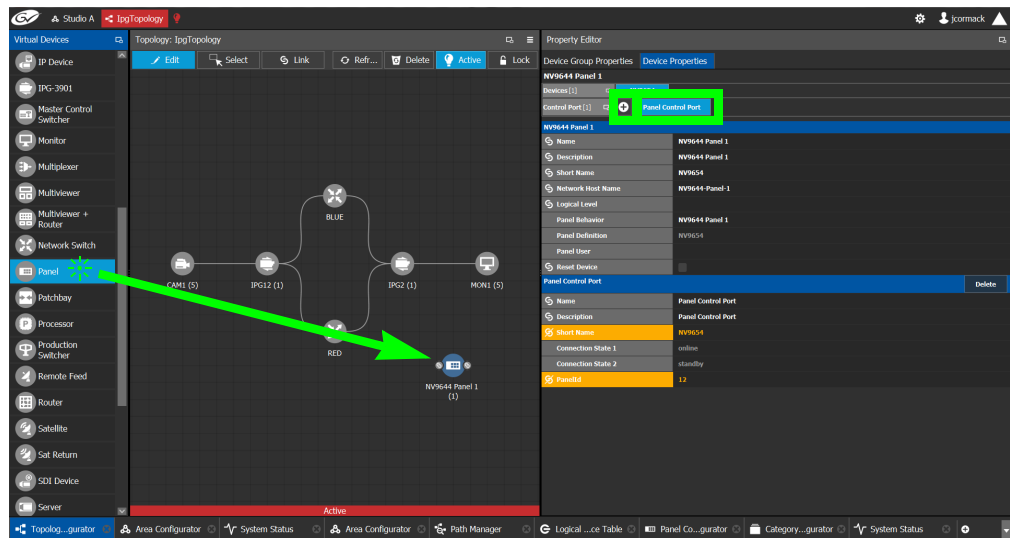

- 2 Select the bubble for the panel device to configure the panel's Device Group Properties in the **Property Editor**. See also [Description of Common Device Properties](#), on page 162.

Parameter	Description
Name	The name or identifier for this panel instance.
# Devices	The number of panel instances in this device group.
Network Host Name	When one or more panels are managed by DCNM through the media network, set a unique network identifier for these panels so as to be able to push policies to them.
Advanced > Description	An optional description for this panel's control port.
Advanced > Logical Level	The logical level for this panel. See <a href="#">Logical Level Editor Tasks</a> , on page 30.
Advanced > Default Connector Type	The panel's connector type.

- 3 Select **Device Properties** and click **New**  next to **Control Port** at the top of the **Property Editor** and select **NV96XX Panel Control** from the list.

The **Panel Control Port** tab appears. See also [Description of Common Device Properties](#), on page 162.

Parameter	Required <sup>a</sup>	Description
Name		The name or identifier for this panel instance.
Description		An optional description for this panel instance.
Logical Level		The logical level for this panel. See <a href="#">Logical Level Editor Tasks</a> , on page 30.
Panel Behavior	•	Select the name of the panel you used when you created the panel (see <a href="#">Creating a New Panel</a> , on page 114) from the drop-down list.
Panel Definition		When you have selected the <i>Panel Behavior</i> parameter, this is the panel's model number that was selected when you created the panel. It is read-only.
Panel User	•	Select the panel's user name from the drop-down list. For further information, see <a href="#">Administration Tasks</a> , on page 287. A panel <i>Admin</i> or <i>Operator</i> user has the ability to release locks made by another user. Whereas non-Admin or non-Operator users can only release locks they made themselves. Destinations Lock/Protect is performed through the panel and if a destination is currently locked by another user, any take to this same destination will fail. If a specific router port is locked/protected but not linked to any destination within the Control System, the Lock/Protect status won't be exposed in the Control System and in fact is not releasable. See also <a href="#">About Lock, Protect, and Release</a> , on page 282 for more information.
Reset Device		When the topology is inactive (see <a href="#">Making an Active Topology Inactive</a> , on page 73), click to reset the device.

a. This parameter must be configured in order for the panel to become functional.

- 4 Select **Panel Control Port** tab to make the following properties visible. See also [Description of Common Device Properties](#), on page 162.


Parameter	Required <sup>a</sup>	Description
Panel Control Port > Name		The panel's control port name.
Panel Control Port > Description		An optional description for this panel's control port.

Parameter	Required <sup>a</sup>	Description
Panel Control Port > Connection State 1 / 2		Connection State 1 shows the connection status of the panel with the primary server of a server group. Connection State 2 shows the connection status of the panel with the secondary server of a server group. See <a href="#">Configuring a Controller Group</a> , on page 19. <b>unknown:</b> the topology is inactive (see <a href="#">Activating a Topology</a> , on page 72) or the panel does not have network connectivity to the GV Orbit Control server(s). <b>offline:</b> the panel does not have network connectivity to the GV Orbit Control server(s). <b>online:</b> the panel is connected to the GV Orbit Control server(s).
Panel Control Port > PanelID	•	Each control panel must have been configured with a unique Panel ID number. Enter the Panel ID that corresponds with the physical panel that is to be used with this panel instance.


a. This parameter must be configured in order for the panel to become functional.

- In the hardware or software panel, ensure you have configured the Panel ID number and the Controller 1 IP address. For a software panel, set **Connect**.

When the panel is online, you can control GV Orbit Control from the panel.

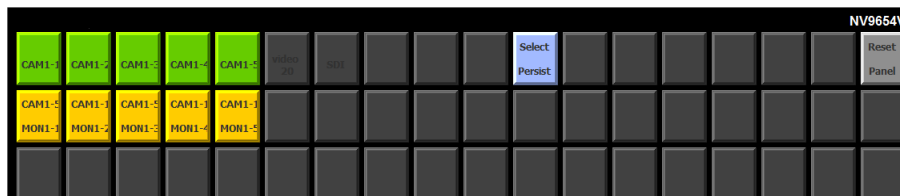

You can view the health of the panel in the System Status task. See [System Status Task](#), on page 269.

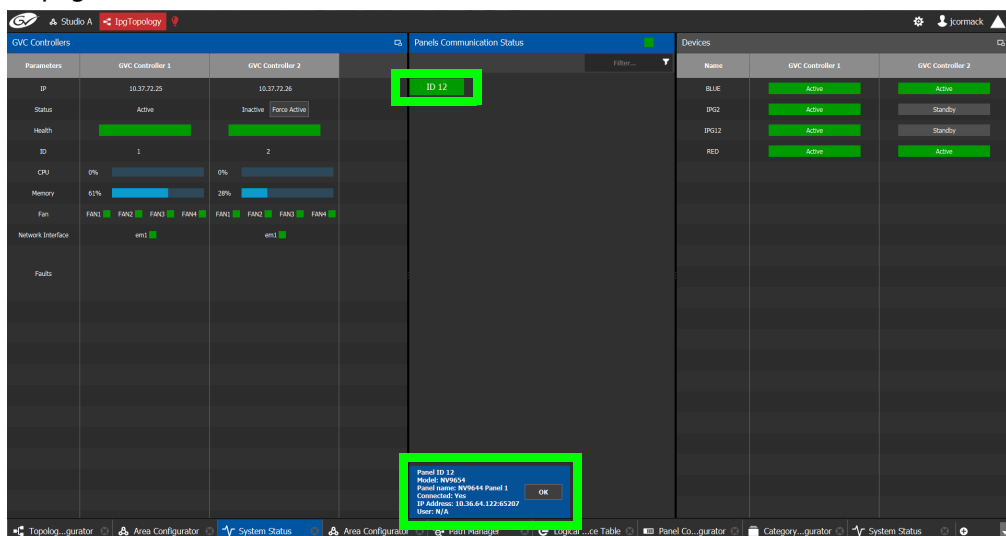

The green bar indicates the health of the panel is good.


- 6 Click the Panel ID at the top of Panel Communication Status column to view data on the panel. This appears at the bottom of the interface.

## Panel Configuration Example Using Categories with Custom Navigation

This panel configuration example shows how to:

- Set panel navigation when using categories.
- Generally configure a panel.

For this example, the following panel page structure is used. The goal of this example is to teach you how to configure the panel so that the panel user has a work flow with the least number of panel navigation button presses (that is, the need to use *exit*, *return*, or *home* button presses has been minimized).

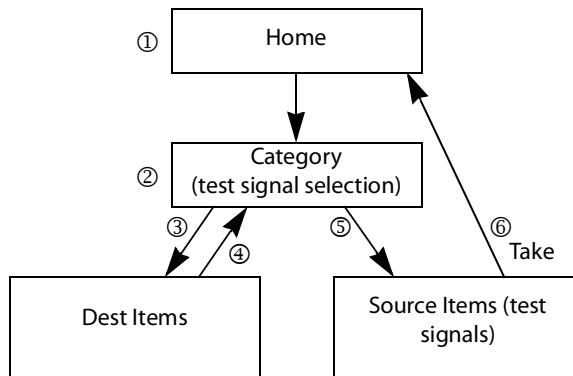

*Panel Page Structure and Panel User Navigation Steps for this Example*



The following steps outline panel navigation button presses used for this example. See the circled numbers in the above diagram.

Step	Panel User Button Press	Description
1	Category	On the panel's <b>Home</b> page is: <ul style="list-style-type: none"> <li>• Is a range of sources and destinations, plus a Take button for normal routing activities.</li> <li>• A <b>Category</b> button (test signal selection) that allows the panel user to route a test signal to a destination using categories.</li> </ul>
2	Dest Items	On the panel's <b>Category</b> page (test signal selection) are <b>Dest Items</b> and <b>Source Signals</b> buttons (test signals). The panel user presses <b>Dest Items</b> .
3	Select a destination	A selection of five destination category items are shown in the <b>Dest Items</b> page. The panel user presses a button to select a destination to which a test signal will be sent. The panel user is returned to the panel's <b>Category</b> page.
4	Source Items	On the panel's <b>Category</b> page (test signal selection) are <b>Dest Items</b> and <b>Source Signals</b> buttons (test signals). The panel user presses <b>Source Items</b> .
5	Select a source and then Take	A selection of five source category items (test signals) are shown in the <b>Source Items</b> page. The panel user presses a button to select a source (test signal) and then presses <b>TAKE</b> .
6	–	Once the Take is made in the <b>Source Items</b> page, the panel's configuration navigates the panel user to the <b>Home</b> page where the panel user is ready to continue with other operations.


#### About panel user navigation in this example

Note that *no up, home, or return* navigation buttons are used in this example. In practice, a panel's configuration should include navigation buttons as an answer to when a panel user changes their mind and no longer wants to commit to an action. In this example, a panel user must complete the action once started; there is no escape function to exit the above procedure part way through. This is solved by adding a *Load Page* action to a panel button and configuring the action to take the panel user to the **Home** Page for example. See [Adding Actions to a Panel](#), on page 119.

**To configure this example**

Proceed as follows.


- 1 Create the following topology that is used for this example.

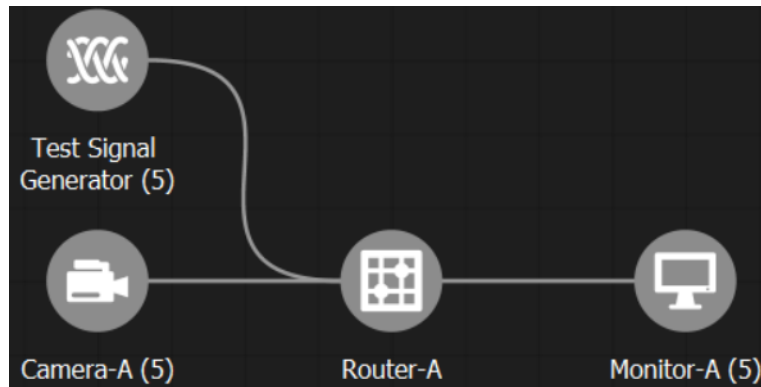

Add to the Topology Configurator the following device groups: 5 Test Signal Generators, 5 cameras, 5 monitors. Then add a router with 10 inputs and 5 outputs to the Topology Configurator. See [Adding Devices to a Topology](#), on page 44 and [To name a device and set the number of devices in the group](#), on page 45.


- 2 Click Quick Connect to link the devices together. See [Using Quick Connect to Link all Devices in a Topology](#), on page 58.
- 3 In the Category Configurator, Create the categories you will use with the panel. See [Creating Categories for the Sources and Destinations in Your Topology](#), on page 108.

For this example, five test signal sources have been added to the **Source** Category (shown) and five destinations have been added to the **Destination** Category (not shown).

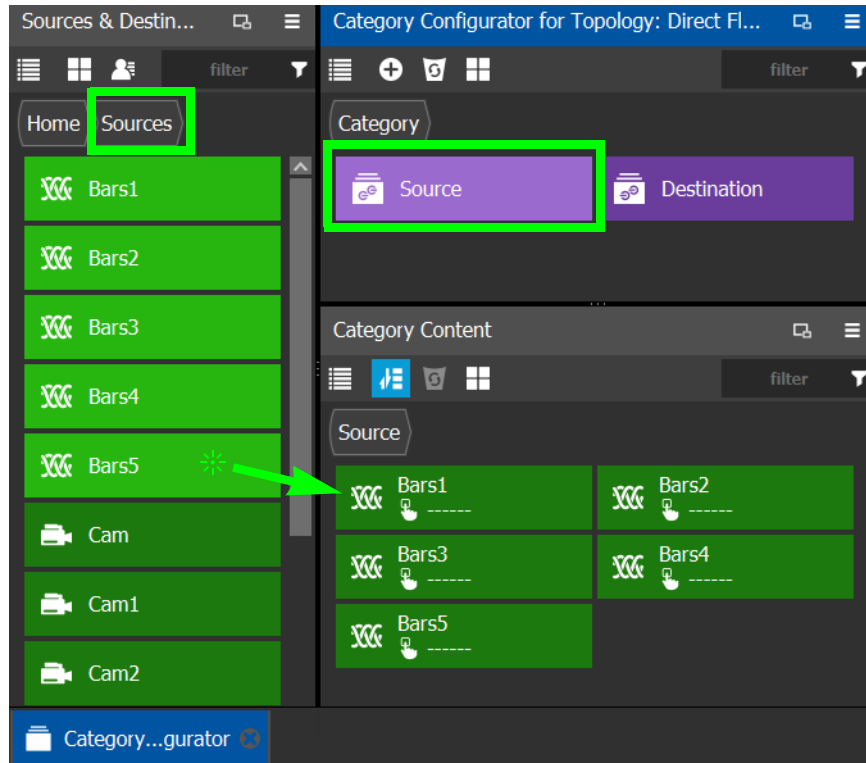


- 4 Create a panel if you have not already done so. See [Creating a New Panel](#), on page 114.
- 5 Configure the panel's properties. See [Configuring a Panel's Properties](#), on page 117.

- 6 Add the following pages to the panel: **Category**, **Source Items**, and **Dest Items**. See [Page Editor Menu](#), on page 114.

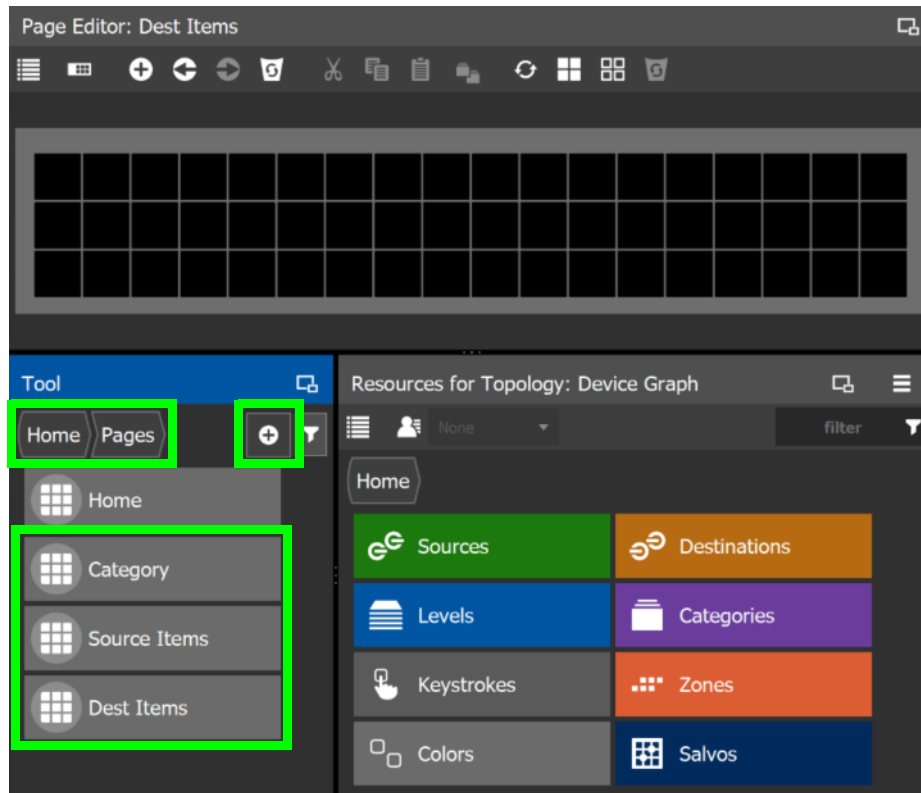


These are the pages between which the panel user will navigate according to the configuration parameters you set in the Panel's configuration, shown in later steps in this procedure.


- 7 On the **Home** page, add a **Load Page** from the **Built-In** Tool to a panel button. See [Adding Actions to a Panel](#), on page 119.

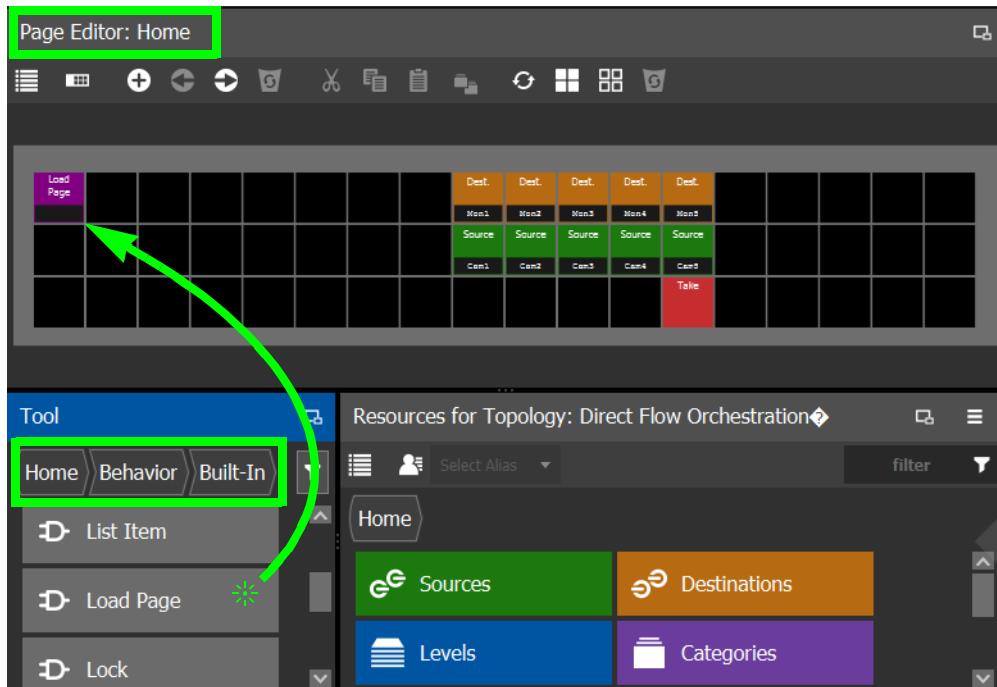


- 8 On the **Home** page, select the **Load Page** panel button and set the **Page** property parameter to **Category**. With this setting, when the panel user presses this button, they will be shown the **Category** page.

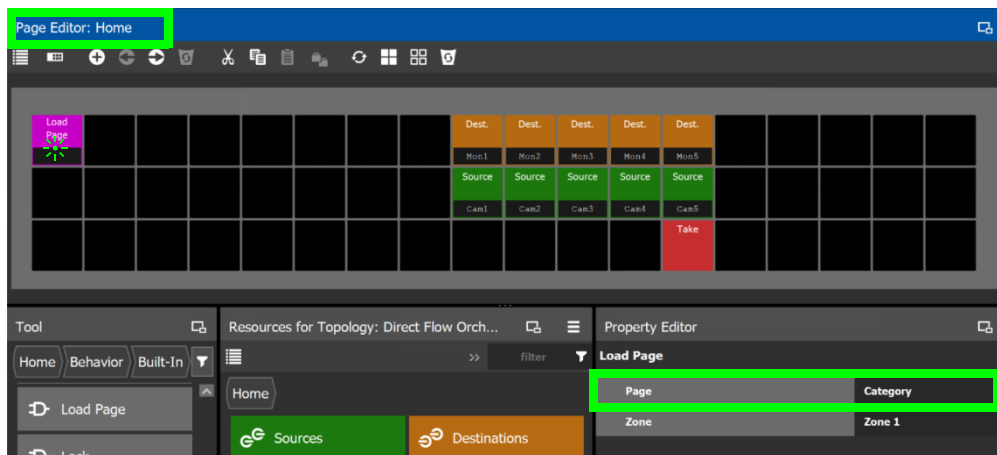


- 9 On the **Category** page, add the **Destination** Category to a panel button. See [Adding Resources to the Panel](#), on page 122.

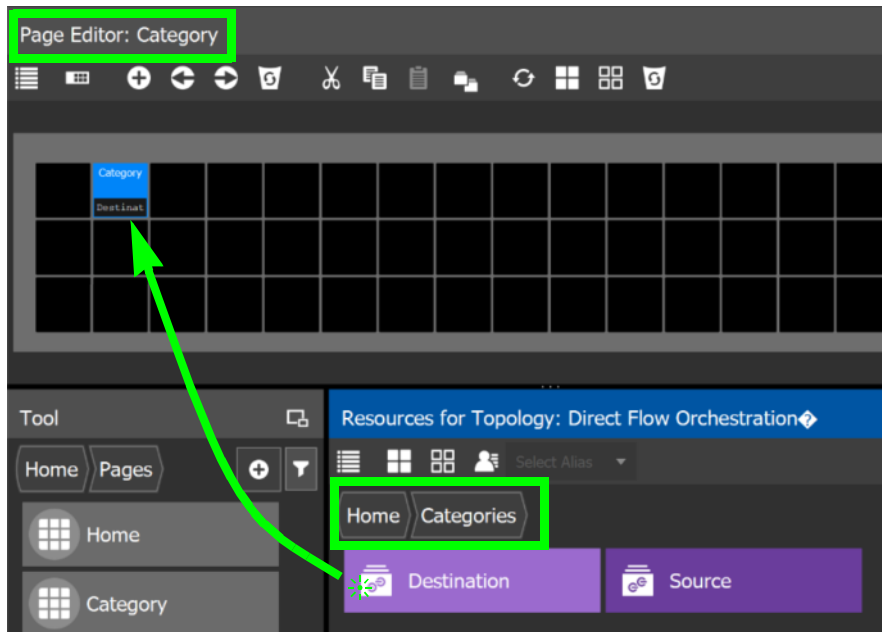

- 10 On the **Category** page, add the **Source** Category to a panel button. See [Adding Resources to the Panel](#), on page 122.

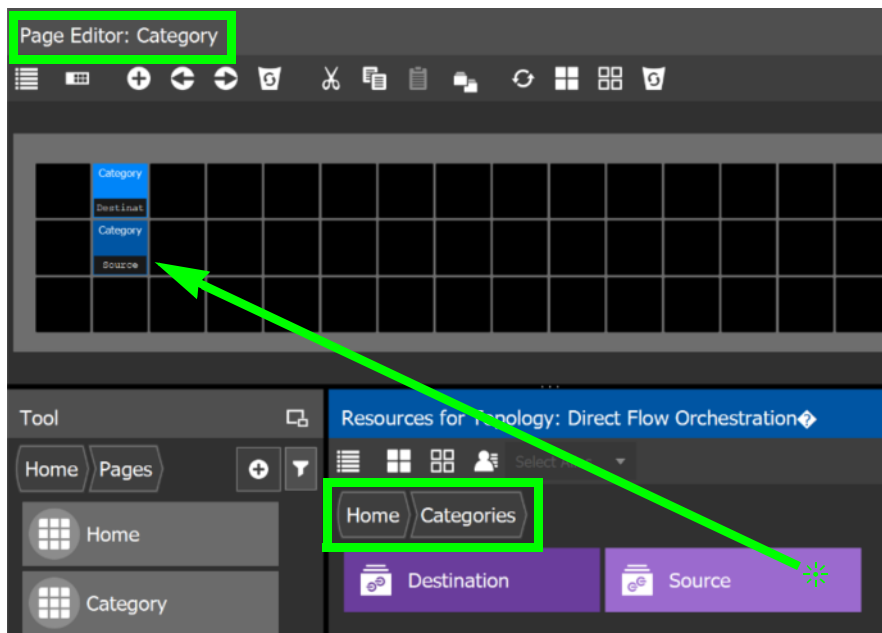

- 11 On the **Category** page, select the **Destination** Category panel button and set the **Exit Mode**, **Exit Page**, and **Page** property parameters.

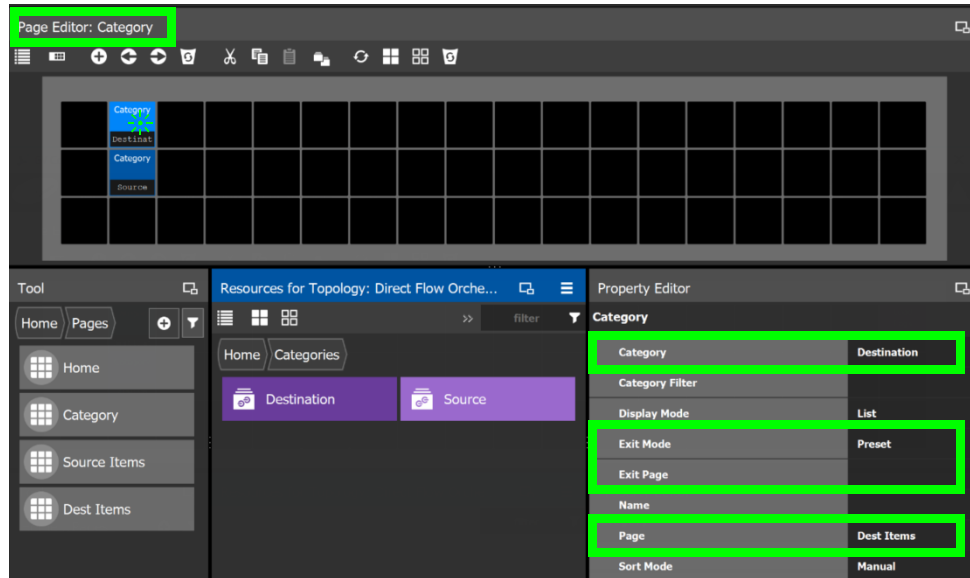


The following configuration parameter explanation should be interpreted within the context of this example procedure.

Parameter	Description
Category	This should show <b>Destination</b> for this step.
Exit Mode	Select how the panel user will be returned once they have made a category item selection or Take. In this example, set this to <b>Preset</b> . With this option, the panel behavior is to take the panel user to the <b>Category</b> page immediately once they have pressed a destination category in the <b>Dest Items</b> page.
Exit Page	In this example, this is set to [blank]. The <b>Exit Page</b> feature is unused.
Page	For the <b>Destination</b> category, set to <b>Dest Items</b> . With this setting, when the panel user presses this panel button on the <b>Category</b> page, they will be shown the <b>Dest Items</b> page where the panel user is able to select a destination item.

See also [Adding Resources to the Panel](#), on page 122 and [Setting the Properties for Panel Resources](#), on page 124 for more information about the remaining properties.

- On the **Category** page, select the **Source** Category panel button and set the **Exit Mode**, **Exit Page**, and **Page** property parameters.

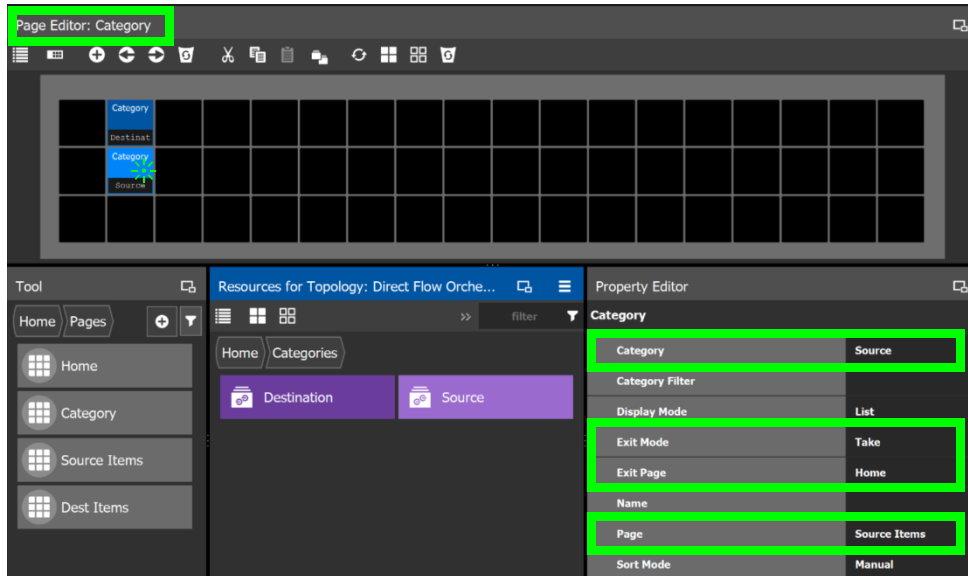


The following configuration parameter explanation should be interpreted within the context of this example procedure.

Parameter	Description
Category	This should show <b>Source</b> for this step.
Exit Mode	Select how the panel user will be returned once they have made a category item selection or Take. In this example, set this to <b>Take</b> . With this option, the panel user has to select a source category and then press the Take button.
Exit Page	In conjunction with the <b>Exit Mode</b> parameter, this parameter changes the <b>Take</b> return navigation to any other panel page. In this example, set this to <b>Home</b> ; the panel behavior is to take the panel user to the <b>Home</b> page immediately once they have pressed the category item selection and then the Take button in the <b>Source Items</b> page.
Page	For the <b>Source</b> category, set to <b>Source Items</b> . With this setting, when the panel user presses this panel button on the <b>Category</b> page, they will be shown the <b>Source Items</b> page where the panel user is then able to select a source item and then clicks Take.




- 13 On the **Dest Items** page, add five **List Item** from **Built-In** to five panel buttons. This corresponds to one **List Item** for each of the five sources.

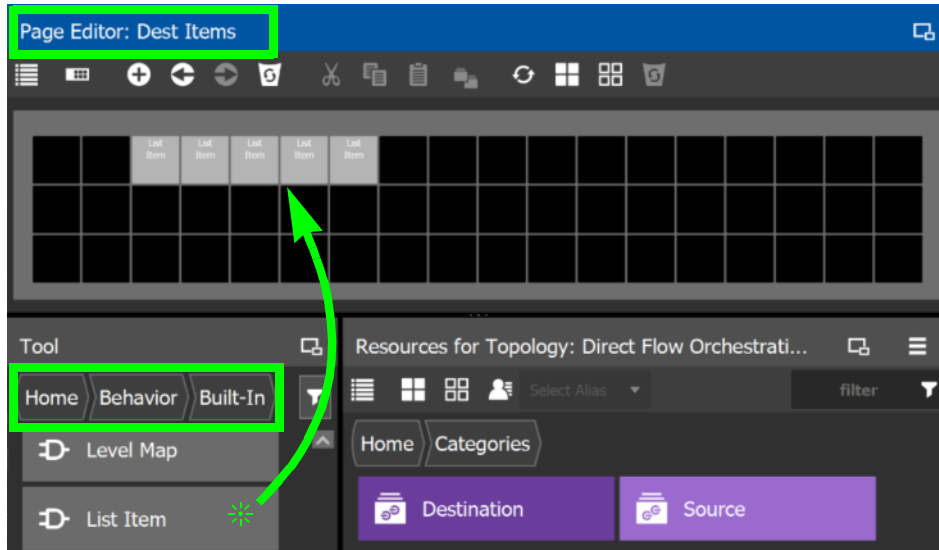


**Note:** You can use copy and paste a block of **List Item** on the panel to quickly create a large number of sources or destinations.

- 14 On the **Source Items** page, add five **List Item** from **Built-In** to five panel buttons. This corresponds to one **List Item** for each of the five sources. See [Adding Resources to the Panel](#), on page 122.

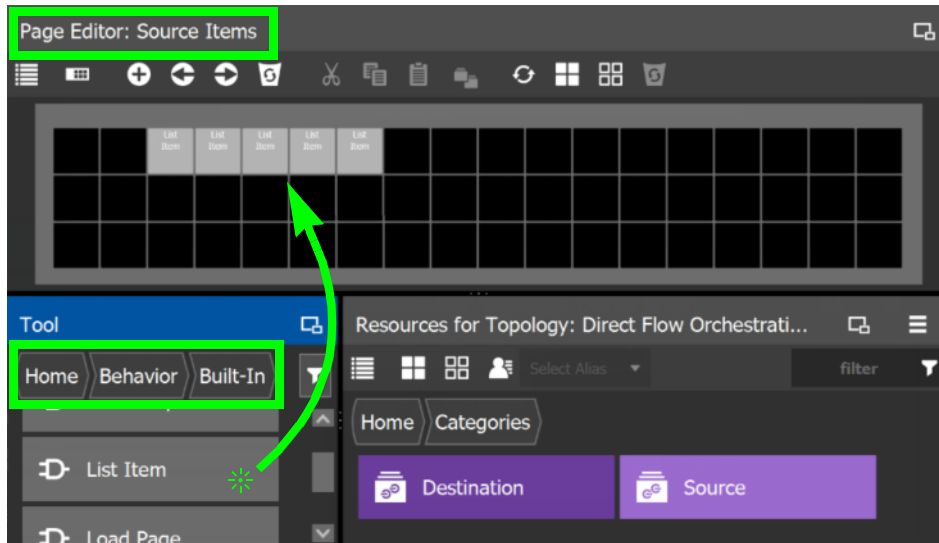

- 15 On the **Source Items** page, add a **Take** button.

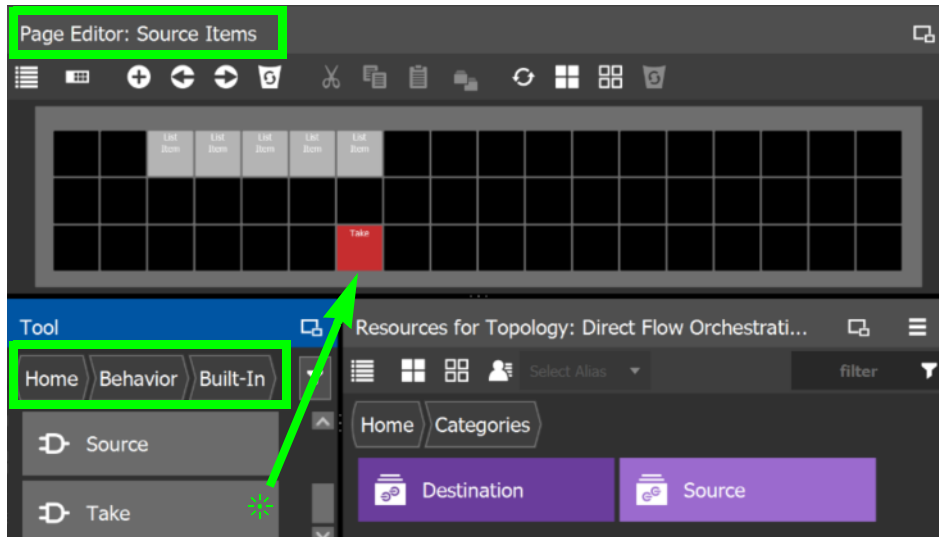

- 16 Add a panel device to the topology and configure the panel and its control port properties. See [Adding the New Panel to the Topology](#), on page 129.  
**Note:** The panel device bubble on the Topology Configurator does not need to be linked to any other bubble.
- 17 In the Topology Configurator, activate the topology. See [Activating a Topology](#), on page 72.
- 18 Test the panel's behavior. Change the **Exit Page** and **Exit Mode** property parameters for the **Source** and **Destination** buttons on the **Category** page to see how the navigation behavior changes.
- 19 Add load page buttons that will allow the panel user to return to the Home page, to each of the following pages: **Category**, **Source Items**, and **Dest Items**. See also [Adding Resources to the Panel](#), on page 122 and [Setting the Properties for Panel Resources](#), on page 124 for more information.  
 This step is necessary because when the changing the **Exit Page** and **Exit Mode** property parameters for the **Source** and **Destination** buttons on the **Category** page, the panel user might wind up in a page without a way to exit out of it. Once testing is complete, and navigation is perfected, these buttons can be removed.


## GPIO Configurator Tasks

Tally devices you connect to the panel's inputs can trigger events in the router control system such as a salvo or it can route a source to a destination.

In reaction to pressing a panel button, to a GPI input, or to a XPT status, the router control system can trigger events through the panel's relay outputs to switch your tally devices.

**SUPPORTED PANELS:** the following panels that support GPIO; NV9605, NV9606, NV9607, NV9609, NV9646, NV9649 (configured as a NV9609 panel model), NV9640, and NV9642.

Soft panels are available with GPIO controls that allow you to test and debug your GPIO configuration before putting a panel into production.

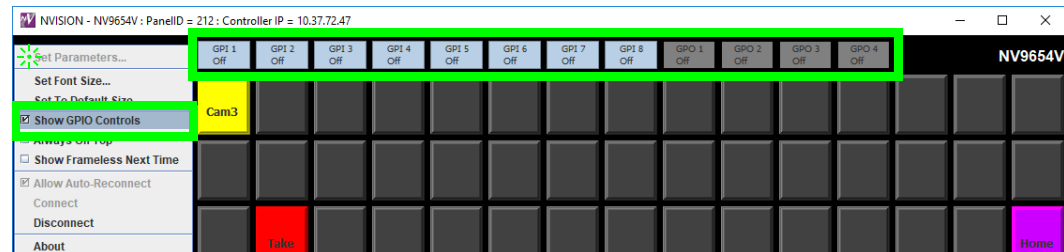

**PREREQUISITES:** The following must have been configured:


- a Topology ([Topology Configurator Tasks](#), on page 39) including:
  - Panel Configuration: see [Panel Configurator Tasks](#), on page 113
  - Sources and destinations: see [Methods to Link Devices in a Topology](#), on page 58.
- a router: see [Configuring Router Devices](#), on page 240

## Accessing the GPIO Configurator


To access the GPIO Configurator Task

- 1 Open GV Orbit Control Client Stage. See [Navigating Back to Stage](#), on page 10.
- 2 Select an area. See [Selecting an Area](#), on page 23.
- 3 Select a topology. See [Selecting a Graph](#), on page 24.
- 4 Create and configure a Panel. See [Creating a New Panel](#), on page 114, [Configuring a Panel's Properties](#), on page 117, [Adding Actions to a Panel](#), on page 119, and [Adding Resources to the Panel](#), on page 122.
- 5 If a salvo is to be triggered by a GPI, create one or more salvos. See [Creating Salvos](#), on page 284.
- 6 If aliases are to be used, create them. See [Adding Aliases](#), on page 277.
- 7 Add a panel to the topology. See [Adding the New Panel to the Topology](#), on page 129.

8 Select **Configuration > GPIO Configurator**.

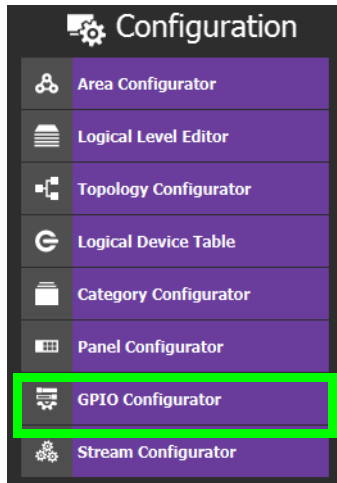

The GPIO Configurator task appears:

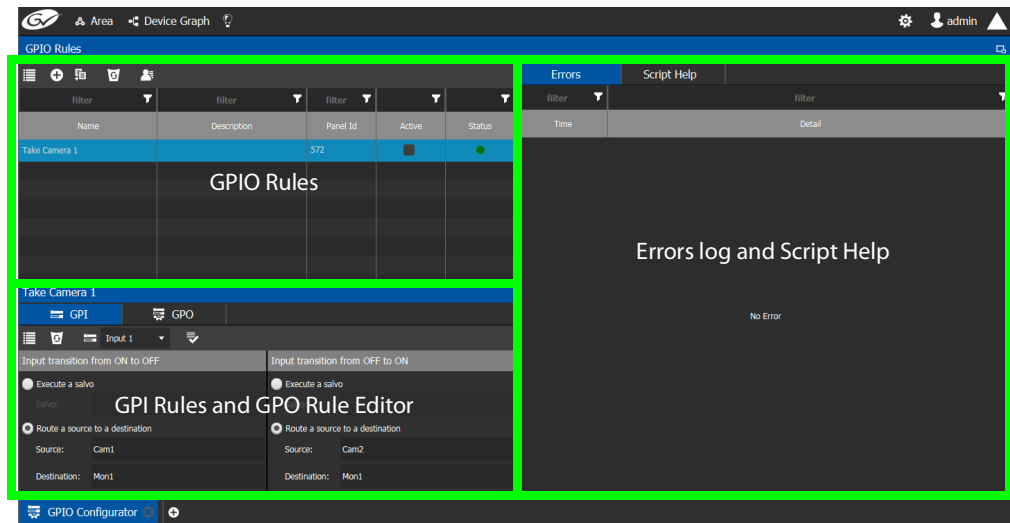





The GPIO Configurator has the following main sections shown above:

- GPIO Rules
- GPI Rules and GPO Rule Editor
- Errors log and Script Help

### GPIO Rules Menu





The GPIO rules menu has the following menu options.

Icon	Description
 New	Create a new rule in the rules list. See <a href="#">Adding a GPIO Rule</a> , on page 145.
 Duplicate	Make a copy of the currently-selected rule. See <a href="#">Duplicating a Rule</a> , on page 151.

Icon	Description
	Delete Remove the currently-selected rule. See <a href="#">Deleting a Rule</a> , on page 152.
	Alias Select the Alias to use for all rules. See <a href="#">Choosing an Alias for all Rules</a> , on page 152.

## GPI / GPO Rule Editor Menu

The GPIO rule editor has the following menu options.

Icon	Description
	Delete Remove the configuration for this rule.
	Select GPI Select the GPI input to be configured. See <a href="#">Configuring a GPI to Trigger an Event</a> , on page 146.
	Select GPO Select the GPO output to be configured. See <a href="#">Configuring a Script to Trigger a GPO</a> , on page 148.
	Validate Verifies if the rule is valid

## Adding a GPIO Rule

 
Create one or more rules to control your tallies. Rules can be enabled and disabled as needed.

### Note:


It is possible to create two or more rules can that act upon the same GPO, thereby creating a conflict. No error or warning will be flagged in this case. When two or more rules conflict, you must deactivate rule(s) such that only one rule controls a GPO at a time. See [Activating / Deactivating a Rule](#), on page 151.

### To add a rule


- 1 Click **New** .



- 2 Enter meaningful text in the **Name** and **Description** fields to identify the rule.

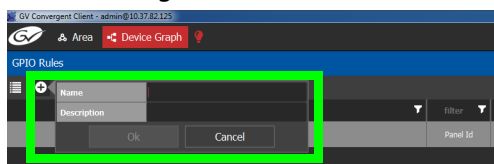


- 3 For the new row, click the cell for the Panel ID column.

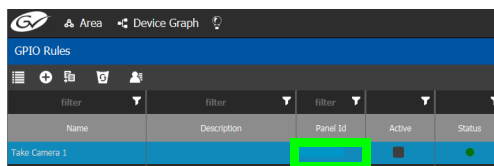


The **Panel Selector** window appears showing the panels that have been previously configured. See [Panel Configurator Tasks](#), on page 113.

- 4 Select the panel which has GPIO connections made to it that you want to configure.

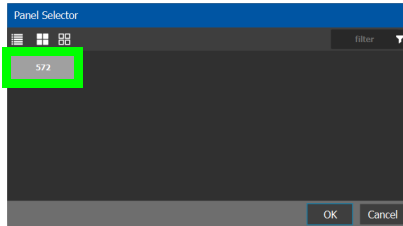

- 5 Click **OK**.


The Panel Id is shown for the GPIO rule and the Status is green.

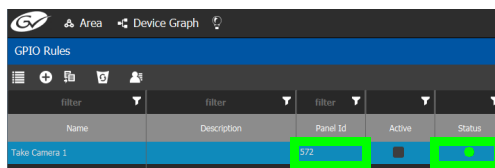


## Configuring a GPI to Trigger an Event

Tally inputs (called GPIs) can be configured to trigger an event when the input transitions from OFF to ON and to trigger another event on a transition from ON to OFF. Events include:

- Execute a salvo. The salvo must have been previously created. See [Creating Salvos](#), on page 284.
- Route a source to a destination. The source and destination must have been previously created. See [Logical Device Table Tasks](#), on page 78.

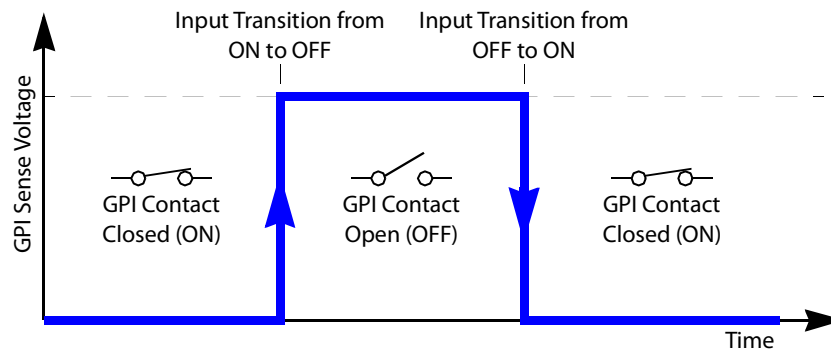


Separate actions are triggered depending on whether the transition is from ON to OFF or the transition is OFF to ON as shown above.

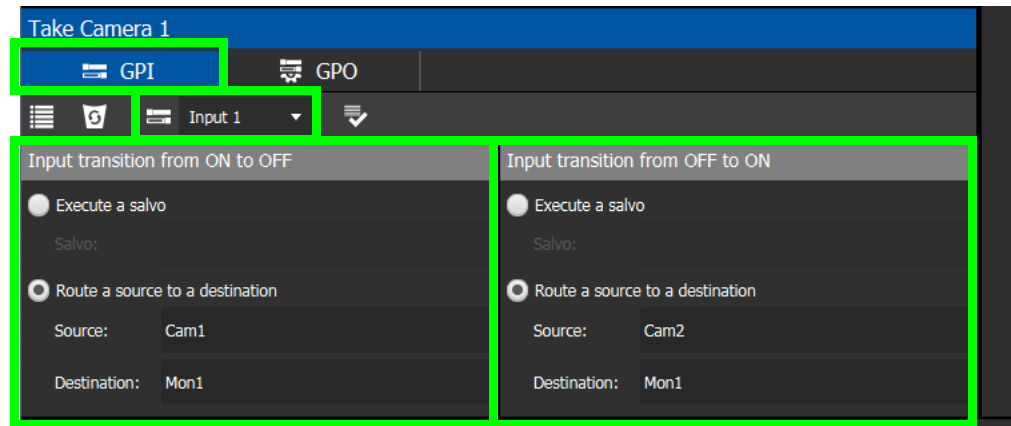

**To configure a GPI state transition to route a source to a destination or trigger a salvo**

- 1 Add a Rule if necessary. See [To add a rule](#), on page 145. Select the rule you want to configure. Ensure the rule is de-activated.

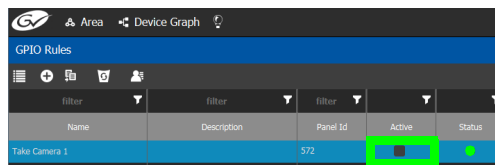


- 2 Click the GPI tab.
- 3 Select the panel's GPI input to be used as a trigger.
- 4 Select the action to execute when this input transitions from ON to OFF:
  - **Execute a salvo:** select the salvo to be executed from the list.
  - **Route a source to a destination:** select a source and a destination from the lists.
- 5 Select the action to execute when this input transitions from OFF to ON:
  - **Execute a salvo:** select the salvo to be executed from the list.
  - **Route a source to a destination:** select a source and a destination from the lists.
- 6 Repeat for the remaining GPI inputs to be used as a trigger for an action.
- 7 Click **Validate** to check the syntax and semantics with respect to the current configuration and it then saves the script.
- 8 Activate the rule. See [To activate a rule](#), on page 151.

## Configuring a Script to Trigger a GPO

Relay outputs can be configured to activate on a number of Boolean true or false conditions that form a script:

- One or more routes occurring on specific levels.
- Conditions involving output ports (destination, level).
- A transition on one or more of the panel's tally inputs.

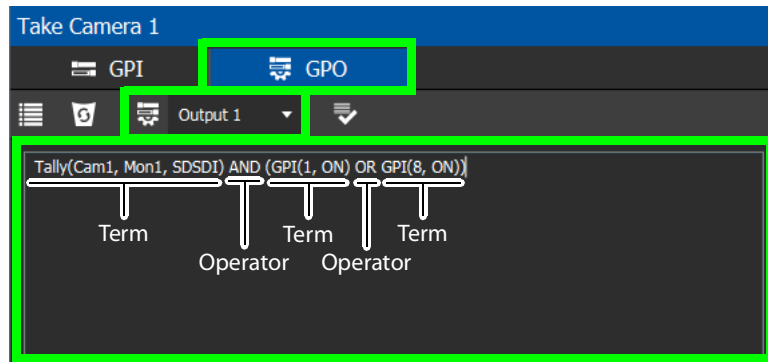

In this dialog, you create a Boolean script involving sources, port status, and GPI (input) status. When the conditions of the entire Boolean script evaluates as true, the relay output closes. When the conditions are not met, the relay output opens. Names of sources, destinations, levels and so on are case sensitive.

Boolean expressions comprise terms and operators. The operators include those shown under the **Script Help** tab. Expressions can be parenthesized to control the order of evaluation. Operator precedence is normally NOT > AND > OR. All parenthesized expressions are evaluated first; expressions in nested parentheses are evaluated before those in outer parentheses.

Function	Description
AND,OR, NOT,( )	Logical AND, OR, NOT, and precedence. Note that && (AND),    (OR), ! (NOT) are also supported.
Tally(SRC,DST)	Returns true when the specified source is tallied on the specified destination for the SDI level.
Tally(SRC,DST,Level)	Returns true when the specified source is tallied on the specified destination for the specified level.
Tally(SRC,DST,Levels...)	Returns true when the specified source is tallied on the specified destination for the specified level shuffles. Level shuffle arguments are in pairs.
Locked(DST)	Returns true when the specified destination is locked.
LockReleased(DST)	Returns true when the specified destination is unlocked.
Protected(DST)	Returns true when the specified destination is protected.
ProtectReleased(DST)	Returns true when the specified destination is unprotected.
GPI(GPI#, STATUS)	Returns true when the GPI status is equal to the specified STATUS. STATUS value could be ON or OFF.



For example, the following script is true when Cam1 is tallied on Mon1 for the SDSDI level and GPI1 input is on or GPI8 input is on:

`Tally(Cam1, Mon1, SDSDI) AND (GPI(1, ON) OR GPI(8, ON))`

Click a function to see an example script of how to use the function under **Example**.


Function	Description
AND, OR, NOT, ()	Logical AND, OR, NOT and precedence. Note that &&,   , ! are also supported.
Tally(SRC, DST)	Returns true when the specified source is tallied on the specified destination for the SDI level.
Tally(SRC, DST, Level)	Returns true when the specified source is tallied on the specified destination for the specified level.
Tally(SRC, DST, Levels...)	Returns true when the specified source is tallied on the specified destination for the specified level shuffles. Level shuffle arguments are in pairs.
Locked(DST)	Returns true when the specified destination is locked.
LockReleased(DST)	Returns true when the specified destination is unlocked.
Protected(DST)	Returns true when the specified destination is protected.
ProtectReleased(DST)	Returns true when the specified destination is unprotected.
GPI(GPI#, STATUS)	Returns true when the GPI status is equal to the specified STATUS. STATUS value could be ON or OFF.

**Examples**


`Tally(Cam1, Mon1) AND (Tally(Cam1, Mon2) OR NOT(Tally(Cam2, Mon3)))`

### To configure a script to control GPOs


- 1 Add a Rule if necessary. See [To add a rule](#), on page 145. Select the rule you want to configure. Ensure the rule is de-activated.

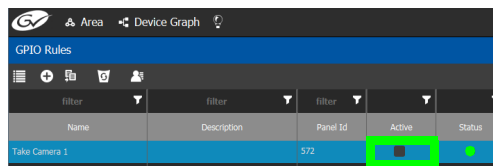


- 2 Click the **GPO** tab.
- 3 Select the panel's GPO output to be used as a trigger.

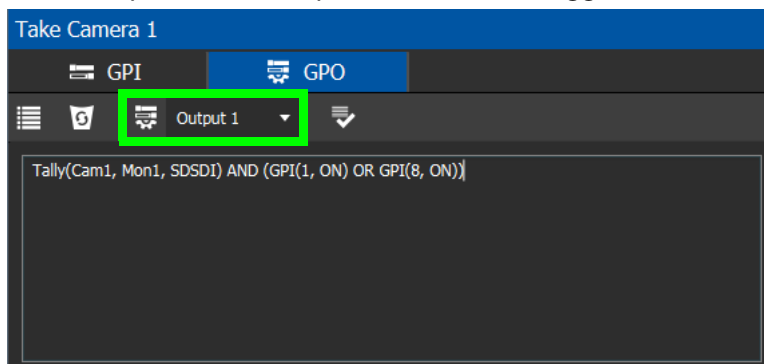


- 4 Create a script that when true will close the output relay's contact.

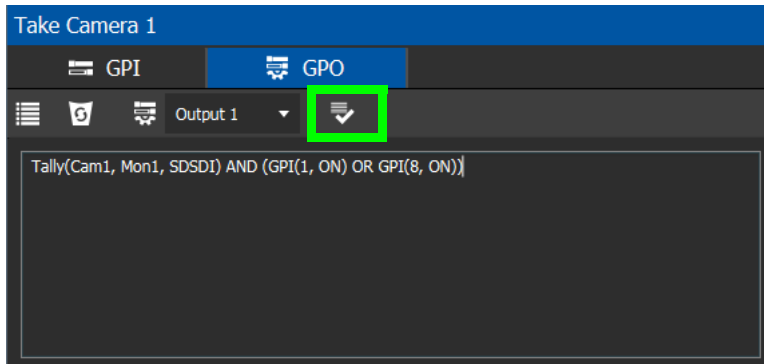

- 5 Click **Validate**  to check the script's syntax.

Any errors are shown in the **Errors** tab. Correct the script as necessary. Click the **Script Help** tab for how to use script arguments.

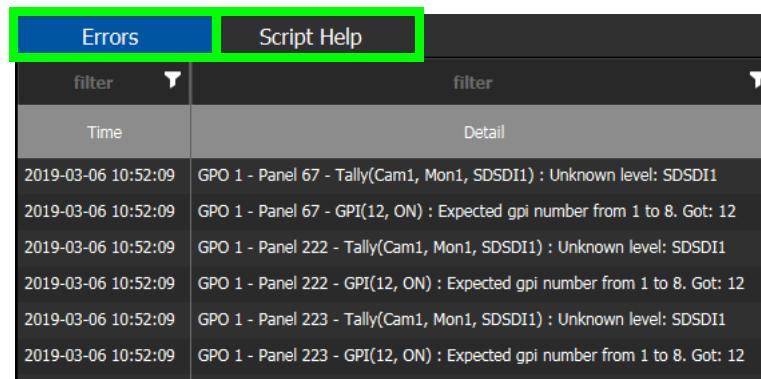


- 6 Activate the rule. See [To activate a rule](#), on page 151.

## Deleting a GPI or GPO Action Configuration

To delete a GPI or GPO action configuration

- 1 Click the GPI or GPO tab.

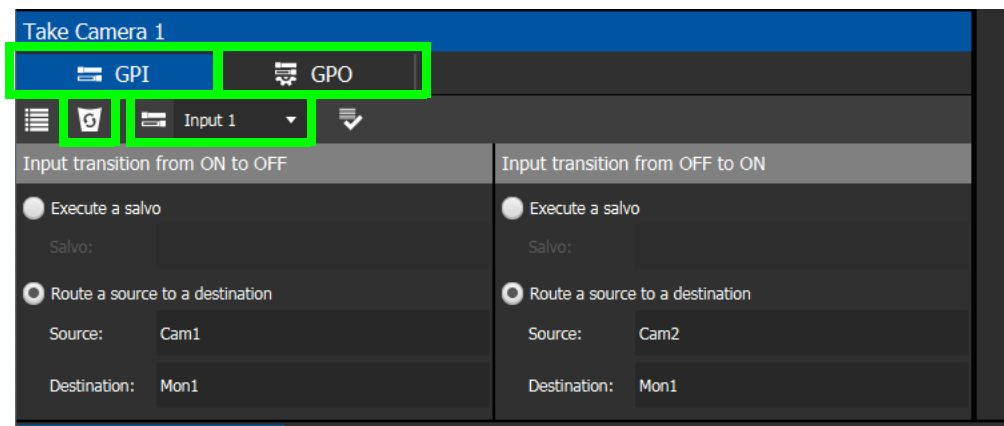


- 2 Select an **Input** or **Output** to be deleted.
- 3 Click **Delete** .

## Activating / Deactivating a Rule

### To activate a rule

- 1 Set **Active** in the rule's row.

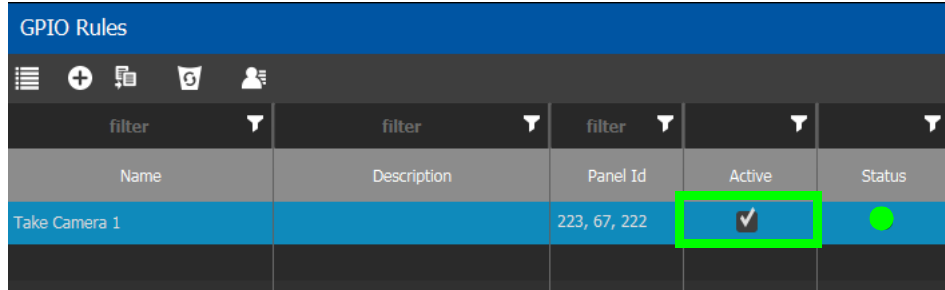


The rule's configuration becomes read only and cannot be modified. The rule's status becomes a green circle to indicate that the rule is valid.


### To deactivate a rule

- 1 Deselect **Active** in the rule's row.

## Duplicating a Rule

### To duplicate a rule

- 1 Select the rule to be duplicated.
- 2 Click **Duplicate** .

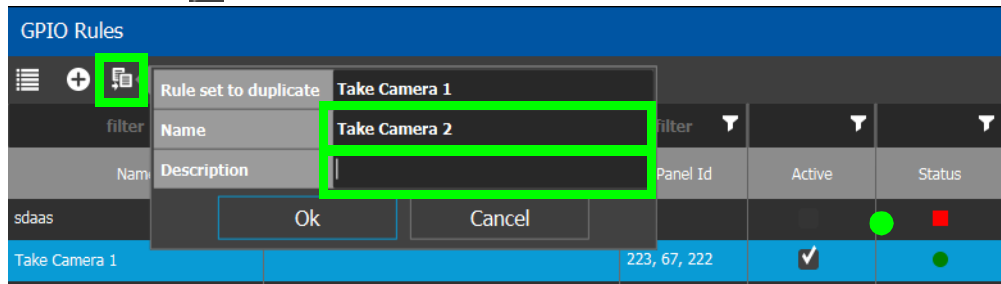


- 3 Set the name and description of the new rule.
- 4 Click **OK**.

## Deleting a Rule

### To delete a rule

- 1 Select the GPIO rule to be deleted.

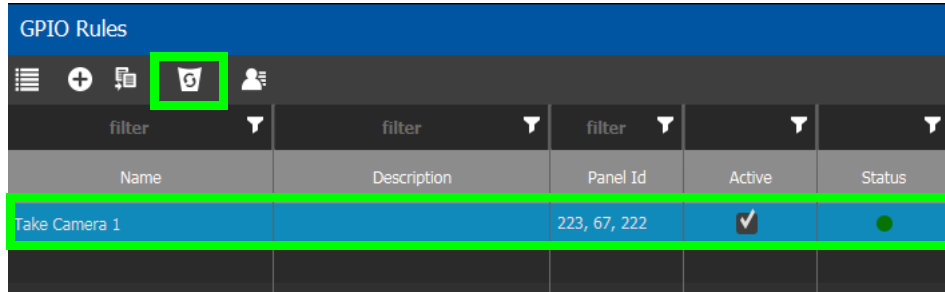


- 2 Click **Delete** .

## Choosing an Alias for all Rules

The source and destination aliases must have been previously created. See [Adding Aliases](#), on page 277. The alias selection applies to all current rules.

### To set an alias

- 1 Click **Alias** .

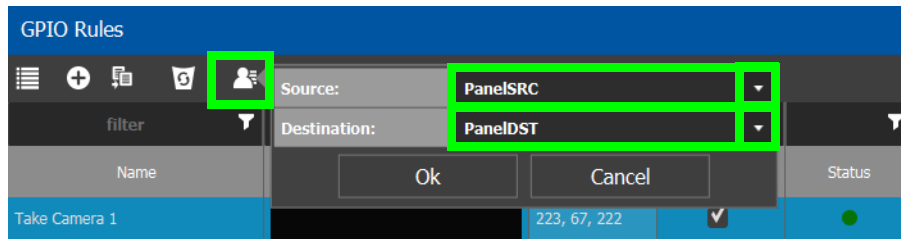

- 2 Set the **Source** and **Destination** aliases to use for all rules.
- 3 Click **OK**.

## Stream Configurator Tasks

The Stream Configurator task displays all streams in the current topology and allows you to configure on a large scale the following stream parameters:

- Set the stream's Unicast and multicast IP addresses
- Change the stream's SDP template
- Change the stream's logical levels
- Expose or hide streams

This can be done in bulk by selecting multiple rows and using the paste functionality, to set the IP addresses of hundreds of streams in one action. Filters allow you to narrow down the list in order to only show the devices you want to change their IP addresses / port numbers. The list has multiple sort, so you can put the devices in the right order (from top to bottom), thereby allowing you to paste an incremental range of IP addresses. Content can be pasted from a vertical column of Microsoft Excel worksheet cells, or from a text editor where there is one IP address per line.

The Stream Configurator is also useful for troubleshooting: for example, you discover an unexpected IP address is being routed and you want to find the device associated with that IP address. Use the IP address in the filtering at the top of the **Unicast IP** or **Multicast IP** columns in the Stream Configurator to find the device.

**PREREQUISITES:** The following must have been configured:

- a Topology ([Topology Configurator Tasks](#), on page 39).
- a number of devices on the topology such as a GV Node which has a variety of streams (see [Adding Devices to a Topology](#), on page 44).


Setting the IP address in GV Orbit Control for third-party IP devices are an ideal application for the stream configurator; see [Using Quick Config](#), on page 55 and the example in [Setting Port Redundancy for Many Devices at Once](#), on page 56 to create such devices.

## Accessing the Stream Configurator


### To access the Stream Configurator Task

- 1 Open GV Orbit Control Client Stage. See [Navigating Back to Stage](#), on page 10.
- 2 Select an area. See [Selecting an Area](#), on page 23.
- 3 Select a topology. See [Selecting a Graph](#), on page 24.
- 4 The topology must be currently:
  - Activated (see [Activating a Topology](#), on page 72).
  - Unlocked (see [Unlocking / Relocking a Topology](#), on page 75).

5 Select **Configuration > Stream Configurator**.

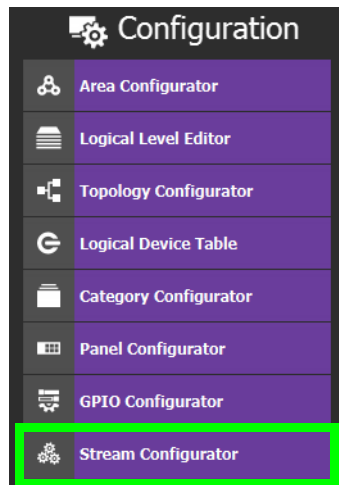



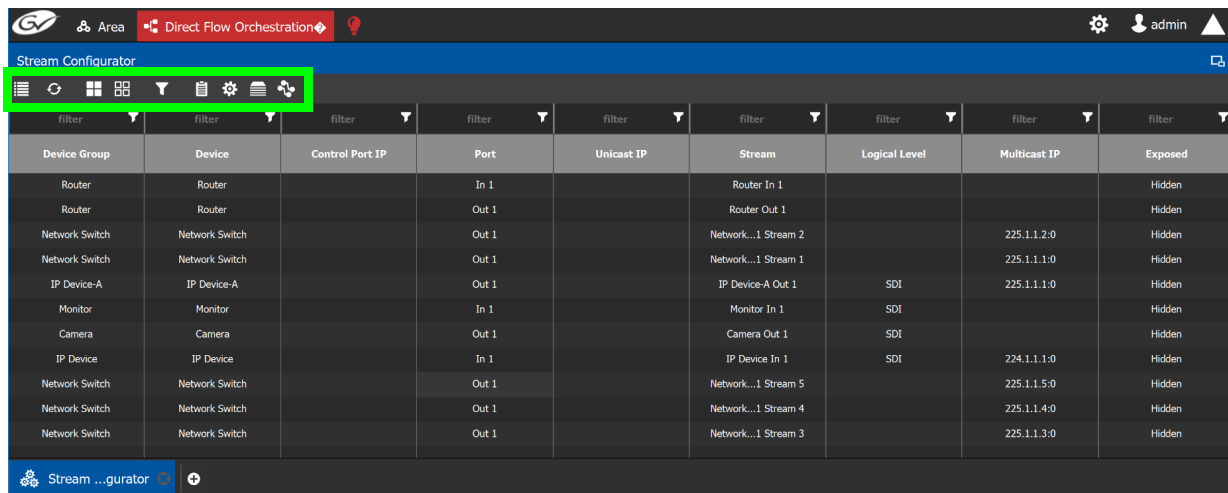


The Stream Configurator task appears:



### Stream Configurator Menu

 
The Stream Configurator menu has the following menu options.

Icon	Description
Refresh	Reloads the Stream Configurator's contents. The Stream Configurator's content is static. If you make a configuration change in another task, it will not automatically be reflected in the Stream Configurator.
Select All	Selects all rows in the Stream Configurator.
Clear All	Deselects all rows in the Stream Configurator.
Filters	Filters the list by signal type and direction. See <a href="#">Stream Configurator Filters Tool</a> , on page 156.

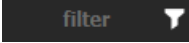Icon	Description
 Paste IP addresses	<p>Pastes the clipboard contents to the selected Stream Configurator's column from a Microsoft Excel spreadsheet column or a text editor, where there is one IP address per line.</p> <p>See <a href="#">Pasting Unicast and Multicast IP Addresses from a Microsoft Excel Spreadsheet / Text Editor</a>, on page 157.</p>
 Set stream SDP file	<p>Set the SDP pattern for streams. See <a href="#">Setting SDP Templates for one or more Streams</a>, on page 158.</p>
 Set stream level	<p>Sets the logical level of one or more selected streams. This shows the Logical Level Selector.</p> <div data-bbox="643 646 1162 961" data-label="Image"> </div> <p>Select a logical level and click <b>OK</b> to change the level of all selected streams to the new logical level.</p> <p>For more information about logical levels, see <a href="#">Logical Level Editor Tasks</a>, on page 30.</p>
 Expose or hide streams	<p>Sets to expose or hide streams of one or more selected streams. Only certain devices support this property. When Expose Stream is set, it displays the streams for this device in the Logical Device Table. See <a href="#">Logical Device Table Tasks</a>, on page 78.</p>
 Filter	<p>Row filters can be applied to each column by typing text in the filter boxes to filter the list according to a column's content. The combination of all applied filters means that a row must match all filter values in order to be displayed. See <a href="#">Filtering the Stream Configurator List</a>, on page 156. See also <a href="#">Filtering Lists, Table Columns, Sources, and Destinations</a>, on page 104.</p>

## Stream Configurator Filters Tool

A filter button is available in the toolbar for you to show or hide signal types (SDI, IP, MADI) or signal direction (Input/Rx and Output/Tx streams).

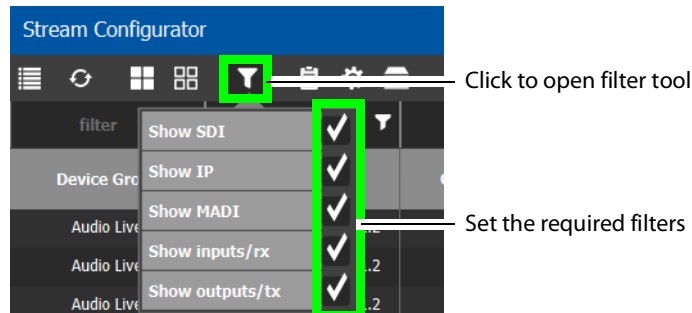

Icon	Description
Show SDI	Show results where the connection type is SDI.
Show IP	Show results where the connection type is IP.
Show MADI	Show results where the connection type is MADI.
Show inputs / rx	Show results where the connection direction is an input.
Show outputs / tx	Show results where the connection direction is an output.

## Pasting IP addresses from a Microsoft Excel worksheet into the Stream Configurator

In order to paste a vertical column of worksheet cells of an ordered list of IP addresses you have created in Microsoft Excel, you must first prepare the Stream Configurator by:

- 1 Filtering the table to only show the devices, inputs / outputs, signal type, logical levels, for which you are going to update their IP addresses. Filters allow you to narrow down the Stream Configurator list in order to only show the devices of interest.
- 2 Sorting the filtered list such that the devices are in the same order as the vertical column of worksheet cells you have created in Microsoft Excel.
- 3 Paste a vertical column of worksheet cells you have created in Microsoft Excel into either the Unicast IP or Multicast IP columns of the Stream Configurator.

### Filtering the Stream Configurator List

First, filter the Stream Configurator's contents to create a list of only the devices that are of interest; those devices you want to update their IP addresses.



Filtering can be done by combining the following methods:

- Use the Filters tool to show or hide signal types (SDI, IP, MADI) or signal direction (Input/Rx and Output/Tx streams). See [Stream Configurator Filters Tool](#), on page 156.
- Enter text into the row filters found at the top of each column by typing text in the filter boxes to filter the list according to a column's content. The combination of all applied filters means that a row must match all filter values in order to be displayed. See [Filtering Lists, Table Columns, Sources, and Destinations](#), on page 104.

filter	filter	filter	filter	filter	filter	filter	filter
Device Group ▲	Device ▲	Control Port IP ▲	Port ▲4	Unicast IP ▲5	Stream ▲6	Logical Level ▲7	Multicast IP ▲8
Audio Live	Audio Live 191.13.11.2		Eth In 1	191.13.11.2	Audio Live...1 Stream 1	AES67-64	236.1.1.1:0
Audio Live	Audio Live 191.13.11.2		Eth In 1	191.13.11.2	Audio Live...1 Stream 2	AES67-64	225.2.1.1:0

## Sorting the Stream Configurator List

Once the Stream Configurator's contents have been filtered, then sort the filtered list.

The list has multiple sort, so you can put the devices in the right order (from top to bottom), thereby allowing you to paste an incremental range of IP addresses. Content can be pasted from a vertical column of Microsoft Excel worksheet cells, or from a text editor where there is one IP address per line.

Each column can be sorted by clicking the header text. Multiple sort can be applied by <Shift> + clicking the headers. Bullets and numbers will appear next to the sort arrow indicating the column's sort priority. An up arrow is ascending sort, and a down arrow is a descending sort.

filter	filter	filter	filter	filter	filter	filter	filter
Device Group ▲	Device ▲	Control Port IP ▲	Port ▲4	Unicast IP ▲5	Stream ▲6	Logical Level ▲7	Multicast IP ▲8
Audio Live	Audio Live 191.13.11.2		Eth In 1	191.13.11.2	Audio Live...1 Stream 1	AES67-64	236.1.1.1:0
Audio Live	Audio Live 191.13.11.2		Eth In 1	191.13.11.2	Audio Live...1 Stream 2	AES67-64	225.2.1.1:0

First sort priority (one bullet)    Second sort priority (two bullets)    Third sort priority (three bullets)    Fourth sort priority    Fifth sort priority    . . .    Eighth sort priority

## Pasting Unicast and Multicast IP Addresses from a Microsoft Excel Spreadsheet / Text Editor

Unicast and Multicast IP address values can be bulk pasted into the Stream Configurator from a Microsoft Excel spreadsheet column by using copy/paste.


- Multicast IPs are formed with the following semi-colon separated concatenated format: **[IPv4 Address]:[Port Number]**. For example, the text to be pasted for a multicast address should look like **231.102.30.13:5004**

If you paste an IPv4 address without a port number into the **Multicast IP** column, only the IP address will be updated and the current port number will be left intact.

- Unicast IPs are a basic IP address without a port number.

### To paste Unicast or Multicast IP Addresses

- 1 Select a column with IP addresses from a Microsoft Excel spreadsheet and copy them.
- 2 Select the rows in the Stream Configurator that contain the streams to be changed. See [Selecting Stream Configurator Rows](#), on page 160.

- 3 Click the paste  button in the Stream Configurator toolbar. Choose whether to apply the paste to Unicast or Multicast IP addresses. The paste is made starting from top-to-bottom of the selected rows.

---

**Note:** All pasted IP addresses are validated and if any one address is invalid, the entire paste is canceled and nothing happens.

---

## Editing Unicast and Multicast IP Addresses


Cells in the Unicast IP column can be double-clicked in order to edit their contents. These cells will only accept valid IPv4 addresses.

Cells in the Multicast IP column can also be double-clicked in order to edit their contents. These cells only accept valid IPv4 addresses and a port number separated by a colon (:). For example `231.102.30.13:1080`.

## Setting SDP Templates for one or more Streams

Not all devices are NMOS compliant, however with the use of SDP parameters, GV Orbit Control may be able to make a take of a stream from a non-NMOS Device to an NMOS Device. GV Orbit Control can intuit some SDP parameters while other parameters will have to be provided by you. For more information about how to form an SDP template, see [Using SDP Parameters to Take a Stream from a non-NMOS Device to an NMOS Device](#), on page 215.

You can set the SDP templates for one or more streams as follows.

- 1 If necessary, filter and sort the Stream Configurator list to only show the devices, inputs / outputs, signal type, logical levels, for which you are going to update their SDP templates. Filters allow you to narrow down the Stream Configurator list in order to only show the devices of interest. See [Filtering the Stream Configurator List](#), on page 156 and [Sorting the Stream Configurator List](#), on page 157.
- 2 Select the rows in the Stream Configurator that contain the streams to be changed. See [Selecting Stream Configurator Rows](#), on page 160.
- 3 Click the cogwheel  icon. The SDP template text for the last selected stream in the table is shown in a pop-up.  
If the last selected stream type is SDI or a receiver, the SDP template text area will be blank.
- 4 Type in or paste the SDP template text into the pop-up text area and click **OK**. See [Using SDP Parameters to Take a Stream from a non-NMOS Device to an NMOS Device](#), on page 215.

---

**Note:** The SDP text you enter is not validated by GV Orbit Control. The SDP is directly applied to IP streams only. All other stream types are ignored.

---

All selected streams will be updated with the new SDP template.

### GV Orbit Control SDP Variables that can be used with Third-Party Devices

The following table lists whether the GV Orbit Control SDP variables are supported when used with third-party devices. Any unsupported SDP variable must be replaced by a hard coded value that represents the third-party device's static property value.

GV Orbit Control SDP Variable	Supported with third-party-devices	Description
<code>\${audioBits}</code>		The audio stream's bit depth.
<code>\${channelCount}</code>		The number of (audio) channels.
<code>\${clockSetting}</code>		The PTP master clock setting.
<code>\${sequence}</code>		This SDP file's ID.
<code>\${packetTime}</code>		The length of time in milliseconds represented by the (audio) media in a packet.
<code>\${portIpAddress}</code>	•	The sending port's IP address. The source for this variable comes from the Port's <b>IP Address</b> parameter for this stream.
<code>\${streamIpAddress}</code>	•	The transmit (sending) stream's multicast IP address. The source for this variable comes from the stream's <b>IP Address</b> parameter.
<code>\${streamPortNumber}</code>	•	The transmit (sending) stream's IP port number. The source for this variable comes from the stream's <b>IP Port</b> parameter.
<code>\${redundantIpAddress}</code>	•	The transmit (sending) stream's redundant multicast IP address. The source for this variable comes from the stream's <b>IP Address</b> parameter used for the redundancy port. See the <b>Redundancy Port</b> parameter to identify the current redundancy port.
<code>\${redundantPortNumber}</code>	•	The transmit (sending) stream's redundant IP port number. The source for this variable comes from the stream's <b>IP Port</b> parameter used for the redundancy port. See the <b>Redundancy Port</b> parameter to identify the current redundancy port.

GV Orbit Control SDP Variable	Supported with third-party-devices	Description
<code>\${redundantPortIpAddress}</code>	<ul style="list-style-type: none"><li>•</li></ul>	The transmit (sending) stream's redundant IP port number. The source for this variable comes from the stream's <b>IP Address</b> parameter used for the redundancy port. See the <b>Redundancy Port</b> parameter to identify the current redundancy port.
<code>\${rtpPayloadType}</code>		The RTP payload type as defined by the SDP specification.
<code>\${samplingRate}</code>		The audio stream's sampling rate.

## Selecting Stream Configurator Rows

Stream Configurator rows can be selected as follows:

- All current rows can be selected by clicking **Select All** from the Stream Configurator's menu. See [Stream Configurator Menu](#), on page 154.
- Select one or more streams in the Stream Browser using <Ctrl> + click.
- Select a range of streams in the Stream Browser by selecting the first stream and then <Shift> + click the last stream in the range.

# 4 Special Device Configuration Tasks

The configuration of certain features for a specific device require an in depth explanation which is provided here.

## Special Devices

These special device are described under the following headings:

- [Configuring a GV Node Device](#), on page 163
- [Configuring an IPG-3901 / IPG-4901 Device](#), on page 174
- [Configuring an IPVU Device](#), on page 180
- [Configuring an IQMix or IQUCP25 Device](#), on page 183
- [Configuring UHD 4K Two-Sample Interleave Division IP Streams for use with an IQMix, IQUCP, or IPVU Device](#), on page 185
- [Configuring UHD 4K Quad-Link SDI Streams for use with an IQMix, IQUCP, or IPVU Device](#), on page 190
- [Configuring an MV-820-IP Multiviewer Device](#), on page 194
- [Configuring a Kahuna IP Production Switcher Device](#), on page 198
- [Configuring a K-Frame Production Switcher](#), on page 201
- [Adding NMOS Devices to a Topology](#), on page 208
- [Using SDP Parameters to Take a Stream from a non-NMOS Device to an NMOS Device](#), on page 215
- [Configuring Cisco DCNM Network Switch Devices](#), on page 219
- [Direct Flow Orchestration: How To Create a Static Flow with a Cisco Network Switch](#), on page 225
- [Configuring a GV Fabric Network Switch Device](#), on page 226
- [Configuring Network Switch Redundancy to Support SMPTE ST 2022-7](#), on page 229
- [Configuring an NVISION Hybrid Series Router](#), on page 234
- [Configuring Router Devices](#), on page 240
- [Configuring a Device that Supports Audio Breakaway/Shuffling such as Audio Live](#), on page 251
- [Configuring an IQAMD40 Device](#), on page 258

## Description of Common Device Properties


The description for certain device properties are universal.

Parameter	Description
# Input Connectors	The number of physical input port connections made to the device. This shows the current status for information purposes.
# Output Connectors	The number of physical output port connections made to the device. This shows the current status for information purposes.
# Streams Per Input	The typical number of streams available on each physical input connection. This shows the current status for information purposes.
# Streams Per Output	The typical number of streams available on each physical output connection. This shows the current status for information purposes.
# Streams	The actual number of streams available on the selected physical input / output connection. This shows the current status for information purposes.
Automatic Destination Automatic Destinations on Inputs Automatic Destinations on Outputs	Set to automatically create a destination by the system for the specified streams. See also <a href="#">About Automatic Sources or Destinations</a> , on page 83.
Automatic Source Automatic Sources on Outputs Automatic Sources on Inputs	Set to automatically create a source by the system for the specified streams. See also <a href="#">About Automatic Sources or Destinations</a> , on page 83.
Description	An optional description for the related input, output, or device.
Enabled	This shows the current status for information purposes.
Expose Streams	When set, it displays the streams for this device in the Logical Device Table. See <a href="#">Logical Device Table Tasks</a> , on page 78. Quick Config can be used to set or clear this parameter; see <a href="#">Using Quick Config</a> , on page 55.
Logical Level	The logical level for this input or output. See <a href="#">Logical Level Editor Tasks</a> , on page 30.
Name	The name or identifier for this device instance. The name or identifier for this input or output port.
Short Name	The nickname by which the input, output, or device is referred to everywhere in the system.
SSM Address Enabled	Shows if the source specific multicast address is enabled.
SDP	See <a href="#">Using SDP Parameters to Take a Stream from a non-NMOS Device to an NMOS Device</a> , on page 215.


## Configuring a GV Node Device

To configure a GV node Device

- 1 Add the **GV Node** device to the Topology: from the **Device Library**, **Virtual Device**, find the **GV Node** device bubble. See [To add a Virtual Device to a topology](#), on page 44.

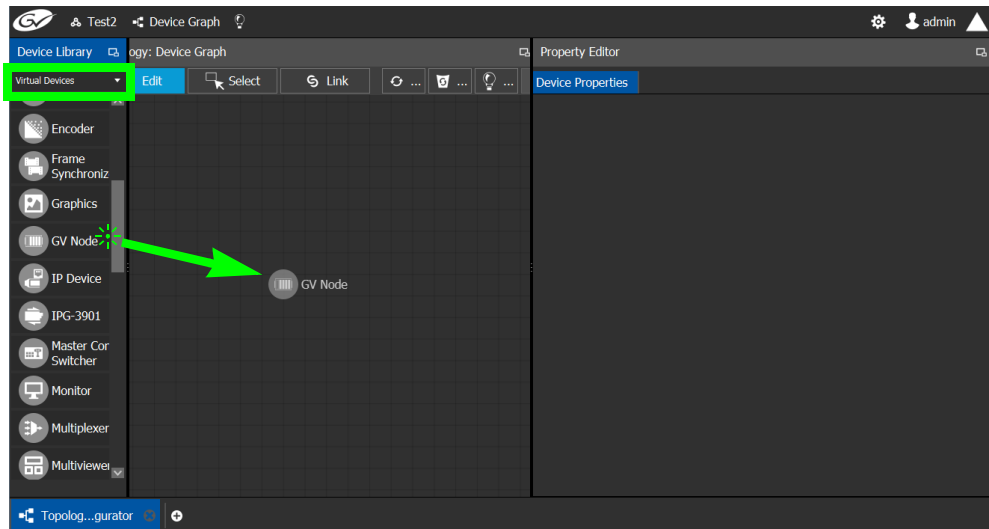

- 2 Select the **GV Node** bubble and configure the Device Properties in the **Property Editor**. See [Defining Device Properties](#), on page 66 for more information.

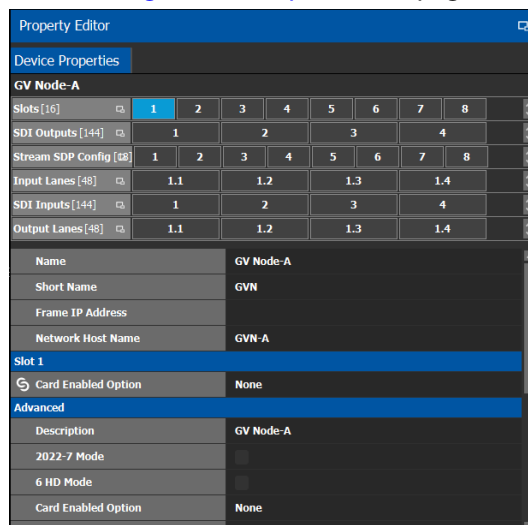

See also [Description of Common Device Properties](#), on page 162.


Parameter	Description
Frame IP Address	The network IP address for the associated GV Node frame.
Network Host Name	The hostname is the unique name by which the associated GV Node CPU-ETH3 is known on the network.
Advanced > Description	An optional description for this GV Node's control port.

Parameter	Description
Advanced > 2022-7 Mode	When the IFM-2T-OPT-40G-6 option is active, you can choose to enable SMPTE ST 2022-7 Low Latency redundant, high-bit-rate streams on the aggregation ports, using the GV Node manager. If this option has been enabled in the GV Node Manager, then enable it here.
Advanced > 6 HD Mode	This no redundancy, low bitrate option reduces each channel from 3Gbps to 1.5Gbps, allowing all 144 channels to be sent on aggregation ports 1-6, and leaving aggregation ports 7-12 unused. If this option has been enabled in the GV Node Manager, then enable it here.
Advanced > Card Enabled Option	This option controls audio embedding / de-embedding. For example, the XIO-4901 3G/HD/SD SDI input/output card supports audio embedding/de-embedding, as a software option (MDX): <b>MDX:</b> The GV Node Manager allows you to enable or disable audio embedding/de-embedding on a card's SDI inputs and outputs. <b>None:</b> If your system is monitoring MADI signals (supported at the XIO-4901 card's inputs/outputs 8 and 9), then disabling the MDX option lets you select MADI at the inputs and outputs matching your physical configuration. See <a href="#">Configuring MADI support with a GV Node Device</a> , on page 169 for more information.
Advanced > Card Mode	Set the signal type.
Advanced > Gateway Connection State 1	Gateway Connection State 1 shows the connection status of the GV Node frame with the primary server of a server group.
Advanced > Gateway Connection State 2	Gateway Connection State 2 shows the connection status of the GV Node frame with the secondary server of a server group. See <a href="#">Configuring a Controller Group</a> , on page 19. <b>unknown:</b> The topology is inactive (see <a href="#">Activating a Topology</a> , on page 72) or the GV Node frame does not have network connectivity to the GV Orbit Control server(s). <b>offline:</b> The GV Node frame does not have network connectivity to the GV Orbit Control server(s). <b>online:</b> The GV Node frame is connected to the GV Orbit Control server(s).
Advanced > Gateway NP16 Connection State	This shows the NP16 connection status of the GV Node frame with a server of a server group. <b>unknown:</b> The topology is inactive (see <a href="#">Activating a Topology</a> , on page 72) or the GV Node frame does not have network connectivity to the GV Orbit Control server(s). <b>offline:</b> The GV Node frame does not have network connectivity to the GV Orbit Control server(s). <b>online:</b> The GV Node frame is connected to the GV Orbit Control server(s).
Advanced > IFM-2T Version	The IFM-2T Fabric Module User Interface version number.



Parameter	Description
Advanced > Internal Wiring Done	Shows if the internal modeling of the GV Node is complete.
Advanced > Join Timeout (ms)	When GV Orbit Control is used with a GV Node version 1.3.0, to allow a clean switch that will not be reported as a fail, we recommend this parameter to be set to 2 ms.
Advanced > Router Connection State 1	Router Connection State 1 shows the connection status of the router with the primary server of a server group.
Advanced > Router Connection State 2	Router Connection State 2 shows the connection status of the router with the secondary server of a server group. See <a href="#">Configuring a Controller Group</a> , on page 19. <b>unknown:</b> The topology is inactive (see <a href="#">Activating a Topology</a> , on page 72) or the router does not have network connectivity to the GV Orbit Control server(s). <b>offline:</b> The router does not have network connectivity to the GV Orbit Control server(s). <b>online:</b> The router is connected to the GV Orbit Control server(s).

- Configure the card in each slot and configure the inputs and outputs for each card by making a selection at the top to make the related parameters become available below.

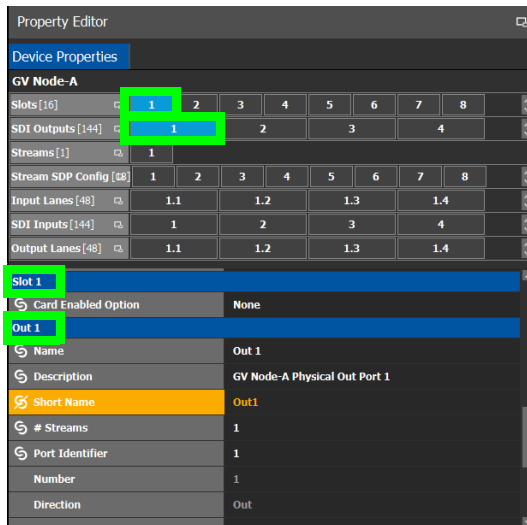

Select the	To configure the properties exposed below under
Card by its slot number in <b>Slots</b>	<b>Slot #</b>
Card's SDI output number in <b>SDI Outputs</b> . Then select the Card's SDI Output Stream Configuration number in <b>Streams</b>	<b>Out #</b> <b>GV Node-[instance] Out #</b>
Card's Stream SDP Configuration number in <b>Stream SDP Config</b>	<b>IP Stream Prototype #</b>

Select the	To configure the properties exposed below under
Card's Input Lanes number in <b>Input Lanes</b> . Then select the card's stream number in <b>Streams</b> .	<b>Eth In #.#</b> <b>GV Node-[instance] Eth In#.# Stream #</b>
Card's SDI Input number in <b>SDI Inputs</b> . Then select the card's stream number in <b>Streams</b> .	<b>In#</b> <b>GV Node-[instance] In#</b>
Card's Output Lanes number in <b>Output Lanes</b> . Then select the card's stream number in <b>Streams</b> .	<b>Eth Out #.#</b> <b>GV Node-[instance] Out#.# Stream #</b>

Configure the GV Node Card Properties in the **Property Editor**. See also [Description of Common Device Properties](#), on page 162.

Parameter	Description
Slot #	
Card Enabled Option	This option controls audio embedding / de-embedding. For example, the XIO-4901 3G/HD/SD SDI input/output card supports audio embedding/de-embedding, as a software option (MDX): <b>MDX:</b> The GV Node Manager allows you to enable or disable audio embedding/de-embedding on a card's SDI inputs and outputs. <b>None:</b> If your system is monitoring MADI signals (supported at the card's inputs/outputs 8 and 9), then disabling the MDX option lets you select MADI at the inputs and outputs matching your physical configuration. See <a href="#">Configuring MADI support with a GV Node Device</a> , on page 169 for more information.
Out #	
Name	The name or identifier for this SDI output.
# Streams	The number of streams for this SDI output.
Port Identifier	An input lane is specified as QSPFport.lane which in turn corresponds to a physical port on the router. The number property specifies which physical port it is. The port identifier is how you name it so that you can refer to it.
Number	Set the port number on the router.
Direction	This shows the current status for information purposes.
Connector Type	
Capacity (bps)	The stream's data rate.
IP Address	The stream's network IP address.

Parameter	Description
Mods-Out to IFM	This option sets the expected output signal type: <b>SDI:</b> The output signal is a standard SDI video signal with embedded audio. <b>MADI:</b> The output signal is a MADI signal (supports 64 audio channels). See <a href="#">Configuring MADI support with a GV Node Device</a> , on page 169 for more information.
Redundancy Port	Associate this port with another port to create a redundant network traffic flow path for failover protection. The associated port will not be available to carry other traffic.
GV Node-[instance] Out #	
Name	The name or identifier for this SDI output.
Automatic Source	Set to automatically create a source by the system using the specified stream.
Bandwidth (bps)	The stream's data rate.
IGMPv3 SSM Address	Source Specific Multicast address as per IGMPv3 (Internet Group Management Protocol) protocol.
IP Stream Prototype #	
Name	The name or identifier for this SDI output.
Flow Type	Set the content type for this stream: <b>Audio, Data, or Video.</b>
SDP	The Session Description Protocol is a format for describing streaming media communications parameters.
Eth In #.#	
Name	The name or identifier for this IP input.
# Streams	The number of streams for this IP input.
Port Identifier	An input lane is specified as QSPFport.lane which in turn corresponds to a physical port on the router. The number property specifies which physical port it is. The port identifier is how you name it so that you can refer to it.
Number	Set the port number on the router.
Direction	This shows the current status for information purposes.
Connector Type	
Capacity (bps)	The stream's data rate.
GV Node-[instance] Eth In#.# Stream #	
Name	The name or identifier for this IP input.
Flow Type	Set the content type for this stream: <b>Audio, Data, or Video.</b>
Automatic Source	Set to automatically create a source by the system using the specified stream.
SDP	The Session Description Protocol is a format for describing streaming media communications parameters.

Parameter	Description
IGMPv3 SSM Address	Source Specific Multicast address as per IGMPv3 (Internet Group Management Protocol) protocol.
IP Address	The stream's network IP address.
IP Port	Port number for the stream.
In#	
Name	The name or identifier for this IP input.
# Streams	The number of streams for this IP input.
Port Identifier	An input lane is specified as QSPFport.lane which in turn corresponds to a physical port on the router. The number property specifies which physical port it is. The port identifier is how you name it so that you can refer to it.
Number	Set the port number on the router.
Direction	This shows the current status for information purposes.
Connector Type	
Capacity (bps)	The stream's data rate.
Bandwidth Usage (bps)	The stream's data rate.
IP Address	The stream's network IP address.
Mods-In to IFM	This option sets the expected input signal type: <b>SDI:</b> The input signal is a standard SDI video signal with embedded audio. <b>MADI:</b> The input signal is a MADI signal (supports 64 audio channels). See <a href="#">Configuring MADI support with a GV Node Device</a> , on page 169 for more information.
Redundancy Port	Associate this port with another port to create a redundant network traffic flow path for failover protection. The associated port will not be available to carry other traffic.
GV Node-[instance] In#	
Name	The name or identifier for this IP input.
Automatic Source	Set to automatically create a source by the system using the specified stream.
IGMPv3 SSM Address	Source Specific Multicast address as per IGMPv3 (Internet Group Management Protocol) protocol.
Eth Out #.#	
Name	The name or identifier for this IP input.
# Streams	The number of streams for this IP input.
Port Identifier	An input lane is specified as QSPFport.lane which in turn corresponds to a physical port on the router. The number property specifies which physical port it is. The port identifier is how you name it so that you can refer to it.

Parameter	Description
Number	Set the port number on the router.
Direction	This shows the current status for information purposes.
Connector Type	
Capacity (bps)	The stream's data rate.
Bandwidth Usage (bps)	The stream's data rate.
IP Address	The stream's network IP address.
Redundancy Port	Associate this port with another port to create a redundant network traffic flow path for failover protection. The associated port will not be available to carry other traffic.
GV Node-[instance] Out#.# Stream #	
Name	The name or identifier for this IP input.
IP Address	The stream's network IP address.
IP Port	Port number for the stream.
Flow Type	Set the content type for this stream: <b>Audio, Data, or Video.</b>
Automatic Source	Set to automatically create a source by the system using the specified stream.
SDP	The Session Description Protocol is a format for describing streaming media communications parameters.
Bandwidth (bps)	The stream's data rate.
IGMPv3 SSM Address	Source Specific Multicast address as per IGMPv3 (Internet Group Management Protocol) protocol.

### Configuring MADi support with a GV Node Device

To support a MADi input on a GV Node frame, this option must be configured both in GV Orbit Control and the MADi input must have been previously configured in iControl Navigator; locate the GV Node Manager associated with your GV Node and double-click its icon. For example, the following figure shows the 9<sup>th</sup> input XIO-4901 card in slot 16 is set to

accept a MADI input. Within GV Orbit Control, the same setting must be made wherever a MADI input has been configured in iControl Navigator for a GV Node frame.

Provisioning		Agg Format		Module Inputs -Tx Streams		Module Outputs -Rx Streams									
Slot#	Main Module	Rear panel	Enabled Options	Module Inputs (Mod-In) to Internal Fabric Module (IFM)											
				1	2	3	4	5	6	7	8	9			
1	XIO-4901	XIO-4901-4SRP-D	MDX	MDX	MDX	MDX	MDX	MDX	MDX	MDX	MDX	MDX	MDX		
2	KMX-4911	KMX-49N1-9x2-4...	MDX	SDI	SDI										
3	KMX-4911	KMX-49N1-9x2-4...	MDX	SDI	SDI										
4	XIO-4901	XIO-4901-4SRP-D	MDX	MDX	MDX	MDX	MDX	MDX	MDX	MDX	MDX	MDX	MDX		
5	Empty														
6	Empty														
7	Empty														
8	Empty														
9	SME-1911														
10	Empty														
11	XVP-3901														
12	Empty														
13	HDA-3931														
14	XIO-4901	XIO-4901-4SRP-D	MDX	MDX	MDX	MDX	MDX	MDX	MDX	MDX	MDX	MDX	MDX		
15	Empty														
16	XIO-4901	XIO-4901-4SRP-D	None	SDI	SDI	SDI	SDI	SDI	SDI	SDI	SDI	SDI	MADI		
				Module Inputs (Mod-In) to Aggregation Ports (Agg-Tx)											
IFM-2T				Video Streams			Ancillary Data Streams			Audio Streams					
Redundancy Mode: 2022-7, Low Latency				Mod-In		Agg-Tx		Mod-In		Agg-Tx		Mod-In		Agg-Tx	
Maximum Stream Bitrate: 3.0Gbps (3G)				39		72		27		72		31		72	
Stream Format: Video+Audio+Data															
				Apply		Cancel									


Fig. 4-1: A GV Node in iControl Navigator

The above iControl Navigator configuration is used as an example configuration for the following procedure.

#### To configure a GV node MADI input in GV Orbit Control

- 1 Select the required Area. See [Selecting an Area](#), on page 23.
- 2 Select the required topology. See [Selecting a Graph](#), on page 24.
- 3 Add and configure a GV Node device. See [Configuring a GV Node Device](#), on page 163.

- In the **Property Editor** for the GV Node device, make the same setting as in GV Node Manager for **Enabled Options** for the card: in the GV Node's properties, in **Slots**, select **16**, then set **None** in **Card Enabled Option**.

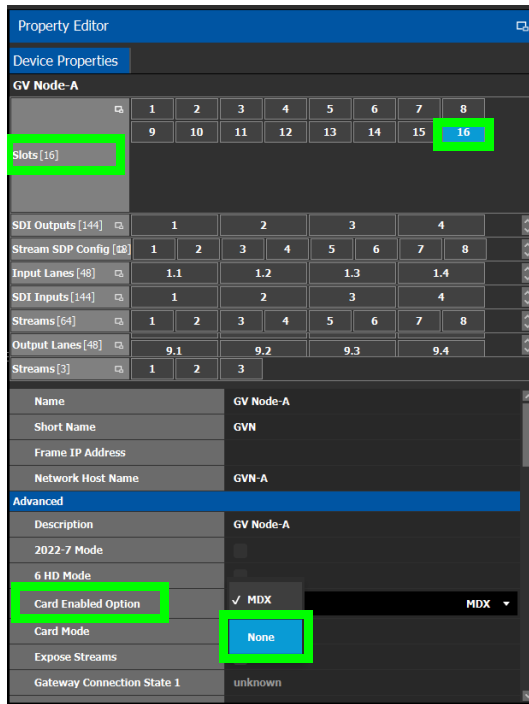


- Use the following table to identify the SDI input number used by GV Orbit Control from the card's slot and input number for the next step. Only the eighth and ninth inputs of each slot support MADl input signals. For example, the ninth input of the card in slot 16 is 144.

#### Matrix Input from Fabric Number for each GV Node Frame Slot

Card's Input from GV Node Fabric	GV Node Frame Slot Number															
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
First Input	1	10	19	28	37	46	55	64	73	82	91	100	109	118	127	136
Second Input	2	11	20	29	38	47	56	65	74	83	92	101	110	119	128	137
Third Input	3	12	21	30	39	48	57	66	75	84	93	102	111	120	129	138
Fourth Input	4	13	22	31	40	49	58	67	76	85	94	103	112	121	130	139
Fifth Input	5	14	23	32	41	50	59	68	77	86	95	104	113	122	131	140
Sixth Input	6	15	24	33	42	51	60	69	78	87	96	105	114	123	132	141
Seventh Input	7	16	25	34	43	52	61	70	79	88	97	106	115	124	133	142
Eighth Input	8	17	26	35	44	53	62	71	80	89	98	107	116	125	134	143
Ninth Input	9	18	27	36	45	54	63	72	81	90	99	108	117	126	135	144

- 6 In the **Property Editor** for the GV Node device, make the same setting as in GV Node Manager for the card's input: in the GV Node's properties, in **SDI Inputs**, select **144**, then set **MADI** in **Mods-In** to **IFM**.

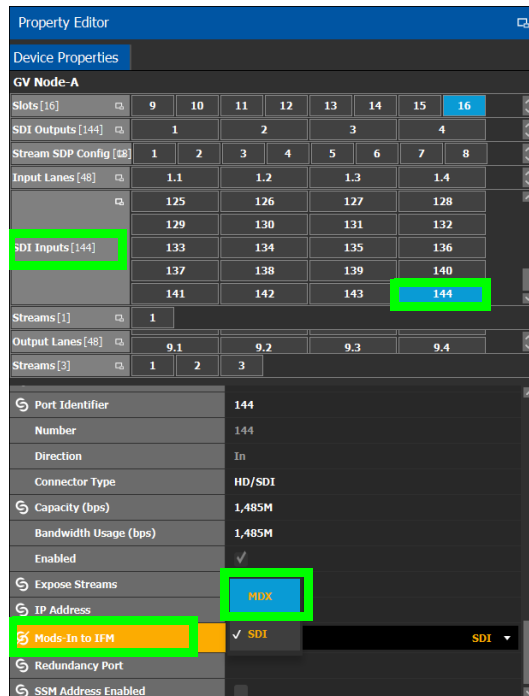

For each MADI input, 64 audio streams are shown in **Streams** and the logical level is MADI for each stream. These 64 streams are made available within the Logical Device Table for use on manually created logical devices. If you choose the Automatic source/destination option for the MADI, then 4 devices of 16 channels of audio are



created in the Logical Device Table on the appropriate tab. See [Logical Device Table Tasks](#), on page 78.

The screenshot shows the 'Property Editor' window for 'GV Node-A 10.37.73.211'. The interface is divided into several sections:

- Device Properties:** A grid of properties including Slots, Stream SDP Config, SDI Outputs, Input Lanes, SDI Inputs, Streams, and Output Lanes. The 'Streams [64]' row is highlighted in green, showing values from 1 to 18.
- Redundancy Port:** A section with a toggle for 'Redundancy Port'.
- SSM Address Enabled:** A section with a toggle for 'SSM Address Enabled'.
- GV Node-A 10.37.73.211 In 144 Stream 1:** A section with various properties:
  - Name: GV Node-A 10.37.73.211 In 144 Stream 1
  - Description: GV Node-A 10.37.73.211 In 144 Stream 1
  - Logical Level: MADI (highlighted in green)
  - Automatic Source: [disabled]
  - Automatic Destination: [disabled]
  - Enabled: [checked]
  - Expose Stream: [disabled]
  - IGMPv3 SSM Address: 0.0.0.0
  - SSM Address Enabled: [disabled]

## Configuring an IPG-3901 / IPG-4901 Device


The Densité IP Gateway (IPG-3901) plug-and-play module is a 3 RU module for the Densité 3 frame, which provides bidirectional IP/SDI conversion. The Gateway operates with 10 GigE audio/video video-over-IP, supporting UHD/3G/HD/SD-SDI formats.

The GV Node IP Gateway (IPG-4901) plug-and-play module is a 3 RU single slot module for the GV Node frame, which provides bidirectional fiber IP connectivity to provide conversion to and from other equipment that cannot be handled directly by the GV Node aggregation ports (GV Node's receivers and transmitters). This card allows the user to expand the receivers available on the GV Node, as well as it brings more flexibility to the allowed audio profiles that can be accepted through the IPG-4901


**PREREQUISITES:** All IPG-3901 and IPG-4901 devices must have been previously configured in iControl Navigator. GV Orbit Control reads this configuration information from iControl through the GV Node / Densité Manager.

### To configure an IPG-3901 / IPG-4901 Device

- 1 Add the **IPG-3901** or **IPG-4901** device to the Topology: from the **Device Library, Virtual Device**, find the **IPG-3901** or **IPG-4901** device bubble. See [To add a Virtual Device to a topology](#), on page 44.

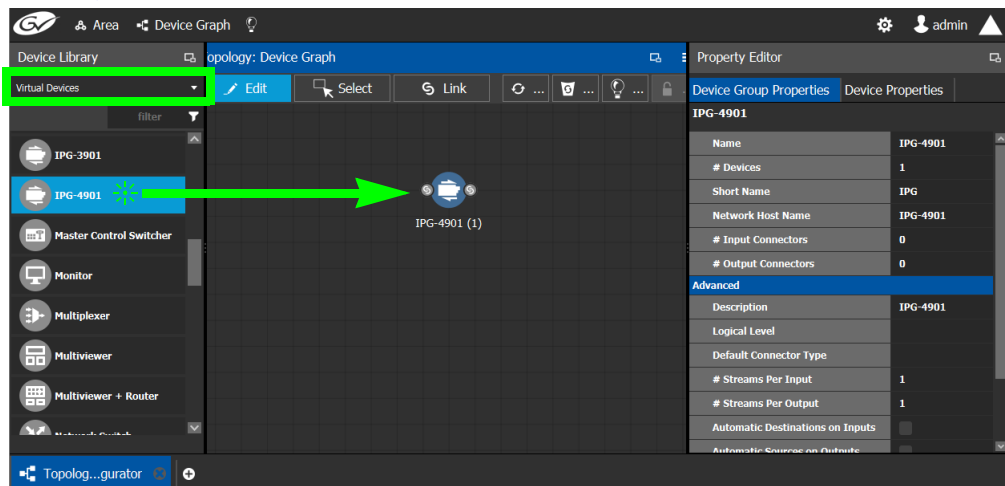

- 2 Select **Device Group Properties**. Configure the **GV Node IP Address / Frame IP Address** and **Slot Number** properties.

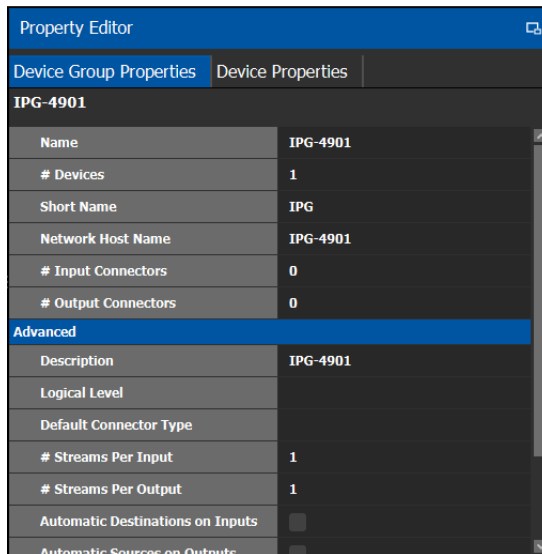

See also [Description of Common Device Properties](#), on page 162.

Parameter	Description
# Devices	The number of panel instances in this device group.
Network Host Name	The hostname is the unique name by which the associated IPG-3901 or IPG-4901 is known on the network.
# Input Connections	The current status for information purposes, once the <b>GV Node IP Address</b> and <b>Slot Number</b> parameters are configured and the topology is activated. See <a href="#">Activating a Topology</a> , on page 72.
# Output Connections	
Advanced > Default Connector Type	
Advanced > # Streams Per Input	
Advanced > # Streams Per Output	
Advanced > Receive Stream IP Pattern	
Advanced > Send Stream IP Pattern	

- 3 Activate the topology. See [Activating a Topology](#), on page 72.  
The card configuration is read from Densite Manager and applied to the device.

- 4 Select the **Device Properties** tab and then select **IPG** next to **Devices**. See also [Description of Common Device Properties](#), on page 162.

Parameter	Applies to		Description
	IPG-3901	IPG-4901	
Network Host Name	•	•	The hostname is the unique name by which the associated IPG-3901 or IPG-4901 is known on the network.
GV Node IP Address		•	IP Address of the CPU-ETH3 for the GV Node frame into which the IPG-4901 card is installed.
Frame IP Address	•		IP Address of the CPU-ETH3 for the Densité frame into which the IPG-3901 card is installed.
Slot Number	•	•	The slot in which the IPG-3901 or IPG-4901 device is located in the GV Node frame.
Connection to Controller 1	•	•	Connection to Controller 1 shows the connection status of the IPG device with the primary server of a server group.
Connection to controller 2	•	•	Connection to Controller 2 shows the connection status of the IPG device with the secondary server of a server group. See <a href="#">Configuring a Controller Group</a> , on page 19. <b>unknown:</b> The topology is inactive (see <a href="#">Activating a Topology</a> , on page 72) or the IPG device does not have network connectivity to the GV Orbit Control server(s). <b>offline:</b> The IPG device does not have network connectivity to the GV Orbit Control server(s). <b>online:</b> The IPG device is connected to the GV Orbit Control server(s).
Firmware Version	•	•	Shows the firmware version installed on the IPG-3901 or IPG-4901 card. This shows the current status for information purposes.
Internal Wiring Done	•	•	Shows if the internal modeling of the IPG-3901 or IPG-4901 is complete.
Operation Mode	•	•	Shows the operation mode of the ETH2 port of the IPG-3901 or IPG-4901 card for information purposes: <b>Redundancy:</b> ETH 2 is redundant to ETH 1. <b>Aggregation:</b> Both ETH 1 and ETH 2 are available simultaneously. <b>OFF:</b> ETH 2 is disabled.

- 5 Select **ETH#** next to **Ethernet Ports**. These are the network configuration parameters for the IPG-3901 or IPG-4901 card's Ethernet ports. See also [Description of Common Device Properties](#), on page 162.

Parameter	Description
IP Address	The network IP address for this Ethernet port.
Gateway	The network gateway IP address.
Subnet Mask	The IP network's subnet mask.

- 6 Select one of the streams next to **Gateways** (by default labelled as **OUT#** or **IN#**). See also [Description of Common Device Properties](#), on page 162.

Parameter	Description
Direction	This shows the current status for information purposes.
Logical Level on SDI Stream	To force a stream to use the IPG-3901 or IPG-4901 device, create a new level (see <a href="#">Duplicating a Logical Level</a> , on page 33) that you will use to select these specific streams at the source and destination ports. Set the logical level that will be used for this here.  For example, create a logical level called IPG-SDI from the SDI logical level. Now use this level to send and receive streams to and from this device.

- 7 Select **1** or **2** next to **Streams**. See also [Description of Common Device Properties](#), on page 162.

Parameter	Description
Ethernet Port	The Ethernet port this gateway is assigned to (ETH 1 or ETH 2). This shows the current status for information purposes.
Format	The gateway format: SD, HD, or 3G for video streams, or AES67 profile for audio streams. This shows the current status for information purposes.
IGMPv3 Source	For a receiver gateway, this is the address of the joined stream's port when SSM Address is enabled on the device.
IP Address	The stream's network IP address.
Logical Level on ETH stream	The Logical level to apply on the ETH side of the gateway. By default for the video stream, this value is SDI and for the audio stream, this value is SDI audio.
Port	The stream's network port.
Redundant IGMPv3 Source	When the IPG-3901 or IPG-4901 card is in Redundancy mode: For a receiver gateway, this is the address of the joined stream's port when SSM Address is enabled on the device.

Parameter	Description
Redundant IP Address	When the IPG-3901 or IPG-4901 card is in Redundancy mode: The stream's network IP address.
Redundant Port	When the IPG-3901 or IPG-4901 card is in Redundancy mode: The stream's network port.

## Connecting an IPG-4901 device


The IPG 4901 has 9 SDI input ports, 9 SDI output ports, and 2 bidirectional ETH ports. The SDI ports must be connected to the SDI ports of the GV Node in which the IPG-4901 is slotted in. This rule is not enforced in GV Orbit Control. GV Orbit Control allows you to use an IPG-4901 like an IPG-3901, however this is not a valid use case and will not work.

The 9 SDI input ports short labels are called OUT for OUT from fabric, and the 9 SDI output ports short labels are called IN for In to fabric to follow iControl's behavior.

## Device properties

- It is possible to assign a logical level to SDI ports by changing the Logical Level of SDI stream at the Gateway level.
- It is possible to assign a logical level to IP streams by changing the Logical Level on ETH stream on Stream level, under the Gateway.
- It is possible to change the multicast address for SDI to IP gateways (called OUT) by changing the IP Address, Port, Redundant IP Address and Redundant Port properties on Stream level, under Gateway. These changes are propagated to iControl.
- In OFF or Redundancy mode, gateways OUT 6 to 9 and IN 6 to 9 are disabled and not visible in **Property Editor**. They become visible only if card is in Aggregation mode.

## Example Topology Using an IPG-4901

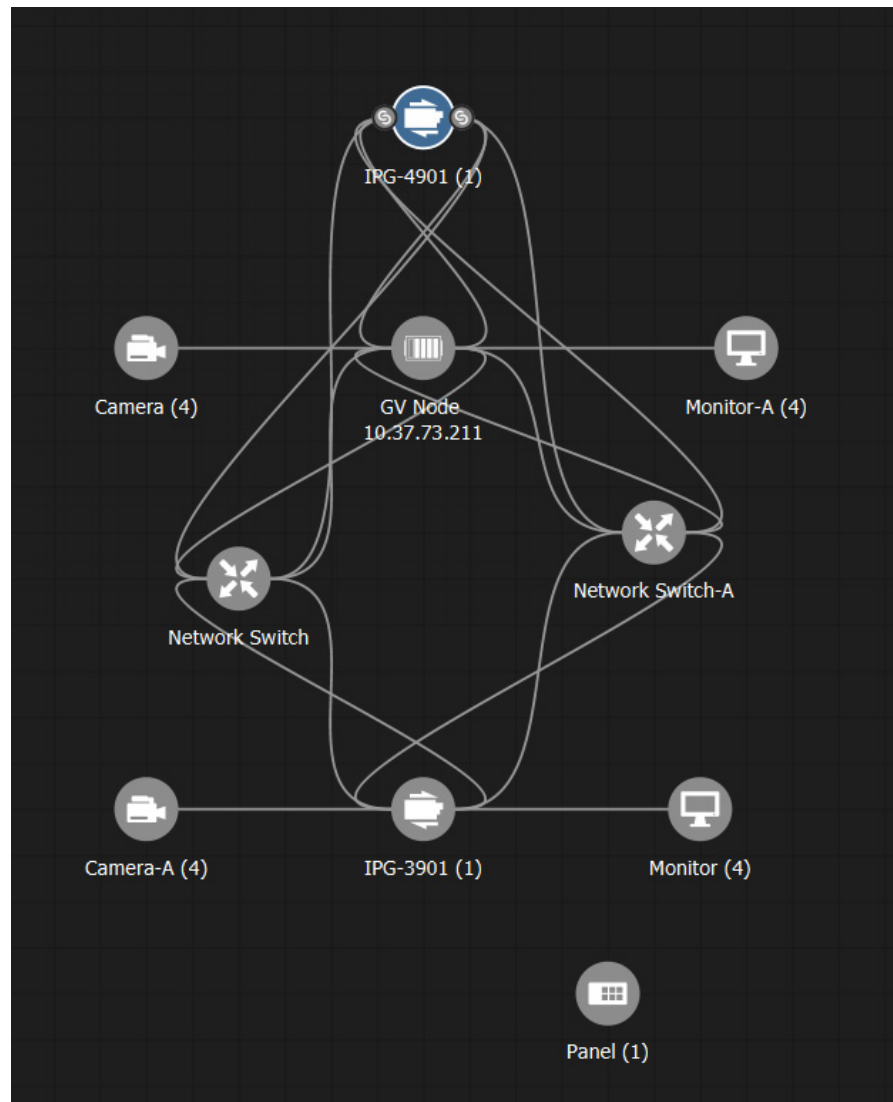

## Configuring an IPVU Device

The IPVU is a compact dual-channel IP-to-HDMI converter that is perfect for displaying IP sources and a multiviewer's IP outputs on HD and UHD HDMI displays.

The inputs of an IPVU are called *spigots*. See also [How to Know if a Spigot is an Input or an Output](#), on page 184.

---

### WARNING

The IPVU's configuration is set through GV Orbit Client and then GV Orbit Control reads the configuration from the IPVU device. All spigots on an IPVU are inputs.

---

There is no offline configuration of the IPVU device. It must first be discovered on the network by GV Orbit Control.

The IPVU device must have been previously configured with GV Orbit Client before being integrated into GV Orbit Control as most configuration parameters shown in GV Orbit Control are for information purposes only (GV Orbit Control reads it from the IPVU devices). See the *IPVU Installation Guide* for more information.

**PREREQUISITES:** The Domain ID of the IPVU device(s) must be set in the System Controller Group Properties under **Domain Ids**. See [Configuring a Controller Group](#), on page 19. These devices must be on the same subnet that the GV Orbit Control server is connected to.

### Related Topics

- [How to Know if a Spigot is an Input or an Output](#), on page 184.
- [Configuring UHD 4K Two-Sample Interleave Division IP Streams for use with an IQMix, IQUCP, or IPVU Device](#), on page 185.
- [Configuring UHD 4K Quad-Link SDI Streams for use with an IQMix, IQUCP, or IPVU Device](#), on page 190.

### Spigot Usage

An IPVU device has 8 input spigots. They are used according to the IPVU's output resolution.


Input Spigot Number	HD Output Description	UHD Output Description
Spigot1	Stream input for <b>Monitor Output 1</b> connection	SMPTE ST 424-5 Link 1 input stream for <b>Monitor Output 1</b> output connection
Spigot2	Not used	SMPTE ST 424-5 Link 2 input stream for <b>Monitor Output 1</b> output connection
Spigot3	Not used	SMPTE ST 424-5 Link 3 input stream for <b>Monitor Output 1</b> output connection
Spigot4	Not used	SMPTE ST 424-5 Link 4 input stream for <b>Monitor Output 1</b> output connection
Spigot5	Stream input for <b>Monitor Output 2</b> connection	SMPTE ST 424-5 Link 1 input stream for <b>Monitor Output 2</b> output connection
Spigot6	Not used	SMPTE ST 424-5 Link 2 input stream for <b>Monitor Output 2</b> output connection



Input Spigot Number	HD Output Description	UHD Output Description
Spigot7	Not used	SMPTE ST 424-5 Link 3 input stream for <b>Monitor Output 2</b> output connection
Spigot8	Not used	SMPTE ST 424-5 Link 4 input stream for <b>Monitor Output 2</b> output connection

### To configure an IPVU Device


- 1 Add the IPVU device to the Topology: from the **Device Library, Discovered**, find an IPVU device bubble that you want to control. See [To add a Discovered Device to a Topology](#), on page 47.

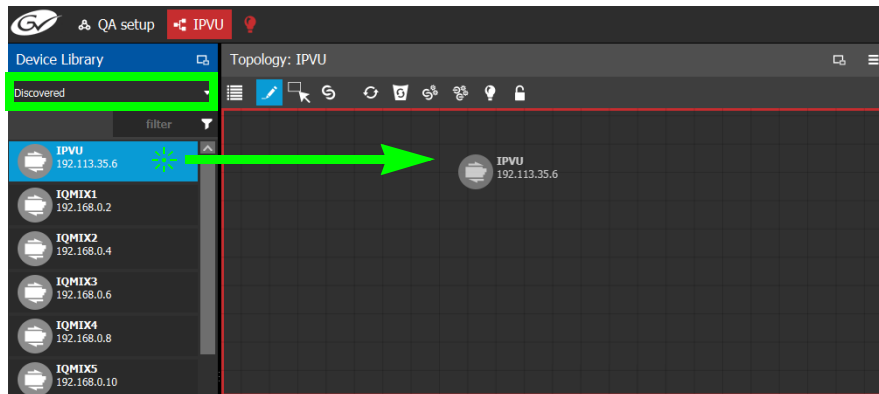

- 2 Configure the IPVU properties. See also [Description of Common Device Properties](#), on page 162. The IPVU device should be first configured with GV Orbit Client before being integrated into GV Orbit Control as most configuration parameters shown in GV Orbit Control are shown for information purposes only.

Parameter	Description
Network Host Name	The hostname is the unique name by which the associated IPVU is known on the network.
Domain ID	Set the same Domain IDs on all IPVU devices that are to communicate with each other on the network. The default value for Grass Valley equipment is <b>101</b> . Valid range: 0 to 232. See also <a href="#">Configuring a Controller Group</a> , on page 19.
Internal wiring	Shows if the internal modeling of the IPVU is complete.

- 3 Create and connect the core IP devices to the IPVU. See [Methods to Link Devices in a Topology](#), on page 58.

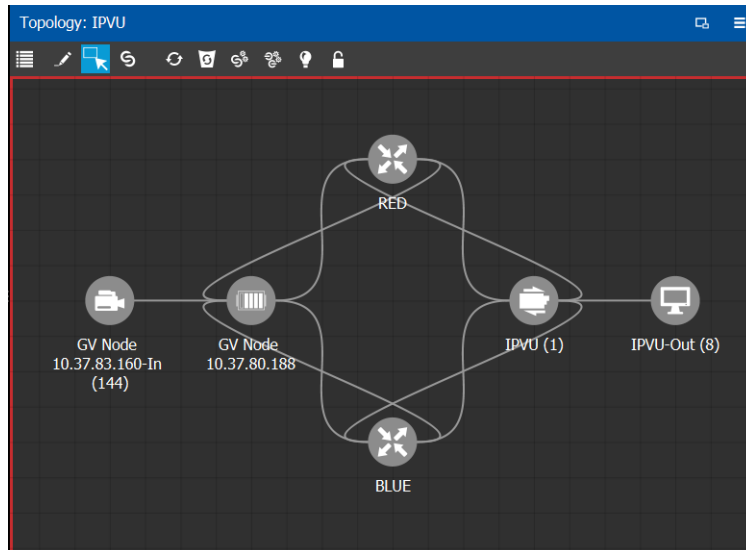

## Configuring an IQMix or IQUCP25 Device

The IQMIX / IQUCP25 series is a range of multi-channel video over IP transceiver modules developed for use within low latency, high bandwidth Ethernet IP networks, capable of encoding / decoding multiple SDI signals. They provide both compressed and uncompressed modes of operation.

The inputs and outputs of an IQMIX / IQUCP25 are called *spigots*. There are a variety of spigot configurations that are available; for example, 6 inputs / 6 outputs, 12 inputs / 0 outputs, 0 inputs / 12 outputs, 8 inputs / 0 outputs. See also [How to Know if a Spigot is an Input or an Output](#), on page 184.

---

### WARNING

The spigot configuration is set through GV Orbit Client and then GV Orbit Control reads it from the IQMIX / IQUCP25 card. For any given spigot, you must know which mode (input or output) has been configured to connect the spigots correctly in GV Orbit Control.

---

There is no offline configuration of the IQMIX / IQUCP25 device. It must first be discovered on the network by GV Orbit Control.

The IQMIX / IQUCP25 device must have been previously configured with GV Orbit Client before being integrated into GV Orbit Control as most configuration parameters shown in GV Orbit Control are for information purposes only (GV Orbit Control reads it from the IQMIX / IQUCP25 devices). See the IQMIX / IQUCP25 User Manual for more information.

**PREREQUISITES:** The Domain ID of the IQMIX / IQUCP25 device(s) must be set in the System Controller Group Properties under **Domain Ids**. See [Configuring a Controller Group](#), on page 19. These devices must be on the same subnet that the GV Orbit Control server is connected to.

---

**Note:** An IQMix using VC2 video compression format is not currently supported by GV Orbit Control.


---

### Related Topics

- [How to Know if a Spigot is an Input or an Output](#), on page 184
- [Configuring UHD 4K Two-Sample Interleave Division IP Streams for use with an IQMix, IQUCP, or IPVU Device](#), on page 185.
- [Configuring UHD 4K Quad-Link SDI Streams for use with an IQMix, IQUCP, or IPVU Device](#), on page 190

### To configure an IQMIX / IQUCP25 Device

- 1 Add the IQMIX / IQUCP25 device to the Topology: from the **Device Library, Discovered**, find an IQMIX / IQUCP25 device bubble that you want to control. See [To add a Discovered Device to a Topology](#), on page 47.

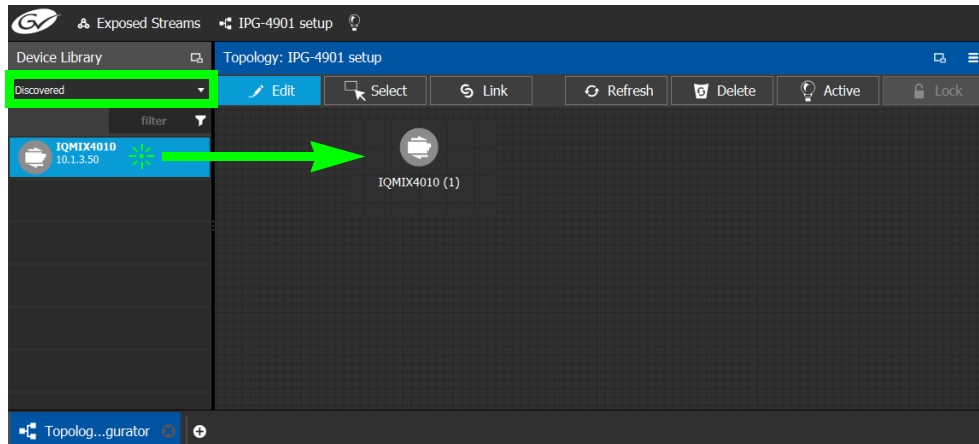

- 2 Configure the IQMIX / IQUCP25 properties. See also [Description of Common Device Properties](#), on page 162. The IQMIX / IQUCP25 device should be first configured with GV Orbit Client before being integrated into GV Orbit Control as most configuration parameters shown in GV Orbit Control are shown for information purposes only.

Parameter	Description
Network Host Name	The hostname is the unique name by which the associated IQMIX / IQUCP25 is known on the network.
Domain ID	Set the same Domain IDs on all IQMIX / IQUCP25 devices that are to communicate with each other on the network. The default value for Grass Valley equipment is <b>101</b> . Valid range: 0 to 232. See also <a href="#">Configuring a Controller Group</a> , on page 19.
Internal wiring	Shows if the internal modeling of the IQMIX / IQUCP25 is complete.

- 3 Create and connect the edge devices (SDI and IP devices) that are connected to the IQMIX / IQUCP25. See [Methods to Link Devices in a Topology](#), on page 58.

### How to Know if a Spigot is an Input or an Output

To know if a spigot In GV Orbit Control is an input or output, proceed as follows:


- 1 Select the device bubble on the Topology Configurator. See [Selecting a Graph](#), on page 24.
- 2 Expand **Ip Spigots** in **Device Properties** and select a spigot from the list.
- 3 For each spigot, interpret the **Mode** property as follows:
  - SRC = Output
  - DST = Input

## Configuring UHD 4K Two-Sample Interleave Division IP Streams for use with an IQMix, IQUCP, or IPVU Device

To support UHD 4K streams, the image is mapped onto four SDI HD sub-images using a two-sample interleave division. This means each of the four sub-stream carries a quarter-resolution picture. These four sub-streams must:

- each be individually represented by four logical levels; one level for each sub-stream. For example, **SDI2Sluhd1**, **video2Sluhd2**, **video2Sluhd3** and **video2Sluhd4**.
  - The first logical level, **SDI2Sluhd1**, carries the full SDI stream for video, audio, and ancillary data.
  - The remaining logical levels will only use the video stream from the SDI levels, **video2Sluhd2**, **video2Sluhd3**, and **video2Sluhd4**.
- be logically linked together so that they are switched together at once ensuring that there is no switching delay between the four streams that would create visible glitches between the four quadrants.

The following shows the typical video stream composition of a two-sample interleave division display with the associated logical levels used in this procedure.

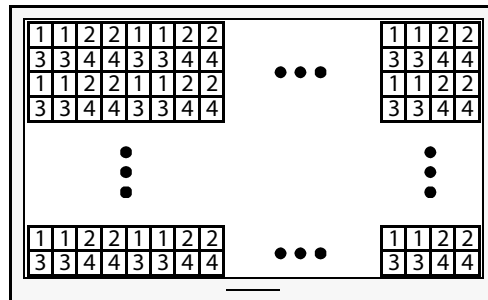


UHD Composite Image


- 1: SMPTE ST 424-5 Link 1 pixels carried by HD Logical Level **SDI2Sluhd1**
- 2: SMPTE ST 424-5 Link 2 pixels carried by HD Logical Level **Video2Sluhd2**
- 3: SMPTE ST 424-5 Link 3 pixels carried by HD Logical Level **Video2Sluhd3**
- 4: SMPTE ST 424-5 Link 4 pixels carried by HD Logical Level **Video2Sluhd4**

**PREREQUISITES:**

- For IQMix / IQUCP device(s):
  - The IQMix / IQUCP device(s) must already be configured in GV Orbit Control. See [Configuring an IQMix or IQUCP25 Device](#), on page 183.
  - Configure the IQMix / IQUCP device spigots to be used for UHD in GV Orbit Client by enabling the **UHD Links** parameter in the **Link Control Page** for all quad-link signal spigots.
  - Set the corresponding spigots to use 2SI signals: Under **TPG**, clear (disable) the **SDQS** check boxes as required.

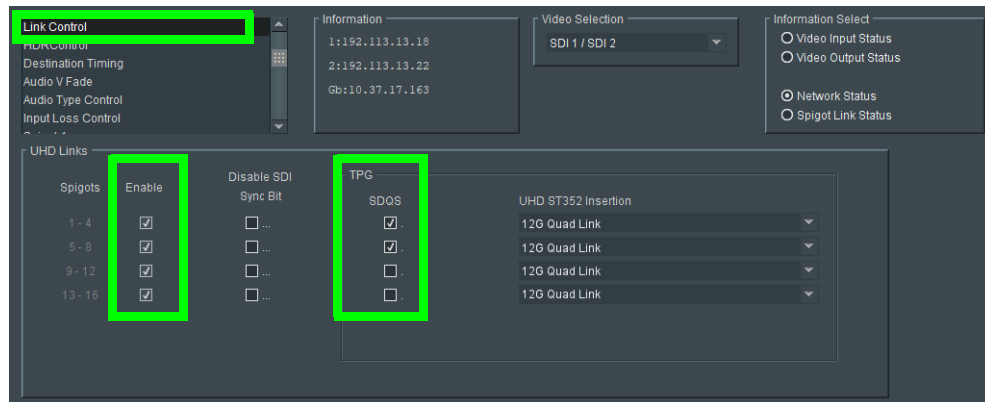

- The IPVU device(s) must already be configured in GV Orbit Control. See [Configuring an IPVU Device](#), on page 180.
  - Configure the IPVU device spigots to be used for UHD in GV Orbit Client by:
    - Enabling the **Enable UHD** parameter in the **IPVU** configuration page for **Monitor Output 1** and **2** as necessary.
    - Set the **UHD Mode** to **2SI**.

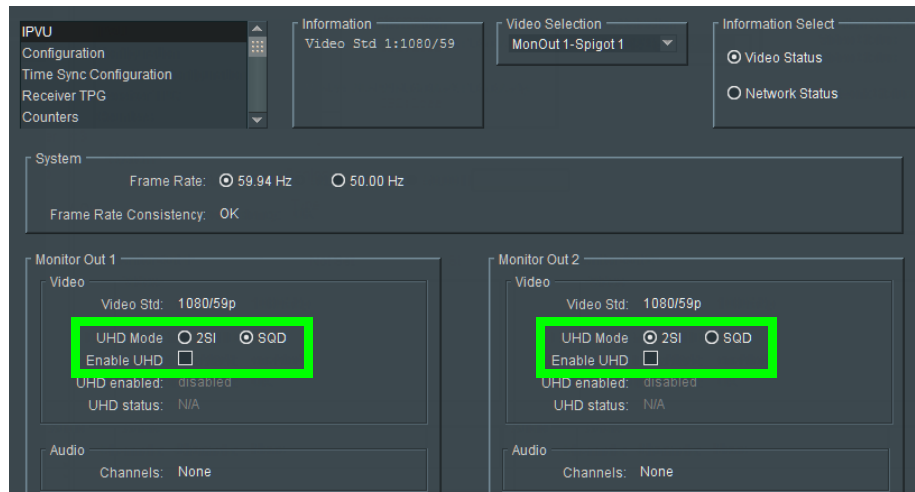


**To configure UHD 2SI Streams with an IPVU Device**


- 1 Add IPVU device(s) to the topology and configure them in GV Orbit Control. See [Configuring an IPVU Device](#), on page 180.

- 2 Link the IPVU device(s) to the logical sources and destinations in GV Orbit Control. See [Methods to Link Devices in a Topology](#), on page 58.


The following topology will be used as an example, where the IPVU receives UHD stream sources from the GV Node.

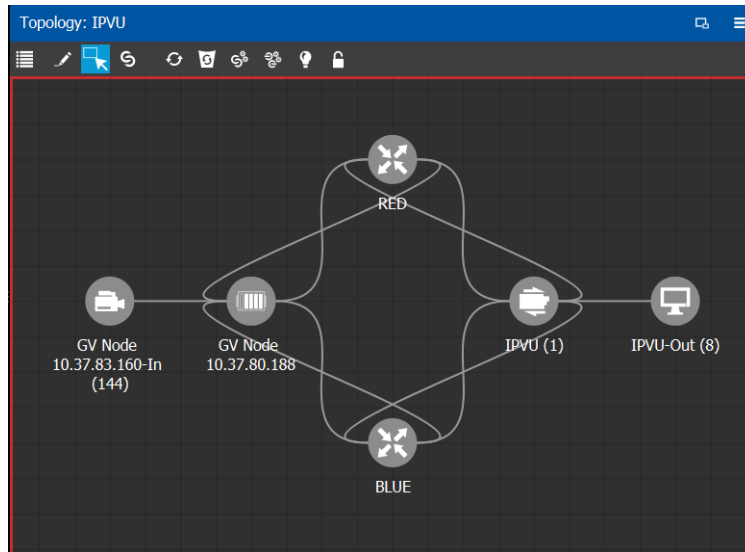

- 3 Create the logical levels necessary to support 2SI sources and destinations: Create the following UHD logical levels from the Logical Level Editor from the pre-existing SDI logical level: **SDI2Sluhd1**, **SDI2Sluhd2**, **SDI2Sluhd3**, and **SDI2Sluhd4**. See [Duplicating a Logical Level](#), on page 33.

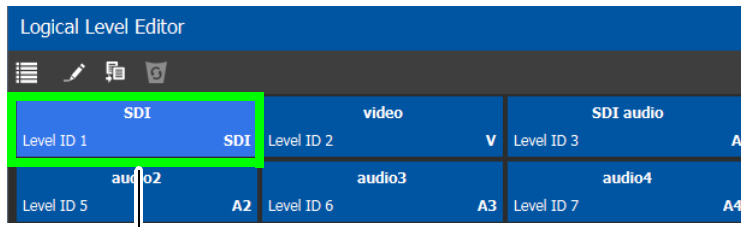


Duplicate the SDI Logical Level four times to create **SDI2Sluhd1**, **SDI2Sluhd2**, **SDI2Sluhd3**, and **SDI2Sluhd4**

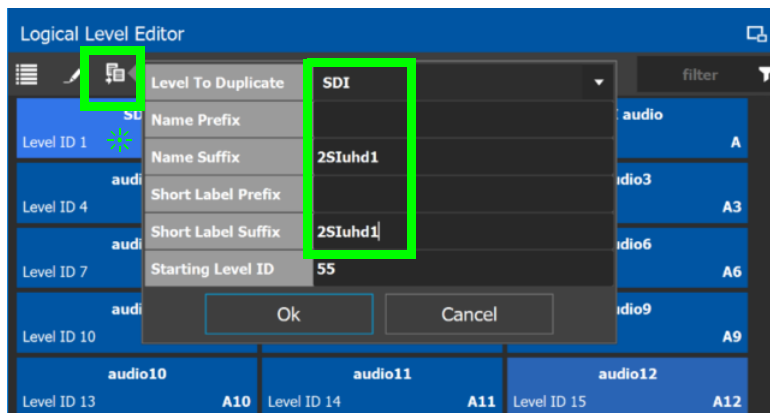

For this example, only the following “2SIuhd” levels will be used: **SDI2Sluhd1**, **Video2Sluhd2**, **Video2Sluhd3**, and **Video2Sluhd4**. It is optional to delete all other

“2SIuhd” logical levels for a cleaner presentation, if they are not used elsewhere. See [Deleting a Logical Level](#), on page 36.

- 4 From the **Multilevel Table** of the **Logical Device Table**, under the **Sources** tab, click the Levels icon . See [Accessing the Logical Device Table task](#), on page 78.
- 5 Select the levels you want to display in the **Logical Device Table**. As shown below, the **2SIuhd** filter was applied and then you can select the 4 Sluhd levels (**SDI2SIuhd1**, **Video2SIuhd2**, **Video2SIuhd3**, and **Video2SIuhd4**), each representing one sub-stream of a of a 2SI signal. Click **OK**.




The columns of the Multilevel Table updates to only show the **SDI2SIuhd1**, **Video2SIuhd2**, **Video2SIuhd3**, and **Video2SIuhd4** columns.

- 6 In the Logical Device Table, select a source’s row to which you want to add the streams. See [To configure streams for the new sources](#), on page 88.




- 7 In the Logical Device Table, map streams with levels: Configure the UHD sources and destinations by assigning quad-link IP streams to each level.

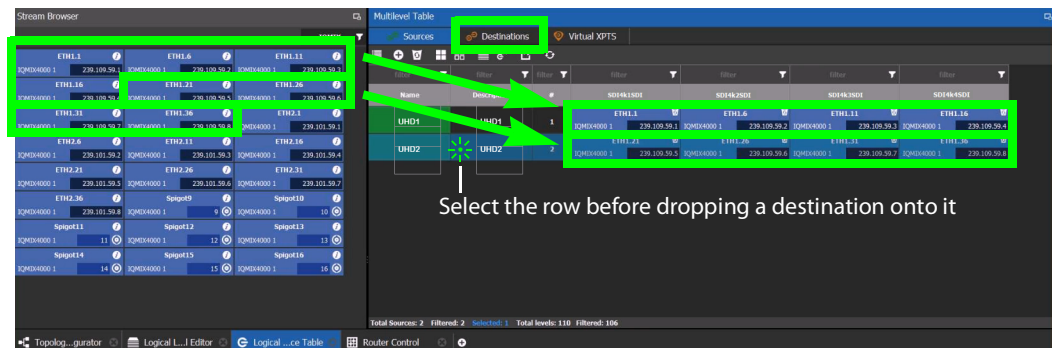

- 8 Select the levels you want to display in the **Logical Device Table**. Again, select the 4 Sluhd levels (**SDI2Sluhd1**, **Video2Sluhd2**, **Video2Sluhd3**, and **Video2Sluhd4**), each representing one sub-stream of a of a 2SI signal. Click **OK**.

The columns of the Multilevel Table updates to only show the **SDI2Sluhd1**, **Video2Sluhd2**, **Video2Sluhd3**, and **Video2Sluhd4** columns.


- 9 From the **Multilevel Table** of the **Logical Device Table**, under the **Destinations** tab, click the Levels icon . See [Accessing the Logical Device Table](#) task, on page 78.
- 10 Repeat step 6 for destinations.
- 11 Test the configuration by making takes between a logical source and destination that use the two-sample interleave division streams. See [Performing a Take in Router Control](#), on page 281. See in Pathfinder that the correct source sub-streams are received by each destination. See [Viewing Information about the Destinations](#), on page 265.

## Configuring UHD 4K Quad-Link SDI Streams for use with an IQMix, IQUCP, or IPVU Device

To support UHD 4K streams, a quad-link (square division) configuration is used. That is, the UHD image is divided into four SDI HD quadrants, and each quadrant is sent as four separate streams. These four streams must:

- each be individually represented by four logical levels; one level for each quadrant. For example, **SDI**, **SDIuhd2**, **SDIuhd3** and **SDIuhd4**.
  - The first logical level is the base **SDI** logical level. This logical level carries the video, audio, and ancillary data.
  - The **SDIuhd2**, **SDIuhd3** and **SDIuhd4** logical levels are video only.
- be logically linked together so that they are switched together at once ensuring that there is no switching delay between the four streams that would create visible glitches between the four quadrants.


The following shows the typical video stream composition of a UHD quad-link display with the associated logical levels used in this procedure.

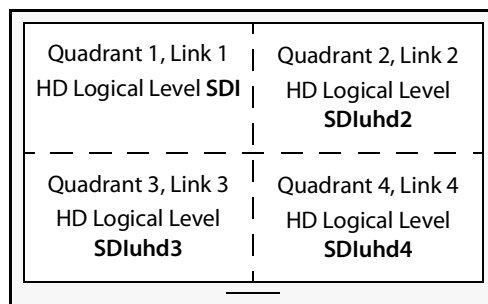


UHD Composite Image

**PREREQUISITES:**

- For IQMix / IQUCP device(s):
  - The IQMix / IQUCP device(s) must already be configured in GV Orbit Control. See [Configuring an IQMix or IQUCP25 Device](#), on page 183.
  - Configure the IQMix / IQUCP device spigots to be used for UHD in GV Orbit Client by enabling the **UHD Links** parameter in the **Link Control Page** for all quad-link signal spigots.
  - Set the corresponding spigots to use Square Division signals: Under **TPG**, set (enable) the **SDQS** check boxes as required.

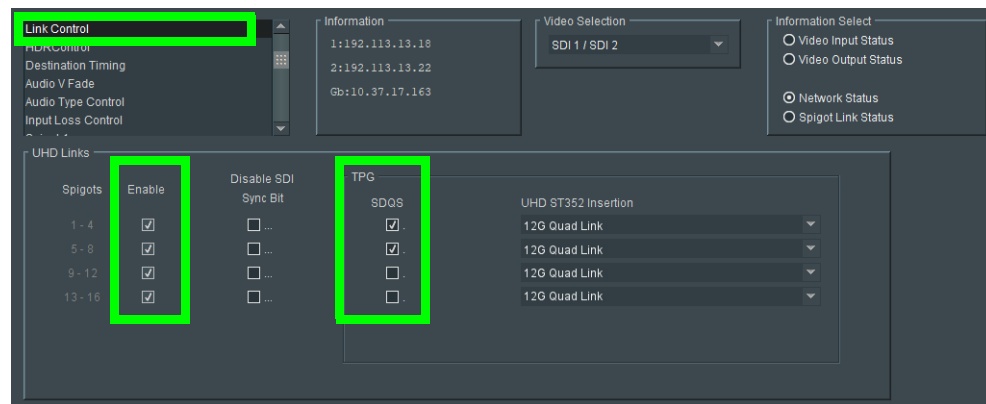


- For IPVU device(s):
  - The IPVU device(s) must already be configured in GV Orbit Control. See [Configuring an IPVU Device](#), on page 180.
  - Configure the IPVU device spigots to be used for UHD in GV Orbit Client by:
    - Enabling the **Enable UHD** parameter in the **IPVU** configuration page for **Monitor Output 1** and **2** as necessary.
    - Set the **UHD Mode** to **SQD**.

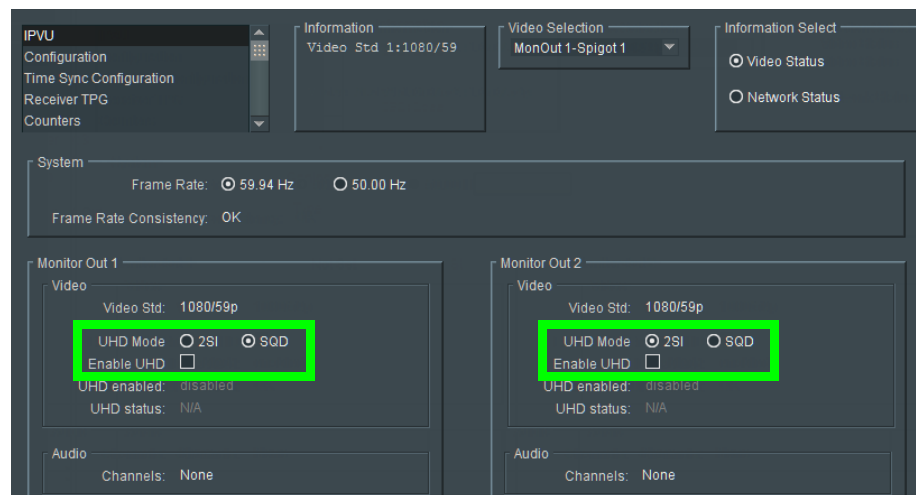


### To configure UHD Quad-Link Streams

Create the logical levels necessary to support quad-link sources and destinations.

- 1 Create the following UHD logical levels from the Logical Level Editor from the pre-existing **SDI** logical level: **SDIuhd1**, **SDIuhd2**, **SDIuhd3** and **SDIuhd4**. See [Duplicating a Logical Level](#), on page 33.

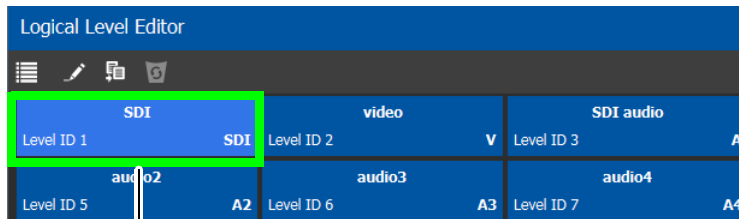

Duplicate the SDI Logical Level four times to create **SDIuhd1**, **SDIuhd2**, **SDIuhd3**, and **SDIuhd4**

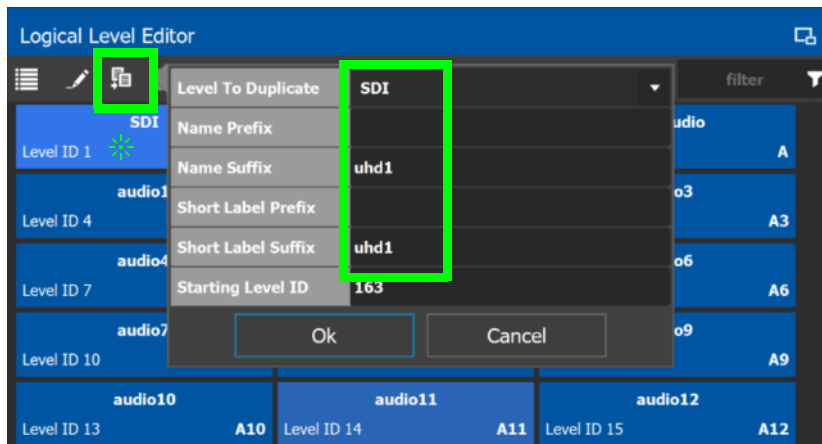

- 2 From the **Multilevel Table** of the **Logical Device Table**, click the Levels icon . See [Accessing the Logical Device Table task](#), on page 78.
- 3 Select the levels you want to display in the table. As shown below, a filter **SDIuhd** was applied and then you can select the 4 SDI UHD levels and click **OK**.




The logical device table will show 4 items (**SDIuhd1**, **SDIuhd2**, **SDIuhd3**, and **SDIuhd4**), each with a UHD level representing one quadrant of a of a quad-link signal.


- 4 Add IQMix / IQUCP device(s) to the topology and configure them in GV Orbit Control. See [Configuring an IQMix or IQUCP25 Device](#), on page 183.

- 5 Link the IQMix / IQUCP device(s) to the logical sources and destinations in GV Orbit Control. See [Methods to Link Devices in a Topology](#), on page 58.

The following topology will be used as an example, where the IQMix is used as the UHD stream sources (called *uhd1* and *uhd2*) and the IQUCP is used as the UHD stream destination (called *DEST-uhd*).

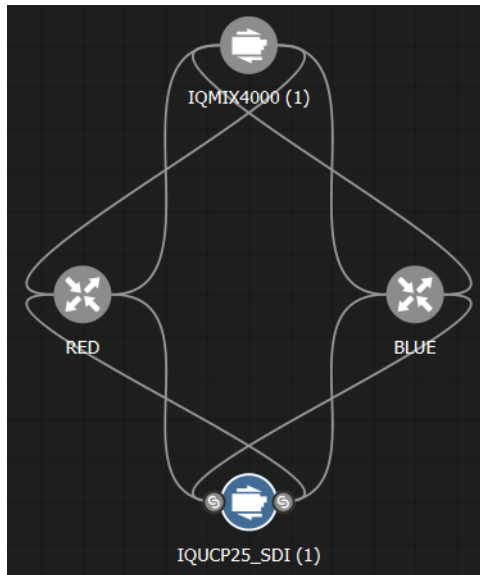

- 6 In the Logical Device Table, map streams with levels: Configure the UHD sources and destinations by assigning quad-link IP streams to each level.

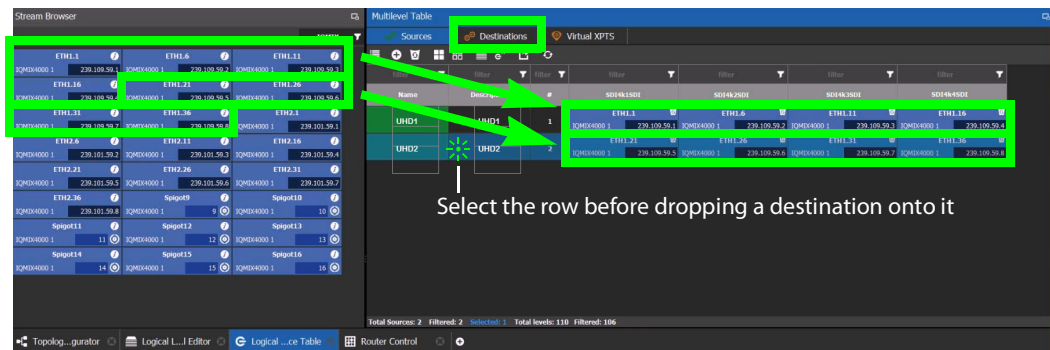


- 7 Repeat step 6 for destinations.
- 8 Test the configuration by making takes between a logical source and destination that use the quad-level link streams. See [Performing a Take in Router Control](#), on page 281. See in Pathfinder that the correct quad-level link streams are received by each destination. See [Viewing Information about the Destinations](#), on page 265.


## Configuring an MV-820-IP Multiviewer Device

The MV-820-IP multiviewer has 48 IP inputs and 12 IP outputs in a 2 RU chassis, making it ideal for high-density IP monitoring applications. Internally, the MV-820-IP multiviewer is an MV-820 SDI multiviewer wrapped inside four IQMix cards to provide IP connectivity through a rear panel that supports the QSFP network interface adapters (refer to the MV-820 Multiviewer User Manual, where this is referred to as the *Video IP Circuitry*). These four IQMix cards are used to convert the IP network input streams to feed the 48 × SDI inputs of the MV-820 cards, and uses three of the four same IQMix cards to also convert the 12 × SDI mosaic outputs of the MV-820 cards into IP stream outputs. These IQMix cards are labeled as *MV-820-IP-REAR* in GV Orbit Client and GV Orbit Control. See [Configuring an IQMix or IQUCP25 Device](#), on page 183 for more information about how to configure an IQMix.

The inputs and outputs of an MV-820-IP are called spigots that, within GV Orbit Control, are provided by four MV-820-IP-REAR devices with the following spigot configuration: 48 input spigots across four MV-820-IP-REAR devices and 12 mosaic output spigots across three MV-820-IP-REAR devices. The third MV-820-IP-REAR device has no output spigots.

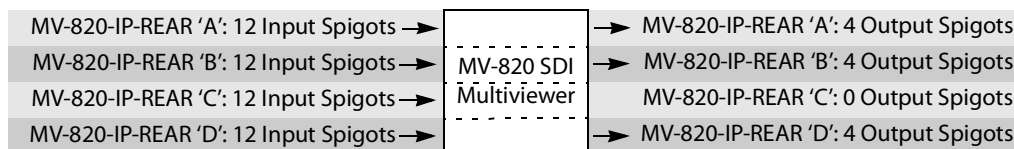

For each MV-820-IP-REAR device, the spigots are used as follows. The third MV-820-IP-REAR device has no output spigots. See also [How to Know if a Spigot is an Input or an Output](#), on page 184.

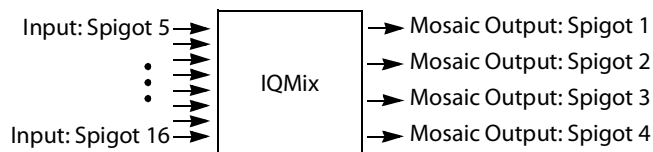

There is no offline configuration of the MV-820-IP device. It must first be discovered on the network by GV Orbit Control.

The MV-820-IP multiviewer must have been previously configured with GV Orbit Client before being integrated into GV Orbit Control as most configuration parameters shown in GV Orbit Control are for information purposes only (GV Orbit Control reads it from the MV-820-IP cards). See the MV-820-IP User Guide for more information.

For example, in GV Orbit Client 2.5 the MV-820-IP is shown as 4 × MV-820-IP-REAR.

Device GUID	Device Name	Device Type	Software	Firmware	Primary IP Address	Secondary IP Address	Control IP Address	Primary Link
(139F7C1E-1D02-1182-8748-002370008A8C)	(139F7C1E-1D02-1182-8748-002370008A8C)	IQMX4010	11.58.71	B24CA1E	190.108.2.109	192.102.2.125		10 Gb
(13A087D0-1D02-1182-8838-002370006D66)	(13A087D0-1D02-1182-8838-002370006D66)	IQMX4010	11.58.71	B24CA1E	190.107.35.2	192.105.36.2		10 Gb
(13A087D0-1D02-1182-8838-002370006D69)	(13A087D0-1D02-1182-8838-002370006D69)	MV-820-IP-REAR	11.54.71	ABA505AC	190.107.34.2	192.105.34.2		50 Gb
(13A087D0-1D02-1182-8838-002370006D69)	(13A087D0-1D02-1182-8838-002370006D69)	MV-820-IP-REAR	11.54.71	ABA505AC	190.107.35.2	192.105.35.2		50 Gb
(13A087D0-1D02-1182-8838-002370006D69)	(13A087D0-1D02-1182-8838-002370006D69)	MV-820-IP-REAR	11.54.71	ABA505AC	190.107.36.2	192.105.36.2		50 Gb
(13A087D0-1D02-1182-8838-002370008FC1)	(13A087D0-1D02-1182-8838-002370008FC1)	MV-820-IP-REAR	11.54.71	ABA505AC	190.107.34.6	192.105.34.6		50 Gb


**PREREQUISITES:** The Domain ID of the MV-820-IP devices must be set in the System Controller Group Properties under **Domain Ids**. See [Configuring a Controller Group](#), on

page 19. These devices must be on the same subnet that the GV Orbit Control server is connected to.

**Note:** An MV-820-IP using VC2 video compression format is not currently supported by GV Orbit Control.

### To configure an MV-820-IP Multiviewer

- 1 Select the required Area. See [Selecting an Area](#), on page 23.
- 2 Select the required topology. See [Selecting a Graph](#), on page 24.
- 3 The topology must be currently:
  - Activated (see [Activating a Topology](#), on page 72).
  - Unlocked (see [Unlocking / Relocking a Topology](#), on page 75).
- 4 From the **Device Library**, on the left, select **Discovered**, from the drop-down list.

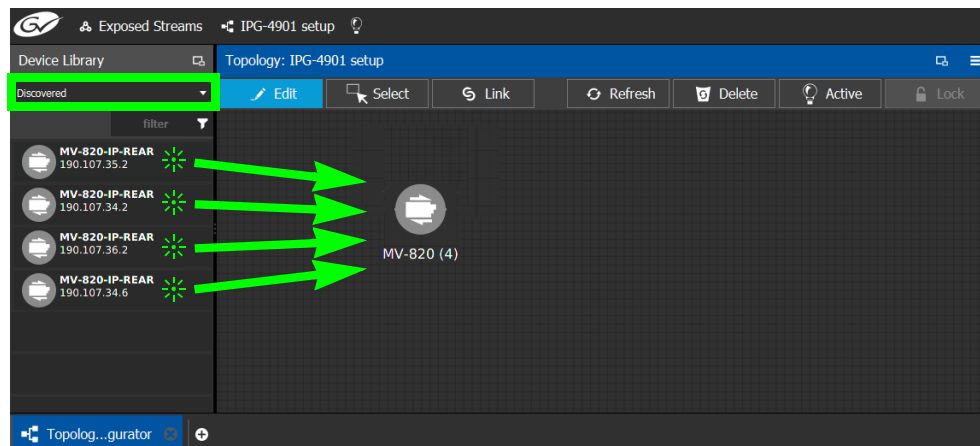

- 5 From the **Device Library**, **Discovered**, find the four **MV-820-IP-REAR** devices with the IP addresses that correspond with those for the MV-820-IP multiviewer on your network: select one of the MV-820-IP-REAR device bubbles and drag it into position on the Topology and release the mouse button.

The device pulled from the **Device Library**, **Discovered** becomes greyed out and another instance of the same device instance cannot be added again to the Topology.

- 6 Now create a device group by adding the remaining three MV-820-IP-REAR device bubbles on top of the MV-820-IP-REAR already on the Topology:
  - a Select another MV-820-IP-REAR device bubble from the **Device Library** and drag it on top of the first MV-820-IP-REAR device instance already on the Topology and release the mouse button.
  - b Repeat this action for the third and fourth MV-820-IP-REAR device bubble in the **Device Library**.


The four MV-820-IP-REAR device instances are shown as a single device on the Topology and can be individually configured in the **Property Editor**, under **Devices**, by clicking an instance. See [Defining Device Properties](#), on page 66 for more information.

- 7 Click on the name of the device underneath the bubble to name the device or device group. See [To name a device and set the number of devices in the group](#), on page 45.

- 8 Configure the MV-820-IP multiviewer's properties. See also [Description of Common Device Properties](#), on page 162. The MV-820-IP device should be first configured with GV Orbit Client before being integrated into GV Orbit Control as most configuration parameters shown in GV Orbit Control are shown for information purposes only.

Parameter	Description
Network Host Name	The hostname is the unique name by which the associated MV-820-IP is known on the network.
Domain ID	Set the same Domain IDs on all MV-820-IP devices that are to communicate with each other on the network. The default value for Grass Valley equipment is 101. Valid range: 0 to 232. See also <a href="#">Configuring a Controller Group</a> , on page 19.
Internal wiring	Shows if the internal modeling of the MV-820-IP is complete.

- 9 Create the logical sources and destinations in GV Orbit Control for the MV-820-IP by adding SDI devices to the topology and then linking them. See [Methods to Link Devices in a Topology](#), on page 58. An example is shown below.

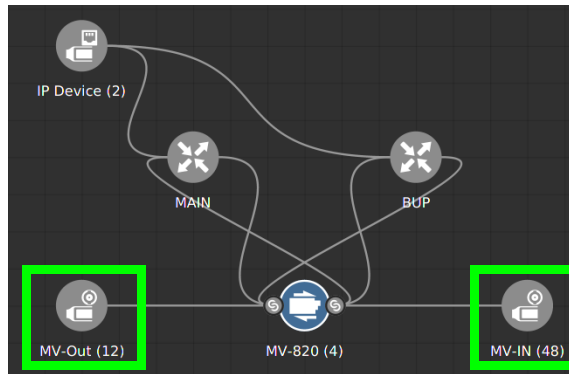


Logical Sources  
 Represent the  
 Multiviewer's SDI  
 Mosaic Outputs

Logical  
 Destinations  
 Represent the  
 Multiviewer's SDI  
 Inputs

These logical sources and destinations represent the SDI inputs and outputs of the MV-820 multiviewer that will be used when making a take.

- a From the **Device Library, Virtual Devices**, find the **SDI Device** bubble and drag it into position on the Topology and release the mouse button.



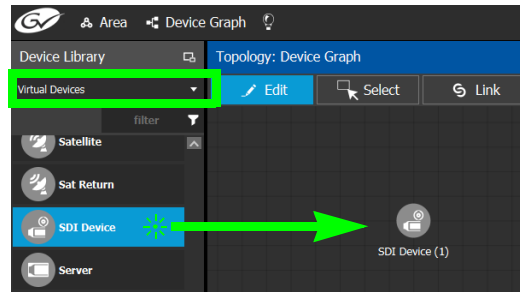


- b Click on the name of the device underneath the bubble to name the device or device group. See [To name a device and set the number of devices in the group](#), on page 45. For example, Enter *MV-Out* in both the **Name** and **Short Name** fields, then enter 12 for the number of device instances. These parameters can also be set in the **Property Editor**.
- c From the **Device Library, Virtual Devices**, find the **SDI Device** bubble and drag it into position on the Topology and release the mouse button.
- d Click on the name of the device underneath the bubble to name the device or device group. For example, Enter *MV-In* in both the **Name** and **Short Name** fields, then enter 48 for the number of device instances.
- e Interconnect the SDI source and destination devices to the proper IQMix spigot SDI inputs and outputs as shown above.

If needed, contact support for more information as how to configure this device. See [Grass Valley Technical Support](#), on page 306.

## Configuring a Kahuna IP Production Switcher Device

The Kahuna IP is a production switcher. Internally, the Kahuna IP production switcher is an Kahuna SDI production switcher wrapped inside two IQMix cards to provide IP connectivity. These two IQMix cards are used to convert the IP network input streams to feed the 12 × SDI inputs of the Kahuna, and the other IQMix card to convert the 12 × SDI outputs of the Kahuna into IP stream outputs. These IQMix cards are labelled as *KahunaIPI10* and *KahunaIPO10* in GV Orbit Control. See [Configuring an IQMix or IQUCP25 Device](#), on page 183 for more information about how to configure an IQMix.

The inputs and outputs of a Kahuna IP are called *spigots*. There are 12 input and 12 output spigots. In the GV Orbit Control Device Library, the Kahuna IP switcher is discovered as two separate IP devices: the first represents the IP inputs (device type: *KahunaIPI10*) and the second represents the IP outputs (device type: *KahunaIPO10*).

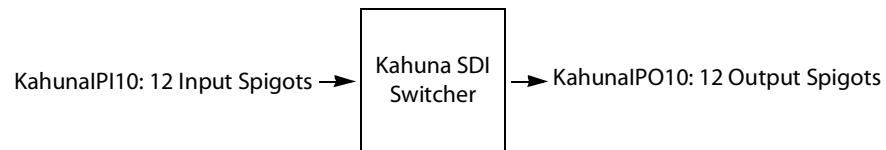

See also [How to Know if a Spigot is an Input or an Output](#), on page 184.

There is no offline configuration of the Kahuna IP device. It must first be discovered on the network by GV Orbit Control.


The Kahuna IP device must have been previously configured with GV Orbit Client before being integrated into GV Orbit Control as most configuration parameters shown in GV Orbit Control are for information purposes only (GV Orbit Control reads it from the Kahuna IP device). See the Kahuna IP User Guide for more information.

**PREREQUISITES:** The Domain ID of the Kahuna IP device(s) must be set in the System Controller Group Properties under **Domain Ids**. See [Configuring a Controller Group](#), on page 19. These devices must be on the same subnet that the GV Orbit Control server is connected to.

### To configure a Kahuna IP Device

- 1 Select the required Area. See [Selecting an Area](#), on page 23.
- 2 Select the required topology. See [Selecting a Graph](#), on page 24.
- 3 The topology must be currently:
  - Activated (see [Activating a Topology](#), on page 72).
  - Unlocked (see [Unlocking / Relocking a Topology](#), on page 75).

- 4 From the **Device Library**, on the left, select **Discovered** from the drop-down list.

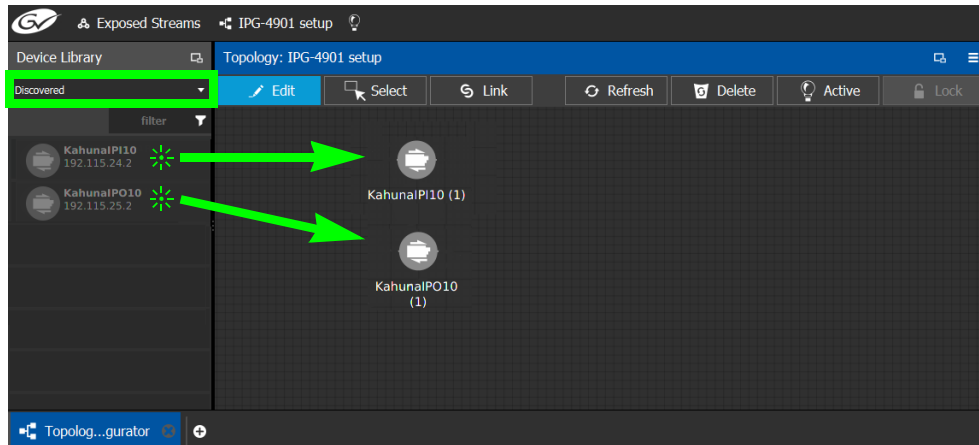


The Kahuna IP is discovered as two separate IP devices: the first represents the IP inputs (device type: KahunaPI10) and the second represents the IP outputs (device type: KahunaIPO10).

- 5 From the **Device Library**, **Discovered**, find the Kahuna IP input device that you want to control: select the **KahunaPI10** device bubble and drag it into position on the Topology and release the mouse button.
- The device pulled from the **Device Library**, **Discovered** becomes greyed out and another instance of the same device instance cannot be added again to the Topology.
- 6 From the **Device Library**, **Discovered**, find the matching **KahunaIPO10** device bubble and drag it into position on the Topology and release the mouse button.
- 7 For each Kahuna IP device (IP inputs device type: **KahunaPI10** and IP outputs device type: **KahunaIPO10**) Click on the name of the device underneath the bubble to name the device. See [To name a device and set the number of devices in the group](#), on page 45.
- 8 Configure the Kahuna IP properties. See also [Description of Common Device Properties](#), on page 162. The Kahuna IP device should be first configured with GV Orbit Client before being integrated into GV Orbit Control as most configuration parameters shown in GV Orbit Control are shown for information purposes only.

Parameter	Description
Network Host Name	The hostname is the unique name by which the associated Kahuna IP is known on the network.
Domain ID	Set the same Domain IDs on all Kahuna IP devices that are to communicate with each other on the network. The default value for Grass Valley equipment is <b>101</b> . Valid range: 0 to 232. See also <a href="#">Configuring a Controller Group</a> , on page 19.
Internal wiring	Shows if the internal modeling of the Kahuna IP is complete.

- 9 Create and connect the edge devices (SDI and IP devices) that are connected to the Kahuna IP. See [Methods to Link Devices in a Topology](#), on page 58. An example is shown below.


Logical Sources  
Represent the  
Switcher's SDI  
Mosaic Outputs

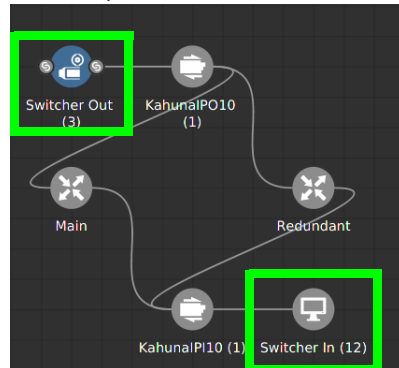

Logical Destinations  
Represent the  
Switcher's SDI Inputs

These logical sources and destinations represent the SDI inputs and outputs of the Kahuna switcher that will be used when making a take.

- a From the **Device Library, Virtual Devices**, find the **SDI Device** bubble and drag it into position on the Topology and release the mouse button.

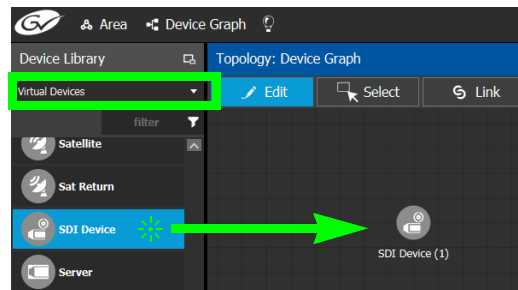

- b Click on the name of the device underneath the bubble to name the device or device group. See [To name a device and set the number of devices in the group](#), on page 45. For example, Enter *Switcher-Out* in both the **Name** and **Short Name** fields, then enter 3 for the number of device instances. These parameters can also be set in the **Property Editor**.
- c From the **Device Library, Virtual Devices**, find the **Monitor Device** bubble and drag it into position on the Topology and release the mouse button.
- d Click on the name of the device underneath the bubble to name the device or device group. For example, Enter *Switcher-In* in both the **Name** and **Short Name** fields, then enter 12 for the number of device instances.
- e Interconnect the SDI source and destination devices to the proper IQMix spigot SDI inputs and outputs as shown above.


If needed, contact support for more information as how to configure this device. See [Grass Valley Technical Support](#), on page 306.

## Configuring a K-Frame Production Switcher

The K-Frame is a series of production switchers, and certain models support IP connectivity. The following frames are supported:

- K-Frame-V Production Switcher has 4 slots each providing 8 inputs and 4 outputs to the switcher, for a total of 32 inputs x 16 outputs.
- K-Frame-X Production Switcher has 14 slots. 10 slots each providing 16 inputs and 8 outputs to the switcher, followed by 4 slots each providing 8 inputs and 4 outputs of the switcher, for a total of 192 inputs x 96 outputs.

The following diagram shows a K-Frame-V / K-Frame-X Production Switchers populated with a typical assortment of I/O cards.

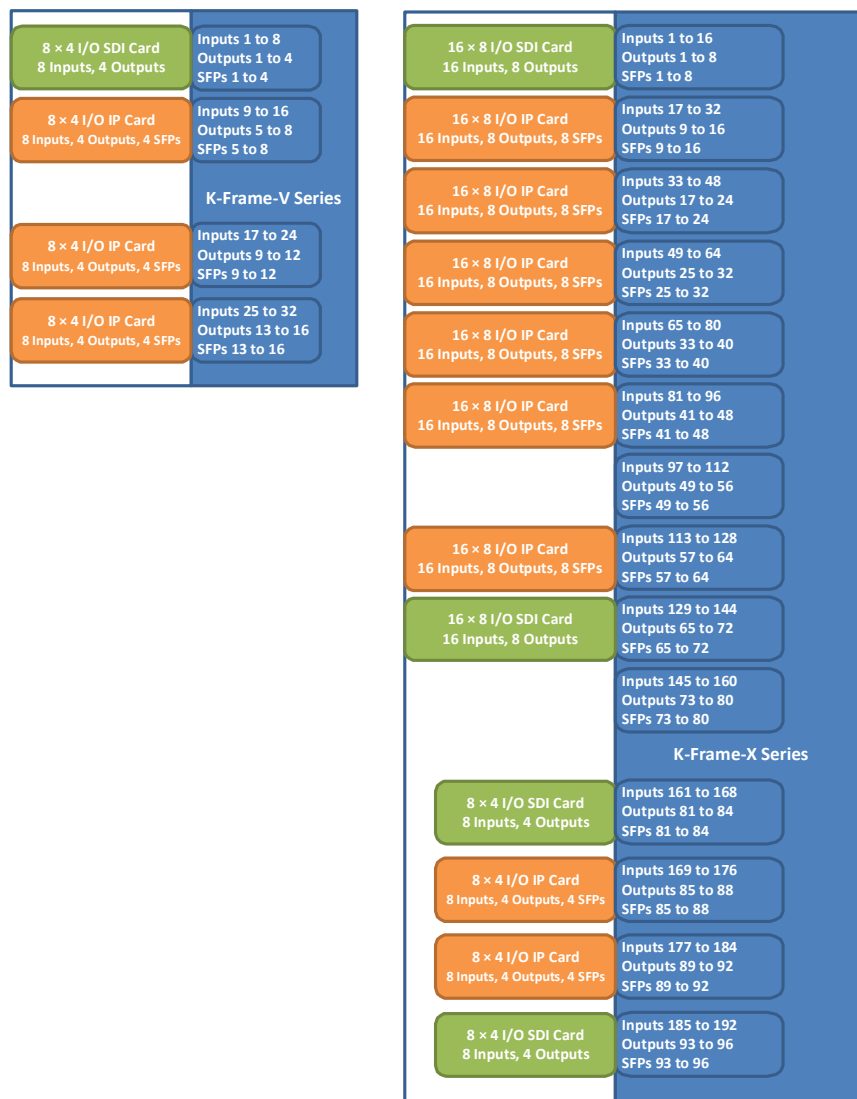

There are two types of modules which can be used in the K-Frame Production Switcher slots:

- SDI only card, equipped with BNC connectors.

- IP only card, equipped with SFP connectors.

Here are some details about IP cards you will need to know to model your K-Frame Production Switcher in GV Orbit Control:

- An SFP can receive two streams and transmit one. A stream is a group of the essence flows (a 2022-6 stream has a single flow, a TR-04 stream has two flows and a SMPTE 2110 stream has three flows)
- Each SFP stream maps directly to a switcher input or output of the slot. For example: the IP card in the second slot of the K-Frame-V Production Switcher has 4 SFP pairs (for redundancy) providing signals to inputs 9-16 of the switcher. The first SFP provides streams for inputs 9-10, the second SFP provides streams for inputs 11-12 and so on.
- IP cards support SMPTE 2022-6, SMPTE 2110, and TICO.
- Redundancy in SMPTE 2022 and SMPTE 2110 is supported.
- For SMPTE 2110-30, the following profiles are supported: L16/48K/125us, L16/48K/1ms, L24/48K/125us, L24/48K/1ms.


Note that GV Orbit Control only controls the K-Frame Production Switcher's IP receivers and transmitters. In consequence, The K-Frame Production Switcher must have been previously setup and configured before being integrated into GV Orbit Control. See the *K-Frame Installation & Service Manual* for more information.

**PREREQUISITES:** GV Orbit Control must have IP connectivity to the K-Frame Production Switcher:

- to automatically detect the K-Frame Production Switcher's model (K-Frame-V / K-Frame-X) and its current configuration parameters that are needed by GV Orbit Control.
- before making connections to the *Production Switcher* bubble in GV Orbit Control. See [To configure a K-Frame Production Switcher](#), on page 204.

### K-Frame Production Switcher Nomenclature used in GV Orbit Control

The following diagram shows the nomenclature used in GV Orbit Control for the K-Frame-V Production Switcher signal flow. A K-Frame-X Production Switcher's signal flow uses a similar architecture, with more inputs and outputs.

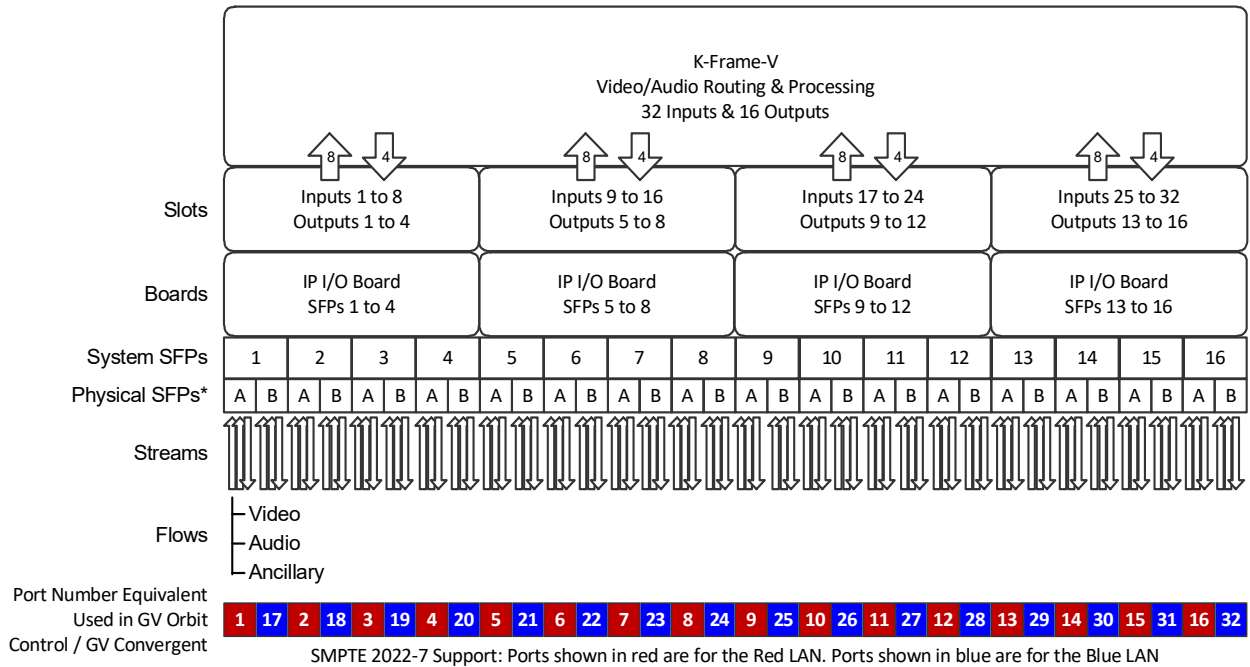

\* This is shown in the Short Name property for a port. For example, SFP-1A is the first input port.

\* Note that GV Orbit Control's **Short Name** property for a port is composed of a combination of the System SFP number and the Physical SFP letter in the following format: SFP-[System SFP number][Physical SFP letter]


For example, **SFP-1A** is the first input port. This port is shown below in the K-Frame Menu for reference.



When *Redundancy Mode* is *Enabled* in the K-Frame Menu, you must use a SMPTE ST 2022-7 network setup; see [Configuring Network Switch Redundancy to Support SMPTE ST 2022-7](#), on page 229.

### To configure a K-Frame Production Switcher


- 1 Add the Production Switcher device to the Topology: from the **Device Library, Virtual Device**, find the **Production Switcher** device bubble. See [To add a Virtual Device to a topology](#), on page 44.

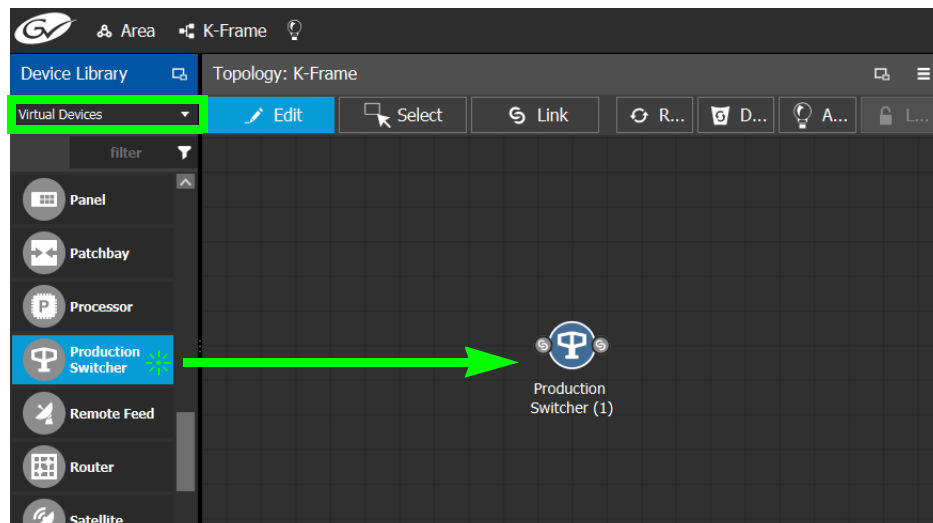


- 2 Click on the name of the device underneath the bubble to enter a meaningful name to identify this device in the **Name** field. See [To name a device and set the number of devices in the group](#), on page 45.



These parameters can also be set in the **Property Editor**.

- 3 Click **New**  next to **Control Port** at the top of the **Property Editor** and select **K-Frame CPL TCP/IP** from the list. See also [Defining Device Properties](#), on page 66 for more information.

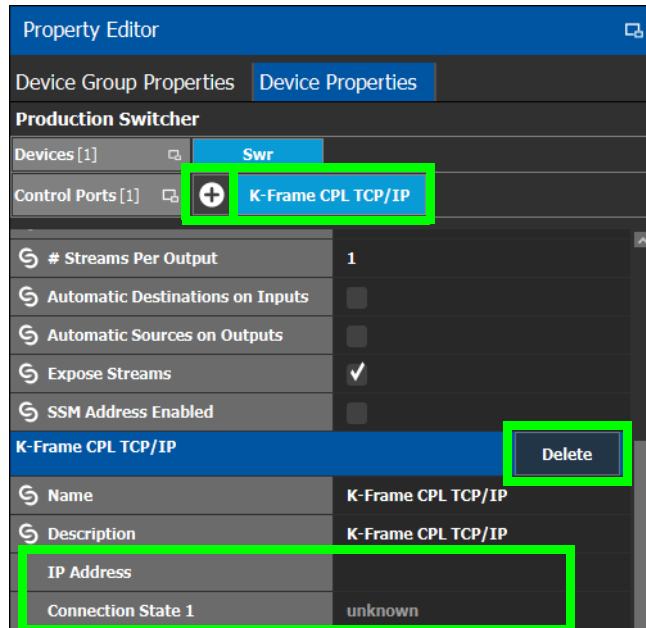

The **K-Frame CPL TCP/IP** tab appears. To remove the control port, click **Delete**.

- 4 Configure the K-Frame Production Switcher properties. See also [Description of Common Device Properties](#), on page 162.


Parameter	Description
Network Host Name	The hostname is the unique name by which the associated K-Frame Production Switcher is known on the network.
IP Address	The IP address of the K-Frame Production Switcher to be controlled. Once connected, GV Orbit Control automatically detects the K-Frame Production Switcher's model (K-Frame-V / K-Frame-X) and K-Frame Production Switcher's configuration parameters that are needed by GV Orbit Control.

Parameter	Description
Connection State 1 Connection State 2	K-Frame Production Switcher Connection State 1 shows the connection status of the K-Frame Production Switcher with the primary server of a server group. K-Frame Production Switcher Connection State 2 shows the connection status of the K-Frame Production Switcher with the secondary server of a server group. See <a href="#">Configuring a Controller Group</a> , on page 19. <b>unknown:</b> The topology is inactive (see <a href="#">Activating a Topology</a> , on page 72) or the K-Frame Production Switcher does not have network connectivity to the GV Orbit Control server(s). <b>Reconnecting:</b> The topology has been activated and GV Orbit Control is learning the K-Frame Production Switcher’s current configuration. <b>offline:</b> The K-Frame Production Switcher does not have network connectivity to the GV Orbit Control server(s). <b>online:</b> The K-Frame Production Switcher is connected to the GV Orbit Control server(s).
Frame Model	Once the topology has been activated, this shows the frame model. This is shown for information purposes only.

5 Activate the topology. See [Activating a Topology](#), on page 72.

The current K-Frame Production Switcher input and output ports are read into GV Orbit Control and become available to be connected within GV Orbit Control. According to the type of streams configured in K-Frame Production Switcher, the corresponding logical levels are created in the Logical Device Table. See [Logical Device Table Tasks](#), on page 78 for more information.

When a port is selected, see the **Short Name** property to see the K-Frame Production Switcher’s internal port reference. For more information, see [K-Frame Production Switcher Nomenclature used in GV Orbit Control](#), on page 203.

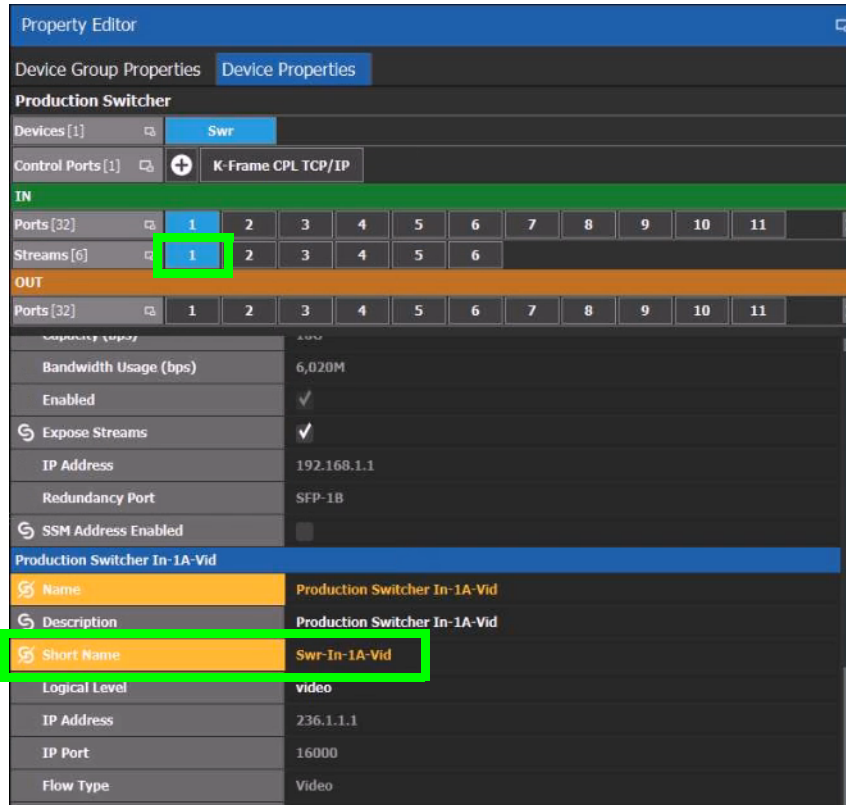

Each input port supports two sources. When a stream is selected, see the **Short Name** property to see the stream type currently configured in the K-Frame Production Switcher.

Streams	Description	Short Name
1	This is the video stream for the first source.	Swr-In-1A-Vid
2	This is the audio stream for the first source <sup>a</sup> .	Swr-In-1A-Aud
3	This is the Ancillary stream for the first source <sup>a</sup> .	Swr-In-1A-Anc
4	This is the video stream for the second source.	Swr-In-2A-Vid
5	This is the audio stream for the second source <sup>a</sup> .	Swr-In-1A-Aud
6	This is the Ancillary stream for the second source <sup>a</sup> .	Swr-In-1A-Anc

a. This stream is not shown if the selected port is configured as SMPTE 2022-6.

The K-Frame Production Switcher can now be used to make takes. See [Router Control Tasks](#), on page 280 for more information.

## Adding NMOS Devices to a Topology

GV Orbit Control supports Networked Media Open Specifications (NMOS) AMWA IS-04 for device discovery and registration and IS-05 for connection management. Furthermore, it supports AMWA BCP-002-01 for the natural grouping of NMOS resources.

GV Orbit Control has a built-in NMOS registry (see below) that can be used to register NMOS devices. To be able to discover NMOS devices, you have one of the following options:

- Allow GV Orbit Control to automatically discover one or more NMOS registries through DNS-SD. DNS-SD can discover an NMOS registry that is available on the network and registered in your DNS server.
- Point GV Orbit Control to use its internal NMOS registry (when enabled), or to an external NMOS registry.

### PREREQUISITES:

- Entries for your NMOS registries have been added to the network DNS server. This enables automatic DNS-SD discovery. Contact your IT department to do so. Otherwise you can manually specify the registry to connect to.

---

### Notes


- GV Orbit Control listens for changes to any of the nodes in the registry. As it receives updates, it automatically updates any device that is dropped onto any topology that is associated with that node.
  - If the registry is shut down, or the node is stopped and is removed from the registry, the devices will disappear from the list of discovered devices. The devices you already have dropped will remain on the topology, but will no longer receive updates.
  - If the registry is restarted or the node is restarted, GV Orbit Control will continue to update the devices on the topology (assuming the devices have the same UUID).
- 

### To configure GV Orbit Control for use with NMOS

To use GV Orbit Control with NMOS devices, you first must configure it to use its internal NMOS registry, to use an external NMOS registry, or to automatically search for external NMOS registries.

- 1 Open the **System Controller Group Properties**. See [Configuring a Controller Group](#), on page 19.

2 Set the following parameters.

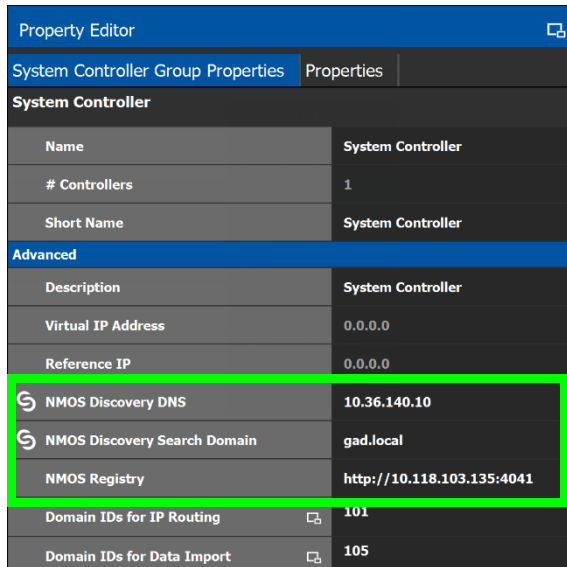

Parameter	Description
NMOS Discovery DNS	<p>GV Orbit Control can automatically discover an NMOS registry through DNS-SD when the <b>NMOS Discovery DNS</b> and <b>NMOS Discovery Search Domain</b> parameters are set.</p> <p><b>NMOS Discovery DNS:</b> The IP address of the network DNS server that is also used to support networked NMOS devices.</p> <p><b>NMOS Discovery Search Domain:</b> The network's domain name on which GV Orbit Control will search for NMOS devices and the NMOS registry.</p> <p>The <b>NMOS Discovery DNS</b> and <b>NMOS Discovery Search Domain</b> parameters are automatically retrieved from the GV Orbit Control's server operating system when available (refer to <b>IP Configuration, DNS</b> tab in the <i>GV Orbit Admin Guide</i>; see <a href="#">Related Documentation</a>, on page 7). The operating system values can be overridden by setting the appropriate values here.</p> <p>NOTE: If the DNS information is changed in the admin interface, GV Orbit Control must be restarted to retrieve the new values from the OS.</p>
NMOS Discovery Search Domain	

Parameter	Description
NMOS Registry	<p>This shows the current NMOS Registry Query API URL (hostname / IP address and port number).</p> <p>Set a static NMOS registry URL when NMOS registry discovery is non-functional or when you want to override it to use a specific NMOS registry.</p> <p>If the <i>NMOS Registry</i> service is installed and running on the GV Orbit Control server and you want to use GV Orbit Control's built-in NMOS registry, set this URL to the local host IP address for this service: <b>http://127.0.0.1:4041</b>. The NMOS registry is available to NMOS devices at the current system controller's IP address<sup>a</sup>, on port <b>4041</b>. The priority of GV Orbit Control's NMOS registry is 0.</p> <p>If redundancy has been configured for GV Orbit Control, use the Virtual IP Address, on port <b>4041</b> to access the NMOS registry.</p> <p>Refer to <b>Application Upgrade</b> in the <i>GV Orbit Admin Guide</i> to install the <i>NMOS Registry</i> service and ensure that it is running. See <a href="#">Related Documentation</a>, on page 7.</p> <p>To revert to automatic NMOS registry discovery, clear this field, press &lt;Enter&gt;, and wait 10 seconds for the above <b>NMOS Discovery DNS</b> and <b>NMOS Discovery Search Domain</b> parameters to take effect.</p>

a. This is the same IP address as for GV Orbit Control's administration interface. This is shown as **IP Address** in [step 6](#) on page 21.

- 3 To be able to discover NMOS devices in GV Orbit Control, you have one of the following options:
  - Allow GV Orbit Control to automatically discover one or more NMOS registries through DNS-SD (set the **NMOS Discovery DNS** and **NMOS Discovery Search Domain** parameters). This is possible when the NMOS registries have been added to the network DNS server.
  - Manually point GV Orbit Control to use the NMOS Registry service (when enabled), or to an external NMOS registry by setting a fixed URL for the registry (set the **NMOS Registry** parameter).

### Update the server's Host file

In order for GV Orbit Control to communicate with the NMOS registry to retrieve a list of all its resources, retrieve update notifications, download SDP files and perform connection management, GV Orbit Control must be able to reach the host where the registry is running by its hostname. In order to do this, an entry for the NMOS host **MUST** be added to the server's hosts file.

The Host file is found here: `/etc/hosts`

Sample entry:

```
10.37.80.177 <registryHostName>
```

Once the server for the NMOS registry has been added to the hosts file, the GV Orbit Control service needs to be restarted. See *Reboot* found under *Upgrade Task* in the **GV Orbit Admin Guide**. See [Related Documentation](#), on page 7.

Note that this applies even if you use the registry's IP address when specifying the URL of the NMOS Discovery Registry. Once the entry in the hosts file is added, the **NMOS Registry**

parameter can be either `http://10.37.80.177:4041` or  
`http://<registryHostName>:4041`

To update the server's Host file, contact Grass Valley Technical Support. See [Grass Valley Technical Support](#), on page 306.

### NMOS Node control port status in GV Orbit Control

GV Orbit Control pings the NMOS node to keep the connection active using the URL `http://XXX.XXX.XXX.XXX:4041/x-nmos/node/v1.2/self`. GV Orbit Control uses the success of the ping to determine the node's control port status (Online/Offline).

---


**Note:** If the NMOS node's status is offline, check if the node's URL contains only a hostname (as opposed to a numeric IP address). If GV Orbit Control cannot resolve the hostname, then you need to add an entry into the server's hosts file and then restart GV Orbit Control. GV Orbit Control must be able to resolve the node's hostname in order to report the control port status as being online, download SDP files, and perform connection management. See [Update the server's Host file](#), on page 210 and *Reboot* found under *Upgrade Task* in the **GV Orbit Admin Guide**. See [Related Documentation](#), on page 7.

---

### How to test the NMOS registry

Test the registry as follows: in a web browser, enter the following address into the browser's address bar: `http://XXX.XXX.XXX.XXX:4041/x-nmos/query/v1.2/`

Where `XXX.XXX.XXX.XXX` is the IP address of GV Orbit Control's NMOS registry. This can be either GV Orbit Control's system controller IP address (for its internal NMOS registry), or the query API IP address of an external NMOS registry, if available. For external NMOS registries, see the NMOS registry's documentation as it may use a number of different IP addresses; one for the query API and another for the registration API for example.

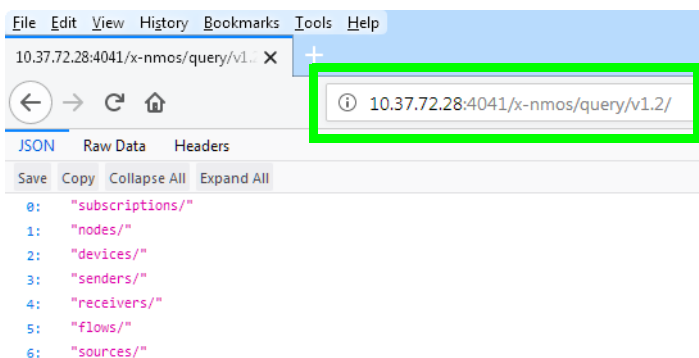

The following NMOS registry switches show the current NMOS registry's content:

- subscriptions
- nodes
- devices
- senders
- receivers
- flows
- sources

This is accessible by, for example, entering the following address into the browser's address bar: `http://XXX.XXX.XXX.XXX:4041/x-nmos/query/v1.2/nodes`

As the NMOS registry has just been started, it is normal that it is empty of content. Wait for devices to discover the NMOS registry and to publish their resources to the registry.

---

**Note:** If nodes are not published to the registry and are not listed under `http://XXX.XXX.XXX.XXX:4041/x-nmos/query/v1.2/nodes`, they will not be discovered by GV Orbit Control. Further device troubleshooting will be required to identify why a device is not publishing to the NMOS registry.

---

### About the grouphint tag

AMWA BCP-002-01 makes use of the *grouphint* tags to identify senders and receivers. When a discovered device publishes grouphint tag information in senders / receivers to the NMOS registry, GV Orbit Control will automatically create the related logical sources and destinations for the device, once the NMOS device has been added to the topology. If a discovered device does not publish grouphint tags to the NMOS registry, then you will have to create the logical sources and destinations for the device manually in GV Orbit Control.

## To add an NMOS device to a topology


### PREREQUISITES:

- There is an operational NMOS registry on the network.
- GV Orbit Control has been configured to connect to the NMOS registry. See [To configure GV Orbit Control for use with NMOS](#), on page 208.
- NMOS devices must be configured to publish their available resources to the NMOS registry.

Proceed as follows.



- 1 Add the NMOS device to the Topology: from the **Device Library**, **Discovered**, find an NMOS device bubble that you want to control. See [To add a Discovered Device to a Topology](#), on page 47.

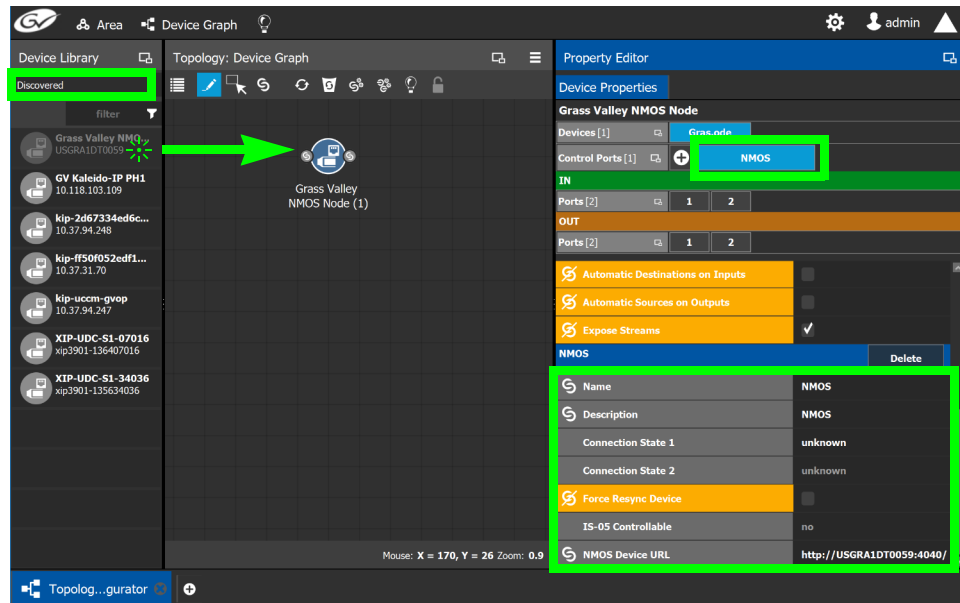

- 2 Click on the name of the device underneath the bubble to name the device or device group. See [To name a device and set the number of devices in the group](#), on page 45.
- 3 The NMOS Control Port parameters are configured in the device's Property Editor, under the **Device Properties** tab. See [Defining Device Properties](#), on page 66 for more information about this tab.
- 4 Select **NMOS** tab (next to **Control Port** at the top of the **Property Editor**) to configure the Device Properties in the **Property Editor**. See also [Description of Common Device Properties](#), on page 162.

The NMOS control port properties appear.

Parameter	Description
Connection State 1 / 2	This shows the current connection state to the NMOS nodes. When a redundant configuration is used (two GV Orbit Control servers form a cluster) <b>Connection State 1</b> and <b>Connection State 2</b> shows the connectivity of each server to the NMOS nodes. <b>unknown:</b> The topology is inactive (see <a href="#">Activating a Topology</a> , on page 72) or the NMOS device does not have network connectivity to the GV Orbit Control server(s). <b>reconnecting:</b> The GV Orbit Control server is in the process of establishing communications with the NMOS device. <b>offline:</b> The NMOS device does not have network connectivity to the GV Orbit Control server(s). <b>online:</b> The NMOS device is connected to the GV Orbit Control server(s).
Force Resync Device	Set to make GV Orbit Control reload the NMOS device's parameters from the NMOS registry.

## Special Device Configuration Tasks

To add an NMOS device to a topology

---

Parameter	Description
IS-05 Controllable	<p>This status shows whether the corresponding node in the NMOS registry has devices that support being controlled through IS-05 (connection management).</p> <p><b>Yes:</b> Routes to these devices should succeed.</p> <p><b>No:</b> If you try to route to a device that is not IS-05 controllable, the route will fail.</p> <p><b>Partial:</b> Some devices are controllable in this node, while others are not.</p>
NMOS Device URL	This is the NMOS device's current URL and port number.

Ports and streams are automatically created using the values found in the registry, and they will automatically be updated whenever GV Orbit Control receives notifications of changes from the NMOS registry.

You can change the following NMOS device properties which will not be overwritten with values from the NMOS registry (the value you set for these properties will persist in GV Orbit Control): Labels, Short labels, Descriptions, Network label, and Logical levels. See [Defining Device Properties](#), on page 66.

## Using SDP Parameters to Take a Stream from a non-NMOS Device to an NMOS Device

In order to use IS-05 connection management, Session Description Protocol (SDP) information is required to be sent as part of the command. GV Orbit Control can create SDP type parameters that a receiving NMOS device requires in order to successfully complete a take made from devices that do not generate and publish their own information.

The SDP information is now generated by GV Orbit Control and is included in the connection management commands to allow discovered AMWA NMOS receivers to join non-discovered senders, or source devices created within the GV Orbit Control client. This SDP information is not currently published to the AMWA NMOS registry.

Within GV Orbit Control, a number of default SDP parameter templates are built-in and are selected according to the stream's **Logical Level** parameter. The SDP parameters can be tweaked if necessary as these SDP parameters must represent the current details and specifications of the source's stream.

The following device bubbles support SDP parameters:


- IP Device
- GV Node
- IQ-family type IP devices, for example, IQMix, IQUCP25, IQAMD, MV-820-IP, Kahuna IP, and so on
- Audio Live

### Related Topics

- The Stream Configurator allows you to configure the SDP template for streams on a large scale. See [Stream Configurator Tasks](#), on page 153.

**PREREQUISITES:** To customize the SDP parameter, you must know how to form a valid SDP. This is beyond the scope of this document. For more information about SDP specific parameters, see [RFC 4566](#). See also [SDP](#).

The SDP parameters are configured in the device's Property Editor, under the **Device Group Properties** tab and in the **Device Properties** tab. See [Defining Device Properties](#), on page 66 for more information about these tabs.

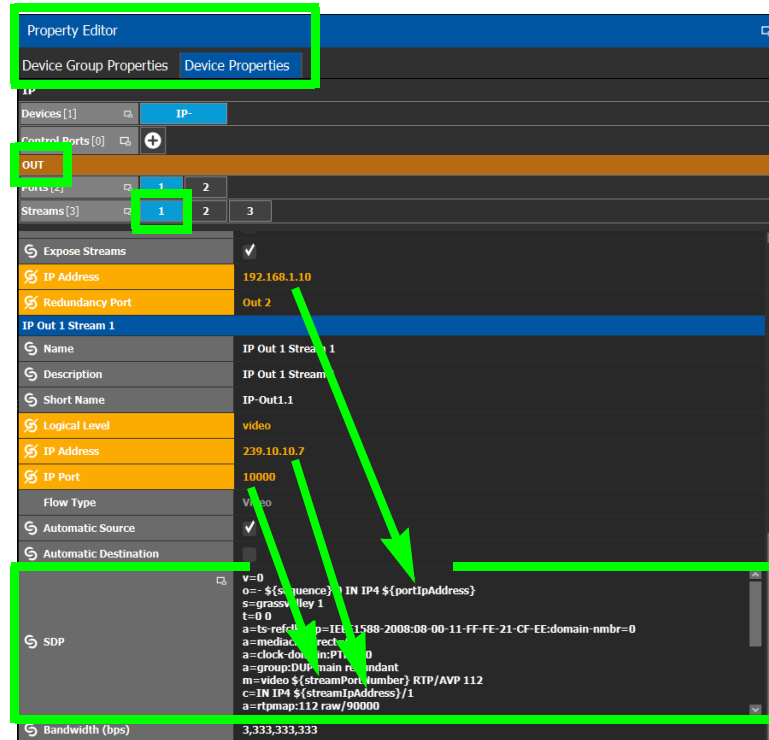

Certain SDP parameters have been enhanced with new GV Orbit Control variables which allows for better device control integration within GV Orbit Control. These variables are available for SDP parameters configured under the **Device Group Properties** and the **Device Properties** tab, output stream property. Variables always start with a dollar sign (\$) and are enclosed in curly brackets {} as shown in the example below.

See [Defining Device Properties](#), on page 66 to know more about how parameter values in the **Device Properties** tab inherit their values from the corresponding parameter values in the **Device Group Properties** tab.

### Example of SDP parameters used in GV Orbit Control

The following is a typical example of the SDP parameters used in GV Orbit Control.

```
v=0
o=- ${sequence} 0 IN IP4 ${portIpAddress}
s=grassvalley 1
t=0 0
a=recvonly
a=ts-refclk:ptp=IEEE1588-2008:08-00-11-FF-FE-22-04-00:127
a=mediaclk:direct
m=video ${streamPortNumber} RTP/AVP 98
c=IN IP4 ${streamIpAddress}/1
a=rtptime:98 SMPTE2022-6/27000000
```

### Special GV Orbit Control SDP Variables

The following table lists the supported special GV Orbit Control variables for use anywhere within the SDP parameter. These variables reference parameters that are configured elsewhere in GV Orbit Control, thereby automatically keeping stream information up-to-date.

GV Orbit Control SDP Variable	Description
<code>\${audioBits}</code>	The audio stream's bit depth.
<code>\${channelCount}</code>	The number of (audio) channels.
<code>\${clockSetting}</code>	The PTP master clock setting.
<code>\${sequence}</code>	This SDP file's ID
<code>\${packetTime}</code>	The length of time in milliseconds represented by the (audio) media in a packet.
<code>\${portIpAddress}</code>	The sending port's IP address. The source for this variable comes from the Port's <b>IP Address</b> parameter for this stream.
<code>\${streamIpAddress}</code>	The transmit (sending) stream's multicast IP address. The source for this variable comes from the stream's <b>IP Address</b> parameter.
<code>\${streamPortNumber}</code>	The transmit (sending) stream's IP port number. The source for this variable comes from the stream's <b>IP Port</b> parameter.
<code>\${redundantIpAddress}</code>	The transmit (sending) stream's redundant multicast IP address. The source for this variable comes from the stream's <b>IP Address</b> parameter used for the redundancy port. See the <b>Redundancy Port</b> parameter to identify the current redundancy port.
<code>\${redundantPortNumber}</code>	The transmit (sending) stream's redundant IP port number. The source for this variable comes from the stream's <b>IP Port</b> parameter used for the redundancy port. See the <b>Redundancy Port</b> parameter to identify the current redundancy port.
<code>\${redundantPortIpAddress}</code>	The transmit (sending) stream's redundant IP port number. The source for this variable comes from the stream's <b>IP Address</b> parameter used for the redundancy port. See the <b>Redundancy Port</b> parameter to identify the current redundancy port.
<code>\${rtpPayloadType}</code>	The RTP payload type as defined by the SDP specification.
<code>\${samplingRate}</code>	The audio stream's sampling rate.

### Editing SDP Parameters

Any of the above variables can be substituted with a fixed equivalent value so that it is hard coded. For example, the variable `${portIpAddress}` represents a multicast IP address and it can be replaced with an IP address such as `230.1.1.1`.

When you edit any SDP parameter:

- The SDP becomes fixed and will no longer automatically update when you make a change elsewhere in the Property Editor. For example, changing the logical level parameter will not update the SDP parameters with the logical level change. You will have to further edit the SDP to adapt it to any such change.
- The SDP becomes orange to indicate that its default value has been overridden. See [Defining Device Properties](#), on page 66 to know more about how to reset a parameter to its default value.

## Configuring Cisco DCNM Network Switch Devices

Networks that use Cisco Data Center Network Manager (DCNM) to manage LAN fabric can be controlled by GV Orbit Control.

### PREREQUISITES:

- DCNM build 11.0(1) or higher
- Switch's firmware: NXOS 9.2(1) or higher for 9200, 9300-EX, and 9500-R switches.
- Switch's BIOS: version 07.64, compile time: 05/17/2018
- Configure the required DCNM network switch's flow policies. See below.

## Configuring the Network Switch's Flow Policies

If you are using a network switch with DCNM control port, flow policies must be manually set in the DCNM web interface, before you configure GV Orbit Control to use the network switch.

Each flow policy sets the maximum bandwidth that can be allocated to a type of traffic flow. See the table below. **Only the flow policies for bandwidths you will use in your network need to be created.**

Each flow policy must have a multicast IP address range associated to it, according to your network addressing pattern, as GV Orbit Control uses a different multicast IP range for each type of traffic flow and bandwidth (audio, video 3G, Video HD, ANC / metadata, and so on). Class D IP addresses are multicast addresses. By default, IP address 239.255.0.1 may be reserved for use by certain Grass Valley equipment for DDS discovery and should not be allocated for any other purpose.

Review documentation for all equipment you are going to use on your network for any specific IP addressing and bandwidth requirements.

### Establish the Customer Multicast IP Addressing Pattern

All network IP devices must be assigned an IP address, and each network traffic type is assigned to a IP address range according to its bandwidth requirement.

For example, the following table shows a typical multicast IP addressing pattern and the bandwidth allocation required by traffic flow type.

Traffic Flow Type	Flow Policy	Typical IP address range		Recommended Bandwidth Allocation
		From	To	
Video	SMPTE2022-6(3G)	230.1.1.1	230.255.255.255	3.2Gbps
	SMPTE2022-6(HD)	229.1.1.1	229.255.255.255	1.601Gbps
	SMPTE2022-6(SD)	228.1.1.1	228.255.255.255	0.27Gbps
	SMPTE2110-20(3G)	238.1.1.1	238.255.255.255	2.703Gbps
	SMPTE2110-20(HD)	237.1.1.1	237.255.255.255	1.401Gbps
	SMPTE2110-20(SD)	236.1.1.1	236.255.255.255	0.23Gbps
Audio	SMPTE2110-30(AES)	234.1.1.1	234.255.255.255	61Mbps

Traffic Flow Type	Flow Policy	Typical IP address range		Recommended Bandwidth Allocation
		From	To	
ANC (metadata)	SMPTE2110-40(ANC)	235.1.1.1	235.255.255.255	2Mbps
Default <sup>a</sup>		*		150Kbps

a. This allows any general network management data to pass through the network while guaranteeing that it will not take up any significant amount of total network bandwidth. When needed, this bandwidth allocation is also used for DDS discovery when such equipment uses a multicast address that is outside of any other pre-existing flow policy you have created (this must be the case).

## Delete Pre-existing Flow Policies

If your switch has been previously configured, you may need to remove any pre-existing flow policies. These flow policies have the status **Create** under **Deployment Action**.

Policy Name	Multicast IP Range	Bandwidth	QoS/DSCP	Deployment Action	Deployment Status	In Use	Last Updated
Audio	View	61 Mbps	CS1	Create	Success (4/4)	true	Tue Sep 25 2018 22:...
Default	*	150 Kbps	CS1	Create	Success (4/4)	false	Mon Sep 17 2018 19:...
Metadata	View	2 Mbps	CS1	Create	Success (4/4)	true	Tue Sep 25 2018 22:...
Video3G	View	3.2 Gbps	CS1	Create	Success (4/4)	true	Tue Sep 25 2018 22:...

### To delete pre-existing current flow policies

- 1 In the **Deployment** drop menu, select **Undeploy All Custom Policies**.

Policy Name	Multicast IP	Deployment Action	Deployment Status	In Use	Last Updated
Audio	View	Create	Success (4/4)	true	Tue Sep 25 2018 22:...
Default	*	Create	Success (4/4)	false	Mon Sep 17 2018 19:...
Metadata	View	Create	Success (4/4)	true	Tue Sep 25 2018 22:...
Video3G	View	Create	Success (4/4)	true	Tue Sep 25 2018 22:...

- 2 The **Deployment Action** column will show **Delete** instead of **Create**.
- 3 Select all flow policies from the list, but exclude the **Default** flow policy: do not remove the **Default** flow policy as it will be needed.
- 4 Use the delete (X) button to delete the selected flow policies.

## Add New Flow Policies Using Your IP Addressing Pattern

According to the IP addressing pattern shown in the above table, create the new flow policies for each traffic flow type you are going to use.



## To add new flow policies

- 1 Click New (+).

The screenshot shows the 'Add/Edit Flow Policy' dialog box. The 'Policy Name' field contains 'Video\_3G'. The 'Bandwidth' field is set to '3.2' with 'Gbps' selected. The 'QoS/DSCP' dropdown is set to 'CS1'. The 'Multicast IP Range' is set to '239.255.0.2 - 239.255.255.255'. A 'Deploy' button is highlighted with a green box. Below the main form, there is a table with columns 'Begin IP Address' and 'End IP Address'. The table contains two rows: '239.0.0.0 - 239.255.0.0' and '239.255.0.2 - 239.255.255.255'.

- 2 Set the parameters for the flow policy. The setting for **QoS/DSCP** is **CS1**.
- 3 Click **Deploy**.
- 4 Repeat to create all necessary flow policies.
- 5 In the **Deployment** drop menu, select **Deploy All Custom Policies**.

The status under **Deployment Action** becomes **Create** and the **Deployment Status** becomes **Success**.

Media Controller / Flow / Flow Policies


Flow Policies

<input type="checkbox"/>	Policy Name	Multicast IP Range	Bandwidth	QoS/DSCP	Deployment Action
<input type="checkbox"/>	Default	*	150 Kbps	CS1	Create
<input type="checkbox"/>	Audio	<a href="#">View</a>	61 Mbps	CS1	Create
<input type="checkbox"/>	Metadata	<a href="#">View</a>	2 Mbps	CS1	Create
<input type="checkbox"/>	Video_3G	<a href="#">View</a>	3.2 Gbps	CS1	Create
<input type="checkbox"/>	DDS_discovery	<a href="#">View</a>	150 Kbps	CS1	Create

## Configuring a DCNM Network Switch Device

### To configure a DCNM Network Switch Device


- 1 Add the Network Switch device to the Topology: from the **Device Library, Virtual Device**, find the Network Switch device bubble. See [To add a Virtual Device to a topology](#), on page 44.

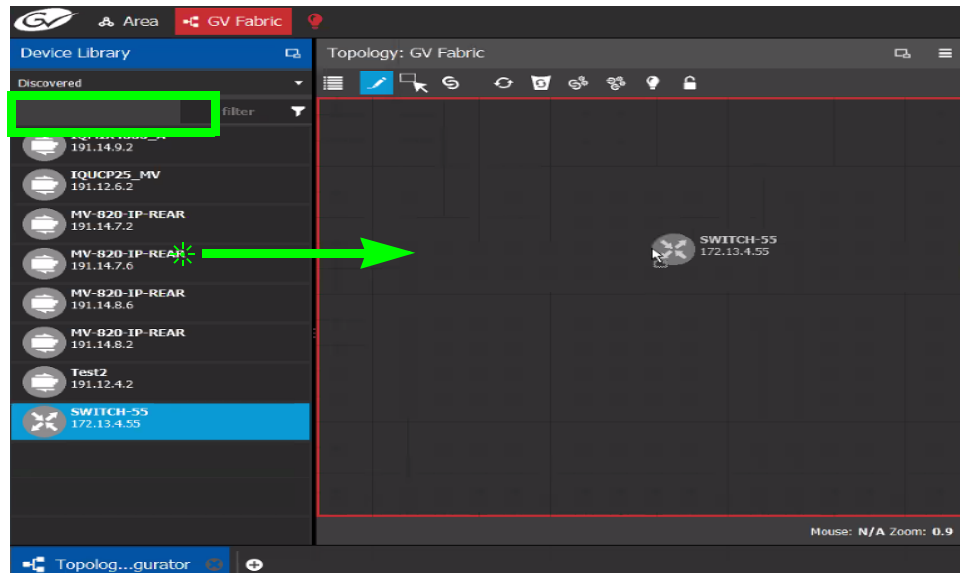


- 2 Click on the name of the device underneath the bubble to enter a meaningful name to identify this device in the **Name** field. See [To name a device and set the number of devices in the group](#), on page 45.

These parameters can also be set in the **Property Editor**.


- 3 Set the number of physical input and output connectors being used on the network switch in **# Input Connectors** and **# Output Connectors**. See [Defining Device Properties](#), on page 66 for more information.

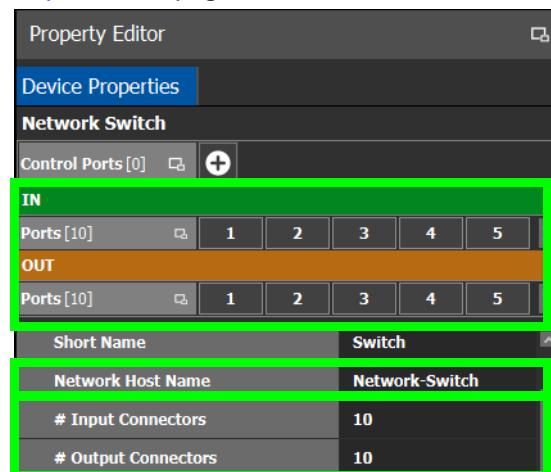

The configuration for these ports become available as **Ports** under **IN** and **OUT**.

- 4 Click **New**  next to **Control Ports** at the top of the **Property Editor** and select **Cisco DCNM** from the list. **Dummy Network Switch** should be used when the DCNM network

manager is not being used for the network switch. See [Defining Device Properties](#), on page 66 for more information.

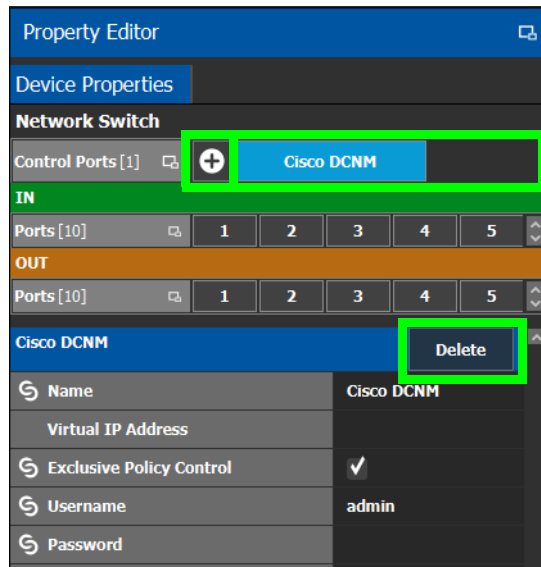

The **Cisco DCNM** tab appears. To remove the control port, click Delete.

- 5 Select **Cisco DCNM** tab (next to **Control Port** at the top of the **Property Editor**) to configure the Device Properties in the **Property Editor**. Only the properties shown below should be used. See also [Description of Common Device Properties](#), on page 162.

Parameter	Description
Network Host Name	This is the unique name by which the Network Switch is identified within GV Orbit Control. This value is used to construct the input/output port labels.
Cisco DCNM Control Port parameters	
Virtual IP Address	This is the virtual IP address to communicate with DCNM cluster. This IP is used to address any active member of the two nodes that are operating in High Availability (HA) mode. If DCNM is not operating in HA mode, use the DCNM node IP address.
Exclusive Policy Control	When set, GV Orbit Control operates in exclusive mode: any change to the host aliases, host policies or flow policies (through DCNM web interface for example) will be overwritten and restored by GV Orbit Control. This is the supported mode to be used. Only deselect this parameter under the guidance of Grass Valley Technical Support.
Enabled	When set, GV Orbit Control controls the switch. When deselected, GV Orbit Control no longer controls the switch, thus allowing you to perform maintenance operations on the switch. When re-establishing control (set <b>Enabled</b> ), GV Orbit Control will push the current policies to the switch.
Username	Set the administrator's username to access the DCNM network.
Password	Set the administrator's password to access the DCNM network.

Parameter	Description
Connection State 1 / 2	This shows the current connection state to the switch. When a redundant configuration is used (two GV Orbit Control servers form a cluster) <b>Connection State 1</b> and <b>Connection State 2</b> shows the connectivity of each server to the switches. <b>Unknown:</b> The Virtual IP is not configured yet or the topology is inactive. <b>Online:</b> GV Orbit Control is connected to DCNM. <b>Offline:</b> The topology is active and GV Orbit Control is unable to communicate with DCNM. <b>Reconnecting:</b> GV Orbit Control is trying to reach DCNM.
Active Host Name	In a redundant High Availability network architecture, one node (in standby mode) provides failover protection to another node (currently active). <b>Host Name:</b> The hostname is the unique name by which the active / standby node is known on the network. <b>IP Address:</b> The network IP address for the active / standby node.
Active IP Address	
Standby Host Name	
Standby IP Address	

- 6 Do not configure any parameters found under Ports or Streams. These are shown for information purposes only.
- 7 Add IP devices to the topology and then connect them to the switch: Click Quick Connect to link the devices. See [Using Quick Connect to Link all Devices in a Topology](#), on page 58. See also [Methods to Link Devices in a Topology](#), on page 58.

To support network redundancy for use with SMPTE ST 2022-7 compatible equipment, see [Configuring Network Switch Redundancy to Support SMPTE ST 2022-7](#), on page 229.

Use the Path Manager to view and troubleshoot the flow of streams through the switch fabric. See [Path Manager Tasks](#), on page 262.

## Direct Flow Orchestration: How To Create a Static Flow with a Cisco Network Switch

This topic describes the use case where a destination IP device does not have an API exposed that allows GV Orbit Control to direct the device's receivers to join send streams. Or you want to control what is to be sent to an IP destination. For this, GV Orbit Control can control the egress ports of a network switch to statically stitch flows feeding the IP device. It is also necessary to remove the network interface ports from the available resources for dynamically stitching flows via IGMP joins. Another way of stating this, it is necessary to remove these paths from the available tielines.

To create a static flow with GV Orbit Control you need to set some information on an output port of a network switch with a DCNM control port.

- 1 For this procedure the following topology will be used. See [Adding Devices to a Topology](#), on page 44.



- 2 In the Network Switch's **Property Editor**, under **Control Ports**, select an output port on your network switch (for example, **Cisco DCNM**). This port should not be connected to anything. See [Configuring Cisco DCNM Network Switch Devices](#), on page 219.
- 3 Set the number of streams you need in **#Output Connectors**.
- 4 With the **Cisco DCNM** control port selected, set **Expose Streams**.
- 5 Set the name and IP address of the network switch's control port (**Cisco DCNM**). You find this information through the Inventory page on the DCNM web UI. (*Inventory, Switches, Select a leaf, Interfaces* tab). You have to add 1 to the last number of the IP. For example: 192.102.45.0/31 becomes 192.102.45.1.
- 6 On the port's streams, set the **Logical Level**. See [Configuring the Logical Levels for the Devices in a Topology](#), on page 37.
- 7 On the port's streams, set **Automatic Destination** if you do not want to create a logical destination yourself.
- 8 To create the static flow, you need to do a normal take from the streams (or logical destination if you created one) to the source you want.
- 9 To confirm if the flow is passing, you can check the flow status page on the DCNM UI (*Media Controller, Flow status*). Note: If the static flow was created but the source does not have a signal, there will be no feedback.

To delete a static flow, you need to do a take from the destination to a source with an IP of 0.0.0.0 on the streams.

## Configuring a GV Fabric Network Switch Device


GV Fabric is an IP switch enabling format agnostic signal routing for small to enterprise-wide installations. GV Orbit Control automatically discovers and configures any GV Fabric switch found by the GV Orbit *Automatic Network Configurator* service (see *Automatic Network Configurator Service* in the **GV Orbit Admin Guide**; see [Related Documentation](#), on page 7). When this service finds a GV Fabric network switch on the network, or when you factory-reset an existing GV Fabric network switch, the service uses Zero Touch Provisioning (ZTP) to automatically configure the GV Fabric network switch to optimize its configuration to forward media traffic. Once the initial configuration of the GV Fabric switch is done, the GV Fabric switch becomes available as a discovered device in the **Device Library**.

GV Orbit Control also monitors the switch and updates the configuration as required. For example, the switch's media Ethernet interfaces are automatically assigned as members of the MEDIA\_VLAN and configured for use.

**LIMITATION:** You must manually configure an interface breakout by using the GV Fabric Command Line Interface (CLI).


### To configure a GV Fabric Network Switch Device

- 1 Add the GV Fabric Network Switch device to the Topology: from the **Device Library**, **Discovered**, find the GV Fabric Network Switch device bubble that you want to use. See [To add a Discovered Device to a Topology](#), on page 47.

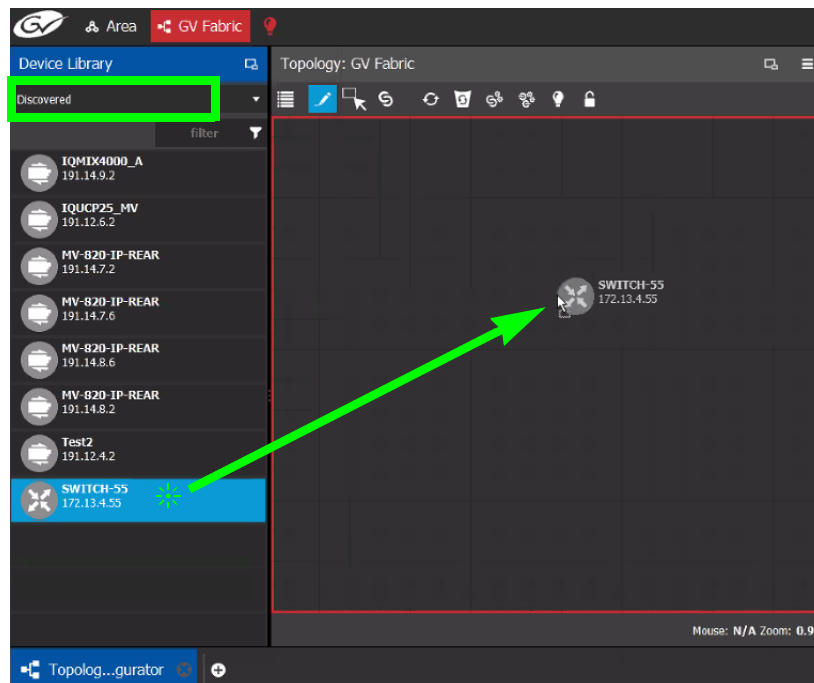

- 2 Select **Device Properties** and select **GV Fabric**. See [Defining Device Properties](#), on page 66 for more information.
- 3 Select **GV Fabric** tab (next to **Control Port** at the top of the **Property Editor**) to configure the Device Properties in the **Property Editor**. Only the properties shown

below should be used. See also [Description of Common Device Properties](#), on page 162.

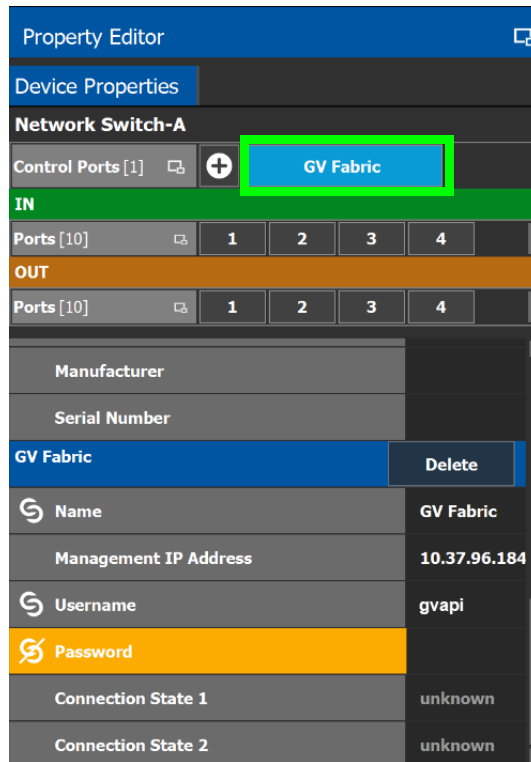

Parameter	Description
Network Host Name	This is the unique name by which the Network Switch is identified within GV Orbit Control. This value is used to construct the input/output port labels.
GV Fabric Control Port parameters	
Name	Once GV Orbit Control connects to the switch, the switch's name is read from the switch's configuration.
MGT0 / MGT1 IP Address	Once GV Orbit Control connects to the switch, the switch's management IP addresses are read from the switch's configuration.
Username	The Zero-Touch Provisioning (ZTP) process creates a <i>gvapi</i> user account in the switch. By default, GV Orbit Control uses the <i>gvapi</i> user account to access the switch. The username field can be customized to use another switch user account. Such a user account's capability must be <i>Monitor</i> or higher. See GV Fabric documentation to create a new user on the switch.
Password	Set the administrator's password for GV Orbit Control to access the GV Fabric switch's user account. When the GV Fabric device is added to the topology, the password for the <i>gvapi</i> user account is preset.

Parameter	Description
Connection State 1 / 2	<p>This shows the current connection state to the switch. When a redundant configuration is used (two GV Orbit Control servers form a cluster) <b>Connection State 1</b> and <b>Connection State 2</b> shows the connectivity of each server to the switches.</p> <p><b>Unknown:</b> The Virtual IP is not configured yet or the topology is inactive.</p> <p><b>Online:</b> GV Orbit Control is connected to DCNM.</p> <p><b>Offline:</b> The topology is active and GV Orbit Control is unable to communicate with DCNM.</p> <p><b>Reconnecting:</b> GV Orbit Control is trying to reach DCNM.</p>

4 Do not configure any parameters found under Ports or Streams. These are shown for information purposes only.

5 Add IP devices to the topology and then connect them to the GV Fabric switch: Click Quick Connect to link the devices. See [Using Quick Connect to Link all Devices in a Topology](#), on page 58. See also [Methods to Link Devices in a Topology](#), on page 58.

To support network redundancy for use with SMPTE ST 2022-7 compatible equipment, see [Configuring Network Switch Redundancy to Support SMPTE ST 2022-7](#), on page 229.


Use the Path Manager to view and troubleshoot the flow of streams through the switch fabric. See [Path Manager Tasks](#), on page 262.



## Configuring Network Switch Redundancy to Support SMPTE ST 2022-7

This topic describes the theory of how to implement network redundancy, and as such, information is provided as an example that can be used for any SMPTE ST 2022-7 compatible equipment.

To make streaming more reliable over an IP network, the implementation of SMPTE ST 2022-7 seamless protection switching depends on stream redundancy. This protection scheme transmits two identical packet streams over physically separate network routes (shown as Red LAN and Blue LAN in the figure below), so that if packets from one network are lost or delayed, the data can be reconstructed using packets from the second network stream. This process is seamless because switching between the streams is instantaneous and does not impact content.

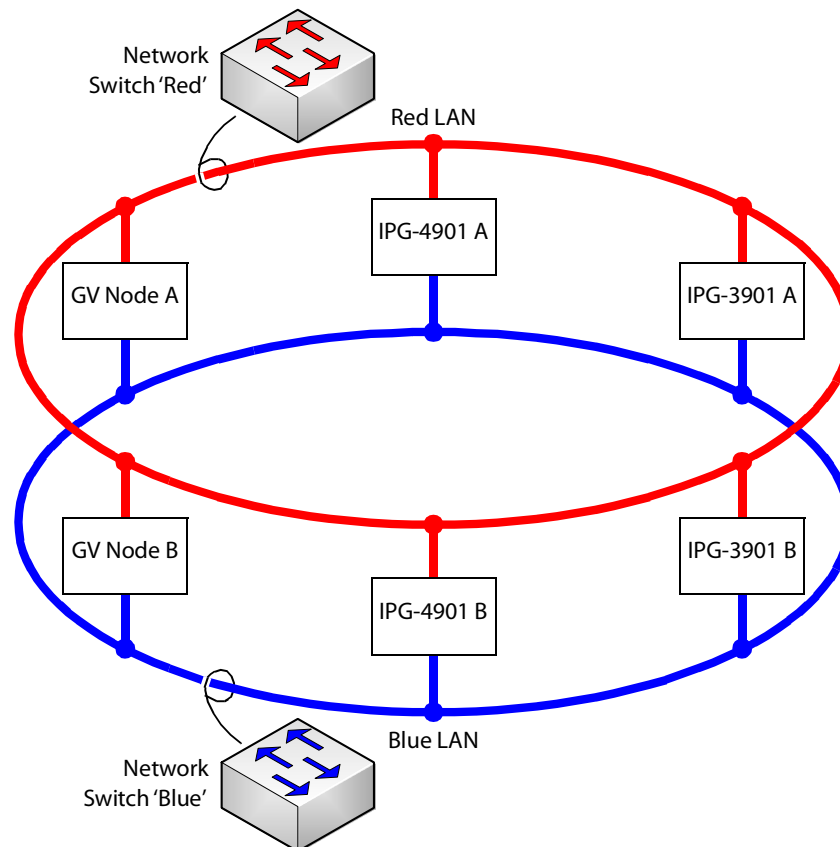

### PREREQUISITES:

- At least two DCNM-compliant switches must be used for this application. Contact Grass Valley for more information about switch compatibility. See [Grass Valley Technical Support](#), on page 306.


- For any GV Node frame:
  - a In iControl's GV Node Manager, make sure to set **redundancy** to ON. See the GV Node User Manual for more information.
  - b In GV Orbit Control, set **2022-7 Mode** and configure the **Redundancy Port** parameter. See [Configuring a GV Node Device](#), on page 163.
- For any IPG-4901 / IPG-3901 card
  - a In iControl's **Network panel, Settings** tab, for the **ETH 2 Port**, make sure to set the Operation Mode to **Redundancy**. See the IPG-4901 Guide to Installation and Operation for more information.
  - b In GV Orbit Control, set the **Operation Mode** to **Redundancy**. See [Configuring an IPG-3901 / IPG-4901 Device](#), on page 174.
- For certain third-party devices you may have to configure port redundancy manually. See [Setting Port Redundancy for Many Devices at Once](#), on page 56.

**To configure SMPTE ST 2022-7 example**

- 1 Add the following devices to the Topology: from the **Device Library, Virtual Device**, add the following device bubbles to the Topology. See [To add a Virtual Device to a topology](#), on page 44.


Quantity	Device
2	Network Switch
2	IPG-3901
2 × 3 instances in a group	Camera
2 × 3 instances in a group	Monitor

Arrange the devices on the Topology as shown below.

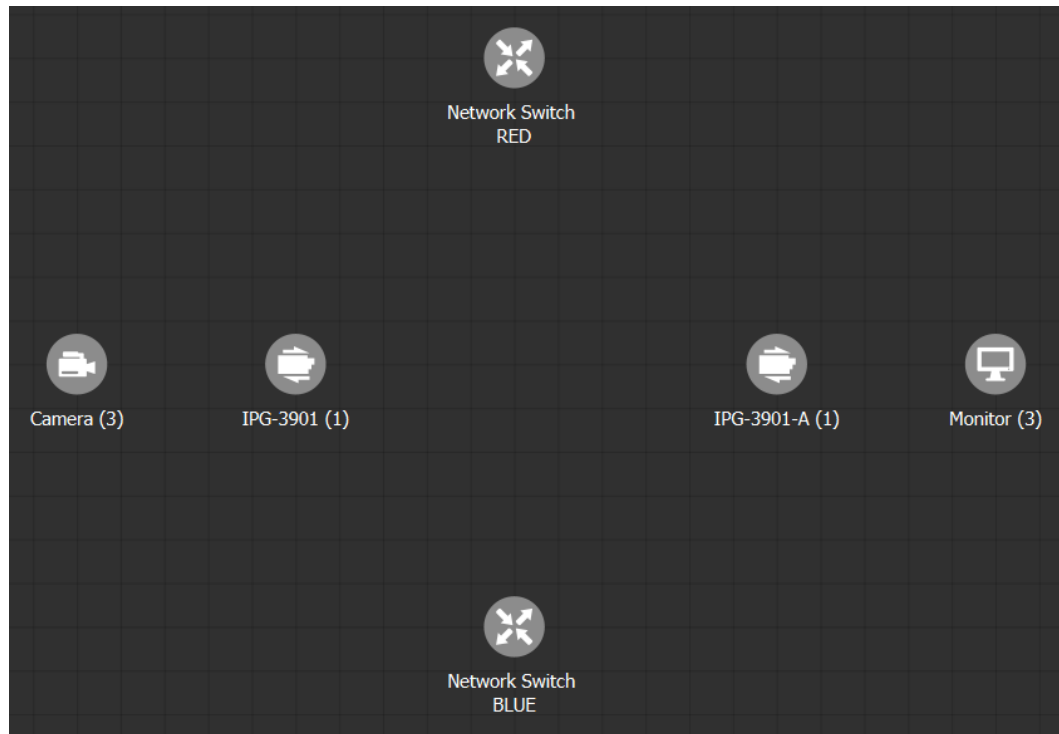

- 2 Activate the topology. See [Activating a Topology](#), on page 72.
- 3 Configure the devices on the Topology. See [Special Devices](#), on page 161. For any other device, see [Adding Devices to a Topology](#), on page 44.

- 4 Click Quick Connect to link the devices as shown below. See [Using Quick Connect to Link all Devices in a Topology](#), on page 58. See also [Methods to Link Devices in a Topology](#), on page 58.

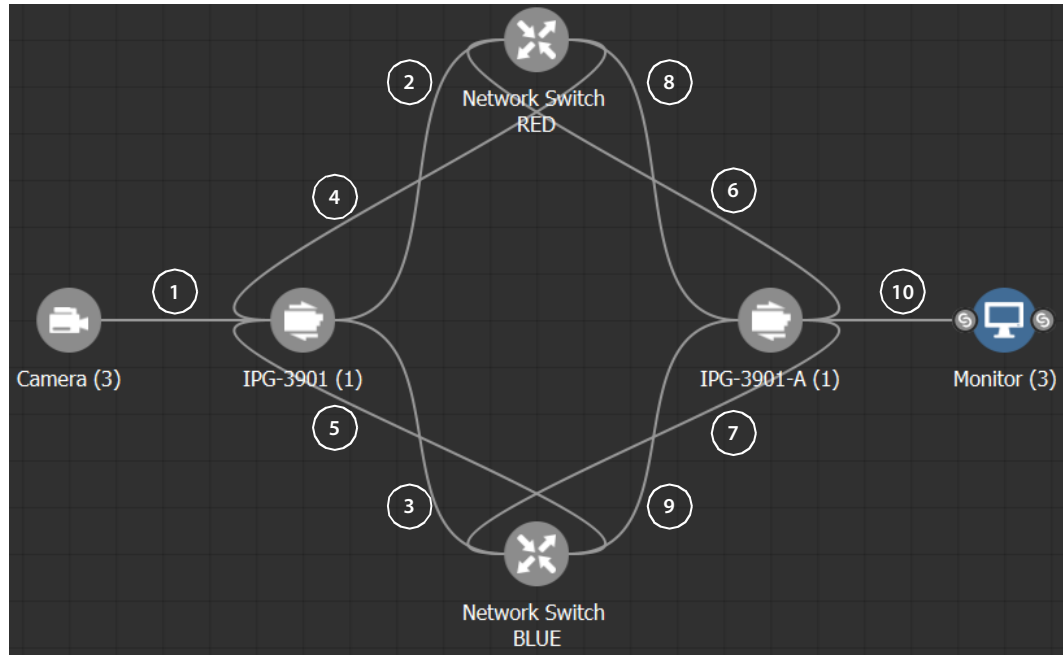

Much more elaborate systems can be configured. The objective is to connect all SMPTE ST 2022-7 IP devices (#2 to #9) to both network switches (RED and BLUE).

- 5 If you are manually making the connections between the devices, select the links between devices, one at a time, to make the connections between devices as shown below. See [Manually Setting the Link's Physical Connection Parameters \(Sources and Destinations\)](#), on page 62. If you use Quick Connect, this is not necessary.

Link			Make the following connections	
#	From	To	From	To
1	Camera	IPG-3901	Cam1 Cam2 Cam3	SDI to 1 (Input Port Id: 3) SDI to 2 (Input Port Id: 4) SDI to 3 (Input Port Id: 5)
2	IPG-3901	Network Switch RED	ETH1	SwitchIn1
3	IPG-3901	Network Switch BLUE	ETH2	SwitchIn1
4	Network Switch RED	IPG-3901	SwitchOut1	ETH1
5	Network Switch BLUE	IPG-3901	SwitchOut1	ETH2
6	IPG-3901-A	Network Switch RED	ETH1	SwitchIn2

Link			Make the following connections	
#	From	To	From	To
7	IPG-3901-A	Network Switch BLUE	ETH2	SwitchIn2
8	Network Switch RED	IPG-3901-A	SwitchOut2	ETH1
9	Network Switch BLUE	IPG-3901-A	SwitchOut2	ETH2
10	IPG-3901	Camera	SDI to 1 (Output Port Id: 3) SDI to 2 (Output Port Id: 4) SDI to 3 (Output Port Id: 5)	Mon1 Mon2 Mon3


## Configuring an NVISION Hybrid Series Router

To control an NVISION Hybrid Series Router, GV Orbit Control uses the NP0016 router control protocol. The following NVISION Hybrid Routers are supported: NV8140, NV8144, NV8280, NV8576 or NV8576 Plus. Once the IP address(es) have been added to the Control Port(s) that connects to the NVISION Hybrid Series Router, the router's configuration is read into GV Orbit Control, and the router's card types and ports are automatically configured within GV Orbit Control.

**PREREQUISITE:** You must have a list of the card type for each slot in the router's frame. This information may be available in the router's MRC configuration software.


### LIMITATIONS:

- The disembedder / embedder output card is currently not supported.
- The following topology use case is unsupported.

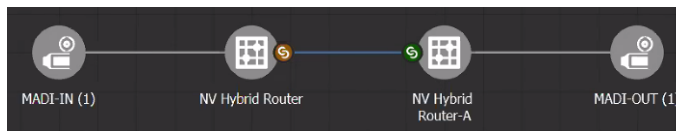

The tieline between two NVISION Hybrid Routers should not be MADI (for example, to link between a MADI source and a MADI destination). Taking a MADI source to a MADI destination will only work if both of them are directly connected to the same NVISION Hybrid Series Router.


- The following topology use case does not support lock and protect from a third-party control system on the NVISION Hybrid Router for a Logical Destination.

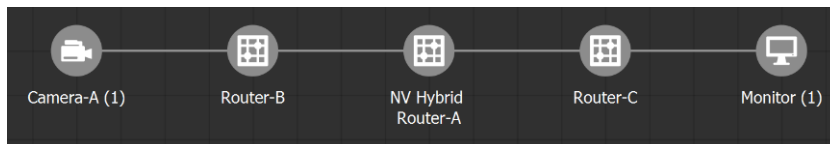


 
Any output of a NVISION Hybrid Router that is connected to another router cannot be locked in GV Orbit Control. GV Orbit Control will only update the lock/protect status of a destination which is directly connected to the NVISION Hybrid Router (that is, without any other devices in-between).

### To configure an NVISION Hybrid Series Router Device

- 1 Add the **NV Hybrid Router** device to the Topology: from the **Device Library, Virtual Device**, find the **NV Hybrid Router** device bubble. See [To add a Virtual Device to a topology](#), on page 44.

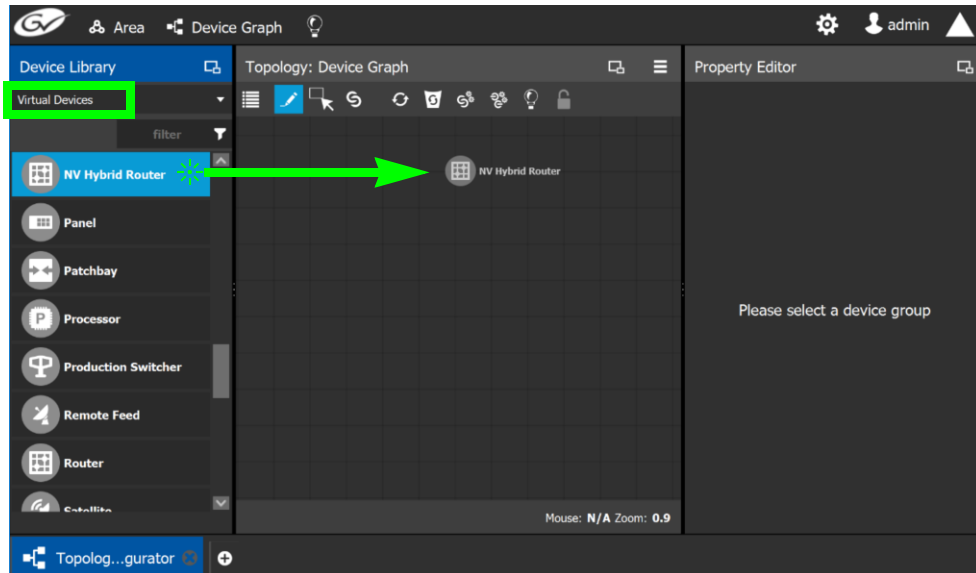

- 2 The control port(s) must be configured to allow communication with the router thereby permitting GV Orbit Control to control the router. NVISION Hybrid Series Routers are controlled through the NP0016 router control protocol.  
Select the **NV Hybrid Router** bubble and click **New**  next to **Control Port** at the top of the **Property Editor** and select the router's control protocol from the list. **Dummy** can be used for testing purposes (or pre-deployment) when the actual router model is unknown. See also [Defining Device Properties](#), on page 66 for more information.



A tab for the selected router model appears. Select this tab to configure the control port.

If the router has a second redundant network connection for controlling it, add a second control port and configure it the same way as the first one except for the IP address which must reflect that of the router's second network connection.

Specifically, you must set the router's control port **IP Address** and **IP Port** number parameters.

Router Control Protocol	See
NP0016 Compact Router	<a href="#">NP0016 Compact Router Control Port Configuration Parameters</a> , on page 245
NP0016 Enterprise Router	<a href="#">NP0016 Enterprise Router Control Port Configuration Parameters</a> , on page 245

To delete a control port, see [To delete a router's control port](#), on page 244.

- 3 Activate the topology. See [Activating a Topology](#), on page 72.

The **Connection State 1 / 2** status for the control port(s) becomes **Online** when is has successfully connected to the NVISION Hybrid router.

Once GV Orbit Control has connected to the NVISION Hybrid Router through the Control Port, it reads the router's configuration to then automatically configure the NVISION Hybrid Router device properties in GV Orbit Control accordingly. Should the NVISION Hybrid router's configuration change (for example, changes have been made to the type and slot location of the router's cards), the router's configuration can be re-loaded into GV Orbit Control; see [To automatically refresh the NVISION Hybrid router's card information in GV Orbit Control](#), on page 239.

- 4 Deactivate the topology. See [Making an Active Topology Inactive](#), on page 73.
- 5 Configure the NVISION Hybrid Series Router properties. See also [Description of Common Device Properties](#), on page 162.


Parameter	Description
Network Host Name	The hostname is the unique name by which the associated NVISION Hybrid Series Router is known on the network.
Audio Physical Level ID	From the NVISION Hybrid Series Router's configuration, specify the level ID number that has been assigned to the router's audio matrix. Usually this is 2.
Video Physical Level ID	From the NVISION Hybrid Series Router's configuration, specify the level ID number that has been assigned to the router's video matrix. Usually this is 1.
NVision Hybrid Router Type	Shows the router's model type. This is automatically read from the router.
Advanced > Internal Wiring Done	Shows if the internal modeling of the NVISION Hybrid Router is complete.

- 6 This step is optional; setting the **Card Type** for each slot in the router's frame can automatically be done by GV Orbit Control: To automatically update GV Orbit Control's configuration when the type and slot location of the cards have been changed in the router, see [To automatically refresh the NVISION Hybrid router's card information in GV Orbit Control](#), on page 239.


Manually set the router's card type for any of the router's input and output slots that need to be updated: select an **Input Slot** or **Output Slot** in the router's frame in the



**Property Editor** and then set the card type in the **Card Type** parameter. If the slot has no card installed in it, set the **Card Type** parameter to **NONE**.

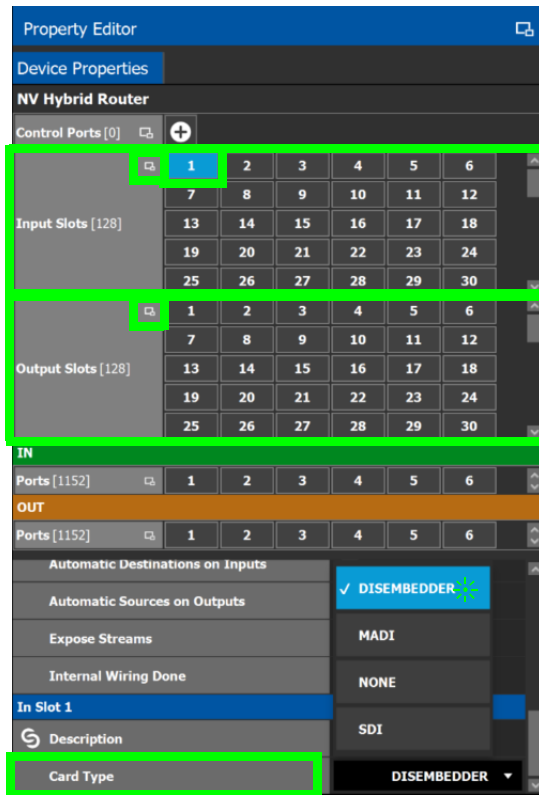


- 7 Select each input or output port to configure them individually. These are the configuration parameters for each of the router’s input/output ports. See also [Description of Common Device Properties](#), on page 162.

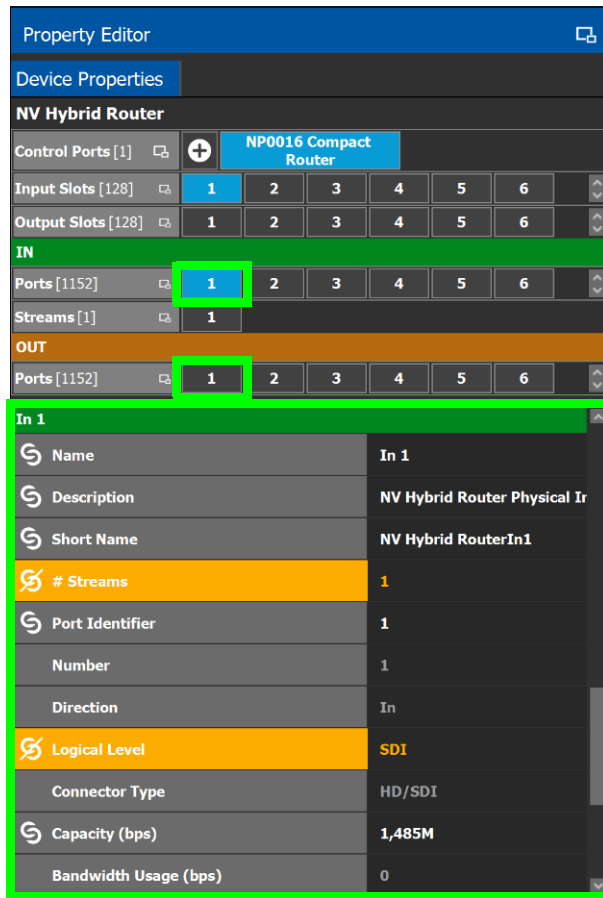

Parameter	Description
Port Identifier	This is the generic identifier of the port within GV Orbit Control.
Number	This shows the current status for information purposes.
Direction	
Connector Type	
Capacity (bps)	The stream’s data rate.
Bandwidth Usage (bps)	This shows the current status for information purposes.
Embedder bypassed	Shows the current embedder status for the selected output port according to the current path being routed. See also <a href="#">Path Manager Tasks</a> , on page 262. When set, the output embedder is not being used. When deselected, the output embedder is being used.


- Select each stream found under each input and output port to configure them individually. These are the configuration parameters for the individual streams carried on a network port. See also [Description of Common Device Properties](#), on page 162.

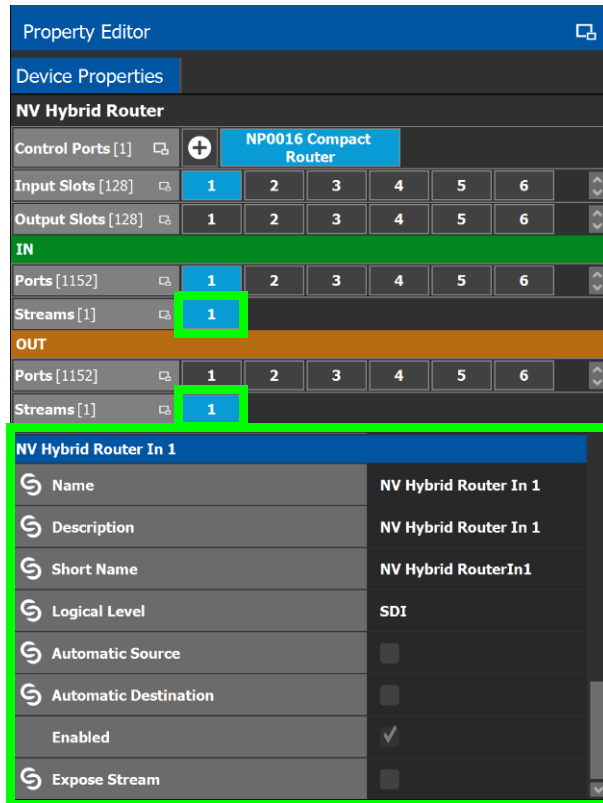

#### To automatically refresh the NVISION Hybrid router's card information in GV Orbit Control

When the router has been reconfigured with new or different cards, GV Orbit Control can read the router's configuration again to automatically configure the NVISION Hybrid Router device properties in GV Orbit Control accordingly.

- De-activate the topology if activated. See [Making an Active Topology Inactive](#), on page 73.
- Select one of the router's control ports.
- Scroll-down the router's **Device Properties** list to the control port.

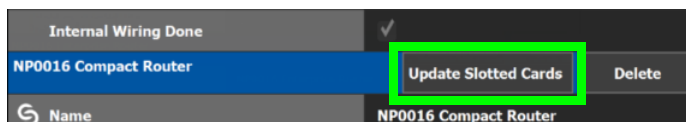

- Click **Update Slotted Cards** and then click OK.  
GV Orbit Control reads the router's configuration to then automatically configure the NVISION Hybrid Router device properties in GV Orbit Control accordingly.
- Activate the topology. See [Activating a Topology](#), on page 72.

## Configuring Router Devices

The following procedure configures a router device. Different models of routers use a range of control protocols that GV Orbit Control uses to control the router. Each router control protocol is individually covered in follow up procedures: see also [Configuring a Router's Control Port](#), on page 243.


For more information about how GV Orbit Control manages a router's Lock, Protect, and Release, see also [About Lock, Protect, and Release](#), on page 282.

### To configure a Router Device

- 1 Add the Router device to the Topology: from the **Device Library, Virtual Devices**, find the **Router Device** bubble. See [To add a Virtual Device to a topology](#), on page 44.
- 2 Add and configure router control port(s) according to the router model you want to control. Control port(s) must be configured to allow communication with the router thereby permitting GV Orbit Control to control the router; see [Configuring a Router's Control Port](#), on page 243.
- 3 Select the router's tab (next to **Control Port** at the top of the **Property Editor**) to configure the Device Properties in the **Property Editor**. See also [Description of Common Device Properties](#), on page 162.


Parameter	Description
Network Host Name	The hostname is the unique name by which the associated router is known on the network.
Physical Level ID	Set the Physical Level ID value that has been configured for the corresponding router to be controlled by this device instance. To obtain this value, use the router's native configuration interface.
Advanced > Default Connector Type	The router's physical interface port connector: <b>HD/SDI, IP/RJ-45, MADI</b> .
Controller Starting Input	The starting input port number from which you want to control the router's physical level.
Controller Starting Output	The starting output port number from which you want to control the router's physical level.

- 4 Set the number of physical input and output connectors being used on the router in # **Input Connectors** and # **Output Connectors**.

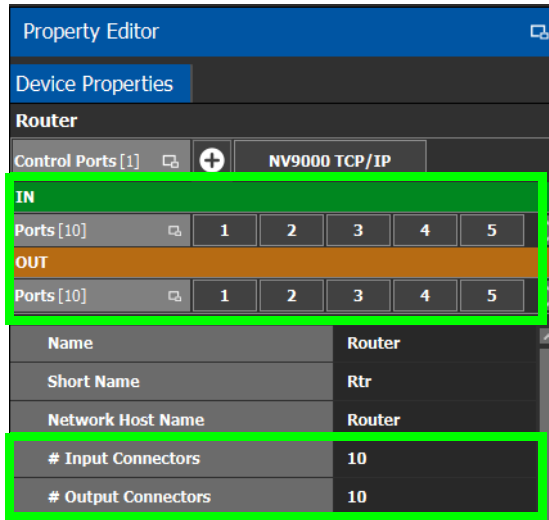


The configuration for these ports become available as **Ports** under **IN** and **OUT**.

- Select each input or output port to configure them individually. These are the configuration parameters for each of the router's input/output ports. See also [Description of Common Device Properties](#), on page 162.

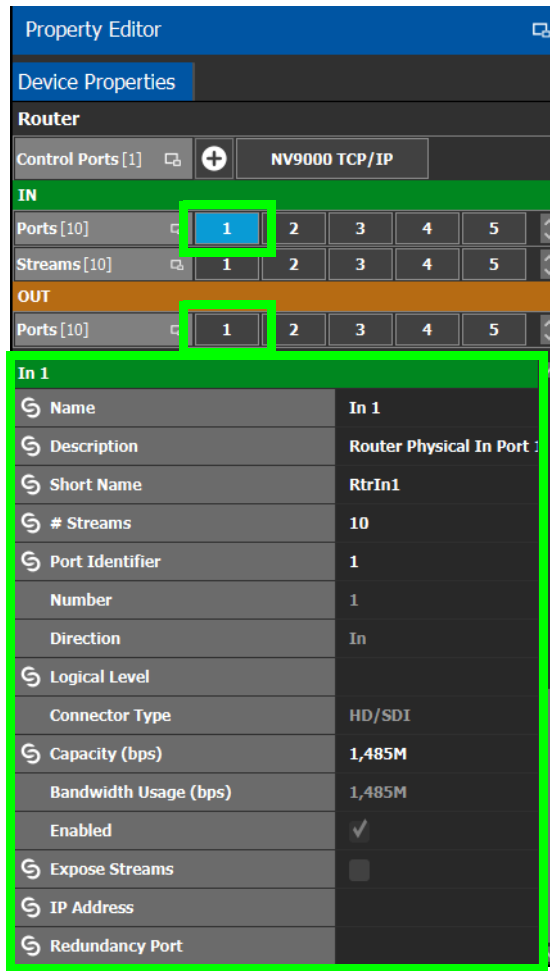

Parameter	Description
Port Identifier	This is the generic identifier of the port within GV Orbit Control.
Number	This shows the current status for information purposes.
Direction	
Connector Type	
Capacity (bps)	
Bandwidth Usage (bps)	This shows the current status for information purposes.
IP Address	This is the interface IP address of the selected port. This is currently not used in the router virtual device.
Redundancy Port	Associate this port with another port to create a redundant network traffic flow path for failover protection. The associated port will not be available to carry other traffic.

- 6 Select each steam found under each input and output port to configure them individually. These are the configuration parameters for the individual streams carried on a network port. See also [Description of Common Device Properties](#), on page 162.

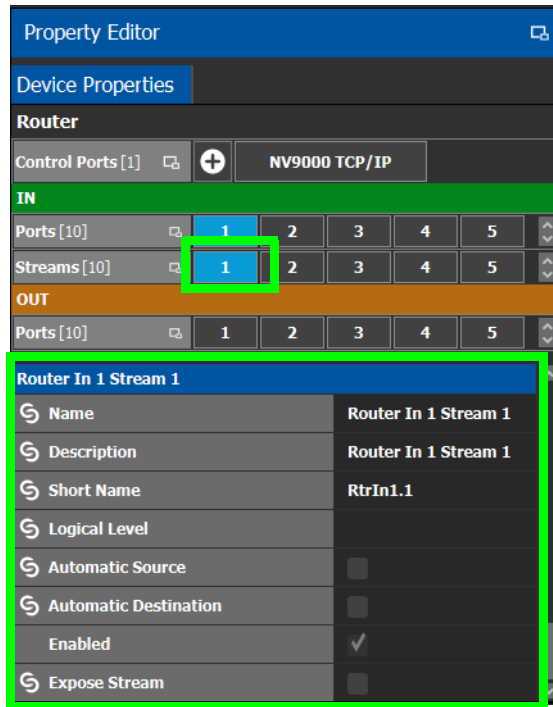


## Configuring a Router's Control Port

Control port(s) must be configured to allow communication with the router thereby permitting GV Orbit Control to control the router. There are many types of control ports suited to the router's individual model or control protocol. First, you must add a control port to the router's configuration in GV Orbit Control and then configure it.

**PREREQUISITE:** Add a router device to the Topology Configurator. See [To configure a Router Device](#), on page 240.

### To add a router control port

- 1 Select the **Router** bubble on the Topology Configurator and then select **Device Properties** and click **New**  next to **Control Port** at the top of the **Property Editor** and select the router's model / control protocol from the list. **Dummy** can be used for testing purposes (or pre-deployment) when the actual router model is unknown. See also [Defining Device Properties](#), on page 66 for more information.



A tab for the selected router model appears. Select this tab to configure the control port. The control port(s) must be configured to allow communication with the router thereby permitting GV Orbit Control to control the router.


If the router has a second redundant network connection for controlling it, add a second control port and configure it the same way as the first one except for the IP address which must reflect that of the router's second network connection.

- 2 Configure the control port. See below.

### To delete a router's control port

Delete a router's control port as follows.

- 1 De-activate the topology if activated. See [Making an Active Topology Inactive](#), on page 73.
- 2 Select one of the router's control ports.
- 3 Scroll-down the router's **Device Properties** list to the control port

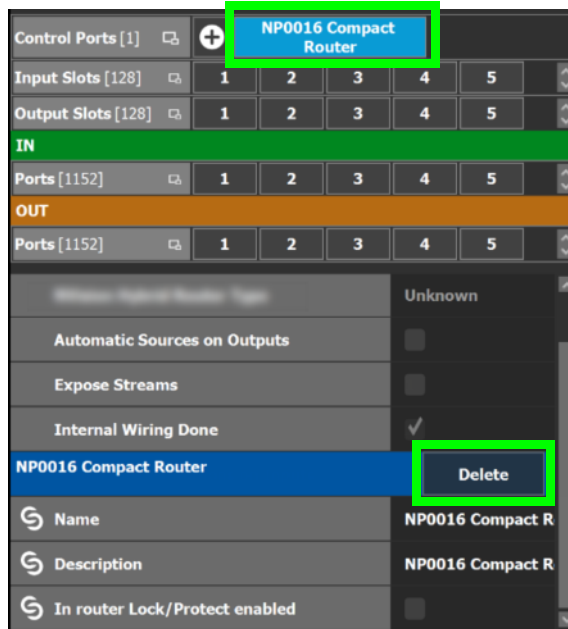

- 4 Click **Delete**.

### Supported router control protocols

The following router control protocols are supported.

Router Control Protocol	See
NP0016 Compact Router	<a href="#">NP0016 Compact Router Control Port Configuration Parameters</a> , on page 245
NP0016 Enterprise Router	<a href="#">NP0016 Enterprise Router Control Port Configuration Parameters</a> , on page 245
NS-BUS	<a href="#">NS-BUS Control Port Configuration Parameters</a> , on page 248
NV9000 TCP/IP (NP0017 device-based)	<a href="#">NV9000 TCP/IP Control Port Configuration Parameters</a> , on page 248
SAM SW-P-08 TCP/IP	<a href="#">SAM SW-P-08 TCP/IP Control Port Configuration Parameters</a> , on page 249



## NP0016 Compact Router Control Port Configuration Parameters

See also [Description of Common Device Properties](#), on page 162.

Parameter	Description
IP Address	The network IP address for the associated router's management or control port Ethernet address.
Connection State 1	<p>Connection State 1 shows the connection status of the router with the primary server of a server group.</p> <p>Connection State 2 shows the connection status of the router with the secondary server of a server group. See <a href="#">Configuring a Controller Group</a>, on page 19.</p> <p><b>unknown:</b> The topology is inactive (see <a href="#">Activating a Topology</a>, on page 72) or the router does not have network connectivity to the GV Orbit Control server(s).</p> <p><b>offline:</b> The router does not have network connectivity to the GV Orbit Control server(s).</p> <p><b>online:</b> The router is connected to the GV Orbit Control server(s).</p>
Connection State 2	
Connections From Multiple Servers	Set this if the router supports multiple concurrent connections to it. When set, this allows GV Orbit Control main and backup servers to connect at the same time to the router, thereby increasing system availability.
IP Port	Port number for the control port stream used by the router. The default is 5194.
In router Lock/Protect enabled	<p>Set to transfer the management of Locks/Protects from the GV Orbit Control control system to the Router for destinations that are directly connected to this router.</p> <p>Deselect to manage all Lock/Protect in GV Orbit Control exclusively. See <a href="#">About In router Lock/Protect enabled for a Router using NP0016 router control protocol</a>, on page 247.</p>

## NP0016 Enterprise Router Control Port Configuration Parameters

The enterprise router control port supports the protocol's 'Coherent take' command when performing multiple crosspoint changes at the same time. See also [Description of Common Device Properties](#), on page 162.

Parameter	Description
IP Address	The network IP address for the associated router's management or control port Ethernet address.

Parameter	Description
Connection State 1	Connection State 1 shows the connection status of the router with the primary server of a server group.
Connection State 2	<p>Connection State 2 shows the connection status of the router with the secondary server of a server group. See <a href="#">Configuring a Controller Group</a>, on page 19.</p> <p><b>unknown:</b> The topology is inactive (see <a href="#">Activating a Topology</a>, on page 72) or the router does not have network connectivity to the GV Orbit Control server(s).</p> <p><b>offline:</b> The router does not have network connectivity to the GV Orbit Control server(s).</p> <p><b>online:</b> The router is connected to the GV Orbit Control server(s).</p>
Connections From Multiple Servers	Set this if the router supports multiple concurrent connections to it. When set, this allows GV Orbit Control main and backup servers to connect at the same time to the router, thereby increasing system availability.
IP Port	Port number for the control port stream used by the router. The default is 5194.
In router Lock/Protect enabled	<p>Set to transfer the management of Locks/Protects from the GV Orbit Control control system to the Router for destinations that are directly connected to this router.</p> <p>Deselect to manage all Lock/Protect in GV Orbit Control exclusively. See <a href="#">About In router Lock/Protect enabled for a Router using NP0016 router control protocol</a>, on page 247.</p>
Use Coherent Take Message	Set for GV Orbit Control to use the protocol's 'Coherent take' command when performing multiple crosspoint changes at the same time for this router.

**About In router Lock/Protect enabled for a Router using NP0016 router control protocol**

For a router using the NP0016 router control protocol, Lock, Protect, and Release have different behaviors depending on whether the **In router Lock/Protect enabled** parameter is set in the Router Control Port configuration.

<b>In router Lock/Protect enabled parameter</b>	<b>Description</b>
Set	<p>For destinations that are directly attached to the router, this setting transfers the management of Locks/Protects from the GV Orbit Control control system to this router, thereby allowing better third-party router control integration with GV Orbit Control. This is called in router lock and protect.</p> <p>This setting keeps the router's Lock/Protect and GV Orbit Control's Lock/Protect in synchronization as follows:</p> <ul style="list-style-type: none"> <li>• If a Lock/Protect is updated in the router, it's also updated in GV Orbit Control.</li> <li>• If a Lock/Protect is updated in GV Orbit Control, it's also updated in the router.</li> </ul> <p>This option has the following effects and consequences: When locks / protections are created in the router through another control system, the user name used to create the locks / protections will be unknown to GV Orbit Control's user management mechanism. These unknown users are treated as <i>admin</i> users within GV Orbit Control. Note that <i>admin</i> users within GV Orbit Control can override the locks and protections of any other GV Orbit Control user. This means that any third-party control system will override locks / protections made in GV Orbit Control.</p>
Deselected	<p>GV Orbit Control stores the locks in its database and they are preserved after a restart/reboot. As such, destinations will remain locked/protected. GV Orbit Control system does not read a lock from a router and does not control a lock in the router. This is called in control system lock and protect. This is how all other types of routers are managed.</p> <p>Locks and protections are made in GV Orbit Control without consideration of any locks and protections that have been made through another control system (locks and protections are not synchronized between GV Orbit Control and the router). This can result in unexpected routing behavior such as a failed path that looks as though it should have been successful.</p>

See also [About Lock, Protect, and Release](#), on page 282.

## NS-BUS Control Port Configuration Parameters

See also [Description of Common Device Properties](#), on page 162.

Parameter	Description
Connection State 1	Connection State 1 shows the connection status of the router with the primary server of a server group. Connection State 2 shows the connection status of the router with the secondary server of a server group. See <a href="#">Configuring a Controller Group</a> , on page 19. <b>unknown:</b> The topology is inactive (see <a href="#">Activating a Topology</a> , on page 72) or the router does not have network connectivity to the GV Orbit Control server(s). <b>offline:</b> The router does not have network connectivity to the GV Orbit Control server(s). <b>online:</b> The router is connected to the GV Orbit Control server(s).
Connection State 2	
IP Address	The network IP address for the associated router's management or control port Ethernet address.
IP Port	Port number for the control port stream used by the router. The default is 37800.
Multiple Connections Capable	Set this if the router supports multiple concurrent connections to it. When set, this allows GV Orbit Control main and backup servers to connect at the same time to the router, thereby increasing system availability.

## NV9000 TCP/IP Control Port Configuration Parameters

This option uses the NP0017 device-based router control protocol to control an NV9000 router through Ethernet network link(s). If the router has two control ports, add a second control port, one for each control port on the router. See also [Description of Common Device Properties](#), on page 162.

Parameter	Description
IP Address	The network IP address for the associated router's management or control port Ethernet address.
Connection State 1	Connection State 1 shows the connection status of the router with the primary server of a server group. Connection State 2 shows the connection status of the router with the secondary server of a server group. See <a href="#">Configuring a Controller Group</a> , on page 19. <b>unknown:</b> The topology is inactive (see <a href="#">Activating a Topology</a> , on page 72) or the router does not have network connectivity to the GV Orbit Control server(s). <b>offline:</b> The router does not have network connectivity to the GV Orbit Control server(s). <b>online:</b> The router is connected to the GV Orbit Control server(s).
Connection State 2	

Parameter	Description
Connections From Multiple Servers	Set this if the router supports multiple concurrent connections to it. When set, this allows GV Orbit Control main and backup servers to connect at the same time to the router, thereby increasing system availability.
IP Port	Port number for the control port stream used by the router.
Protocol	The IP connection protocol. <b>TCP:</b> A point-to-point connection protocol. <b>UDP:</b> A stateless connection protocol that can also broadcast data to more than one device.

### Lock, Protect, and Release with the NV9000 Control Port

GV Orbit Control stores the locks in its database and they are preserved after a restart/reboot. As such, destinations will remain locked/protected. The GV Orbit Control system does not read a lock from a router and does not control a lock in the router.

See also [About Lock, Protect, and Release](#), on page 282.

### SAM SW-P-08 TCP/IP Control Port Configuration Parameters

Grass Valley/Pro Bel devices including the Sirius router that use the Pro Bel SW-P-08 switcher protocol can be controlled by GV Orbit Control through an IP network. These routers use two control ports to control them.

LIMITATION: GV Orbit Control control of a Sirius router is limited to a maximum of 1152<sup>2</sup> crosspoints using single-level X-Y control.

#### To connect the GV Orbit Control server to the router

- 1 Add two control ports in GV Orbit Control. See [To add a router control port](#), on page 243.
- 2 Configure both control port configuration parameters. See also [Description of Common Device Properties](#), on page 162.

Parameter	Description
IP Address	The network IP address for the associated router's management or control port Ethernet address.
Connection State 1	Connection State 1 shows the connection status of the router with the primary server of a server group.
Connection State 2	Connection State 2 shows the connection status of the router with the secondary server of a server group. See <a href="#">Configuring a Controller Group</a> , on page 19. <b>unknown:</b> The topology is inactive (see <a href="#">Activating a Topology</a> , on page 72) or the router does not have network connectivity to the GV Orbit Control server(s). <b>offline:</b> The router does not have network connectivity to the GV Orbit Control server(s). <b>online:</b> The router is connected to the GV Orbit Control server(s).


Parameter	Description
Connections From Multiple Servers	Set this if the router supports multiple concurrent connections to it. When set, this allows GV Orbit Control main and backup servers to connect at the same time to the router, thereby increasing system availability.
IP Port	Port number for the control port stream used by the router. The default is 14000.
Matrix ID	A SW-P-08 device can have multiple matrices, each with multiple physical levels. Set the Matrix ID value that has been configured for the corresponding router to be controlled by this device instance. To obtain this value, use the router's native configuration interface. Refer to your router's documentation for more information about this parameter.
Polling	Set this to poll the crosspoint status at regular intervals.
Protocol	The IP connection protocol. <b>TCP:</b> A point-to-point connection protocol. <b>UDP:</b> A stateless connection protocol that can also broadcast data to more than one device.
Use Extended Mode	Set this for GV Orbit Control to try to use the <i>extended</i> command set of the SW-P-08 protocol with the router first. Extended commands allow routers larger than 1023 × 1023 to be controlled. If the router does not support extended commands, the GV Orbit Control will fallback to the standard command set and with it, the associated control limitations.

## Configuring a Device that Supports Audio Breakaway/Shuffling such as Audio Live

Audio breakaway and shuffling can be done by Audio Live and by GV Node. Audio Live is designed specifically for audio processing.

### About Audio Live

Audio Live is an IP-only device that manages audio feeds only. It accepts a number of AES67 streams as inputs. Internally, it demultiplexes these inputs to obtain a series of mono PCM audio channels which then go through an audio router. Outputs from the router get multiplexed in accordance with the required output configuration. This allows Audio Live to perform breakaway and/or shuffling of mono channel audio feeds, in addition to audio format conversion.

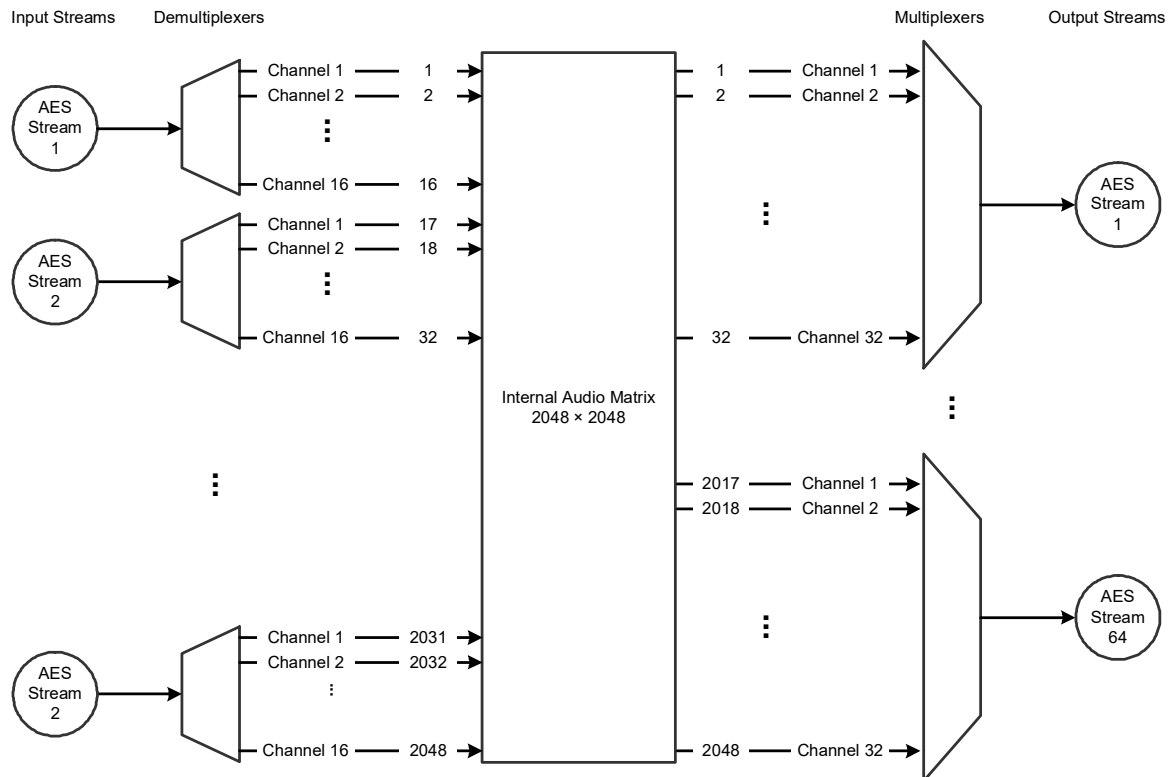

*Example Audio Live configuration with 128 x 16 matrix for the input and 64 x 32 matrix for the output*

The inputs and outputs of an Audio Live are called *spigots*. There are a variety of spigot configurations that are available. See also [How to Know if a Spigot is an Input or an Output](#), on page 184.

GV Orbit Control is able to detect the number of channels in the input spigots and will assign one of the AES67 levels to the input stream for each spigot (for example, AES67-4, AES67-8, AES67-16, AES67-32 or AES67-64). This is conditional on having configured the input spigots in GV Orbit Client to not use the **Auto** setting for the number channels. This is shown in the procedure below ([Required Audio Live Configuration in the GV Orbit Client Control Panel](#), on page 252).

GV Orbit Control will detect the number of channels in the output spigots and one of the AES67 logical levels will be automatically assigned to the output stream of each output spigot (for example, AES67-4, AES67-8, AES67-16, AES67-32 or AES67-64).

Audio Live can accept audio packets with any packet time on the input. Audio Live can convert audio packet times as well as the number of channels in the streams. For example, an input spigot accepts an AES67 stream with 8 channels and packet time of 1 millisecond, and route the signals to an output spigot with 16 channels and packet time of 250 microseconds. When using audio streams with different packet times however, extra configuration steps are required: see [Required Configuration for Audio Streams with Different Packet Times](#), on page 255.

## About the Routing Path of Audio Channels

If there are multiple devices on the topology that can perform audio shuffling, Audio Live will not necessarily always do the shuffle. For example, if the first device reached along the path (from destination to source) is a GV Node, then the GV Node may do the shuffle. It is GV Orbit Control that determines whether and when Audio Live is required for a given route. To know if an Audio Live or GV Node device is currently in use for a given route, use the Path Manager to see if there are tie-line connections to the Audio Live / GV Node device. See [Path Manager Tasks](#), on page 262.

## Prerequisites

Audio Live v1.5 or higher must be connected to the network, licensed, and has been previously configured with GV Orbit Client.

### Required Audio Live Configuration in the GV Orbit Client Control Panel


In the *Audio Live User Guide*, see the following topics that must be configured according to your needs.

- 1 In GV Orbit Client, set the size of Audio Live's audio matrix (**Maximum Supported Channel Count**) and the number of channels per AES input and output streams. This setting is found under **Audio Live > Setup > System Configuration > Input Configuration** and **Output Configuration**.




- 2 Stop the Audio Live server in **Agent Configuration**; under **Available Agents**, select **Audio Live** and click **Stop**.



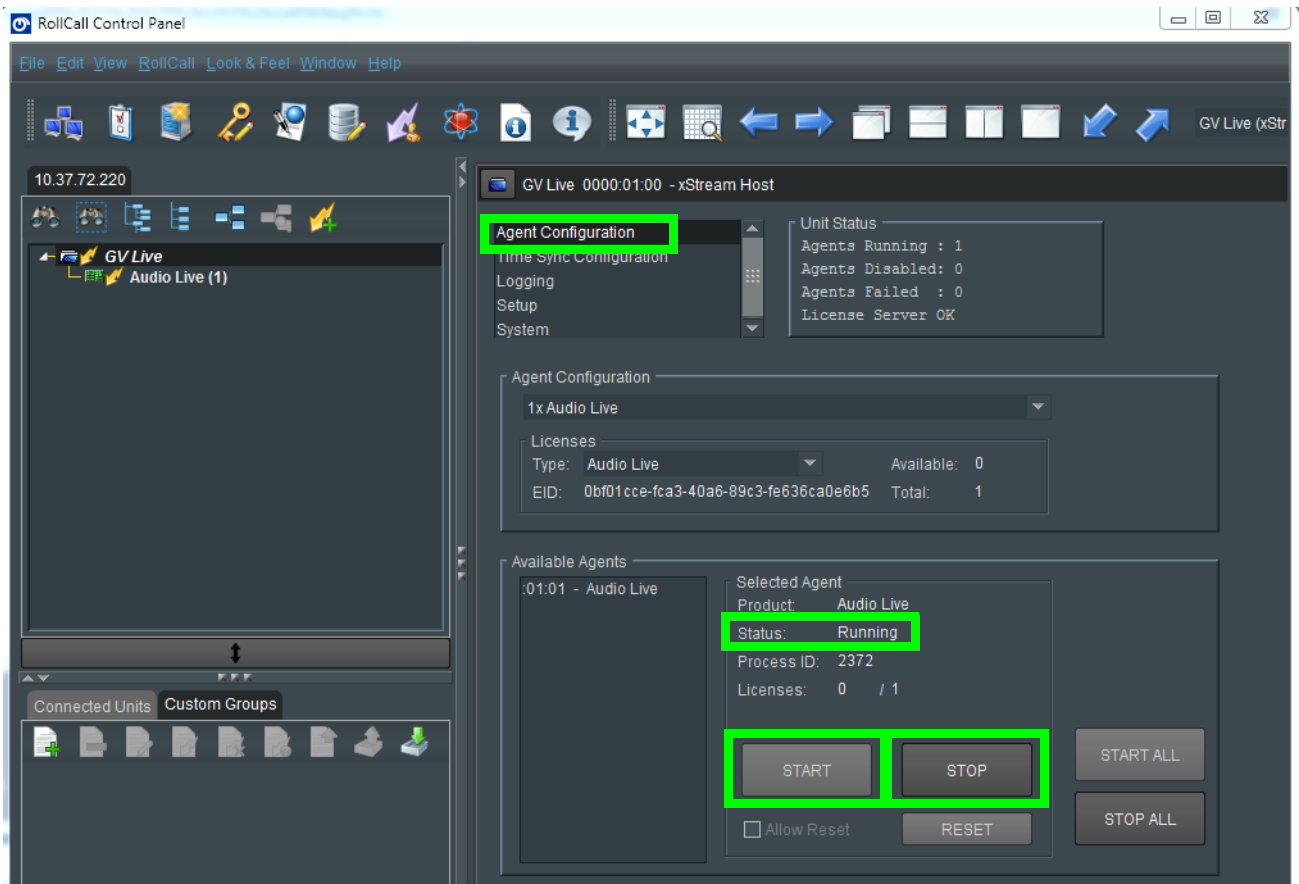

- 3 Once the **Status** under **Selected Agent** becomes **Stopped**, click **Start**.
- 4 In GV Orbit Client, set the **Channels** parameter to the maximum number of channels available for *each stream*. This setting is found under **Audio Live > Input > Source Flows > Channels**.

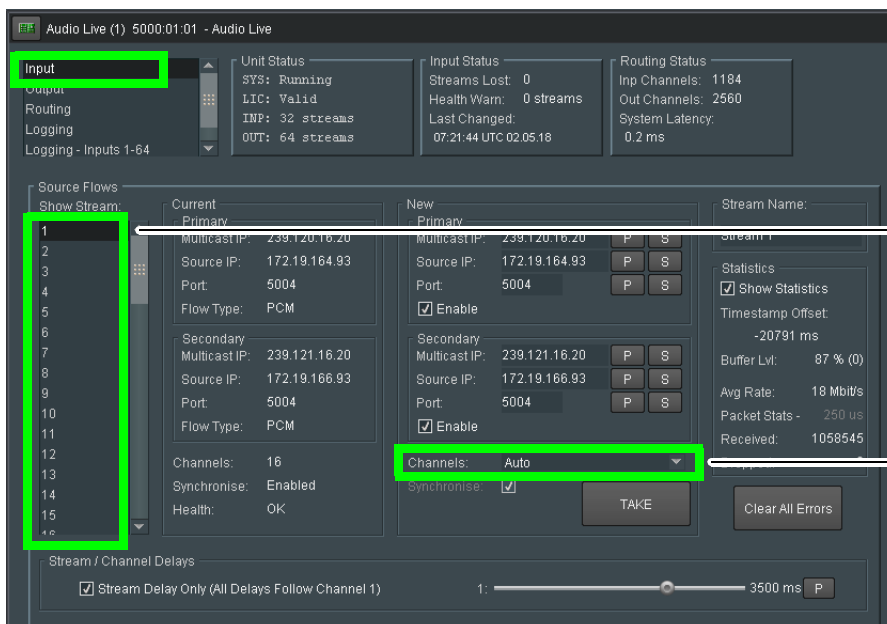

For each available stream, you must...

Set the number of channels to the maximum available in this dropdown. **Note:** the default **Auto** setting will not work.

Setting the maximum number of channels is necessary as GV Orbit Control expects that all channels be available for it to use at any time.

5 Click **Take**.

6 In GV Orbit Client under **Audio Live > Output> Dest Flows**:

- Set the **Channels** parameter to the maximum number of channels available for *each stream*. This setting is found under **Audio Live > Output> Dest Flows**.
- Set the **Packet Time** parameter according to the number of channels configured for *each stream*. See table below. This setting is found under **Audio Live > Output> Dest Flows**.

<b>Packet Time</b>	<b>Maximum number of channels that the stream can carry</b>
125us	up to 64 channels
250us	up to 32 channels
500us	up to 16 channels
1 ms	up to 8 channels
4 ms	up to 2 channels

7 Click **Take**.

#### **Logical Levels that specifically support Audio Live**

To support Audio Live's ability to support a range of audio channels per AES stream, the following logical levels are used according to the number of channels in the AES stream.

See also [Logical Level Editor Tasks](#), on page 30 and [Setting the Logical Levels to be Displayed in the Multilevel Table](#), on page 84.



Logical Level	Description
AES67-4	4 mono audio channels
AES67-8	8 mono audio channels
AES67-16	16 mono audio channels This logical level is interchangeable with the <b>SDI audio</b> logical level.
AES67-32	32 mono audio channels
AES67-64	64 mono audio channels

To see the number of audio channels a given logical level supports, see [Editing a Logical Level](#), on page 35.

### Required Configuration for Audio Streams with Different Packet Times

If for a given topology, all audio streams have the same packet time, then the automatically assigned levels to the output spigots will work. If the topology has audio streams with different packet times, you will have to configure the packet times on Audio Live's output spigots. Currently GV Orbit Control is unaware of these settings in GV Orbit Client, so you must proceed as follows: duplicate the SDI audio level as many times as there are different packet times. To duplicate an SDI audio level, see [Duplicating a Logical Level](#), on page 33.

For example, to accommodate a 1 microsecond audio packet time, you duplicate the SDI audio level with the **-1** suffix. To accommodate a 250 microseconds audio packet time, you again duplicate the SDI audio level with the **-250** suffix.

You also need to set the proper AES67 levels on the Audio Live output streams in GV Orbit Control. For example:

- If output spigot 1 has been configured with 16 channels at 250 microseconds, then the streams for output spigot 1 should be assigned the **AES67-16-250** level.
- If the output spigot has been configured with 8 channels at 1 ms, then the streams for that spigot should be assigned the **AES67-8-1** level.

---


**Note:** You will need to set the level on all output streams of the Audio Live configuration in GV Orbit Control if your topology uses more than one packet time value.

---

## Configuring an Audio Live device in GV Orbit Control


### To add an Audio Live device to a topology

- 1 Add the Audio Live device to the Topology: from the **Device Library, Discovered**, find an Audio Live device bubble that you want to control. See [To add a Discovered Device to a Topology](#), on page 47.

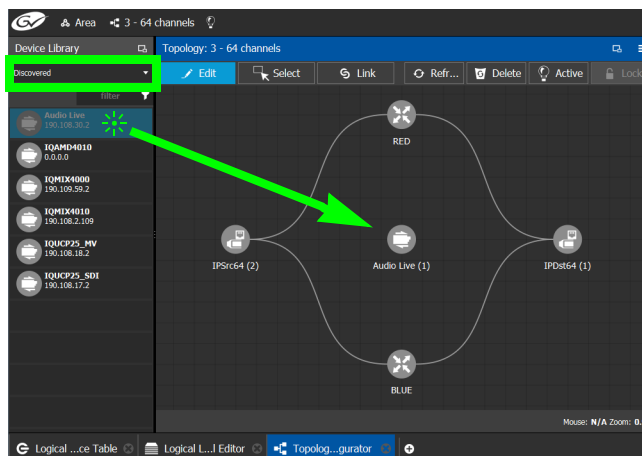

- 2 Click on the name of the device underneath the bubble to name the device or device group. See [To name a device and set the number of devices in the group](#), on page 45.

- 3 On the topology, connect the Audio Live device to the network switches. See [Methods to Link Devices in a Topology](#), on page 58.

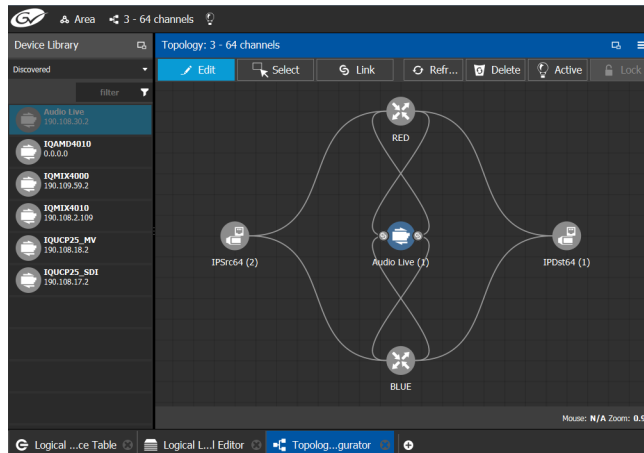

By default, the Audio Live device is created according to the configuration defined in GV Orbit Client. The streams are assigned the appropriate AES67 levels, based on the number of channels. The Audio Live can be used as is, without a need to modify the device properties in the Property Editor, unless you need to modify the streams to use custom levels.

- 4 Create the sources and destinations. See [Automatically Creating AES67 Audio Channels for Sources and Destinations](#), on page 259.
- 5 Test the configuration by making takes between a logical source and destination that use the AES67 audio levels. See [Performing a Take in Router Control](#), on page 281.

## Known Audio Live limitations

- When choosing an Audio Live spigot to use for the take, GV Orbit Control will only use an output spigot that has the same number of channels as the destination, and only use an input spigot that has the same number of channels as the source. If no such spigot is available, the take will fail. It will not try to use multiple spigots (for example, if the source/destination is 16 channels, it will not try to use 2 spigots, each with 8 channels), and it will not try to use part of a spigot (for example, if the source/destination is 8 channels, it would not try to use the first 8 channels of a 16 channel spigot).
- In the Audio Live configuration, the channel count of an **Input Configuration** and **Output Configuration** cannot be set to **Auto** as GV Orbit Control does not support this setting. See [Required Audio Live Configuration in the GV Orbit Client Control Panel](#), on page 252.
- The number of channels on the input stream must match the number of channels on the source stream, and the number of channels on the output stream must match the number of channels on the destination stream.
- For streams that have an AES67-X level, the logical source/destination that is automatically created is not usable. Instead, you must create custom logical sources and destinations, and place the streams in the SDI Audio or audio1 to audio16 level columns instead. See [Required Configuration for Audio Streams with Different Packet Times](#), on page 255.

## Configuring an IQAMD40 Device

### About IQAMD40

The IQAMD40 provides multichannel MADI-to-IP interfacing, and has been developed to allow high-density audio integration into Ethernet IP networks. Using industry standard AES67 encapsulation and an IP interface enables the IQAMD40 to interface directly with many common audio desks and systems.


**PREREQUISITES:** IQAMD40 must be connected to the network, licensed, and has been previously configured with GV Orbit Client.

### IQAMD40 Integration in GV Orbit Control


GV Orbit Control supports the routing of audio signals through an IQAMD40 card.

#### To add an IQAMD device to a topology

- 1 Add the IQAMD device to the Topology: from the **Device Library, Discovered**, find an IQAMD device bubble that you want to control. See [To add a Discovered Device to a Topology](#), on page 47.

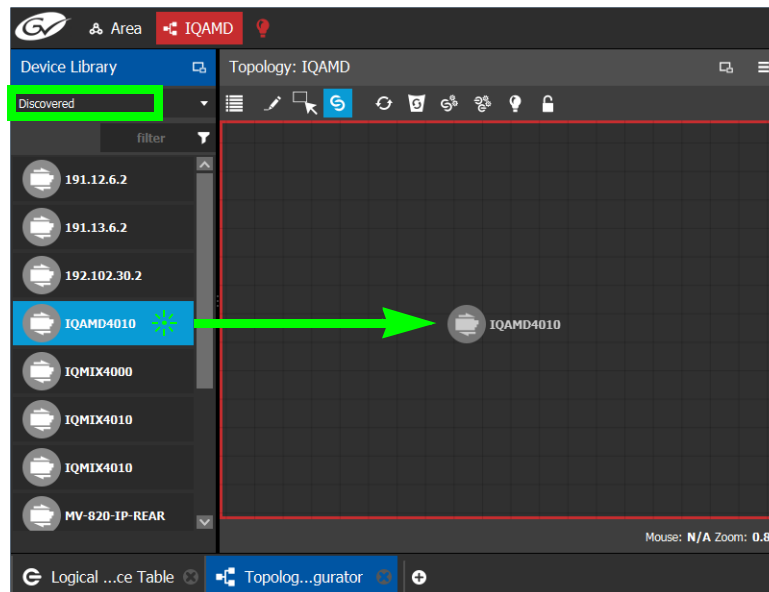

- 2 On the topology, connect the IQAMD device to the network switches. See [Methods to Link Devices in a Topology](#), on page 58.

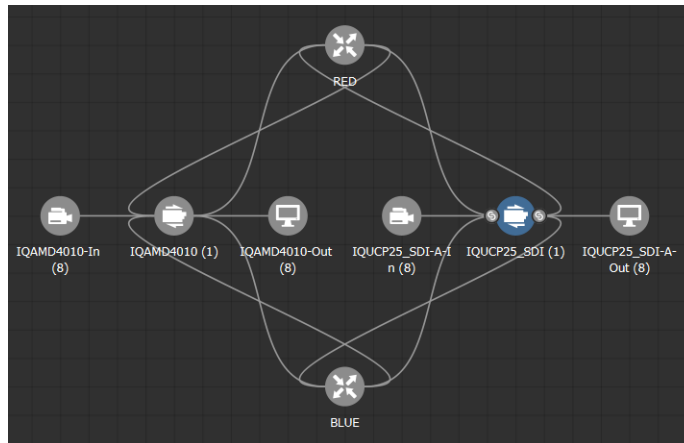


## Automatically Creating AES67 Audio Channels for Sources and Destinations



GV Orbit Control routes multiples of 16 audio channels by default. As a result, if you want to send 64 audio channels to a destination, you create four destinations with 16 audio channels each.


An automation shown in the procedure below allows you to add all the Stream's AES67 audio channels to the Multilevel Table in the Logical Device Table at once for AES67 sources and destinations.


### To automatically create the AES67 audio channels for sources and destinations

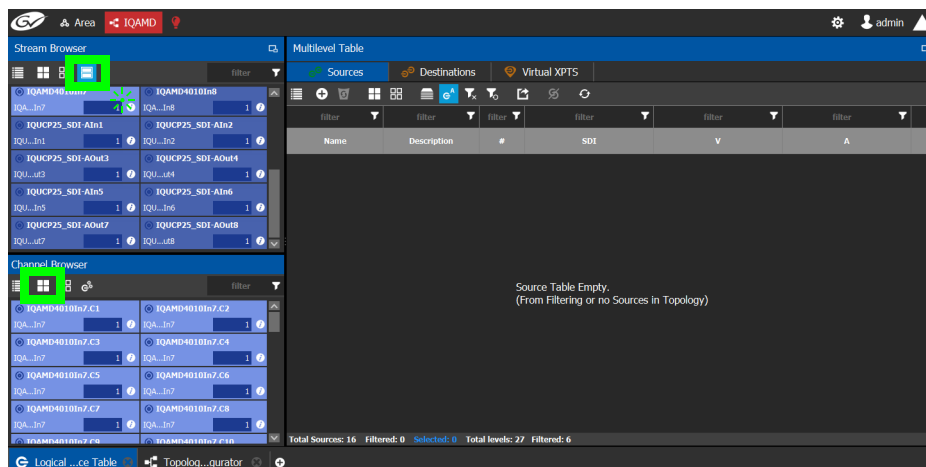- 1 In the Logical Device Table, Multilevel Table, select the **Sources** tab.
- 2 Select one or more streams in the Stream Browser (using <Ctrl> + click) for which you want to create all the source / destination audio channels.



- 3 Click  to show the Channel Browser in the Stream Browser of the Logical Device Table. See [Stream Browser / Channel Browser](#), on page 79.
- 4 Click  to select all in the Channel Browser.

- 5 Click  automated sources / destinations in the Channel Browser to create the selected streams in the multilevel Table.

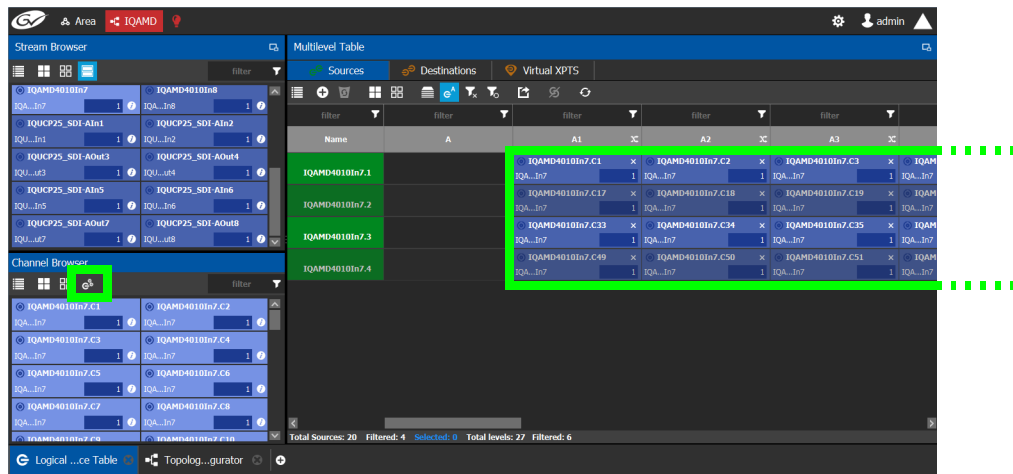

The 64 audio streams are created as four sources / destinations with 16 audio channels each.

- 6 Select the **Destinations** tab and repeat from [step 2](#).
- 7 Test the configuration by making takes between a logical source and destination that use AES67 levels. See [Performing a Take in Router Control](#), on page 281.




# 5

Monitoring Tasks

## Overview

The Monitoring tasks in GV Orbit Control Client are used to view information about tie line use and the source to destination path of the streams and to monitor the health of the GV Orbit Control Controllers and the devices in the selected topology.

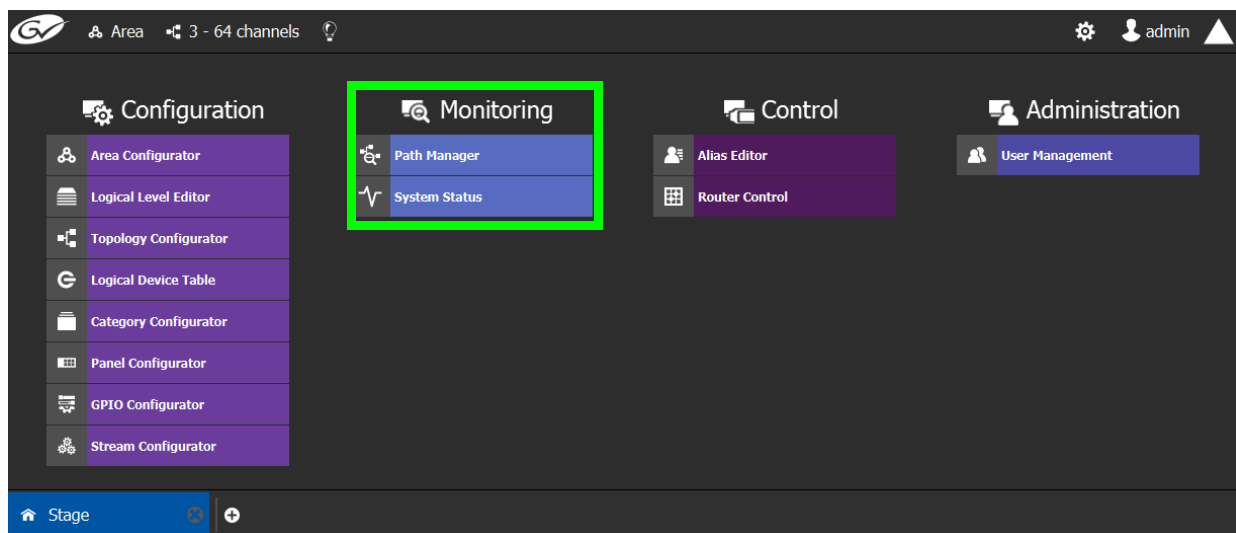

The GV Orbit Control Monitoring Tasks include:


- [Path Manager Tasks](#), on page 262
- [System Status Task](#), on page 269

## Path Manager Tasks


Use the Path Manager task to view information about the tie-line use and the source to destination path of the streams. Tie-lines also show the current percentage of bandwidth used.

When a topology includes a DCNM Network Switch, the Path Manager shows:

- Technical information that can be used to help diagnose network connectivity and path issues (no signal or wrong signal at the destination).
- The overall health status of each Network Switch device.

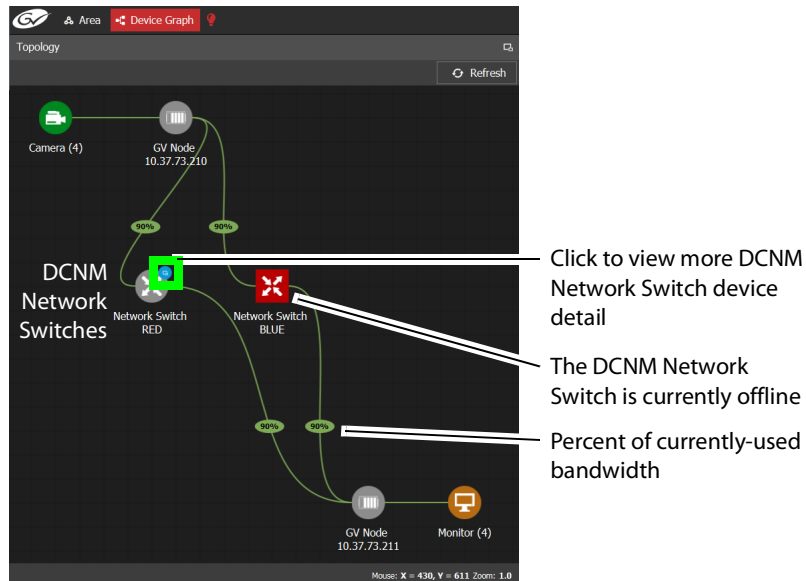

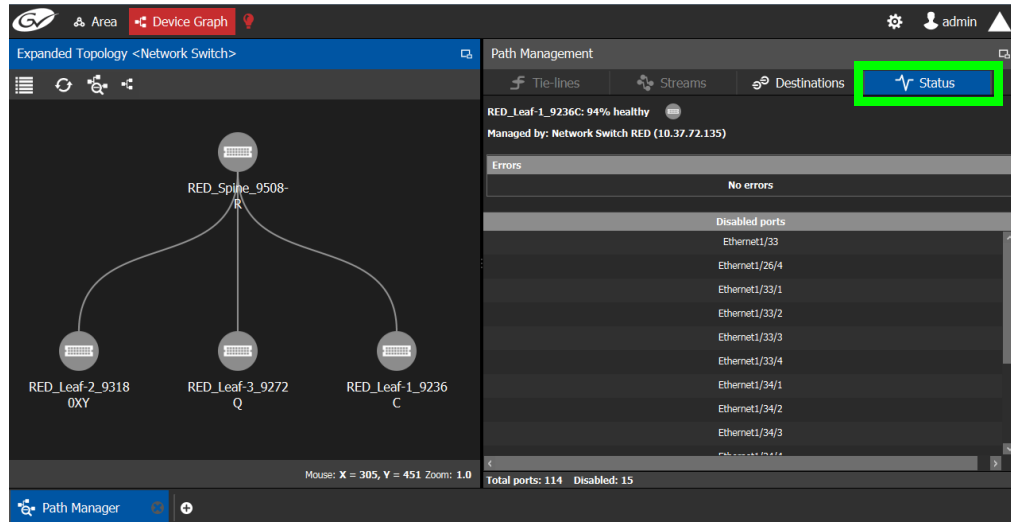

Network Switch devices have a blue bubble that when clicked provides more information about the internal status of the DCNM Network Switch that is shown in the Status tab.



## Interpreting DCNM Network Switch Symbols

The following DCNM network switch symbols are used to represent the Network Switch device's health.


Symbol	Description
	The DCNM network switch device is healthy.
	Connection to the DCNM network switch device is offline. To diagnose: Select this device and select the <b>Status</b> tab to view more technical information that can be used to troubleshoot the issue in the DCNM Web interface (by looking at the host policy / flow policy / flow status).

For a system-level health status, see [System Status Task](#), on page 269.


## Accessing the Path Manager

### To access the Path Manager Task

- 1 Open GV Orbit Control Client Stage. See [Navigating Back to Stage](#), on page 10.
- 2 Select the required Area. See [Selecting an Area](#), on page 23.
- 3 Select the required topology. See [Selecting a Graph](#), on page 24.
- 4 Make the topology active. See [Activating a Topology](#), on page 72.
- 5 Select **Monitoring > Path Manager**.

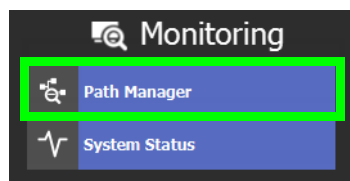

The Path Manager task opens:

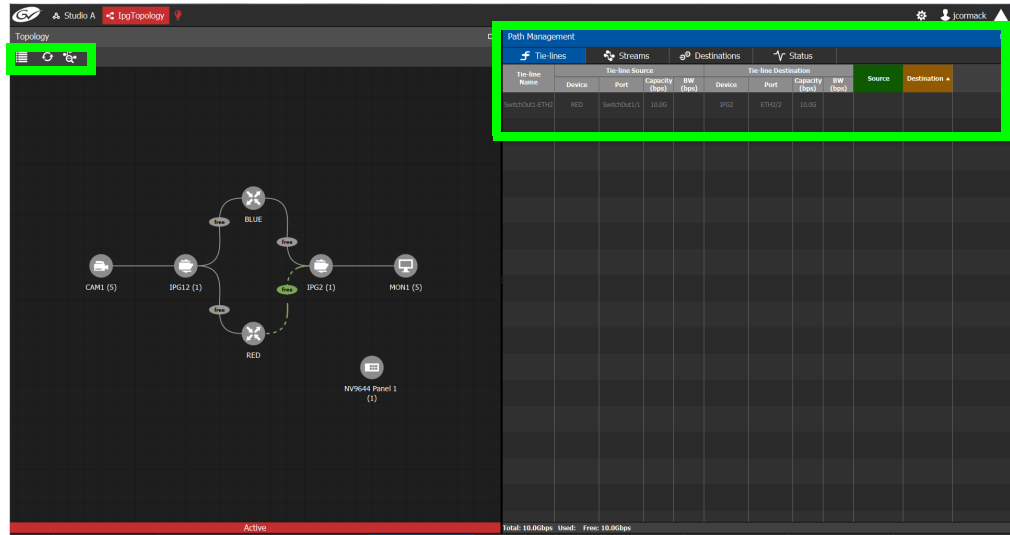

Under Path Management, click any of the following tabs for more information:

- Tie-lines
- Streams
- Destinations
- Status

### Path Manager Topology Menu

The Path Manager Topology menu has the following menu options.


Icon	Description
Refresh	Reloads the Topology's contents. See <a href="#">Refreshing the Topology</a> , on page 42.
Overview	Shows the top level of the topology.
Refresh Tielines	Allows you to recompute the tielines usage based on the current crosspoints in each device, in case the tieline status in the control system has become out-of-sync with what is actually routed. During tieline refresh, all tielines are locked and you can not perform any takes. Only use this feature during off hours as this can take up to 30 seconds to complete.

## Viewing Information about the Tie-lines

To view information about the tie-lines

- 1 Open the Path Manager for the selected topology. See [Accessing the Path Manager](#), on page 263.
- 2 Click Overview if available.  
The tie-lines show their currently-used capacity in percent.

### 3 Select a tie line in the Topology.

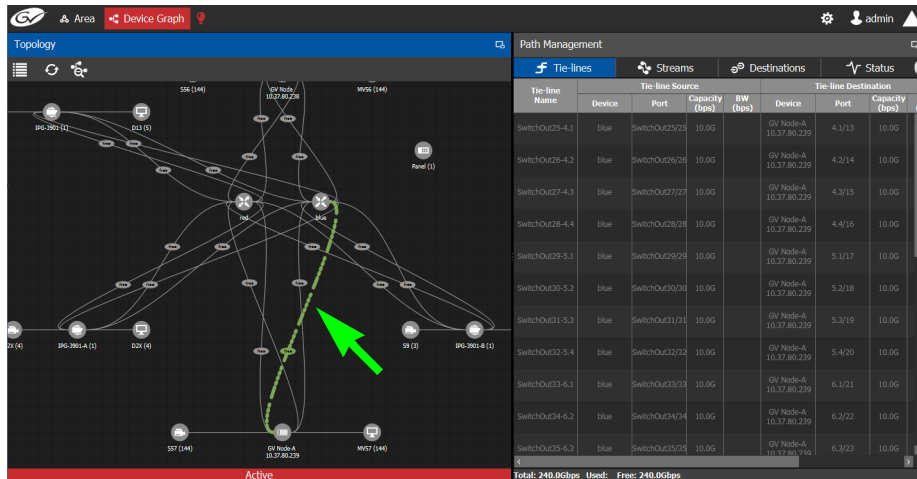


In the **Tie-lines** tab, the source and destination information is displayed under the following headings:

- Tie line Name
- Tie line Source: Device, Port, Capacity (bps), BW (bps)
- Tie line Destination: Device, Port, Capacity (bps), BW (bps)
- Source
- Destination

## Viewing Information about the Streams

To view information about the streams

- 1 Open the Path Manager for the selected topology. See [Accessing the Path Manager](#), on page 263.
- 2 Click Overview  if available.
- 3 Select a tie line in the Topology.
- 4 Select the **Streams** tab.
- 5 In Tie-lines, select a tie-line that you want more information on its streams.

The stream information is displayed under the following headings:

- Stream
- IP address
- BW (bps)
- Source
- Destination


## Viewing Information about the Destinations

This tab shows the path for a signal to a destination. If a destination is showing the wrong signal, use this tab to trace the destination signal back to the source or to start fault-finding.

When a topology includes a GV Fabric / DCNM Network Switch, this tab shows operational status information about the path used by a signal to a destination through the GV Fabric / DCNM Network Switches, GV Node senders and receivers for example. When you select a Network Switch device that is in alarm, more information about the internal status of the GV Fabric / DCNM Network Switch is shown in the Status tab.

### To view information about the destinations


- 1 Open the Path Manager for the selected topology. See [Accessing the Path Manager](#), on page 263.
- 2 Select the **Destinations** tab.

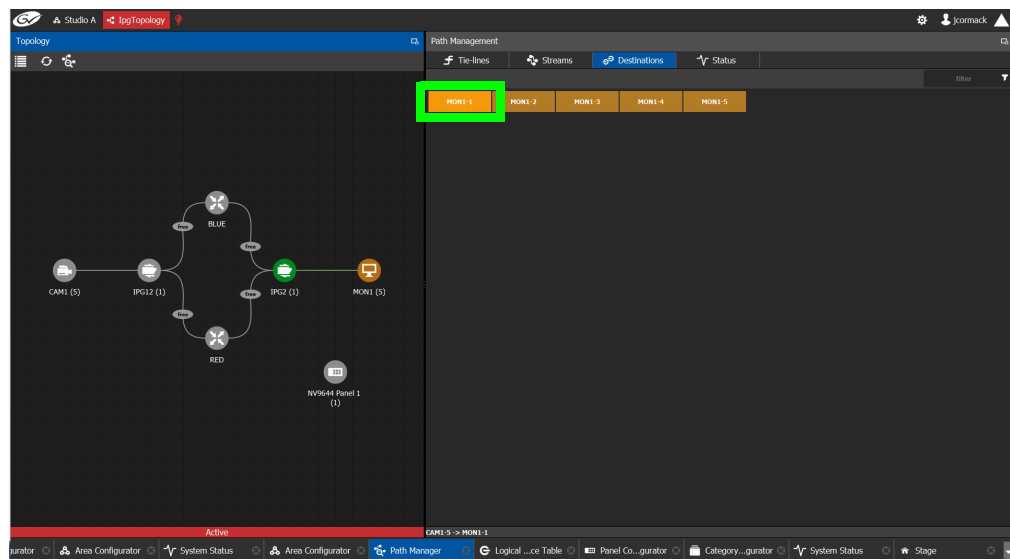

All the destinations are listed on the right.


- 3 Select a destination. The path details to that destination are shown.

If the topology includes a DCNM Network Switch, the path details will include the spine and leaf connections within the DCNM network. This can be used to diagnose issues with the DCNM network switch or any other signal path issue. For example, the figure below shows that the RED network is in alarm and as such no signal is passing through this part of the switch's fabric.

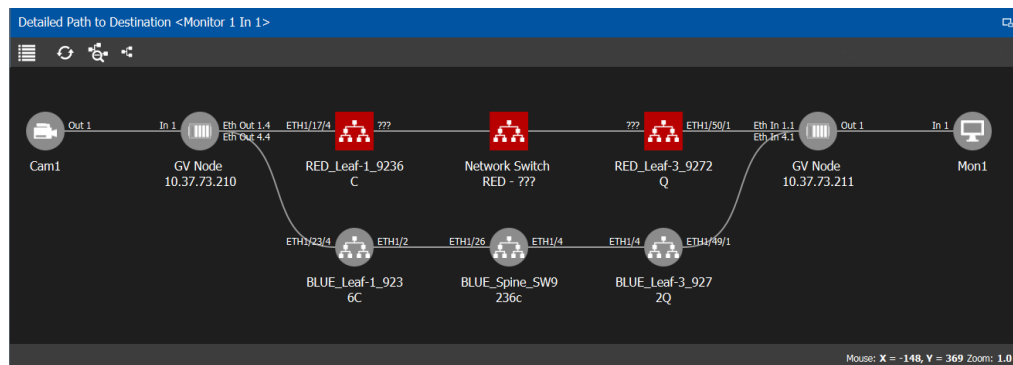


To know more about the DCNM Network switch symbols that are used for health monitoring, see [Interpreting DCNM Network Switch Symbols](#), on page 263

- 4 If a DCNM network switch is in alarm, select it and more specific diagnostic information for the related flow shown under the **Path Management, Status** tab.

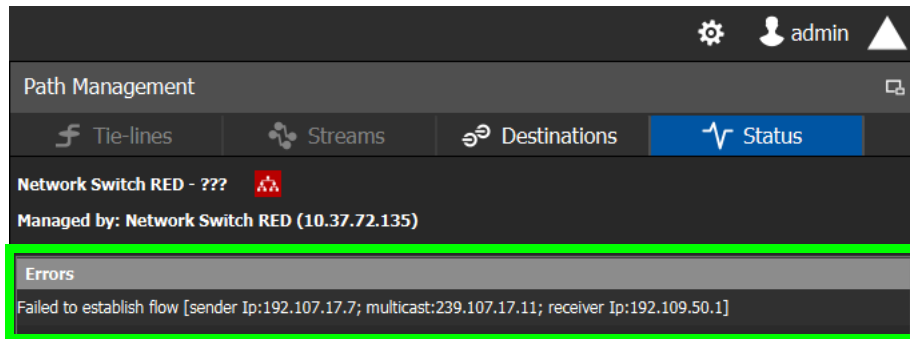

Use this information to diagnose path issues, for example, through the switch's or GV Node's native configuration interface.

- 5 Click **Overview**  to view a highlighted path between the source, shown in green, and the destination, shown in brown.


## Viewing Information about the Status


When a topology includes a DCNM Network Switch, this tab shows more technical information about the DCNM Network Switches such as the Network Switch device's operational status that can be used to diagnose the issue in the path issue, for example, through the switch's or GV Node's native configuration interface.


### To view information about the status

- 1 Open the Path Manager for the selected topology. See [Accessing the Path Manager](#), on page 263.
- 2 Select the **Status** tab.

The flow status of the DCNM Network Switches are displayed, if applicable.

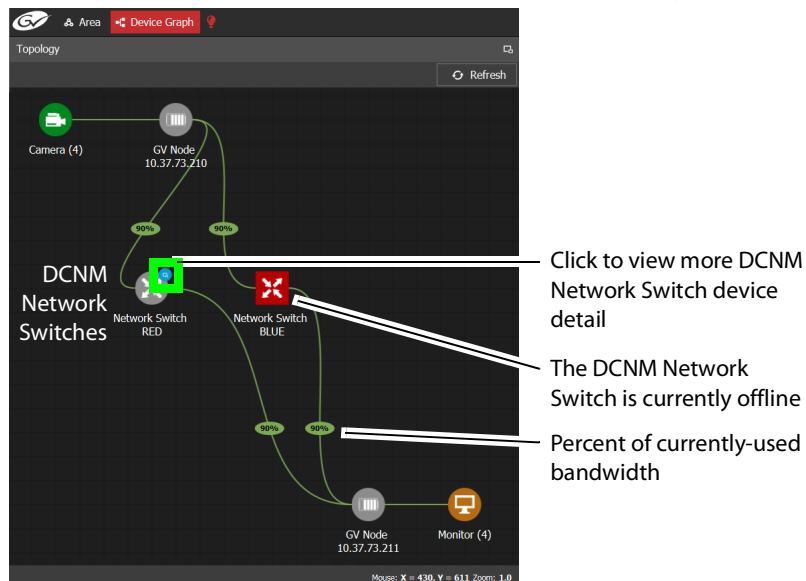

Network Switch devices have a link  that when clicked shows the exploded network switch showing more information about spine and leaves, and the bandwidth capacity for each specific link.

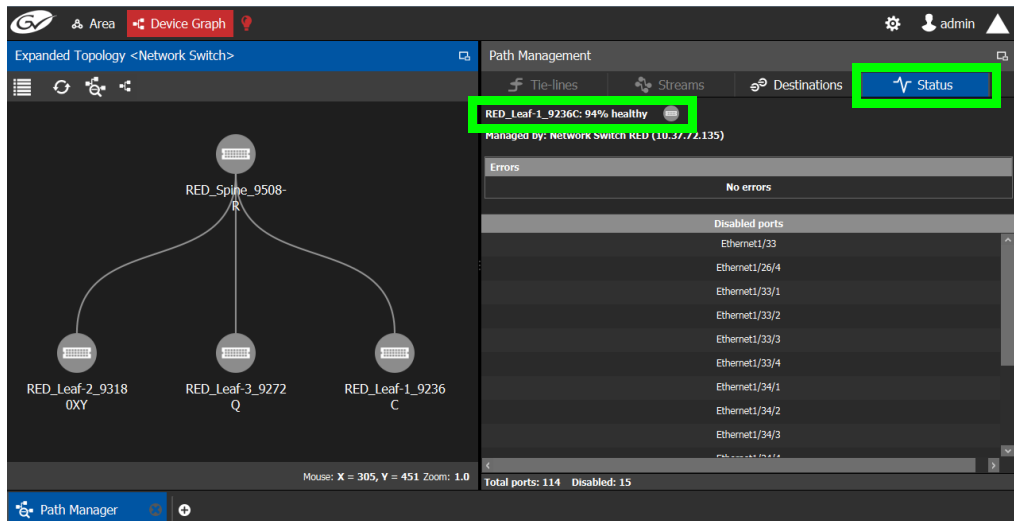

Click each switch to see its health of the switch (as report by the switch itself).

**Disabled Ports** shows a list of all the switch's disconnected or unused ports that are currently disabled by the switch.




## System Status Task

Use the System Status Task to monitor the health of the GV Orbit Control Controllers and the devices in the selected topology. You can also perform a manual failover from this task.

### Accessing the System Status Task

To access the System Status Task

- 1 Open GV Orbit Control Client Stage. See [Navigating Back to Stage](#), on page 10.
- 2 Select the required Area. See [Selecting an Area](#), on page 23.
- 3 Select the required topology. See [Selecting a Graph](#), on page 24.
- 4 Select **Monitoring** > **System Status**.

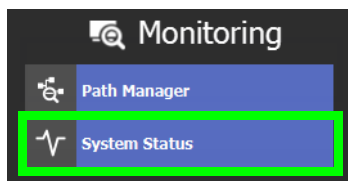

The System Status task opens:

The screenshot shows the 'System Status' task interface. It is divided into two main sections: 'Controllers' and 'Devices'. The 'Controllers' section has a table with columns for 'Parameters', 'Controller 1', and 'Controller 2'. The 'Devices' section has a table with columns for 'Name', 'Controller 1', and 'Controller 2'. The interface shows that Controller 1 is active and Controller 2 is inactive. The 'Devices' section shows various nodes and their status.

Parameters	Controller 1	Controller 2
IP	10.37.72.107	10.37.72.111
Status	Active	Inactive <input type="button" value="Force Active"/>
Health	<div style="width: 100%; height: 10px; background-color: green;"></div>	<div style="width: 100%; height: 10px; background-color: green;"></div>
ID	1	1
CPU	0% <div style="width: 100%; height: 10px; background-color: blue;"></div>	0% <div style="width: 100%; height: 10px; background-color: blue;"></div>
Actual Memory	42% <div style="width: 42%; height: 10px; background-color: blue;"></div>	42% <div style="width: 42%; height: 10px; background-color: blue;"></div>
Reserved Memory	2% <div style="width: 2%; height: 10px; background-color: blue;"></div>	2% <div style="width: 2%; height: 10px; background-color: blue;"></div>
Fan		
Network Interface	eth0 <span style="color: green;">■</span> eth1 <span style="color: green;">■</span>	eth0 <span style="color: green;">■</span> eth1 <span style="color: green;">■</span>
Faults		

Name	Controller 1	Controller 2
BLUE	<span style="background-color: green; color: white;">Active</span>	<span style="background-color: gray; color: white;">Standby</span>
GV Node 10.37.73.210 IFM-2T Gateway	<span style="background-color: green; color: white;">Active</span>	<span style="background-color: gray; color: white;">Standby</span>
GV Node 10.37.73.210 Router	<span style="background-color: green; color: white;">Active</span>	<span style="background-color: gray; color: white;">Standby</span>
GV Node 10.37.73.211 IFM-2T Gateway	<span style="background-color: green; color: white;">Active</span>	<span style="background-color: gray; color: white;">Standby</span>
GV Node 10.37.73.211 Router	<span style="background-color: green; color: white;">Active</span>	<span style="background-color: gray; color: white;">Standby</span>
Network Switch-B	<span style="background-color: gray; color: white;">Unknown</span>	<span style="background-color: gray; color: white;">Unknown</span>
RED	<span style="background-color: green; color: white;">Active</span>	<span style="background-color: gray; color: white;">Standby</span>
	Active : 10.37.72.133 Standby : 10.37.72.134 HA Status : OK	

In this configuration, Controller 1 is the active controller and Controller 2 is not present. The System Status task displays the following information for both GV Orbit Control controllers: **Controller 1** and **Controller 2**. Depending on the server hardware model

and the software applications that are currently installed, certain status parameters shown in the table below will not be displayed.

Parameter	Description
IP	The current controller's IP address.
Status	The current status of GV Orbit Control <b>Controller 1</b> and <b>Controller 2</b> (if equipped): <b>Active:</b> All GV Orbit Control task are being processed by this controller. <b>Inactive:</b> This controller is in hot standby. It is ready to take over from the active controller. <b>Force Active:</b> Make this controller the active controller. See <a href="#">Forcing the Inactive Controller to be the Active Controller</a> , on page 271.
Health	The current controller's health metric: A <b>green bar</b> indicates that the controller's overall health is good.
ID	Identifies the members of a cluster: <b>1:</b> The server that the administrator logged in to when creating the cluster. This is the <i>first</i> server of the cluster. <b>2:</b> The <i>second</i> server that was added by an administrator who was logged in to the first server when creating the cluster.
CPU and Memory	The current GV Orbit Control server's CPU and memory usage show the current level of activity.
Orbit Control Memory	The current GV Orbit Control server's memory usage for the local GV Orbit Control application. I
Densité Memory	The current GV Orbit Control server's memory usage for the local Densité application. The percentage reflects the memory used out of its allocated heap size of 8 GB.
Fans	The current controller's cooling fan health: A <b>green</b> box indicates that the controller's fans are operating correctly.
PSU	<b>Green:</b> the PSU is plugged and detects power. <b>Red:</b> the PSU doesn't detect power. Possibly the power cable is unplugged. <b>Gray</b> or no status: the server doesn't detect correctly the PSU unit because the unit is physically removed or the initialization isn't done. In this second case, shutdown the server, disconnect both power cables, physically remove both power supply units, re-insert them both and apply power to both. Then start the server.
Network Interface	The current controller's Ethernet interface names and health: A <b>green</b> box indicates that the controller's Ethernet interfaces are operating correctly.
Devices	The current status of the devices: <b>Active:</b> This device is in active operation. <b>Standby:</b> This device is in hot standby. It is ready to take over from the active device.
Faults	A list of any current faults.

For more information about the health status of a DCNM Network Switch device, see [Path Manager Tasks](#), on page 262.


## Forcing the Inactive Controller to be the Active Controller

If two controllers are configured in a redundant configuration, then during the normal course of operations, one controller is active and the other is inactive at all times.

If a problem occurs, such as network loss or connectivity issues, the inactive controller (Controller 2) becomes the active controller. The controller that was formerly active (Controller 1) reboots. This is an automatic failover. You can perform a manual failover if you have administrator rights in the selected Area. See [Viewing Permissions by Role](#), on page 294.

### To perform a manual failover

- 1 Open the System Status task for the required topology. See [Accessing the System Status Task](#), on page 269.

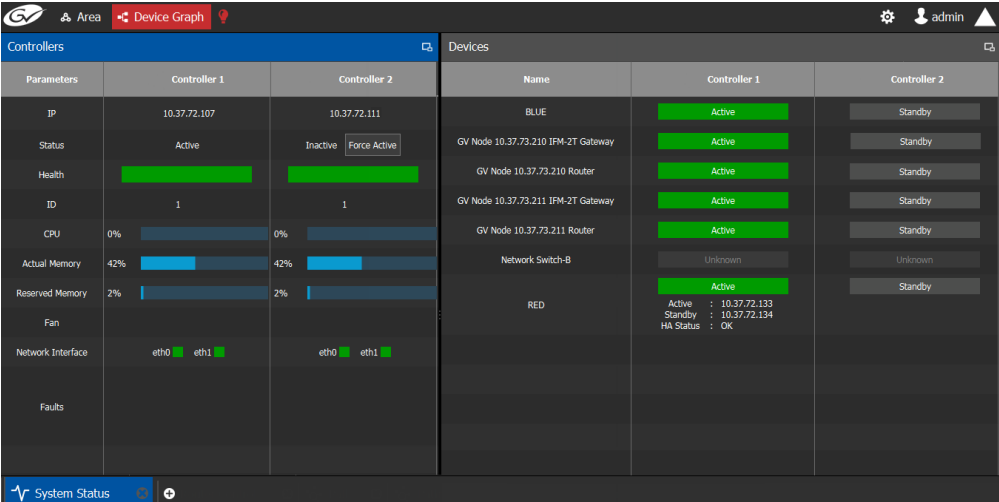


Parameters	Controller 1	Controller 2
IP	10.37.72.107	10.37.72.111
Status	Active	Inactive <b>Force Active</b>
Health	<span style="color: green;">█</span>	<span style="color: green;">█</span>
ID	1	1
CPU	0%	0%
Actual Memory	42%	42%
Reserved Memory	2%	2%
Fan	<span style="color: green;">█</span>	<span style="color: green;">█</span>
Network Interface	eth0 <span style="color: green;">█</span> eth1 <span style="color: green;">█</span>	eth0 <span style="color: green;">█</span> eth1 <span style="color: green;">█</span>
Faults		


Name	Controller 1	Controller 2
BLUE	<span style="color: green;">█</span> Active	<span style="color: gray;">█</span> Standby
GV Node 10.37.73.210 IFM-2T Gateway	<span style="color: green;">█</span> Active	<span style="color: gray;">█</span> Standby
GV Node 10.37.73.210 Router	<span style="color: green;">█</span> Active	<span style="color: gray;">█</span> Standby
GV Node 10.37.73.211 IFM-2T Gateway	<span style="color: green;">█</span> Active	<span style="color: gray;">█</span> Standby
GV Node 10.37.73.211 Router	<span style="color: green;">█</span> Active	<span style="color: gray;">█</span> Standby
Network Switch-B	<span style="color: gray;">█</span> Unknown	<span style="color: gray;">█</span> Unknown
RED	<span style="color: green;">█</span> Active	<span style="color: gray;">█</span> Standby

- 2 Click the **Force Active** button for the Inactive Controller. A confirmation message appears.

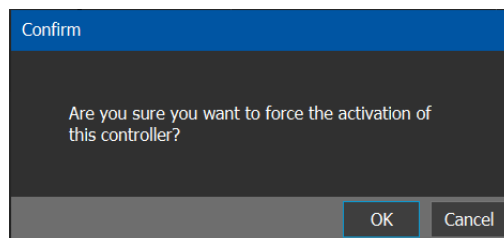


- 3 Click **OK** to continue.

The controllers switch states. The formerly inactive controller (Controller 2) becomes active. The formerly active controller (Controller 1) reboots. As it shuts down, the following changes occur and are reflected on the System Status task.

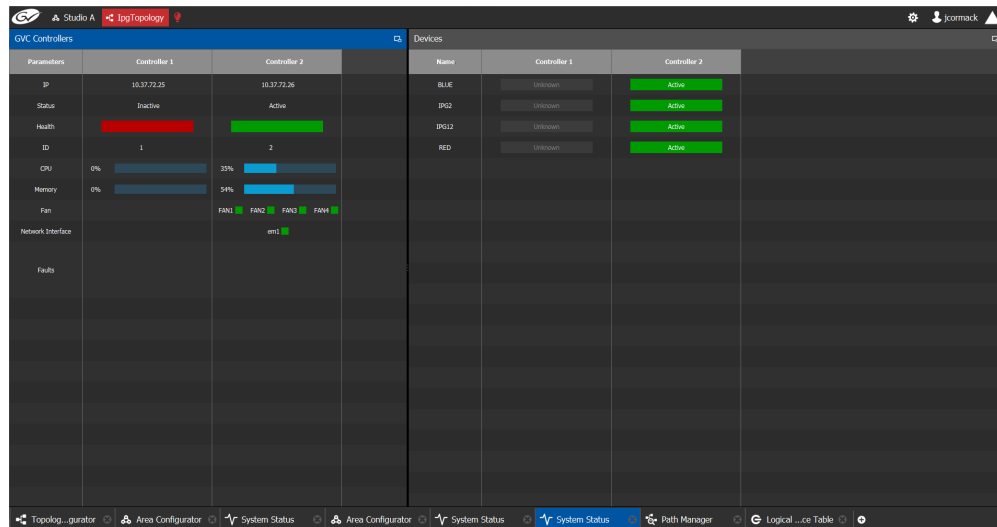


- The **Status** of the **Controller 1** is now **Inactive**.
- A **red bar** is displayed for the **Health** of Controller 1, indicating it is not good.
- The **CPU** and **Memory** are at **0%**.
- The **Fans** and **Network Interface** are blank.
- The **Status** of the **Controller 2** is now **Active**.
- A **green bar** is displayed for the **Health** of Controller 2, indicating it is good.
- The **CPU** and **Memory** fields show their level of activity.
- The **Fans** are green, indicating health.
- The **Network Interface** displays the Management Interface port name (em1).
- The status of all **devices** controlled by **Controller 1** is **unknown**.
- The status of all **devices** controlled by **Controller 2** is **active**.


When Controller 1 comes back, the following changes occur and are reflected in the interface.

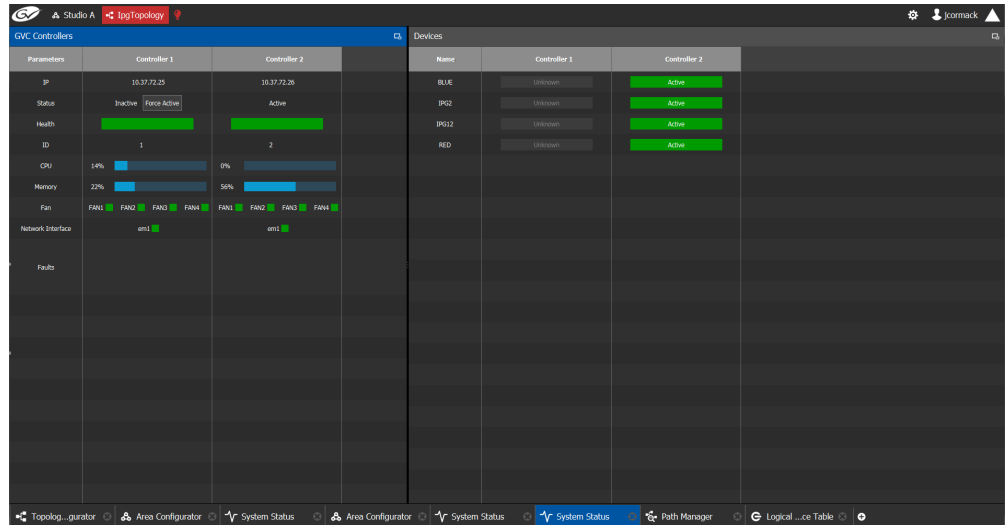

- The **status** of **Controller 1** is now **Inactive**.
- The **health** field for Controller 1 displays a **green bar** indicating it is good.
- The **CPU** and **Memory** fields for both controllers show the current level of activity.
- The **fans** for both controllers show **green** boxes indicating health.
- The **Network Interface** port of both controllers is displayed, **em1**.
- The **status** of the devices on **Controller 1** is **unknown**.
- The **status** of the devices on **Controller 2** is **active**.

Finally, when Controller 1 is fully rebooted, the following changes occur:

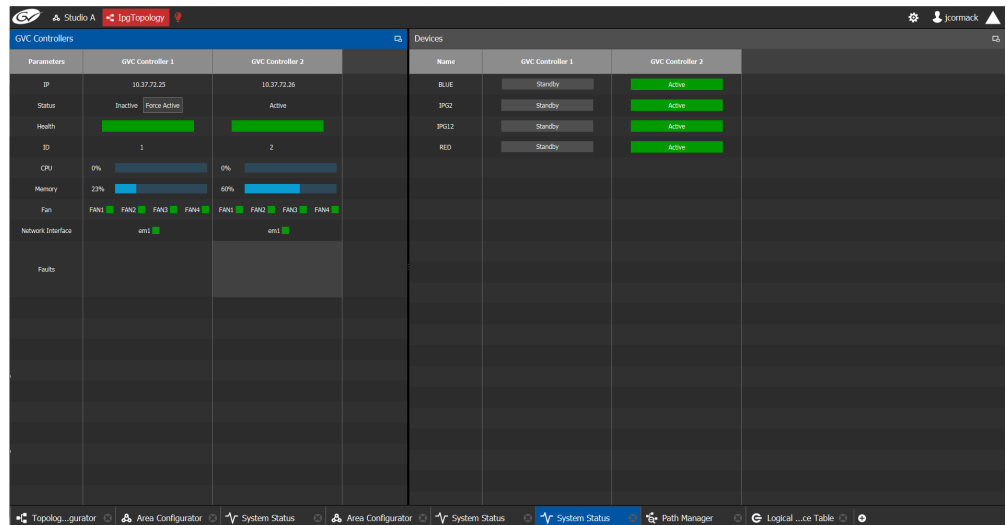

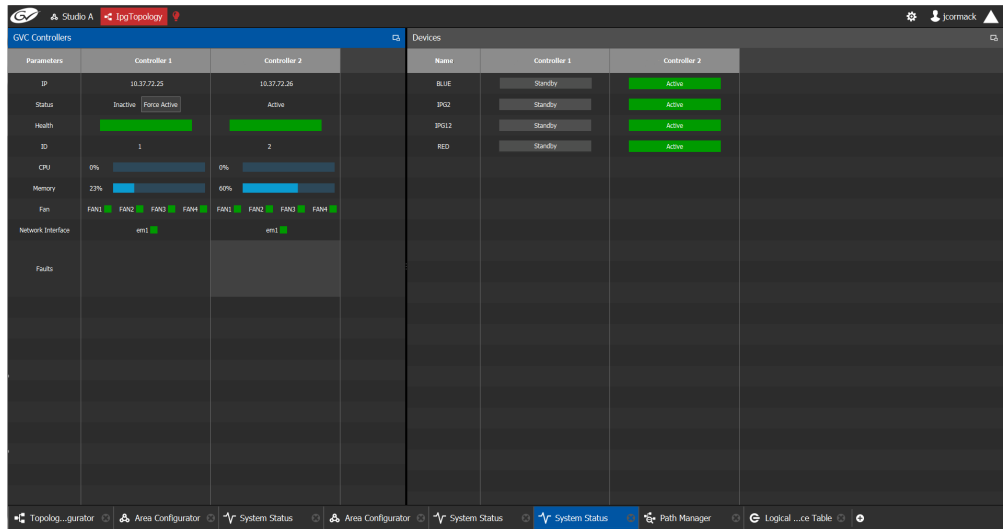


- The **status** of the devices on **Controller 1** is **standby**.

## Permissions

Only users who are assigned to Administrators role in the selected area have View, Edit, and Delete permissions in the System Status task. Users who are assigned to Engineers, Operators, and Maintenance roles have view rights only. See [Viewing Permissions by Role](#), on page 294.

# 6 Control Tasks

## Overview

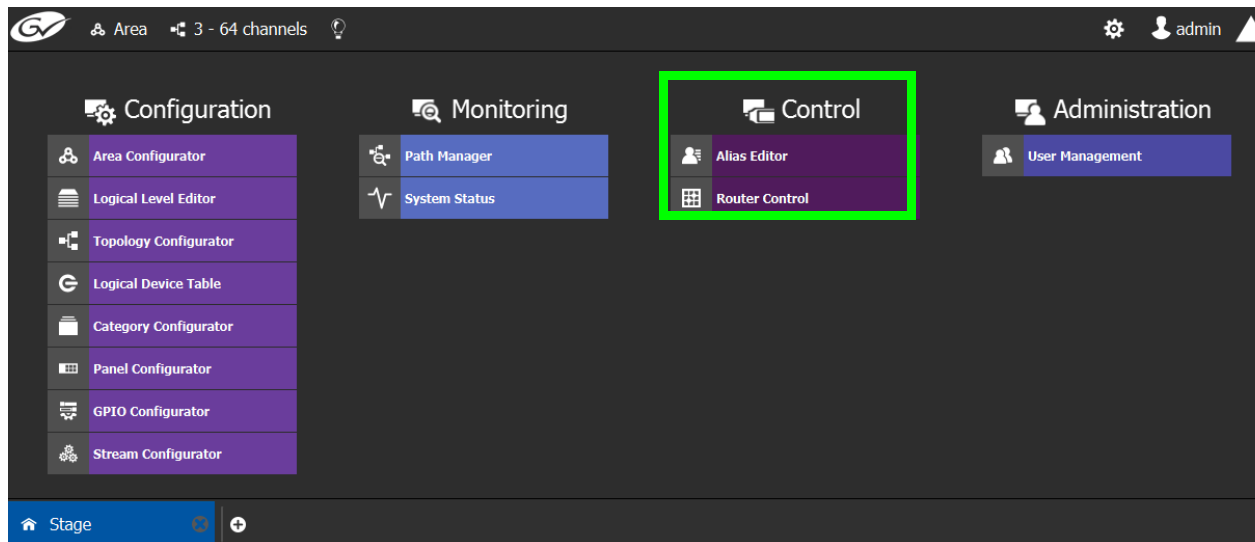

The GV Orbit Control Control Tasks include:

- [Alias Editor Tasks](#), on page 276
- [Router Control Tasks](#), on page 280


## Alias Editor Tasks

Use the Alias Editor to assign aliases to sources and destinations. More than one set of aliases can be created to allow the source / destination naming conventions to be changed on the fly, for example, to change the interface for different programs or production staff, or to support another language(s).


### Accessing Alias Editor Tasks

#### To access the Alias Editor

- 1 Open GV Orbit Control Stage. See [Navigating Back to Stage](#), on page 10.
- 2 Select the required Area. See [Selecting an Area](#), on page 23.
- 3 Select the required topology. See [Selecting a Graph](#), on page 24.
- 4 Select **Control** > **Alias Editor**.

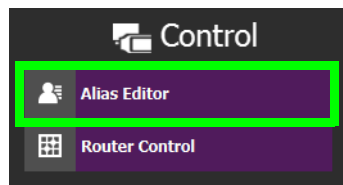



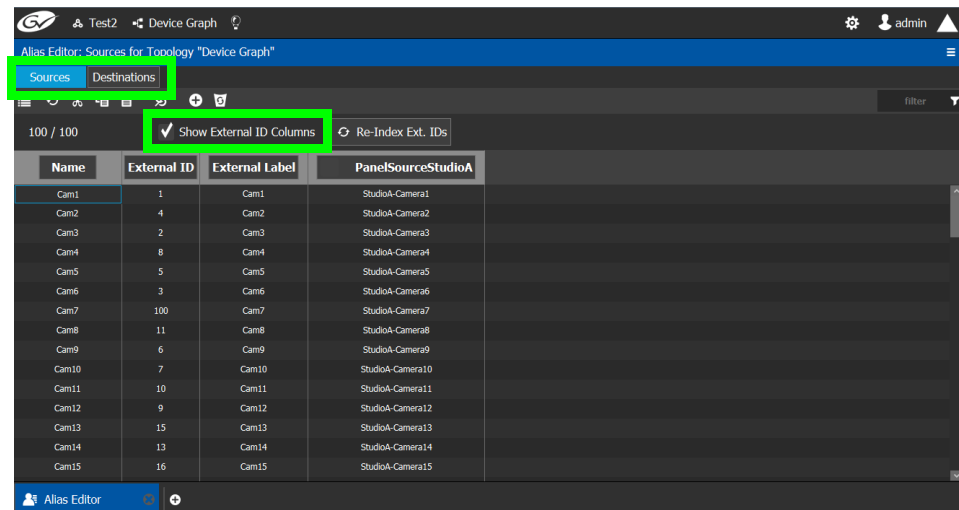

The Alias Editor task opens.






The Alias Editor has tabs for Source and Destination IDs.

### Alias Editor Menu

The Alias Editor menu has the following menu options.

Icon	Description
 Refresh	Reloads the Alias Editor's contents.
 Cut	Cuts the selected contents from an alias column.
 Copy	Copies the selected contents from an alias column.
 Paste	Pastes the clipboard contents to the alias column.



Icon	Description
 Restore default label	When a selected alias has been renamed, this resets the name to its original label.
 New	Adds an alias column. See <a href="#">Adding Aliases</a> , on page 277.
 Delete	Removes the selected alias column.

## About External IDs and Northbound Control Interfaces

External IDs are shown by setting **Show External ID Columns**. External IDs are used for Northbound control interfaces that use ID-based protocols.

Certain control protocols require that the numbering of external IDs must be contiguous. In this case, if they are not sequential, click **Re-Index Ext. IDs**.

External IDs that are larger than the total number of sources or destinations will not status northbound.

GV Orbit Control must have status for all destinations within GV Orbit Control or they will not report northbound for that external ID. For example, if a take has never been made to a destination, that destination will not have its status set. This behavior is different from a physical router where all destinations have a status set by default.

## Adding Aliases


These aliases can be used in router control to change the name of sources and destinations from short labels to the labels of the corresponding alias. The alias can be composed of up to 24 characters to create a more descriptive name than its equivalent short label. Aliases can also be used with panels; see [Creating a New Panel](#), on page 114. See also [Using Source and Destination Aliases with a Panel](#), on page 123.

Once an alias column has been added, you can also copy/paste a list of values from an Microsoft Excel spreadsheet column into the alias column to bulk name the sources and destinations.

Aliases created here can be selected in GV Orbit Control's user interface where sources and destinations are used with the **Select Alias** option. For example, in the Category Configurator; see [Category Configurator Tasks](#), on page 106.

### To Add Aliases

- 1 Open the Alias Editor. See [Accessing Alias Editor Tasks](#), on page 276.  
The Alias Editor task opens.

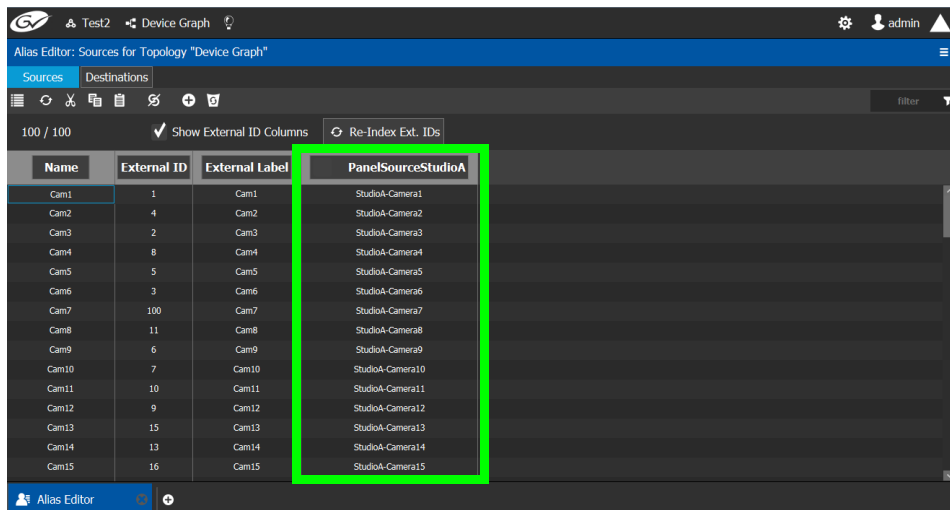

The Alias Editor has tabs for Source and Destination IDs.

- 2 Select **Show External ID Columns** columns if necessary.

The aliases are now available to be used with router control and panels. If aliases are used with a panel and they are longer than 8 characters, consider setting the **Display 24 characters** option for the panel in the Panel's **Property Editor**. See [Creating a New Panel](#), on page 114. The alias to be used in the Category Configurator can be selected; see [Sources & Destinations Menu](#), on page 107.


## Renaming Source and Destination Labels

Source and destination labels can be renamed. You can also copy/paste a list of values from an Microsoft Excel spreadsheet column into the **Name** or **Alias** columns to bulk rename the sources and destinations. Or you can copy the content of one column and paste it into another column.

### To rename Source and Destination Labels

- 1 Open the Alias Editor. See [Accessing Alias Editor Tasks](#), on page 276.

The Alias Editor task opens.

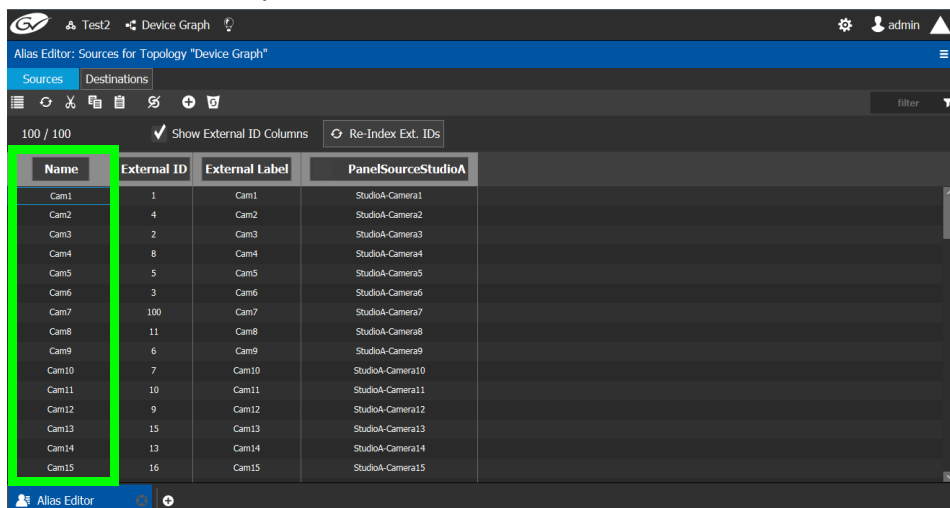

The Alias Editor has tabs for Source and Destination IDs.

- 2 Rename the source or destination by slow clicking it twice. Or paste a list of names from an Microsoft Excel spreadsheet column into the **Name** or Alias column to bulk rename them.

Source and Destination labels in the Alias Editor may be shown as grayed out and they cannot be edited. These devices' configuration properties come from GV Orbit Client. See [Synchronization of Discovered GVOP Devices, Source, Destination, and Spigot Names made in GV Orbit Client](#), on page 49.


## Router Control Tasks

Use the Router Control task to control the sources and destination in an active topology.


### Accessing the Router Control Task

To access the Router Control task

- 1 Open GV Orbit Control Stage. See [Navigating Back to Stage](#), on page 10.
- 2 Select the required Area. See [Selecting an Area](#), on page 23.
- 3 Select the required topology. See [Selecting a Graph](#), on page 24.
- 4 Select **Control > Router Control**.

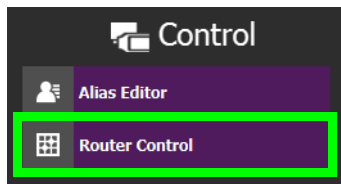

The Router Control task opens

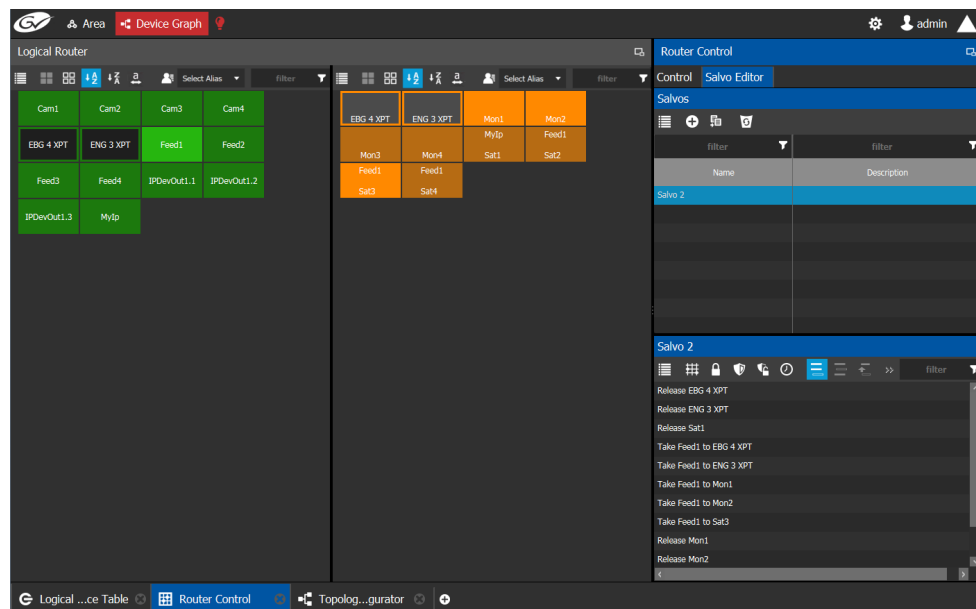





The sources are listed on the left under Logical Router. The destinations are listed in the center. The right hand column displays the actions you can perform.

### Router Control Menu

The Router Control menu has the following menu options.


Icon	Description	
	Select All	Selects all source or destination items.
	Clear All	Deselects all source or destination items.
	Sort Ascending	Sort the source or destination items in alphabetical order from A to Z.

Icon	Description
 Sort Descending	Sort the source or destination items in alphabetical order from Z to A.
 Use Wide Widgets	Doubles the source or destination display width to accommodate longer labels. This option setting is remembered for the currently logged in user on the current client PC.
 Select Alias	Select the Alias you want to use to identify Source and Destination streams in GV Orbit Control's interface.   Aliases are created in the Alias Editor. See <a href="#">Adding Aliases</a> , on page 277.

## Performing a Take in Router Control

You can perform a take in Router Control as follows.

- 1 Under **Logical Router**, select a source, shown in green.
- 2 Select a destination, shown in brown.
- 3 Under **Router Control**, **Control** tab, click **Take**.

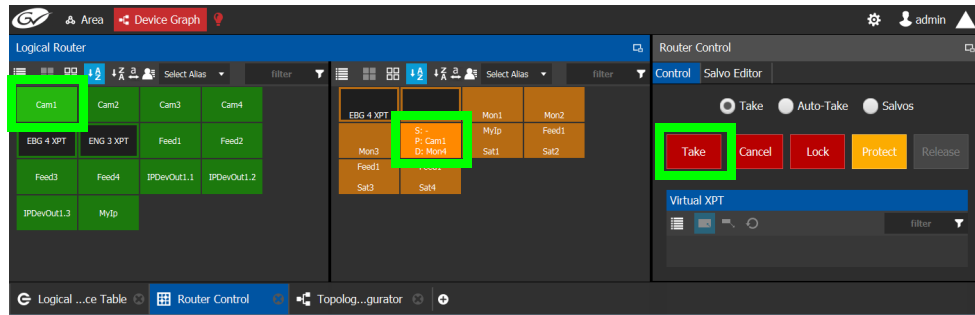

Parameter	Description
Take / Auto-Take / Salvos radio buttons	Sets the router control mode: <ul style="list-style-type: none"> <li><b>Take:</b> Once the source and destination has been selected, you then click <b>Take</b> to make the take.</li> <li><b>Auto-Take:</b> Once the source and destination has been selected, the take is automatically made.</li> <li><b>Salvos:</b> Trigger previously-configured salvos. See also <a href="#">Creating Salvos</a>, on page 284.</li> </ul>
Take button	Makes the connection between the currently selected source and destination. In salvo mode, it triggers the selected salvo.
Cancel button	Cancels the current selection.
Lock button	Will lock the current destination to not allow the source to be changed by any user. High Tally when enabled on selected destination. See also <a href="#">About Lock, Protect, and Release</a> , on page 282.
Protect button	Will protect the current destination to not allow the source to be changed by a user other than the current user. High Tally when enabled on selected destination.
Release button	Releases lock or protect on the selected destination.
Virtual XPT > Minimize Virtual XPT <sup>a</sup>	To minimize the destinations within the selected virtual XPT <sup>b</sup> .
Virtual XPT > Expand Virtual XPT <sup>a</sup>	To show all the destinations within the selected virtual XPT, including the nested destinations of all other virtual XPTs <sup>b</sup> .
Virtual XPT > Reset XPT <sup>a</sup>	Initialize the selected virtual XPT. This will route the appropriate virtual source to the logical destinations that were configured for the virtual XPT in the logical device table.

a. This becomes available when virtual XPTs have been previously configured (see [Configuring Virtual Crosspoints \(XPTs\)](#), on page 95). You must select a destination that is part of a virtual destination in the router control grid or select a virtual destination in the router control grid.

b. See [Minimize and Expand Virtual XPT Destinations](#), on page 102 for more information.

### About Lock, Protect, and Release

The following topics provide a detailed look at how GV Orbit Control manages Lock, Protect, and Release.

#### LIMITATIONS:

- iControl matrices do not support protect.

- Lock and protect currently affects all levels of the destination and does not consider individual levels. Locking one level locks all destination levels and the control system does not currently support specific lock levels.

### Ability to Override a Lock or Protect according to User Rights

When logged in to GV Orbit Control, the permissions assigned to your user profile determine whether you can override a Lock or Protect made by other users. For example, when a user has *admin* or *Operator* rights, the user can override any lock or protection made by:

- Any other user. See [Viewing Permissions by Role](#), on page 294.
- A third-party control system that uses NP0017 to control GV Orbit Control.
- A third-party control system that placed a lock on a device which is also controlled by GV Orbit Control and for which *in router lock and protect* is enabled. See [About In router Lock/Protect enabled for a Router using NP0016 router control protocol](#), on page 247.
- A panel used to set a lock.

Otherwise, without *admin* or *Operator* rights, you will not be able to override a Lock or Protect set by other users.

See [Administration Tasks](#), on page 287 for more information about how to create users and how to set a user's permissions to allow or deny them from overriding a Lock or Protect set by another user. The following user permissions control the ability to override a Lock or Protect.

- Force Unlock
- Force Unprotect

For example, the admin user has the user permissions for both Force Unlock and Force Unprotect. Therefore, an admin user can override any other user who has set a Lock or Protect on a destination.

### Using a Panel to Override a Lock or Protect

If a configured panel in GV Orbit Control is used, a user must be assigned to it. Assign a user to a panel through the **Panel User** parameter (see [Adding the New Panel to the Topology](#), on page 129). It is the user rights that are associated to the user selected in the **Panel User** parameter that determines the panel's priority to override a lock or protect made by another panel user. This can be used to prevent other users from being able to remove a lock. When the **Panel User** parameter is set to a user that has *admin* or *Operator* rights, the panel can be used to override any lock or protection made by:

- Any other user. See [Viewing Permissions by Role](#), on page 294.
- A third-party control system that uses NP0017 to control GV Orbit Control.
- A third-party control system that placed a lock on a device which is also controlled by GV Orbit Control and for which *in router lock and protect* is enabled. See [About In router Lock/Protect enabled for a Router using NP0016 router control protocol](#), on page 247.
- Another panel used to set a lock.

### Identifying the User who has Locked a Destination

To see who has locked a destination, try to make a take to the destination in the *Router Control* task. See [Router Control Tasks](#), on page 280. The user locking / protecting the destination is then shown in the lower left corner. If the user is *admin*, then this could be the result of a third-party control system having locked or protected a destination in the router.



### How is Lock, Protect, and Release Implemented?

The router protocol and the GV Orbit Control's router control port configuration can affect how the Lock, Protect, and Release are implemented. For a further explanation, refer to the router protocol you are using.


Router Control Protocol	See
NP0016 Compact Router	<a href="#">About In router Lock/Protect enabled for a Router using NP0016 router control protocol</a> , on page 247
NP0016 Enterprise Router	
NV9000 TCP/IP (NP0017 southbound)	<a href="#">Lock, Protect, and Release with the NV9000 Control Port</a> , on page 249
NP0016 Enterprise Router	<a href="#">Lock, Protect, and Release with the NP0016 / NS-Bus / SAM SW-P-08 Control Ports</a> , on page 284
NS-BUS	
SAM SW-P-08 TCP/IP	

### Lock, Protect, and Release with the NP0016 / NS-Bus / SAM SW-P-08 Control Ports


GV Orbit Control stores the locks in its database and they are preserved after a restart/reboot. As such, destinations will remain locked/protected. GV Orbit Control system does not read a lock from a router and does not control a lock in the router.

## Creating Salvos




When a salvo is triggered, it executes a list of pre-configured actions. You can create a salvo as follows.

- 1 Under **Router Control**, **Salvo Editor** tab, click **New** .
- 2 Enter a name and description for the salvo in the **Salvos** list.

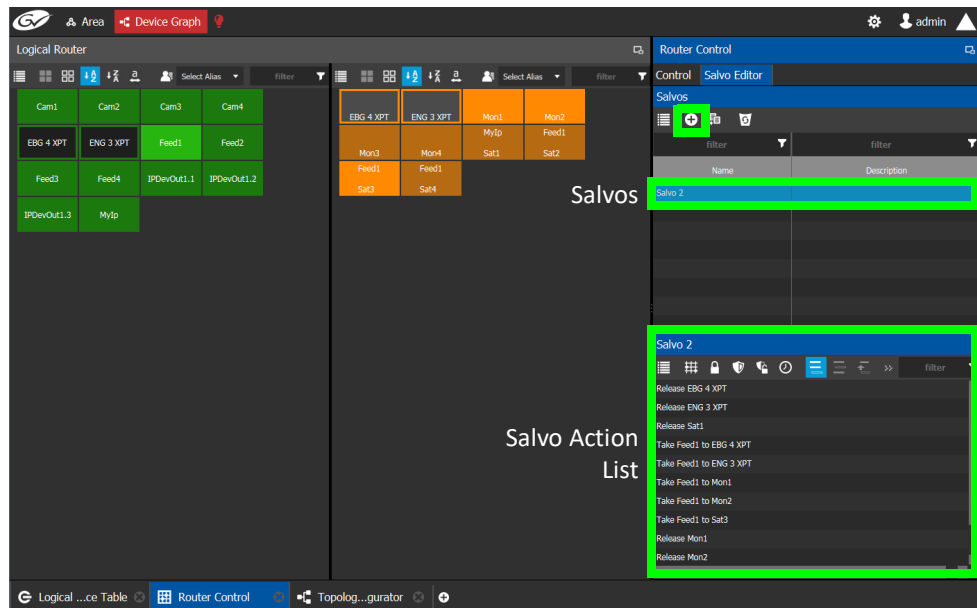



Icon	Description
	New Create a new salvo and associated salvo action list.
	Duplicate Make a copy of the currently-selected salvo.
	Delete Remove the currently-selected salvo / take.
	Take Add the currently-selected source and destination as a take action to the salvo list. The following functional behaviors are by design: <ul style="list-style-type: none"> <li>• If multiple destinations are selected, then there will be multiple take actions added to the salvo list.</li> <li>• If there is only one source and multiple destinations selected, then that source is routed to all destinations.</li> <li>• If multiple sources are selected (for example, Source1, Source2, Source3) and multiple destinations are selected (for example, Destination1, Destination2, Destination3, and Destination4), then the takes added to the salvo list are Source1 to Destination1, Source2 to Destination2, Source3 to Destination3.</li> </ul>
	Lock Lock the currently selected destination. See also <a href="#">About Lock, Protect, and Release</a> , on page 282.
	Protect Protect the currently selected destination.
	Release Release the currently selected destination.
	Pause The wait time in milliseconds that can be added to the list of operations.
	Append In this mode, any new salvo operation will be added to the end of the salvo action list.
	Insert In this mode, any new salvo operation will be inserted at the currently selected spot in the salvo action list.


Icon	Description
 Replace	In this mode, any new salvo operation will replace the currently-selected salvo action from the salvo action list.
 Move Up	Move the selected salvo action up in the salvo action list.
 Move Down	Move the selected salvo action down in the salvo action list.

- 3 Under **Logical Router**, select a source, shown in green.
- 4 Select a destination, shown in brown.
- 5 Under the salvo action list, click **Take**.

## Selecting the Name of Sources and Destinations

When a source or destination has been assigned an alias, you can select the alias to be shown through the Alias drop-down menu. To create aliases, see [Alias Editor Tasks](#), on page 276.


- 1 Select a source or destination under **Logical Router**.
- 2 Click the alias drop-down menu and select an alias option.

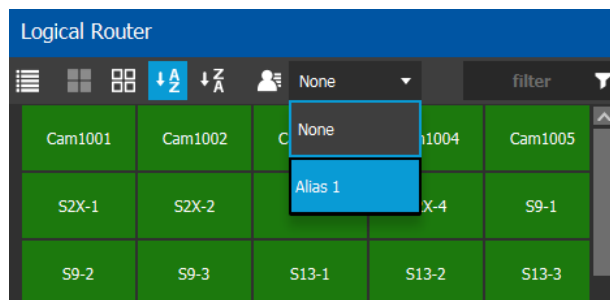

The label for the selected source or destination changes to the selected option.

# Administration Tasks

User Management is the only Administration task. Only administrators have access to it.

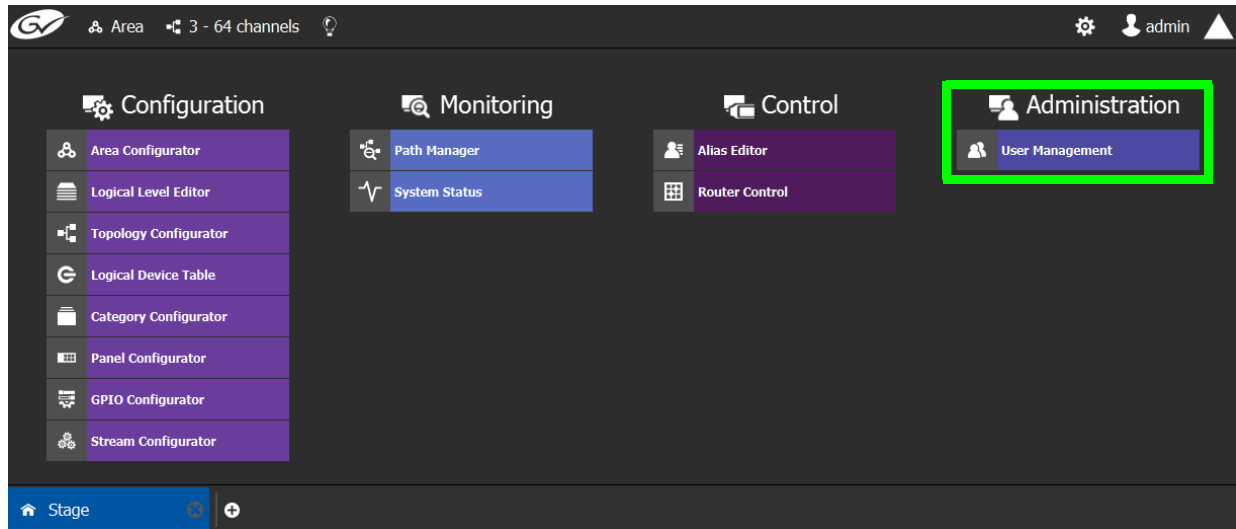

## User Management Task


As an administrator, you have access to the User Management Task. This is used for:

- Creating, editing, and deleting user profiles. See [Creating User Profiles](#), on page 289.
- Managing access rights to the areas in your system. See [Granting Access Permissions to an Area](#), on page 291.
- Viewing and assigning permissions according to predefined user roles. See [Viewing Permissions by Role](#), on page 294.

## The User Management Task Overview

**Note:** Before you assign access permissions, you must create areas in your system. For details, see [Area Configurator Tasks](#), on page 17.

When you first log in to the User Management Task, the admin tile appears in the **Users** section.

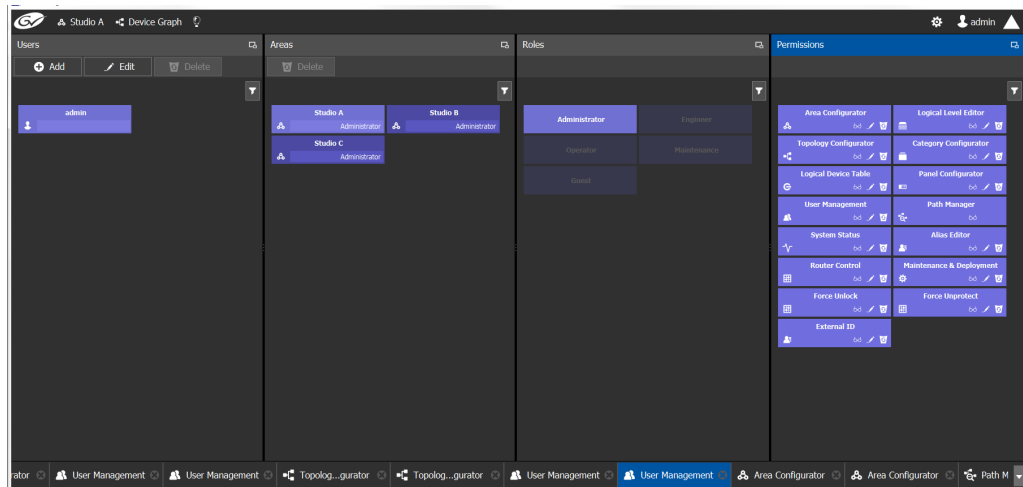

The User Management Task UI has four columns:

- **Users:** The column displays a tile for each user who has access to your system. See [Creating User Profiles](#), on page 289.
- **Areas:** The column displays a tile for each area defined in your system. See [Granting Access Permissions to an Area](#), on page 291.
- **Roles:** The column displays a tile for each of the predefined roles: Administrator, Engineer, Operator, Maintenance, and Guest. Permissions to view, edit, and delete within each client task vary by role. These permissions can be seen when you select the role in the Roles column; i.e., **Administrator** is selected in the screen shot above. The permissions granted to the administrator role are shown in the **Permissions** column. (Members of the administrator role have full access permissions to all areas in the system). See [Viewing Permissions by Role](#), on page 294 for a list of the permissions available to each role.
- **Permissions:** The column displays a tile for the tasks that users can perform within the areas in your system according to the selected User, Area, and Role. View, edit and delete icons show the current user's rights for the task.

## Creating User Profiles


The first step is to create your user profiles.

**Note:** To access the user profiles, you must belong to the administrator role. Otherwise, Administration tasks are not visible in GV Orbit Control Client Stage.

### To create a new user account:

- 1 Launch GV Orbit Control Client.
- 2 Log in as an administrator.
- 3 Select **Administration > User Management**.

The User Management window appears.

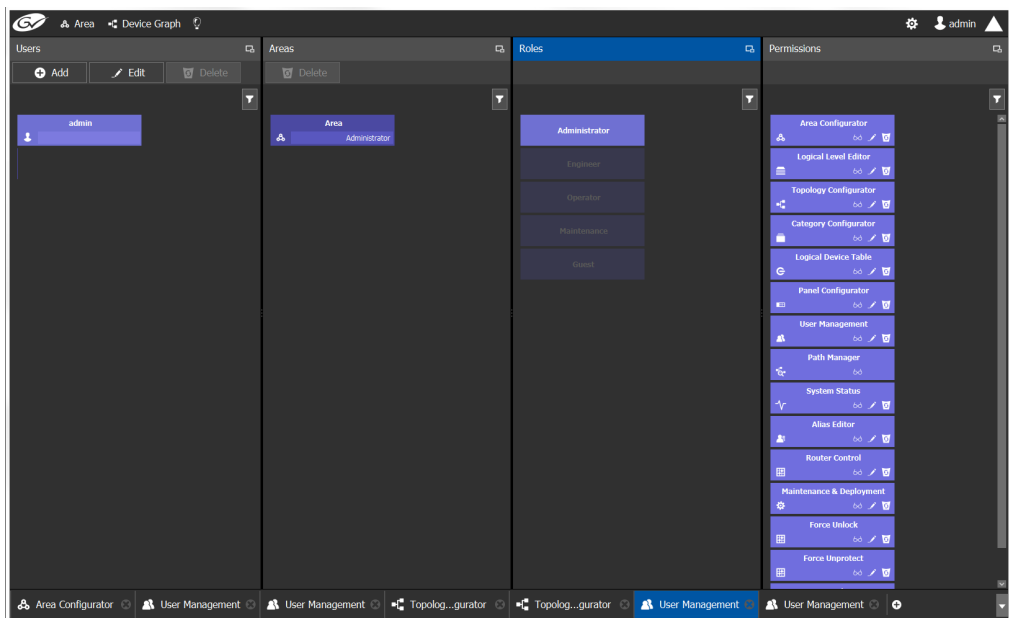

- 4 Click the **Add** button  in the top left corner.

The user configuration window appears.


User ID	jcmack
First Name	Jane
Last Name	Cormack
Password	•••••
Confirm Password	•••••
External Id	1227
<input type="button" value="Ok"/> <input type="button" value="Cancel"/>	

- 5 Enter the required information in the **User ID**, **First Name**, **Last Name**, **Password**, and **Confirm Password** fields.
- 6 If this user is to represent an external northbound routing device for Lock, Protect, and Release with the NP0016 / NP0017 router control protocol, set the **External ID** that this

device uses in its NP0017 router protocol communications with GV Orbit Control. This value is an unsigned integer. See [Setting a User ID for Lock, Protect, and Release with NDAC NP0016 / NP0017 Northbound Interfaces](#), on page 297 for more information.

7 Click **OK**.

A new tile representing the new user account appears in the **Users** section.

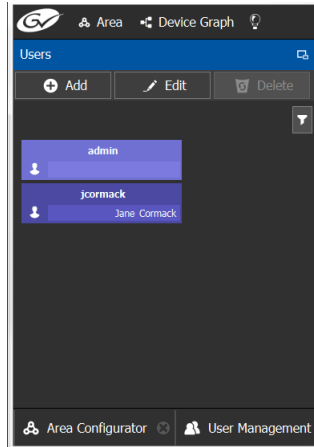

In addition, you can perform the following procedures in the **Users** section:

- **Edit:** Select the icon for the user and click **Edit** to modify the user's credentials.
- **Delete:** Select the icon for the user and click **Delete** to remove the user account. There is no confirmation when you click **Delete**. The user profile is immediately removed.

**See also**

- [Switching User Profiles](#), on page 11


## Granting Access Permissions to an Area

Users are granted access to each area via a predefined role. The procedure is as follows:

### To grant access to an area


- 1 Launch GV Orbit Control Client.
- 2 Log in as an administrator.
- 3 Select **Administration > User Management**.

The User Management task appears.

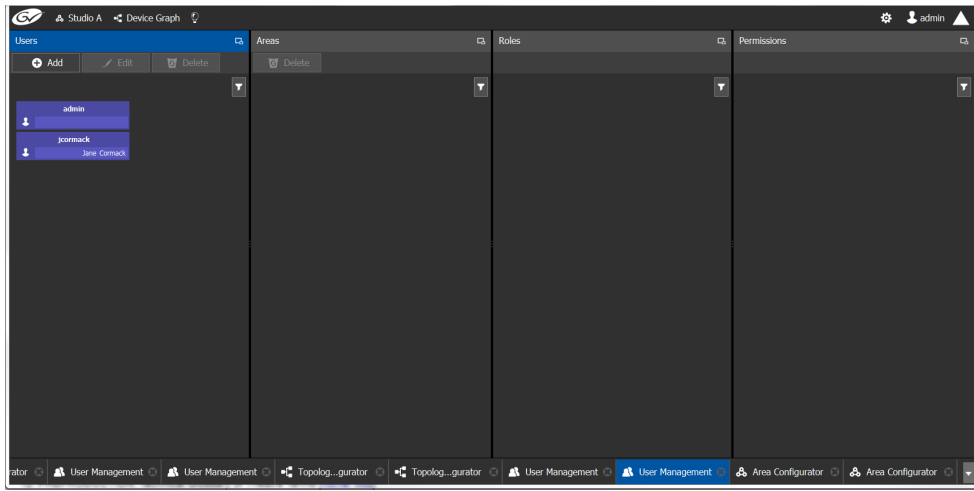

The **Users** column displays tiles for all the users who have access to the system.


- 4 Select the applicable user tile in the **Users** section.

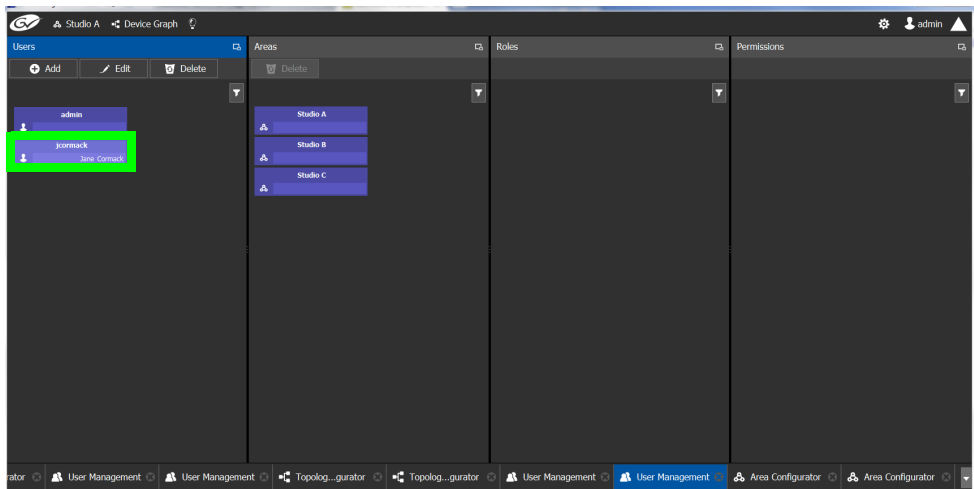


The **Areas** column displays tiles for all the areas defined in your system.

## Administration Tasks

### Granting Access Permissions to an Area

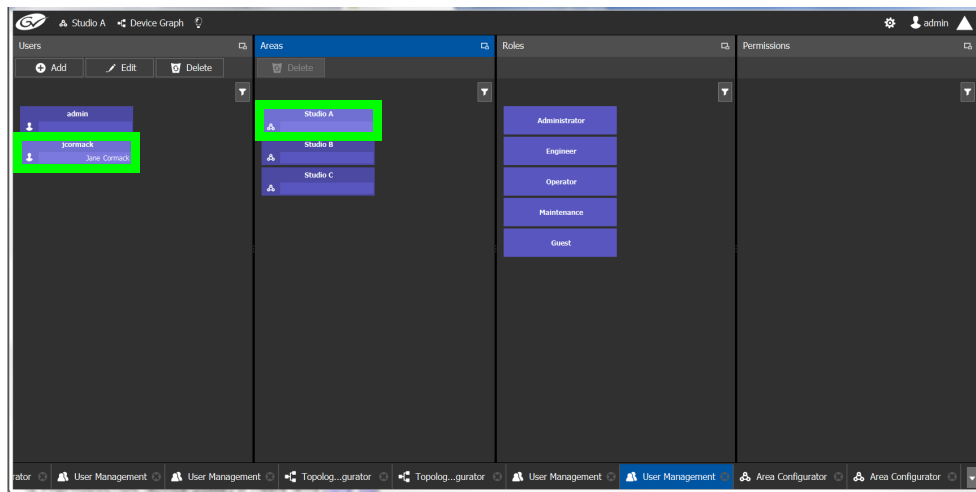


- 5 Select an area tile in the **Areas** section while keeping the user tile selected. The **Roles** column displays tiles for all the roles when both the user tile and the area tile are selected, at the same time.
- 6 Select a role tile and drag it on top of the area tile.

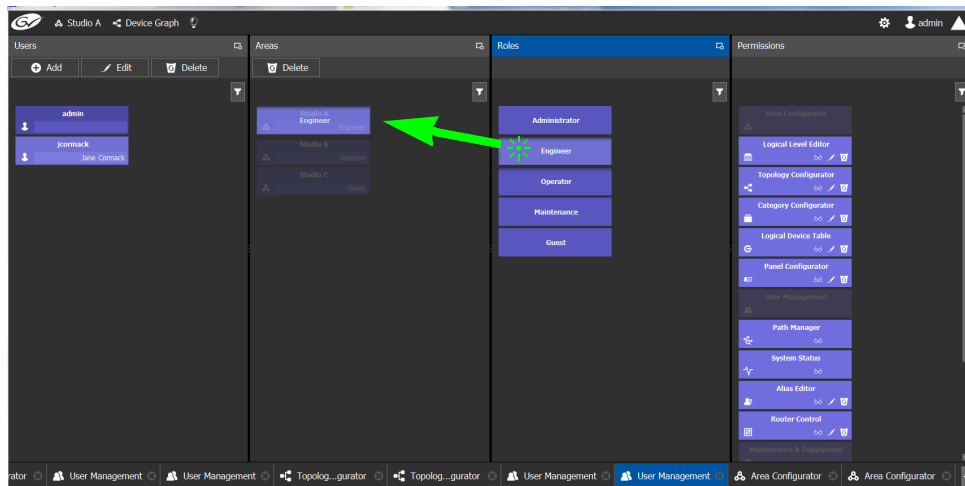


This action gives the user all the permissions defined for the role in the selected area.




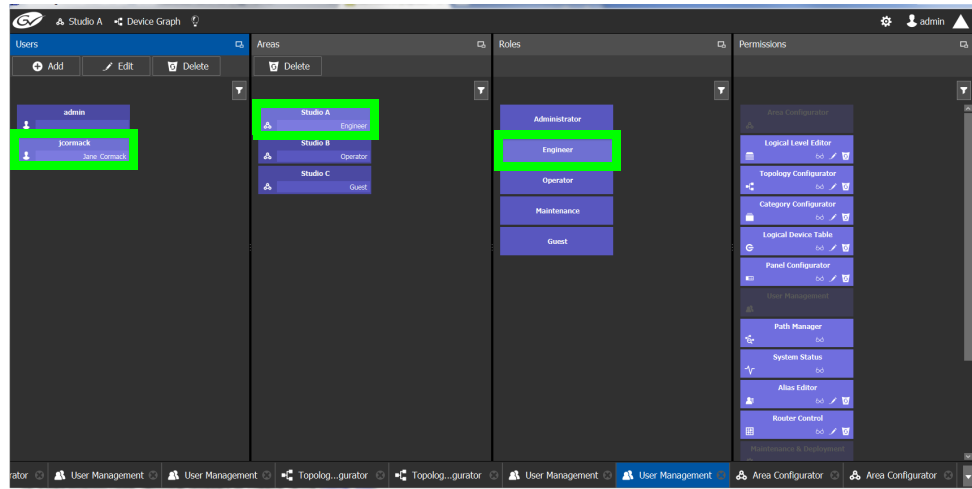

 When you select the user tile in the Users section, the user's role in the area is displayed at the bottom right of the Area tile.



 The permissions granted to the selected role; i.e., view, edit, delete, are displayed on the Permissions tile in the **Permissions** column.







These are listed in the next section.

   
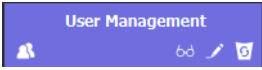 
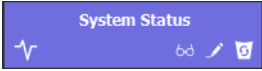 

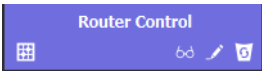 
## Viewing Permissions by Role

Users are granted access to the areas in the system via their assigned roles. The following rules apply:

- Users can be assigned to different roles in different areas.
- Users cannot be granted permissions as individuals, only according to role.
- The roles are predefined, as follows: Administrator, Engineer, Operator, Maintenance, and Guest. The roles cannot be modified.
- Administrators have full access to all tasks in all areas. Guests have the least permissions. The Engineer, Operator, and Maintenance roles have various permissions, as listed in the following table:

The permissions granted to each role can be viewed on the tiles in the Permissions list book of the User Management task. These can be viewed when the user, the area, and the role are all selected at the same time.

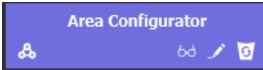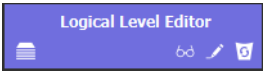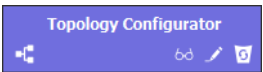Task	Role	Permissions
<b>Area configurator</b> 	Administrator	View, Edit, Delete
	Engineer	No access
	Operator	No access
	Maintenance	No access
	Guest	No access
<b>Logical Level Editor</b> 	Administrator	View, Edit, Delete
	Engineer	View, Edit, Delete
	Operator	No access
	Maintenance	No access
	Guest	No access
<b>Topology Configurator</b> 	Administrator	View, Edit, Delete
	Engineer	View, Edit, Delete
	Operator	View
	Maintenance	No access
	Guest	No access
<b>Category Configurator</b> 	Administrator	View, Edit, Delete
	Engineer	View, Edit, Delete
	Operator	No access
	Maintenance	No access
	Guest	No access

Task	Role	Permissions
<b>Logical Device Table</b> 	Administrator	View, Edit, Delete
	Engineer	View, Edit, Delete
	Operator	No access
	Maintenance	No access
	Guest	No access
<b>Panel Configurator</b> 	Administrator	View, Edit, Delete
	Engineer	View, Edit, Delete
	Operator	No access
	Maintenance	No access
	Guest	No access
<b>User Management</b> 	Administrator	View, Edit, Delete
	Engineer	No access
	Operator	No access
	Maintenance	No access
	Guest	No access
<b>Path Manager</b> 	Administrator	View
	Engineer	View
	Operator	View
	Maintenance	No access
	Guest	No access
<b>System Status</b> 	Administrator	View, Edit, Delete
	Engineer	View
	Operator	View
	Maintenance	View
	Guest	No access
<b>Alias Editor</b> 	Administrator	View, Edit, Delete
	Engineer	View, Edit, Delete
	Operator	View, Edit, Delete
	Maintenance	No access
	Guest	No access
<b>Router Control</b> 	Administrator	View, Edit, Delete
	Engineer	View, Edit, Delete
	Operator	View
	Maintenance	No access
	Guest	No access

Administration Tasks  
Viewing Permissions by Role

Task	Role	Permissions
<b>Maintenance &amp; Deployment</b> 	Administrator	View, Edit, Delete
	Engineer	No access
	Operator	No access
	Maintenance	View
	Guest	No access
<b>Router Force Unlock</b>  See also <a href="#">About Lock, Protect, and Release</a> , on page 282 and <a href="#">Setting a User ID for Lock, Protect, and Release with NDAC NP0016 / NP0017 Northbound Interfaces</a> , on page 297.	Administrator	View, Edit, Delete
	Engineer	No access
	Operator	View, Edit, Delete
	Maintenance	No access
	Guest	No access
<b>Router Force Unprotect</b>  See also <a href="#">About Lock, Protect, and Release</a> , on page 282 and <a href="#">Setting a User ID for Lock, Protect, and Release with NDAC NP0016 / NP0017 Northbound Interfaces</a> , on page 297.	Administrator	View, Edit, Delete
	Engineer	No access
	Operator	View, Edit, Delete
	Maintenance	No access
	Guest	No access
<b>External ID</b> 	Administrator	View, Edit, Delete
	Engineer	View, Edit, Delete
	Operator	No access
	Maintenance	No access
	Guest	No access

## Setting a User ID for Lock, Protect, and Release with NDAC NP0016 / NP0017 Northbound Interfaces

With the NP0016 and NP0017 router control protocols, Lock/Protect commands require a user ID. When in GV Orbit Control, you map this user ID to the **External ID** parameter of a GV Orbit Control user in **User Management**, the GV Orbit Control's northbound implementation takes into account the privileges assigned to this GV Orbit Control user. See also [User ID and Lock, Protect, and Release](#), on page 301.

This user will represent the privileges for the northbound interface with respect to Lock, Protect, and Release. If this GV Orbit Control user does not have *admin* or *Operator* rights, the third-party control system that uses NP0016 / NP0017 to control GV Orbit Control cannot override the lock or Protect set by other GV Orbit Control users.

The **External ID** parameter is an unsigned integer.

For this, proceed as follows.

- 1 Create a new user to represent the third-party control system. See [Creating User Profiles](#), on page 289.
- 2 Set the **External ID** parameter to that of the user ID used by the third-party control system in its NP0016 / NP0017 router control protocol.

User ID	Orbit Client
First Name	Orbit
Last Name	Client
Password	•••••
Confirm Password	•••••
External Id	1227
<input type="button" value="Ok"/> <input type="button" value="Cancel"/>	

- 3 Assign the privileges to this new user. See [Granting Access Permissions to an Area](#), on page 291:
  - Assign *Engineer* or *Maintenance* rights to this new user to prevent the third-party control system from overriding the lock or Protect set by other GV Orbit Control users.
  - Assign *admin* or *Operator* rights to this new user to allow the third-party control system to override the lock or Protect set by other GV Orbit Control users.

If the third-party control system's NP0016 / NP0017 router control protocol, Lock/Protect commands use a user ID that GV Orbit Control cannot match to the **External ID** value of any GV Orbit Control user, the Lock/Protect commands will be carried out as an Admin user (which has the **Router Force Unlock** and **Router Force Unprotect** privileges), thereby allowing the external control system to override the locks of other GV Orbit Control users.

See also [About Lock, Protect, and Release](#), on page 282 to better understand how Lock, Protect, and Release works with other users and other GV Orbit Control components such as panels.

GV Orbit Control stores the locks in its database and they are preserved after a restart/reboot. As such, destinations will remain locked/protected. GV Orbit Control system does not read a lock from a router and does not control a lock in the router.

# Network Device Advance Control (NDAC) NP0017

## General commands

CommandId	Name	Handling
0x0000 300A	Execute System Salvo	Triggers a salvo created in GV Orbit Control by referring to it by the "external ID" of the salvo.
0x0000 310E	Register For Data Changes	Registers the client for changes to the labels within GV Orbit Control and notifies it with a '0x0000 310C Notify Mnemonic Change' when some labels are changed in GV Orbit Control.

## Device-based support

**Note:** We recommend to northbound control systems to use Device-base commands as gaps are properly supported.

The following set of NP0017 device-based commands for support of crosspoints and labels have been implemented in the NDAC.

CommandId	Name	Handling
0x0000 3000	Take Source To Destination	Performs a crosspoint change
0x0000 3002	Lock, Protect and Release Device	User Id of command taken into account, when performing operation. Apply LPR state on a specific input device and level, see "lock protect release level on device" command (0x00003002). See also <a href="#">Setting a User ID for Lock, Protect, and Release with NDAC NP0016 / NP0017 Northbound Interfaces</a> , on page 297.
0x0000 3004	Register for Changes to Device	Registers the client for changes to the port and notifies it with a '0x0000 300B Device Status Changed' when the crosspoint changes in GV Orbit Control.
0x0000 3006	Get Destination Status	Returns the current crosspoint status.
0x0000 3008	Get Device LPR Status	Returns the output's current lock/protect/release status. If a user has an "external ID" value configured it is returned, otherwise 0 is returned.
0x0000 3012	Get Mnemonics	Allows client to retrieve the mnemonics for 'all devices', 'levels', 'sources', 'destinations' and 'categories'. Limited to 8 first characters of the "Short name" property. Categories are not supported.
0x0000 3016	Device All Levels Take	Performs a take between a source and destination on all the available levels.

CommandId	Name	Handling
0x0000 3017	Get Simple Device Status	Provides the input connected to a destination device. Returns all levels including sub-levels of composite levels.
0x0000 3018	Get Device Levels	Returns the levels associated to a device. <ul style="list-style-type: none"> <li>• Returns all levels including sub-levels of composite levels.</li> <li>• Returns the levels with the right device id.</li> </ul>
0x0000 3022	Get Extended Mnemonics	Returns associated device mnemonics. Only types 1,2,3 and 4 are handled. No limit on name length. This returns no category information.
0x0000 302B	Get Contents For Category	This returns no category information.
0x8000 300B	Device Output Changed Response	This is a response message sent back by clients after GV Orbit Control sends out a 0x0000 300B. GV Orbit Control simply ignores these messages.

### Details about device id and level numbers

- The *Device ID* fields used in the device-based commands are 1-based values. Meaning that *Source Device ID* 1 in a command matches the logical source with external id 1 in GV Orbit Control.
- The *Virtual Level ID* field used in the device-based commands are 1-based values. Meaning that *Virtual Level ID* 1 in a command matches the logical level with ID 1 (SDI) in GV Orbit Control.

## Port-based support

GV Orbit Control supports the following set of NP0017 port-based commands in the NDAC.

CommandId	Name	Handling
0x0000 3001	Take Input To Output	Performs a crosspoint change
0x0000 3003	Lock, Protect and Release Port	User Id of command taken into account, when performing operation. Apply LPR state on a specific input port and level, supports NP0017 "lock protect release port" command (0x00003003). See also <a href="#">Setting a User ID for Lock, Protect, and Release with NDAC NP0016 / NP0017 Northbound Interfaces</a> , on page 297.
0x0000 3005	Register for Changes to Port	Registers the client for changes to the port and notifies it with a '0x0000 300C Physical Port Changed' when the crosspoint changes in GV Orbit Control.
0x0000 3007	Get Physical Crosspoint Status	Returns the current crosspoint status.
0x0000 3009	Get Physical LPR Status	Returns the output's current lock/protect/release status. If a user has an "external ID" value configured it is returned, otherwise 0 is returned.



CommandId	Name	Handling
0x0000 3014	Get Physical Level Dimensions	Returns the logical level ids and size for the area being controlled.
0x0000 3015	Get Mnemonic For Ports	Returns the first 8 characters of 'Short name' property for the requested input or output port.
0x0000 3025	Get Extended Mnemonics For Ports	Returns the full 'Short name' property for the requested input or output port. Not limited in length.
0x8000 300C	Physical crosspoint status response.	This is a response message sent back by clients after GV Orbit Control sends out a 0x0000 300C. GV Orbit Control simply ignores these messages.

### Details about port and level numbers

- The *Input Port* and *Output Port* fields used in the port-based commands are 0-based values. Meaning that *Input Port* 0 in a command matches the logical source with external id 1 in GV Orbit Control.
- The port numbers (external Id values) should be sequential in GV Orbit Control. That is, port-based commands do not work properly if there are gaps in the external IDs.
- The *Physical Level ID* field used in the port-based commands are 1-based values. Meaning that *Physical Level ID* 1 in a command matches the logical level with ID 1 (SDI) in GV Orbit Control.

## User ID and Lock, Protect, and Release

User ID is a concept found in some protocols such as NP0016 and NP0017. It allows a northbound controller to identify the user which is performing lock/protect or take operations. In turn GV Orbit Control, will try to match the provided user ID to one of its users by looking up the "external ID" value and perform the operations internally using it.

As of GV Orbit Control version 1.7.0 and above, the user ID provided in commands is taken into account as follows:

- If a GV Orbit Control user has its "external ID" value configured to the same value as the user ID in a command, the operation will be performed internally using the alias of the matching user. See [Setting a User ID for Lock, Protect, and Release with NDAC NP0016 / NP0017 Northbound Interfaces](#), on page 297.
- If no GV Orbit Control user has an "external ID" value matching the command's user ID, the operation is performed internally as the GV Orbit Control "admin" user. See [Viewing Permissions by Role](#), on page 294.

NOTE: GVG NP and Probel SW-P-08 protocols do not have user ID concepts, so all their operations are performed as the GV Orbit Control *admin* user.

## GV Orbit Control user external id configuration

NP0016 and NP0017 protocols provide the user ID for various operations. The user ID is defined as an unsigned integer value from 0 to 4294967295 but it's recommended to NOT use values beyond 2147483647 to avoid any conversion or any special handling of users ID in GV Orbit control systems. If the recommendation cannot be applied, please contact

Grass Valley support for further details on how to configure those values in GV Orbit Control systems. See [Grass Valley Technical Support](#), on page 306.

### User IDs used by Northbound Control Systems

NDAC Client	User ID
iControl - NP0017 device based	0
iControl - NP0017 port based	0
iControl - NP0016	61441 (0xF001)
GV Orbit Routing service - NP0017 device based	0
Image Video - NP0017 device based	0

## Troubleshooting

For troubleshooting, GV Orbit Control has **GV Orbit Control** *audit.logs* found on GV Orbit Admin web interface under **Log Files** that show the user name and its external ID, the northbound interface (for example, NP0017), type of commands (Device-based, Port-based, etc.) and if the command was received from a panel. Refer to **Log Files Task** in the *GV Orbit Admin Guide*. See [Related Documentation](#), on page 7.

## How to...

### How to configure iControl or Kaleido to control GV Orbit Control using NP0017 device-id-based driver

- 1 Add and configure a physical router:
  - a Add the physical router in router manager or Xedit.
  - b Select the 'NVEP NV9000 - Device Takes (NP0017)' router protocol.
  - c Set the Connection type to: TCP/IP
  - d Enter the GV Orbit Control controller IP address.
  - e Set the TCP/IP port to 9193 + 'external id'. For example: if the area 'external id' in GV Orbit Control is '0' use port 9193, if area 'external id' in GV Orbit Control is '1' use port 9194.
  - f Add a physical level.
  - g Configure its size and enter any number in the 'Level or frame ID' field. Kaleido and iControl only do all 'level takes'.

The matrix size should be at least the 'amount of sources of the topology with the most sources' X 'amount of destinations of the topology with the most destinations' as shown in the GV Orbit Control Alias Editor of the area. If you intend to remove/add sources or destinations in GV Orbit Control you should make the router size bigger as 'NP0017 ID' aren't reused.
- 2 Create a logical router:
  - a Set the size and add the logical level.

The logical level can be a subset of all the physical inputs or outputs in GV Orbit Control. That way you can control only certain sources or destinations.

- b Select the physical levels configured.
  - c Perform the auto-map of sources and destinations.
  - d Save.
- 3 Control GV Orbit Control using router matrix.

### **How to configure iTX to control GV Orbit Control using NP0017 device-id-based driver**

- Create a router in iTX and select the 'NV9000' driver.

### **How to configure NV9000 to control GV Orbit Control using NP0017 device-id-based driver**

- NV9000 doesn't support this mode of communication with a router controller.

### **How to configure iControl or Kaleido to control GV Orbit Control using NP0017 port-based driver**

- 1 Add and configure a physical router:
  - a Add the physical router in router manager or Xedit.
  - b Select the 'NVEP NV9000 - Port Takes (NP0017)' router protocol.
  - c Set the Connection type to: TCP/IP
  - d Enter the GV Orbit Control controller IP address.
  - e Set the TCP/IP port to 9193 + 'external id'. For example: if the area 'external id' in GV Orbit Control is '0' use port 9193, if area 'external id' in GV Orbit Control is '1' use port 9194.
  - f Add a physical level.
  - g Configure its size and enter '1' in the 'Level or frame ID' field.

The matrix size should be the total amount of source and destination 'External IDs' within the GV Orbit Control Alias Editor of the area.
  - h Add other levels as needed.
- 2 Create a logical router:
  - a Set the size and add the logical level.

The logical level can be a subset of all the physical inputs or outputs in GV Orbit Control. That way you can control only certain sources or destinations.
  - b Select the physical levels configured.
  - c Perform the auto-map of sources and destinations.
  - d Save.
- 3 Control GV Orbit Control using router matrix.

### **How to configure NV9000 to control GV Orbit Control using NP0017 port based driver**

- 1 Configure the 'area id' in GV Orbit Control to '0'.

- 2 Access the SE-Utilities application.
- 3 Add a router:
  - a Go to Configuration > Routers and click the 'Add router' button.
  - b Enter a name for the router.
  - c Select 'NV Control System Ethernet' as the protocol
  - d Click next.
  - e Add a Physical Level and configure the level '#' value to match the GV Orbit Control logical level 'external Id' from within Area.
  - f Enter '0' for the 'Input Start' and 'Output Start'.
  - g Enter the number of GV Orbit Control inputs - 1 in 'Input End'
  - h Enter the number of GV Orbit Control outputs - 1 in the 'Output End'
- 4 Add a level set:
  - a Go to Configuration > Level Sets and click the 'add level set' button.
  - b Enter a name for the level set.
  - c Select a 'Virtual Level' value for 'display index' 1.
  - d Select a Physical level from the pull down.
- 5 Add devices:
  - a Go to Configuration > Devices and click 'Add Device' button.
  - b Enter a mnemonic, select a level set and optionally enter a description.
  - c Click the 'Next' button.
  - d In the 'Device Level Detail' section enter the input or output numbers used by the Device.
  - e Repeat to add more devices.
- 6 Apply the DB to the controller:
  - a Go to System Management and select the NV9000 controller.
  - b Click the 'Write configuration to NV9000' button.
  - c Once the copying is done, click the 'Restart controller 1' button.
- 7 Control GV Orbit Control using SE-Utilities:
  - a Go to System Management > NV9000 controller > Routers and select the router representing GV Orbit Control.

There is a bug in SE-Utilities when output 0 is used. It's status isn't displayed in the 'Connections' table. If you wish to view the status of output 0, you can change the 'Starting Output' value to 0 instead of 1, but you will lose the status of the last output. The 'Display Count' value cannot be higher than the last output number of the physical level, which is one less than the output count when using 0-based values.
  - b You can perform takes by using 0-based input and output values.





## **Grass Valley Technical Support**

For technical assistance, contact our international support center, at 1-800-547-8949 (US and Canada) or +1-530-478-4148.

To obtain a local phone number for the support center nearest you, consult the Contact Us section of Grass Valley's website ([www.grassvalley.com](http://www.grassvalley.com)).

An online form for e-mail contact is also available from the website.

## **Corporate Head Office**

Grass Valley  
3499 Douglas-B.-Floreani  
St-Laurent, Quebec H4S 2C6  
Canada  
Telephone: +1 514 333 1772  
Fax: +1 514 333 9828  
[www.grassvalley.com](http://www.grassvalley.com)