



grass valley

A **BELDEN** BRAND

NV9000 WEB SUITE

BROWSER APPLICATION FOR VIEWING NV9000 DATA

User's Guide

VERSION 1.3

UG0074-03

| 2015-07-23

www.grassvalley.com

Copyright and Trademark Notice

Copyright © 2015, Grass Valley USA, LLC. All rights reserved.

Belden, Belden Sending All The Right Signals, and the Belden logo are trademarks or registered trademarks of Belden Inc. or its affiliated companies in the United States and other jurisdictions. Grass Valley USA, LLC, Miranda, NV9000 Web Suite, NV9000, Kaleido, NVISION, iControl, and Densité are trademarks or registered trademarks of Grass Valley USA, LLC. Belden Inc., Grass Valley USA, LLC, and other parties may also have trademark rights in other terms used herein.

Terms and Conditions

Please read the following terms and conditions carefully. By using Browser Application for Viewing NV9000 Data documentation, you agree to the following terms and conditions.

Grass Valley hereby grants permission and license to owners of Browser Application for Viewing NV9000 Datas to use their product manuals for their own internal business use. Manuals for Grass Valley products may not be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose unless specifically authorized in writing by Grass Valley.

A Grass Valley manual may have been revised to reflect changes made to the product during its manufacturing life. Thus, different versions of a manual may exist for any given product. Care should be taken to ensure that one obtains the proper manual version for a specific product serial number.

Information in this document is subject to change without notice and does not represent a commitment on the part of Grass Valley.

Warranty information is available in the Support section of the Grass Valley Web site (www.grassvalley.com).

Title NV9000 Web Suite User's Guide

Part Number UG0074-03

Revision July 15, 2015 9:20 am

Electrostatic Discharge (ESD) Protection



Electrostatic discharge occurs when electronic components are improperly handled and can result in intermittent failure or complete damage adversely affecting an electrical circuit. When you remove and replace any card from a frame always follow ESD-prevention procedures:

- Ensure that the frame is electrically connected to earth ground through the power cord or any other means if available.
- Wear an ESD wrist strap ensuring that it makes good skin contact. Connect the grounding clip to an *unpainted surface* of the chassis frame to safely ground unwanted ESD voltages. If no wrist strap is available, ground yourself by touching the *unpainted* metal part of the chassis.
- For safety, periodically check the resistance value of the antistatic strap, which should be between 1 and 10 megohms.
- When temporarily storing a card make sure it is placed in an ESD bag.
- Cards in an earth grounded metal frame or casing do not require any special ESD protection.

Protection contre les décharges électrostatiques (DES)



Une décharge électrostatique peut se produire lorsque des composants électroniques ne sont pas manipulés de manière adéquate, ce qui peut entraîner des défaillances intermittentes ou endommager irrémédiablement un circuit électrique. Au moment de remplacer une carte dans un châssis, prenez toujours les mesures de protection antistatique appropriées :

- Assurez-vous que le châssis est relié électriquement à la terre par le cordon d'alimentation ou tout autre moyen disponible.
- Portez un bracelet antistatique et assurez-vous qu'il est bien en contact avec la peau. Connectez la pince de masse à une *surface non peinte* du châssis pour détourner à la terre toute tension électrostatique indésirable. En l'absence de bracelet antistatique, déchargez l'électricité statique de votre corps en touchant une surface métallique *non peinte* du châssis.
- Pour plus de sécurité, vérifiez périodiquement la valeur de résistance du bracelet antistatique. Elle doit se situer entre 1 et 10 mégohms.
- Si vous devez mettre une carte de côté, assurez-vous de la ranger dans un sac protecteur antistatique.
- Les cartes qui sont reliées à un châssis ou boîtier métallique mis à la terre ne nécessitent pas de protection antistatique spéciale.

Précautions pour les écrans LCD et TFT



Regarder l'écran pendant une trop longue période de temps peut nuire à votre vision. Prenez une pause de 10 minutes, après 30 minutes d'utilisation.

Si l'écran LCD ou TFT est brisé, manipulez les fragments de verre avec précaution au moment de vous en débarrasser. veillez à ce que le cristal liquide n'entre pas en contact avec la peau ou la bouche. En cas de contact avec la peau ou les vêtements, laver

immédiatement à l'eau savonneuse. Ne jamais ingérer le liquide. La toxicité est extrêmement faible, mais la prudence demeure de mise en tout temps.

Recycling

Visit www.grassvalley.com for recycling information.

Certification and Compliance

Safety Compliance



c

This equipment complies with the requirements of CSA/UL/IEC/EN 60950-1, 2nd Ed. + AM1, Safety of information technology equipment.

The power cords supplied with this equipment meet the appropriate national standards for the country of destination.

Electromagnetic Compatibility



This equipment has been tested for verification of compliance with FCC Part 15, Subpart B requirements for class A digital devices.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy, and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.



This equipment has been tested and found to comply with the requirements of the EMC directive 2004/108/EC:

- EN 55022 Class A Radiated and conducted emissions
- EN 61000-3-2 Limits for harmonic current emissions
- EN 61000-3-3 Limitation of voltage fluctuations and flicker
- EN 61000-4-2 Electrostatic discharge immunity
- EN 61000-4-3 Radiated, radio-frequency, electromagnetic field immunity
- EN 61000-4-4 Electrical fast transient immunity
- EN 61000-4-5 Surge transient immunity
- EN 61000-4-6 Conducted disturbances immunity
- EN 61000-4-8 Power frequency magnetic field immunity
- EN 61000-4-11 Voltage dips, short interruptions and voltage variations immunity

toc

Table of Contents

1 Introduction	1
Summary	1
Tabbed Sections	2
Getting Started	3
Installation	3
Managing the Service	5
Changing the State of the Web Suite Service	5
Accessing the NV9000 Web Suite	7
Using your PC's Service	7
Choosing a System Controller	10
Creating a Configuration	10
Adding a User	11
Changing a Password	13
User IDs	13
Saving the User List	13
Logging Out	13
Help Pane	14
Logging Out	15
Usage Notes	15
Creating Tabbed Pages	15
Display Lists	15
Ordering	15
Navigation	16
Takes	16
Locks and Protects	16
Long Dashes in Tables	16
2 Options Tab	17
Subtabs	17
Welcome	17
Configuration	17
Three Kinds of Configuration	18
Logs	18
About	19
Configuration Pages	19
Servers Page	19
NV9000 IP Address	20
DHP IP Address	20
Instrumentation Mode	20
Save Configuration Button	20
Restart Application Server Button	20

Force Server Data Reload Button	20
Run Server Benchmark	21
Debug Dump Files	21
'Pages' Page.....	22
Managing Configurations	24
Adding Tabbed Pages	25
Ordering Tabbed Pages	27
Deleting Tabbed Pages.....	27
Editing a DHP Tab	28
Editing a Tieline Tab	32
Editing a Multi-Level Crosspoint Tab	35
Editing a Primary Level Tab	40
Editing a Matrix View Tab.....	43
Editing a Bulk Routing Tab.....	51
Users Page	56
Adding a User to the List.....	57
Changing a User's Password	58
Admin Privilege	59
User IDs.....	59
Saving the User List	59
Removing a User from the List	59
Log Pages	60
System Status	61
Client Log Page	61
Server Log Page	62
Hide Menu.....	62
Reporting Level	63
Data Store Page	63

3 DHP Tab 65

Summary.....	65
Configuration Options.....	66
Example	66
Disembedder Page	67
Table Ordering	67
Preferences	68
Embedder Page	68
Table Ordering	69
Preferences	70
Reentry Page	71
Table Ordering	71
Preferences	72
Drawing Page	73
Signal Paths.....	74
Usage.....	74
Preferences	75
Sample NV9000 Configuration	76
Non-Core Ports.....	76
Input	76

- DHP Core Ports77
 - Re-embedders tied to Standard Inputs77
 - Disembedders tied to Standard Outputs77

- 4 Tielines Tab 79**
 - Summary79
 - Background Information80
 - Sample NV9000 Data81
 - Sample Tieline Routes81
 - Tieline Uses Page82
 - Table Ordering82
 - Interpretation82
 - Preferences83
 - Tieline Destinations Page86
 - Table Ordering87
 - Interpretation87
 - Preferences87
 - Tieline Drawing Page89
 - Interpretation90
 - Preferences90

- 5 Multi-Level Tab..... 93**
 - Summary93
 - Table Ordering94
 - Preferences94
 - Display Options95
 - Locks and Protects95

- 6 Primary Level Tab 97**
 - Summary97
 - Preferences98
 - Display Options99
 - Locks and Protects99
 - Table Ordering100

- 7 Matrix View 101**
 - Summary101
 - Level Display102
 - Performing Simple Takes102
 - Performing Simple Locks and Protects103
 - Breakaway and Level Mapping103
 - Definitions103
 - Breakaway104
 - Level Mapping105

Performing Breakaway or Level-Mapped Takes	105
Display of Breakaway and Level-Mapping	105
Preferences	107
Display Options	108
8 Bulk Routing	109
Summary	109
Preferences	110
Display Options	111
Device IDs	111
Most Recent Cell	111
Locks and Protects	112
Table Ordering	112
Functions	113
Changing a Source	113
Copying Destinations	113
Filters	114
Snapshots	115
Capture Button	116
Preview Button	116
Fire Button	117
Delete Button	117
Appendix A Notes	119
DHP Restriction	119
Index	121
Contact Us	125

1 Introduction

Chapter 1 provides a brief introduction to the NV9000 Web Suite.

Summary

Summary 1
Getting Started 3

Summary

The NV9000 Web Suite is a browser application that presents views of NV9000 control system data. The NV9000 Web Suite (or, the web suite, for short) has one or more tabbed pages that show:

- DHP data.
- Tieline data.
- Crosspoint data—arranged to show destinations’ primary levels.
- Crosspoint data—arranged to show multiple levels for each destination.
- Crosspoint data—arranged to show the crosspoint matrix, with breakaway and level mapping, and locks and protects. The page also allows users to perform takes (with breakaway and level mapping), and locks and protects.
- Bulk routing data—arranged to show destinations with specific levels.

An additional tab exists for customizing the web suite itself. This is the ‘Options’ tab.

A web suite user (who has administrative privilege) can create additional tabs for different views of NV9000 data. Additional tabs are (modified) instances of the basic 5 types shown above.


The web suite runs on your PC desktop. It can be accessed through browsers that support HTML 5.0.

- ▲ Do **not** install the web suite on an NV9000 family system controller. Customers should never install additional software on any system controller.

We recommend Firefox and Chrome. Internet Explorer 10 (and later) supports HTML 5.0. The web suite is also designed to operate well on hand-held devices such as iPads, ViewSonic tablets, Motorola Zoom tablets and others. (If your browser does not support HTML 5, the web suite will tell you.)

- ▲ DHP—a service running in an NV9000 system controller—can communicate with only one instance of the web suite at a time. See [Appendix A](#).

The web suite is divided into tabbed sections. Each tabbed section has subtabs and pages that display when you click the subtabs:

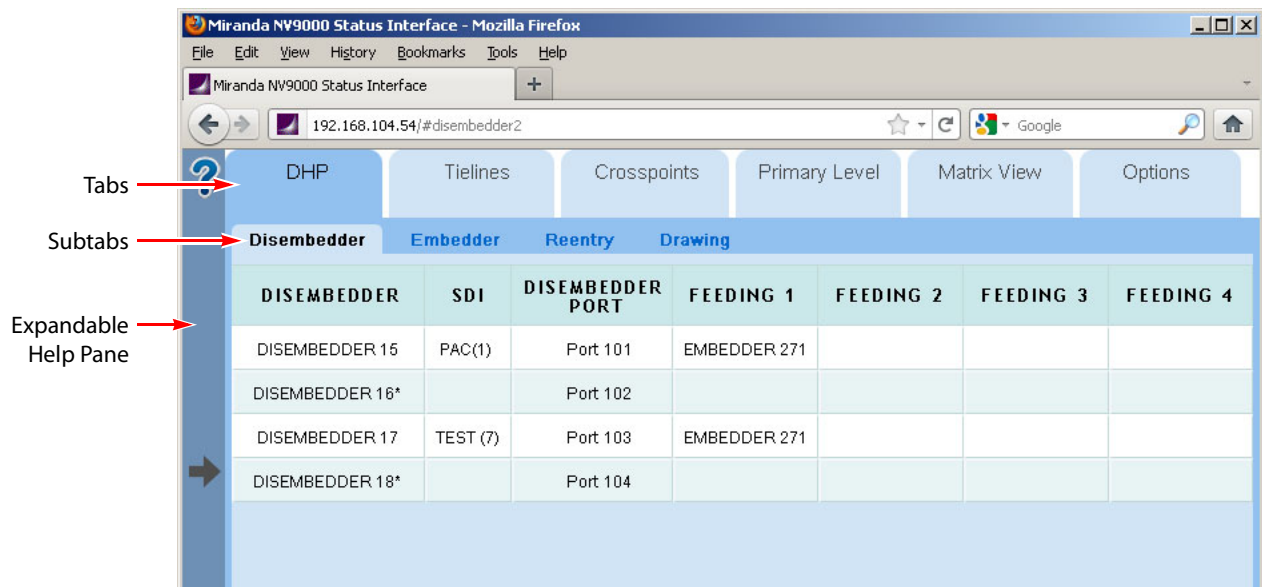

- ▲ The web suite does not, and cannot, communicate with an NV9000 system controller that is in stand-by mode.
- ▲ Although the web suite provides status for the entire NV9000 system, it can provide status for only one router that uses DHP. The NV9000 system must have only one DHP service running.

Tabbed Sections

The upper row of tabs selects a topic within the web suite. Presently there are 7 types of sections in the upper row:

- DHP Management
For DHP, there are 4 subtabs:
DHP Disembedder DHP Embedder DHP Reentry DHP Drawing
There are no management functions in this topic. The DHP pages are simply status pages.
See Chapter 3, [DHP Tab](#), on page 65, for details.
- Tieline Management
For tielines, there are 3 subtabs:
Tieline Uses Tieline Destinations Tieline Drawing
There are no management functions in this topic. The tieline pages are simply status pages.
See Chapter 4, [Tielines Tab](#), on page 79, for details.
- Multi-Level View
The multi-level view displays NV9000 destinations in a table—one destination per row. The columns of the table are the virtual levels (in the NV9000) you have selected. If the

destination has a source routed to it on that level, the name of the source appears in that column for that destination.

See Chapter 5, [Multi-Level Tab](#), on page 93, for details.

- Primary Level View

The primary level view displays NV9000 destination/source pairs in a table. The source of the pair is the one providing the signal on the destination's primary level.

(Users can specify the number of pairs to be displayed in each row.)

See Chapter 6, [Primary Level Tab](#), on page 97, for details.

- Matrix View

The matrix view shows the NV9000's sources and destinations as a 2-dimensional matrix, where sources are columns of the matrix and destinations are rows in the matrix. Each matrix element appears as a button that you can press to perform a take.

The page also has a listing of virtual levels (at the top). The matrix shows "crosspoint" connections on the levels that are selected in this region of the page.

Users may view the matrix and may actually perform takes, locks, protects, breakaways, or level mapping using the controls present on the page.

See Chapter 7, [Matrix View](#), on page 101, for details.

- Bulk Routing View

The bulk routing view displays NV9000 destinations in a table — one destination per row. The columns of the table are the virtual levels (in the NV9000) you have selected for the destinations. If the destination has a source routed to it on that level, the name of the source appears in that column for that destination.

It is possible to perform "bulky" operations on large sets of data in this view. See Chapter 8, [Bulk Routing](#), on page 109, for details.

- Options

The options tab allows you to configure the web suite itself and to see status regarding the web suite itself.

See Chapter 2, [Options Tab](#), on page 17, for details.

Users can usually add tabbed pages of these types except another 'Options' tab.

Getting Started

Installation

The NV9000 Web Suite can be installed on PCs (under Windows XP or Windows 7). Persons who install the web suite should read the notice given in [Appendix A](#).

The installation procedure is brief. Follow these steps:

- 1 Obtain the web suite installer and place it on a USB device.
- 2 Login to the PC¹ on which you are going to install the web suite.
- 3 Insert the USB device in a USB slot on the PC.

1. Use a PC. The web suite should never be installed on an NV9000 family system controller.

- 4 Locate the web suite installer in the file structure of the USB device. Double-click it.
(The name of the installer is nv9000-web-suite-installer- 3.0.1466.68 or something similar.)
- 5 Windows presents a security warning:




Click 'Run' to proceed.

- 6 The installation process asks your permission to install the web suite:

Name ^	Date modified	Type	Size
EC9720_BOM.pdf	3/31/2014 9:08 AM	Adobe Acrobat Doc...	3 KB
ECO_19210_WebSuite_3.0.1435.29.xlsx	3/31/2014 7:55 PM	Microsoft Excel Wor...	61 KB
nv9000-web-suite-installer-3.0.1435.29.exe	3/31/2014 7:20 PM	Application	46,826 KB
SB0247-01_BOM.pdf	3/31/2014 9:10 AM	Adobe Acrobat Doc...	3 KB
SV1176-02.doc	3/31/2014 7:56 PM	Microsoft Word 97 -...	30 KB

Click 'Yes' to proceed.

- 7 The installation process displays a progress indication:

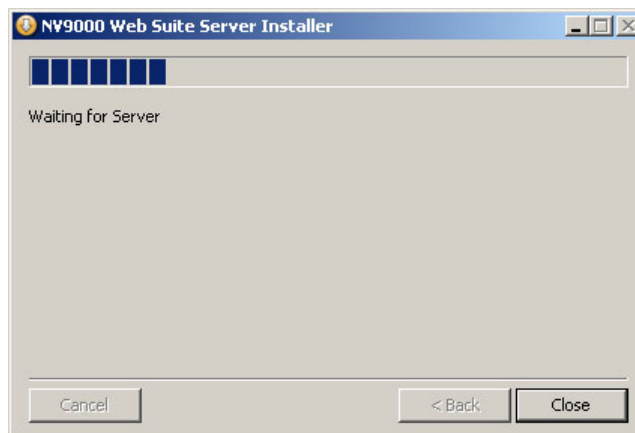

The installation takes only a few seconds.

8 When the installation is complete, it tells you:



Managing the Service

The web suite is a *service*, not an application. As a service, it can be started, or stopped. By default, it starts automatically when the PC starts up.

After you install the web suite, make sure that its status is either stopped, started, or automatic, as appropriate for the PC:

- If the service is to provide DHP status among several PCs, the service for only one PC should 'started'; For all other PCs that access the same system controller, the service should be stopped.
- If the system controller does not use DHP, the service can be started or automatic on any number of PCs.

Multiple PC users who monitor DHP can share a single instance of the web suite service.

See [Appendix A](#).


Changing the State of the Web Suite Service

- ▲ If the service is already in the proper state, leave it alone.


To change the state of the service, follow these steps:

- 1 Right click the 'My Computer' icon, on the desktop of your PC, or the 'NVConfig' icon, on the system controller. Choose 'Manage' from the context menu that appears.

- 2 Choose 'Services' from the tree at the left. Then find 'NV9000 Web Suite Server' among the services:

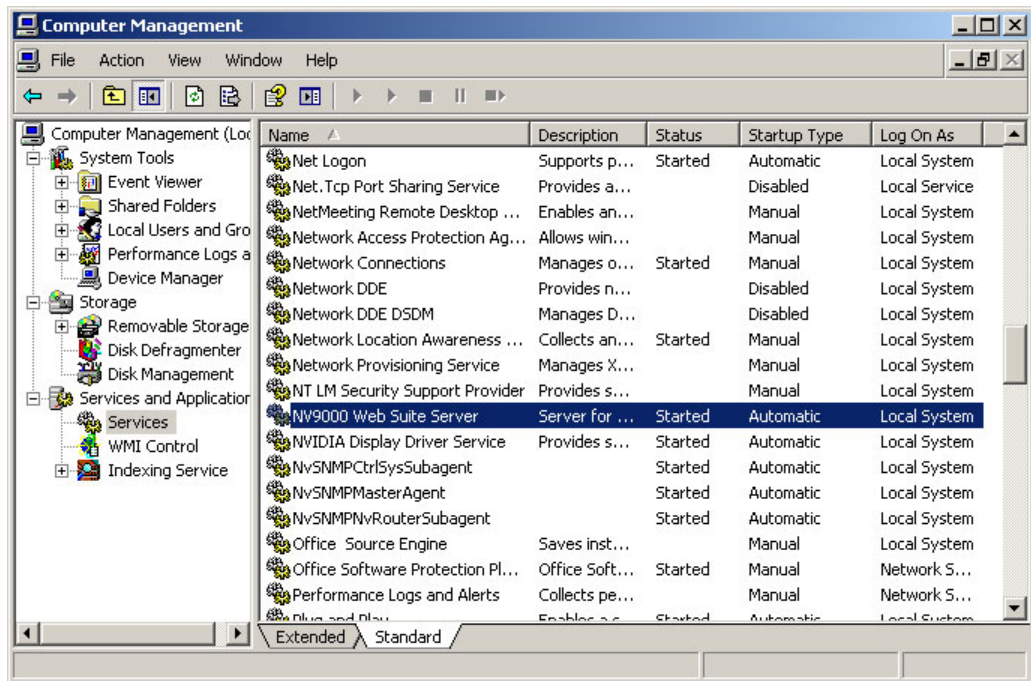

Right-click the highlighted line. A context menu appears:

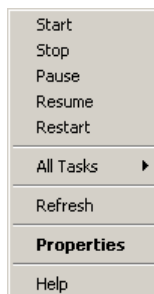

Choose the appropriate command for the PC or system controller: start, stop, or properties. (Commands that have no effect are greyed out.)

The start command starts a stopped service. (A stopped service shows no text in the status column.)

The stop command stops a running service (which shows 'Started' in the status column).


- 3 Ensure that the web suite's 'Startup Type' is correct.

For PCs that reference system controllers that provide DHP, the 'Startup Type' should be 'Manual'.

For system controllers, the 'Startup Type' column must show 'Automatic'.

For PCs that do *not* reference system controllers that provide DHP, the 'Startup Type' should be 'Automatic' for the convenience of the PC user who might restart that PC.

- a Right-click the service and choose 'Properties' from the context menu:

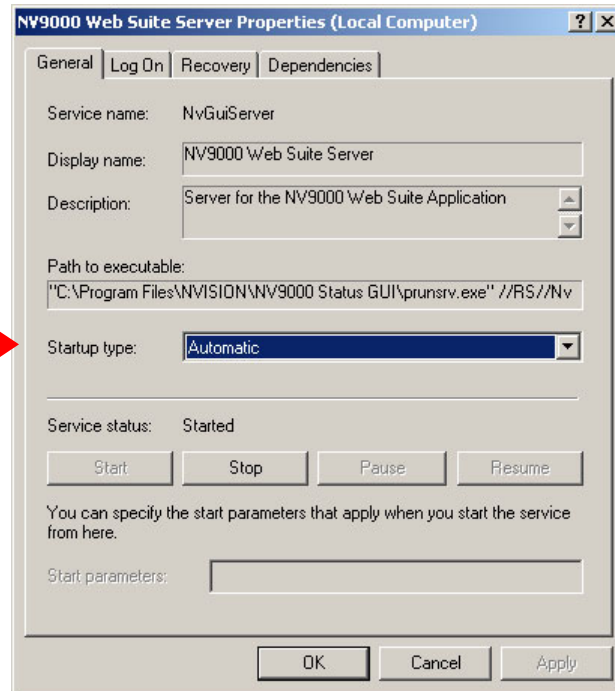

- b Choose either 'Automatic' or 'Manual' from 'Startup Type' field, as required.


Accessing the NV9000 Web Suite

The service functions in a browser on your PC.

Using your PC's Service

Follow these steps:

- 1 Launch your browser (i.e., Firefox, Chrome, Internet Explorer 10).
- 2 Type "localhost" in the URL field of the browser:

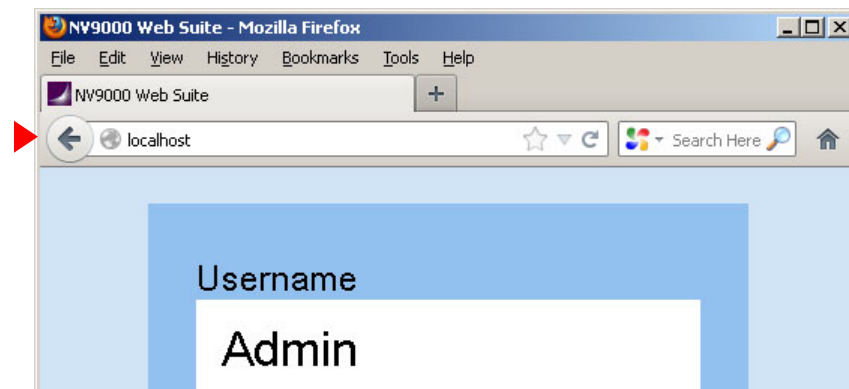

You can also type the IP address of your PC or the IP address of another PC on which the web suite has been installed. The term "localhost" is a synonym for the IP address of

your own PC. In any case, specify the IP address of the PC on which the web suite is running.


The service should execute and display the login page of the web suite.

After you log in, there is one more step before the system controller's data become accessible. That will be to type the NV9000's IP address into a configuration page. See [Choosing a System Controller](#), on page 10.


Logging In

Initially, the web suite is empty—having no configurations and identifying no users—and the first task for administrators is to create a list of users and define at least one web suite configuration. (There is a default configuration.) After that task is done, the users you have named can use the web suite with relative ease.

- 3 Ensure that the PC on which the web suite is installed has access to the Ethernet network of the router control system you want to monitor.
- 4 Launch your browser and either enter "localhost" as the URL ...

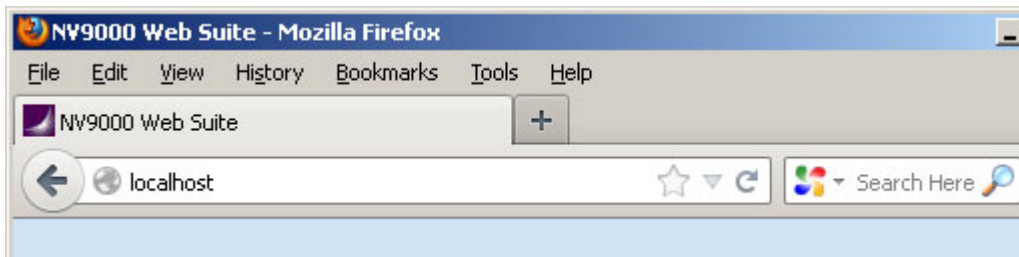

... or enter the IP address of a PC that is running the web suite service as the URL.

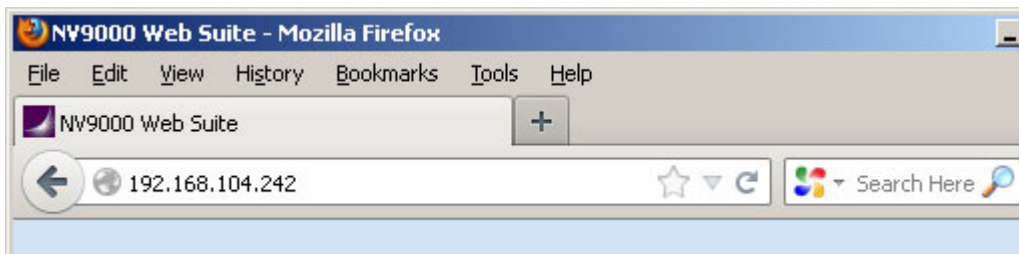


"Localhost" references your own PC. You could also enter your PC's IP address, if you know it.

If you enter the IP address of someone else's PC, you will be using the instance of the web suite running on that PC.

- ▲ Only one instance of the web suite may access DHP data at one time. See [Appendix A](#).

- 5 In any case, given a valid IP address, the web suite presents a login dialog.

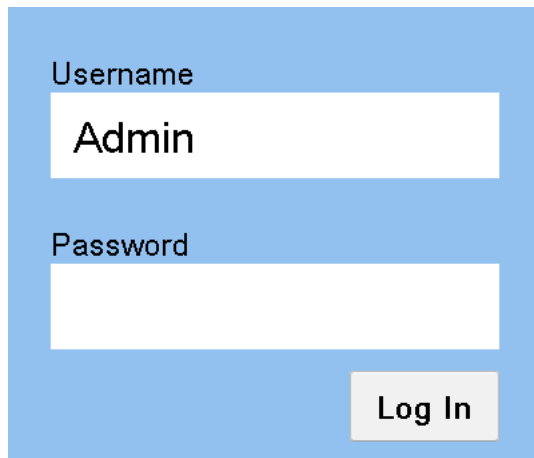

The image shows a login dialog box with a light blue background. It contains two text input fields: the first is labeled "Username" and contains the text "Admin"; the second is labeled "Password" and is empty. A "Log In" button is located at the bottom right of the dialog.

Log in using


Username = Admin
Password = Nvision1

"Admin" is a special user identity that exists only for the purpose of creating configurations and adding users to the web suite's list of users. (This identity always has admin privileges, but cannot view any of the web suite's status pages.)

- 6 First identify the system controller you want to monitor with the web suite.
See [Choosing a System Controller](#), following.
- 7 Create at least one web suite "configuration."
See [Creating a Configuration](#), following.
- 8 Add at least one user (to the initially empty list of users). Include yourself in this list and give yourself admin privilege.
See [Adding a User](#), on page 11.
- 9 After you create a configuration and add one or more users, log out and log in as one of the users you added to the list of users.
You cannot view the web suite status pages while you are logged in as 'Admin'. You can continue to create configurations and add or delete users when you are logged in as a user having admin privilege.

Choosing a System Controller

You must first identify the system controller you want to monitor with the web suite. After you have logged in as 'Admin', click the 'Configuration' tab. Then click the word 'Servers':

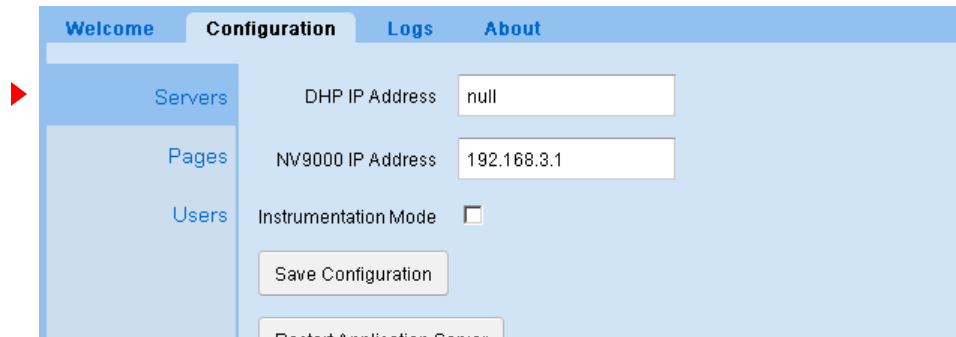


Type the IP address of the system controller or the virtual IP address of a redundant pair of system controllers in the 'NV9000 IP Address' field. (Whether your system controller is an NV960 or an NV920, its IP address goes here.)

Next, if the system controller controls a router that uses DHP, type the same IP address in the DHP IP address field. Otherwise, type "null" in that field.


Last, click 'Save Configuration'. Saving the configuration can take several minutes. If the save takes more than a few minutes, restart your browser and reacquire the web suite.

Creating a Configuration

- 1 Choose the 'Configuration' tab and select 'Pages'

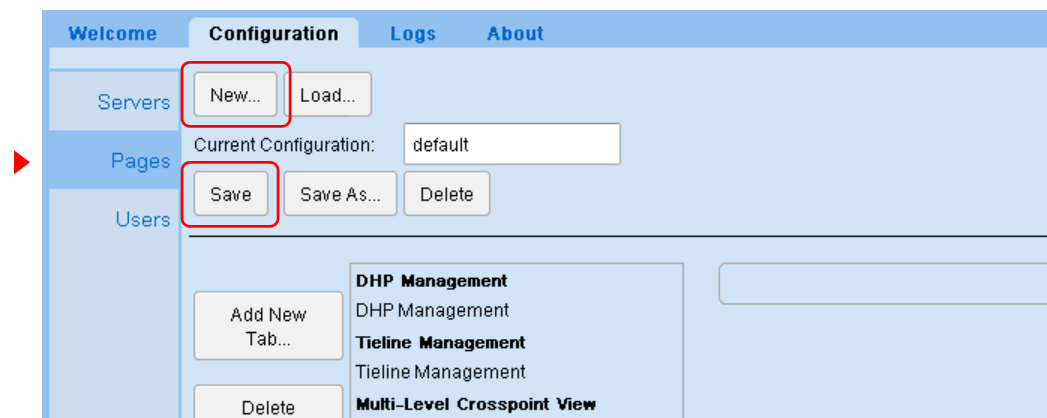


- 2 Click the 'New ...' button. A 'New Configuration' dialog appears:

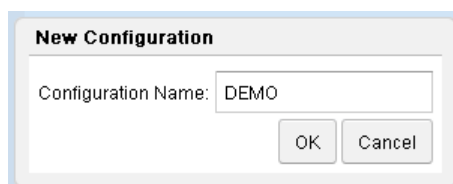


- 3 Enter a configuration name. Click 'OK'.

- At this point, there is a new configuration. The configuration is empty. It defines no tabbed pages.
- You can add tabbed pages, of 5 types, to this configuration and you can add as many of each type as you want. To add a tabbed page, click 'Add New Tab . . .' in the middle of the page:

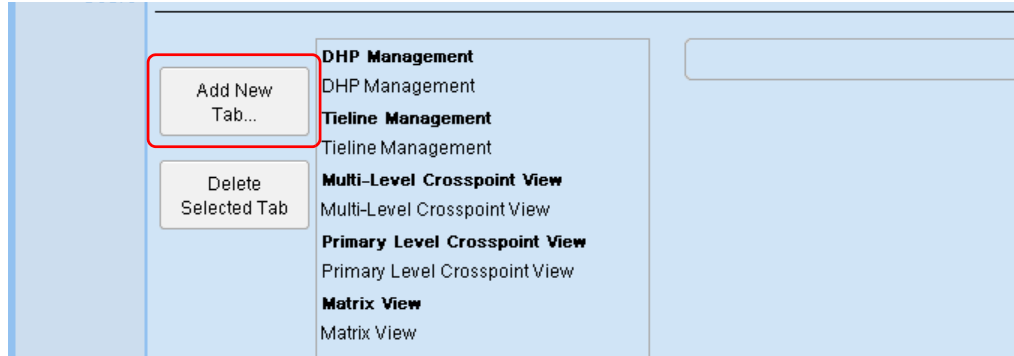

A dialog appears in which you can select a tab type:

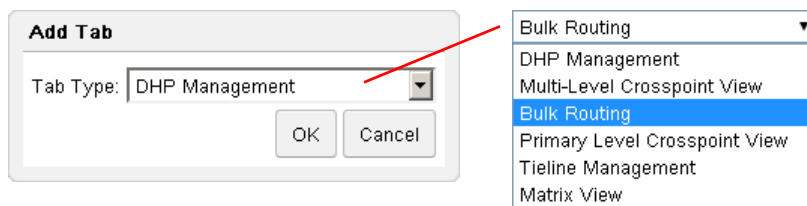


Choose a tab type and click 'OK'.

The new tab and any others you create appear in a list in the order you create them. (If you make a mistake, click on the tab's list entry and then click the 'Delete Tab' button.)

- You could edit the configuration you created, but it is not essential to do so at this time. If you wish to do so, refer to [Configuration Pages](#), on page 19 for more information.
- Finally, click the 'Save' button.

Adding a User

- Choose the 'Configuration' tab and select 'Users':

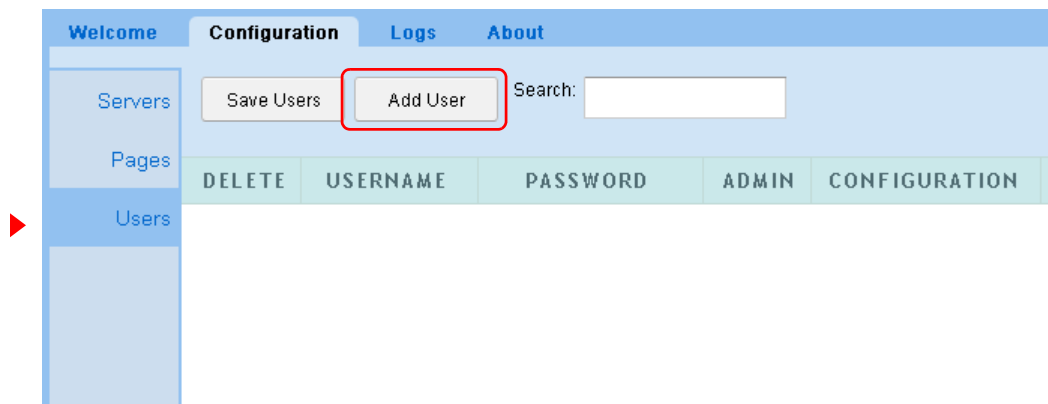

The large white area is empty at first. As you add users, it is filled with rows of data for the users you have defined.

- 2 Click the 'Add New User.' button. A new row appears in the table:

DELETE	USERNAME	PASSWORD	ADMIN	CONFIGURATION	NVUSER
<input type="checkbox"/>		Change Password	<input type="checkbox"/>	default	EnvyUser

The 'Username' field is filled with red and a message appears at the top right: "Username is empty." This message is a prompt for you to click in the 'Username' field and enter a user name. When you do (and follow the entry by pressing <enter> or <tab>) the field turns green and the prompt disappears:

DELETE	USERNAME	PASSWORD	ADMIN	CONFIGURATION	NVUSER
<input type="checkbox"/>	Fred	Change Password	<input type="checkbox"/>	default	EnvyUser

The 'Configuration' field for this user is set to the default and the field is therefore yellow. You should choose a configuration other than the default, but you are not required to do so. This field can be changed at any time.

if you do change the configuration field, the field turns green as the 'Username' field did:

DELETE	USERNAME	PASSWORD	ADMIN	CONFIGURATION	NVUSER
<input type="checkbox"/>	Fred	Change Password	<input type="checkbox"/>	workman	EnvyUser

- 3 Finally, click 'Save Users'. After a confirmation dialog, the new user data are accepted, and the display refreshes:

DELETE	USERNAME	PASSWORD	ADMIN	CONFIGURATION	NVUSER
<input type="checkbox"/>	Fred	Change Password	<input type="checkbox"/>	workman	EnvyUser

When multiple users are identified, the rows are ordered by user name.

- 4 You can also designate whether users have admin privilege in check boxes of the 'Admin' column.

Changing a Password

By default, when you add new users, they will require no password to log in.

If you want to require a password from a user, click the 'Change Password' button for that user. A dialog appears:

A dialog box titled "Change Password" with a light gray border. It contains two text input fields. The first is labeled "Enter Password:" and the second is labeled "Confirm Password:". Both fields contain seven black dots representing masked characters. Below the input fields are two buttons: "OK" and "Cancel".

Enter the password, repeat it, then click OK. Click cancel if you do not want to enter a password.

- ▲ You cannot recover this password if you forget it. But you can always enter a new password (if you can log in with admin privilege).

User IDs

NV9000-SE Utilities allows persons configuring the router control system to define user IDs. User IDs are normally associated with control panels.

In NV9000-SE Utilities, user IDs are alphanumeric strings that usually form readable names.

The web suite allows you to associate any user name defined in the NV9000 router control system with a user in the list. There are drop-down lists in the NVUSER column from which you can choose a user name. The NV9000 user name and its database ID are subsequently used to indicate which user has issued a lock or a protect on destinations in the router control system.

- ▲ It is advisable to have all NV9000 user names defined (in NV9000-SE Utilities) and assigned (in the web suite) at the earliest opportunity. Users who perform locks and protects under one NV9000 user name cannot release those locks and protects if they change to a different NV9000 user name.

Saving the User List

If you made a mistake before you save, you can discard the mistake by clicking your browser's refresh button. Doing so reloads the saved user list from the NV9000 database. (The web suite will warn you about losing the changes you made.)


Logging Out

Log out (as Admin) and log in using your own user name and password.


Use the expandable help pane (described next) to log out.

Help Pane

At the left side of the web suite window is a blue bar with a large question mark at the top and an arrow in the middle:

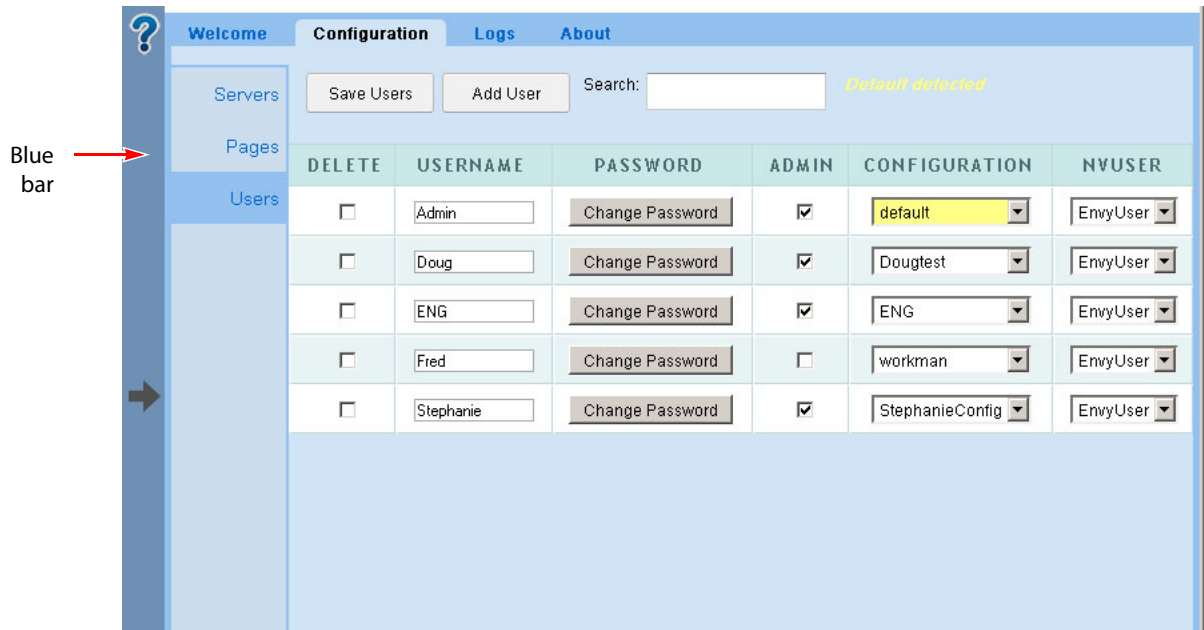

Click on this blue bar to expand the collapsed "sidebar" pane:

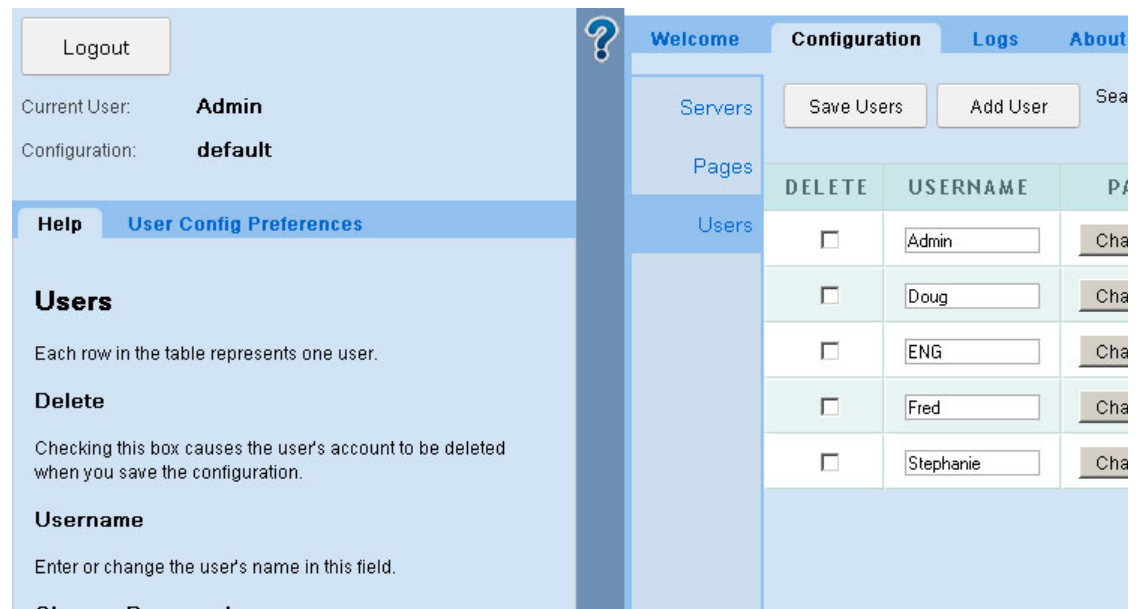

The blue bar slides to the right (when you open the pane).

If you click the bar again, it slides to the left to close the pane.

The pane presents some information about the web suite, principally, the user name and configuration you are currently using.

The pane also offers some help regarding the particular page in which you are working.

The pane also allows you to set certain preferences for the page in which you are working. The preferences differ according to the page. This document describes the preferences in the sections that describe that pages.

Logging Out

Click the 'Logout' button to log out. After you log out, the web suite immediately displays the login dialog (shown on page 9).

Usage Notes

Creating Tabbed Pages

Users with admin privilege can create new tabbed pages and modify the display options of existing pages. Refer to the ['Pages' Page](#), on page 22 for information. The 'Pages' page can be found under the 'Options > Configuration' subtab.

Display Lists

In the multi-level configuration page, the primary level configuration page, and some of the other configuration pages, you can select a set of levels and a set of destinations and sources for display. You can use standard click, shift-click, and control-click methods to select levels or destinations in the configuration pages.

In addition, you can place the levels and destinations in lists in any arbitrary order by using the 'Move Up' and 'Move Down' buttons in those configuration pages. The move buttons affect whatever list entries you have selected.

(See [Editing a Multi-Level Crosspoint Tab](#), on page 35 and [Editing a Primary Level Tab](#), on page 40.)

Similarly, you can define a list of tielines for which to display status in a tielines page. See [Editing a Tieline Tab](#), on page 32.

Similarly, you can define a list of disembedders and a list of embedders for which to display status in a DHP page. See [Editing a DHP Tab](#), on page 28.

Similarly, you can select a set of destinations (and their levels) for which to display status in a 'Bulk Routing' page. See [Editing a Bulk Routing Tab](#), on page 51.

Ordering

In the configuration pages, it is possible to specify the ordering of entries in a displayed table. The fields for the specification of displayed lists have 'Move Up' and 'Move Down' buttons that you can use to reposition selected items within a list.

Further, users can click the header of a column in a displayed table to cause the reordering of the table according to the entries in that column. Users may click the header once to get ascending order; they may click the column again to get descending order.

Navigation

You can lose recently entered configuration data if you switch pages (without saving). *The web suite will warn you if you leave a page without saving data.* However, if you use the 'back' and 'forward' buttons of your browser, you can jump from page to page without losing data.

- ▲ (In most browsers) pressing backspace on your keyboard has the same effect as switching pages. Be careful not to press backspace accidentally!

Takes

When a control panel operator performs a take, and the destination affected by the take is displayed in your web suite window, the background of the table row or table cells for the destination turns green momentarily and then fades back to white over a period of a few seconds.

Note that this phenomenon occurs only in the multi-level and primary level views and in the bulk routing view.

Locks and Protects

In the multi-level, primary level, and bulk routing pages, the table entries for destinations that are locked are colored red. The table entries for destinations that are protected are colored yellow.

In the matrix view, the matrix buttons (round-corner squares) are colored red for locked destinations and are colored yellow for protected destinations.

Long Dashes in Tables

For systems with routers that are offline, many table entries that would normally appear with source names (or other data) are void of data and have a long dash in the field.

Multi-level pages also show long dashes for levels that do not apply to the destinations listed on the page.

There is no way to distinguish a source that does not apply from a source that exists in a router that is offline. The best way to interpret the long dash is that it means "there is no applicable source name."

The same can be said about the string "-----" (8 dashes) in source name fields. This also means "there is no applicable source name." (The 8-dash string is generated by the system controller.)

2 Options Tab


Chapter 2 provides information and instructions regarding the web suite's 'Options' tab.

Summary

<i>Subtabs</i>	17
<i>Configuration Pages</i>	19
<i>Log Pages</i>	60

Subtabs

The 'Options' tab has 4 subtabs.

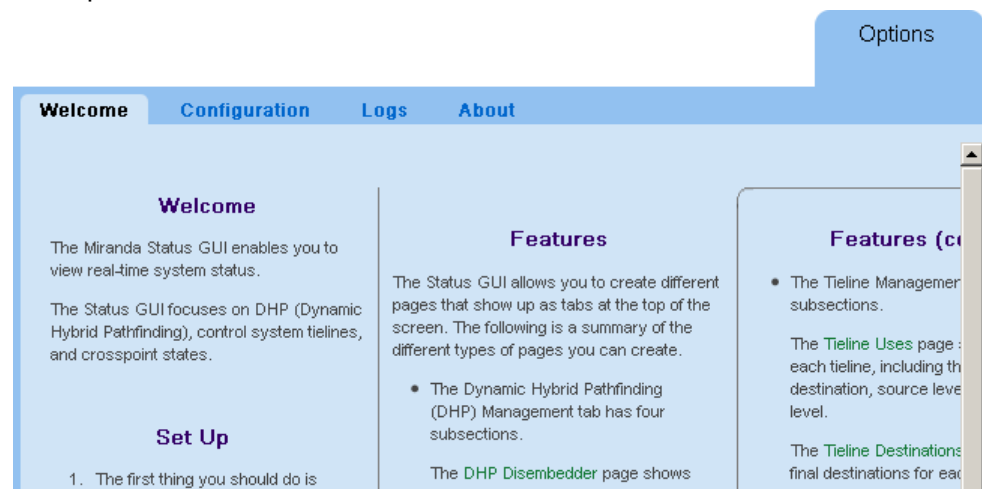

These are the subtabs and their pages:

- Welcome
- Configuration
- Logs
- About

Welcome

The 'Welcome' page offers brief setup instructions and brief descriptions of the various web suite pages.

Configuration

The 'Configuration' page allows you to create new views of NV9000 data and to customize existing views. You can create and save different web suite configurations.

(You must be logged in as a user with "admin" privilege to modify the web suite. Alternatively, you can log in as 'Admin'.)

Three Kinds of Configuration

There are 3 kinds of configuration in the 'Configuration' tab:

- Configuration of the NV9000 Web Suite (i.e., the "server").
Changes made to your web suite configuration are made in the [Servers Page](#) of the 'Configuration' subtab.
Saving changes to this type of configuration causes the NV9000 Web Suite (the "server") to restart. The restart can take several minutes.
The "server" that is running in your browser is the one you selected in your browser. That is, it is either the service running on your PC or it is the service running on someone else's PC. (See [Accessing the NV9000 Web Suite](#), on page 7.)
- Adding and removing users.
These configurations are created and modified in the [Users Page](#) of the 'Configuration' subtab.
Changes to these configurations do **not** cause the web suite service to restart.
- Configuration of the web suite pages.
These configurations are created and modified in the [Pages' Page](#) of the 'Configuration' subtab. These configurations affect the display of DHP data, tieline data, and crosspoint data. You can create many (tabbed) pages in which to view NV9000 data and there are configuration parameters for each page you create. Changes to these configurations do **not** cause the web suite service to restart.
Every user is assigned one configuration, even if it is only the default configuration, in the [Users Page](#) of the 'Configuration' subtab. (A user with admin privilege can choose his or her own web suite configuration and modify the configuration as needed.)
Changes to the data page configurations affect the display of data pages for the user in whose name you are logged in. (Generally, the page configurations are your own, but it is possible for you to be working on someone else's behalf.)

Logs

The 'Logs' subtab has 4 pages. The last page — 'Data Store' — are available only when the web suite is in instrumentation mode:

- Server Log
The 'Server Log' page presents event history for the web suite server.
See [Server Log Page](#), on page 62.
- Client Log
The 'Client Log' page presents event history for the NV9000 Web Suite client.
See [Client Log Page](#), on page 61.
- System Status
The 'System Status' page presents statistics about the web suite.
See [System Status](#), on page 61.
- Data Store
The 'Data Store' page shows the values for data within the web suite.
See [Data Store Page](#), on page 63.

About

The 'About' page presents contact information, Grass Valley's website address, legal notices, and the current revision number of the web suite.

The data presented reference the service you have selected in your browser, that is the service running on your PC.

Configuration Pages

The 'Configuration' subtab is the most important subtab of the 'Options' tab.

If you have "admin" privilege, you can add and delete web suite configurations, add and delete user IDs, and create new and alternate views (i.e., new tabs) of NV9000 data.

The 'Configuration' subtab has 3 pages:

- [Servers Page](#)
Use this page to set up the web suite service you are using.
- [Pages' Page](#)
Use this page to create new configurations, create new tabs, and to modify the views of new and existing tabs.
- [Users Page](#)
Use this page to add and delete user IDs, or to change users' passwords, and to assign configurations to users.

Servers Page

The 'Servers' page lets you modify the configuration of the web suite service you have selected. Use caution if you modify any of the entries in this page:

The screenshot shows the 'Options' tab selected in the top right corner. The main navigation bar includes 'Welcome', 'Configuration', 'Logs', and 'About'. The 'Configuration' subtab is active, and the 'Servers' subpage is selected in the left sidebar. The main content area displays the following configuration fields and controls:

DHP IP Address	<input type="text" value="null"/>
NV9000 IP Address	<input type="text" value="192.168.3.1"/>
Instrumentation Mode	<input type="checkbox"/>

Below the fields are several buttons: 'Save Configuration', 'Restart Application Server', 'Force Server Data Reload', and 'Run Server Benchmark'. At the bottom, there are two links: 'Debug Dump File' and 'Heap Dump File'.

Modifications to any of these fields do not take effect until you click the 'Save Configuration' button and the web suite service subsequently restarts.

If you make a modification to any field, it turns green or has a green outline until you have saved the web suite configuration.

Note: saving the server's (i.e., the web suite's) state causes the server to restart. That might take several minutes.

Descriptions of the fields, buttons, and other items in this page follow.

- ▲ If you click the large blue bar at the left of the page (not shown here), the help pane expands to reveal short help messages regarding the options in this page.

NV9000 IP Address

This is the IP address of the system controller (NV960 or NV920) to which you are connected or the virtual IP address of a redundant pair of system controllers.

DHP IP Address

If your system controller supports a router that uses DHP, place the system controller's IP address in this field too. If your system controller does not support DHP, enter "null" in this field.

- ▲ Reminder: DHP allows only one web suite connection to be started at any time.

Instrumentation Mode

Place a check mark in this check box if you wish to place the web suite in "instrumentation" mode.

When the web suite is in instrumentation mode, all 4 of the pages of the 'Logs' subtab under the 'Options' tab are enabled. When instrumentation mode is off, only 3 logging pages are available. Instrumentation mode also enables more detailed logging.

Save Configuration Button

Click this button to save the web suite setup to your PC.

When you save, the web suite restarts and your browser refreshes. A restart can take several minutes.

Restart Application Server Button

Click this button to restart the web suite service you have selected. A restart can take several minutes.


The service being restarted will be unavailable to you (or to others) during this time.

Force Server Data Reload Button

The data affected by this button are what the web suite displays. This button tells the server to reload all the data it collects from all sources.

Run Server Benchmark

Click this button to get a report about the performance of your web suite server. The report has this format:

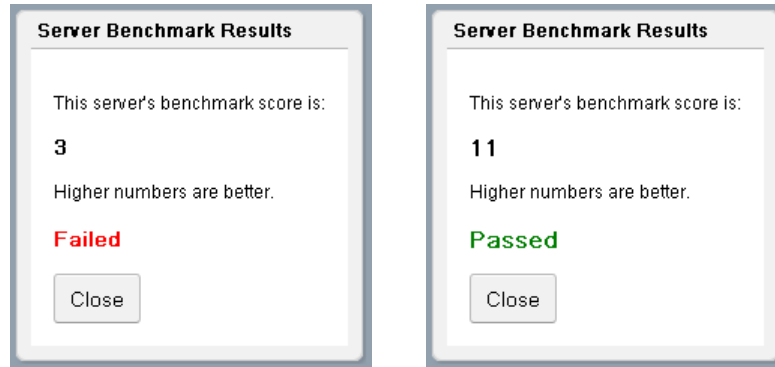

Debug Dump Files

At the bottom of the servers page are 2 options:

- Debug dump file
- Heap dump file


Click either option to save a dump file. The debug dump file has the extension .nvdat. The heap dump file is a .zip file.

Save these file only if you in a debug situation and in communication with a Grass Valley technician. You will be asked to send these files to Grass Valley. The data in these files are not readable. We recommend that you do not attempt to open these files after you have saved them.

The method for saving dump files varies according to the browser you are using.

Firefox Behavior

If you are using Firefox, this is the dialog that appears when you click 'Debug Dump File' or 'Heap Dump File':

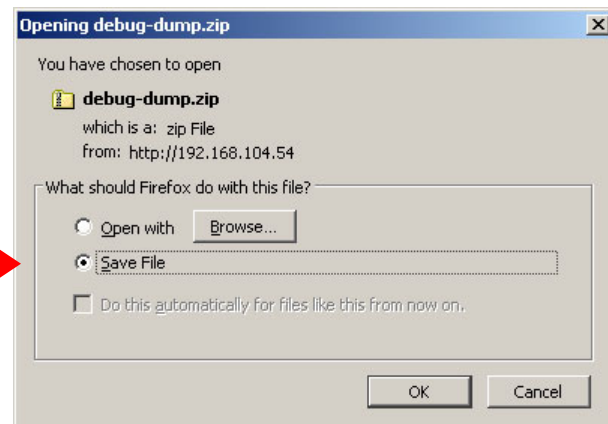


To save the debug information to a file, choose 'Save File'. Then, in the navigation dialog that follows, select a location and a name for the file.

- ▲ Do not choose 'Open with'.

Chrome Behavior

When you click 'Debug Dump File' or 'Heap Dump File', Chrome saves the file in a specific folder. Under Windows, the default folder is `C:\users\\downloads`. Under the Mac OS, the default folder is `<diskname>/<username>/downloads`.


The indication that Chrome has saved the file is that it displays the file name in the lower left corner of its window:

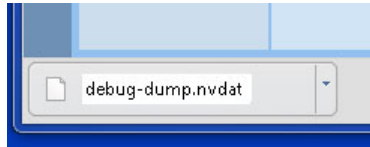

Safari Behavior

When you click 'Debug Dump File' or 'Heap Dump File', Safari saves the file in a specific folder. The default folder is `<diskname>/<username>/downloads`.

The indication that Safari has saved the file is that it briefly displays an animation that targets its download button. If you click the download button, you will see a list of downloaded files, the dump file being among the most recent. Right-click the dump file to get a context menu:

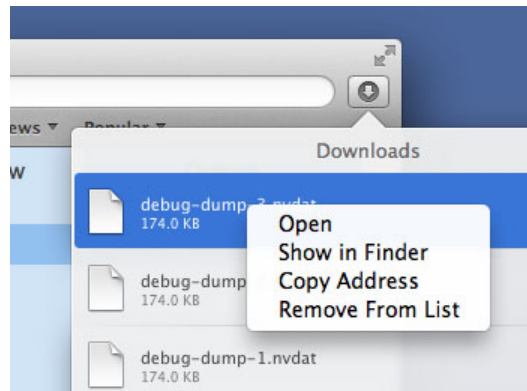


Click 'Show in Finder' in the context menu to locate the file. The OS will display a window giving the file's location.

'Pages' Page

The 'Pages' page allows you (1) to create new configurations and (2) to create or modify different tabbed pages in a selected configuration. The tabbed pages show differing views of NV9000 data. (You need admin privilege to create configurations or additional tabbed pages.)


The page for the default web suite configuration has 5 tabs defined.

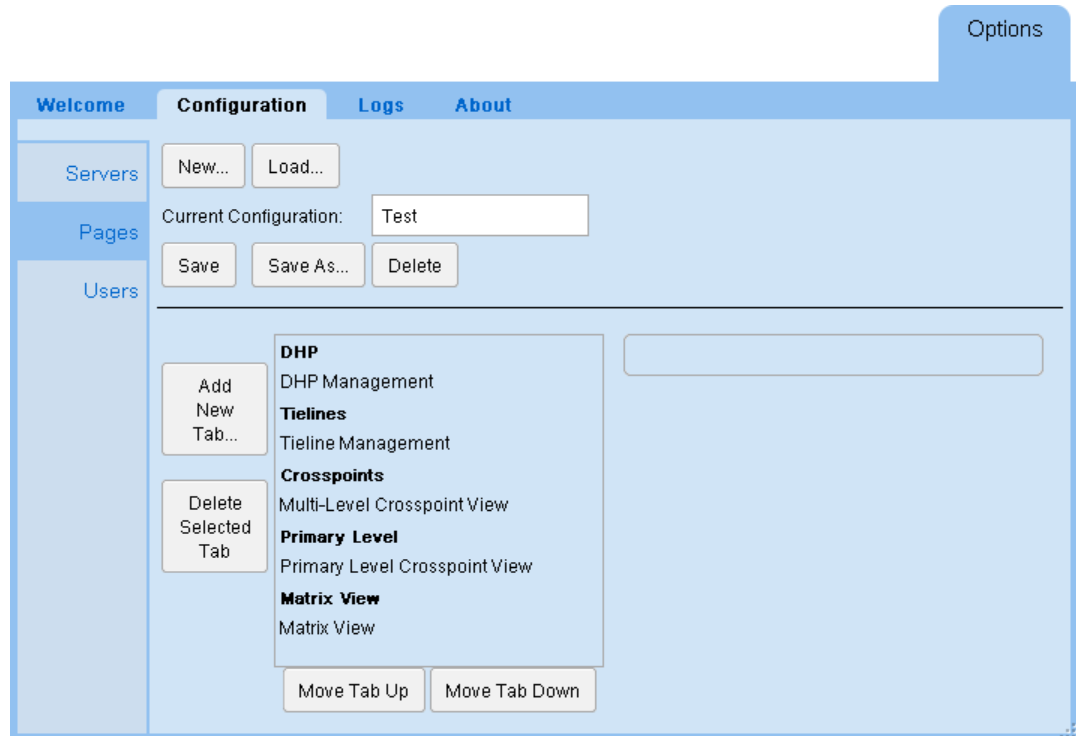

The 5 bold headings identify the 5 different page configurations in the default configuration. When you click one of the headings, the configuration options for tab that appear in the page.

Bulk Routing is not one of the 5 default tabs.

The page for *new* configurations, however, is empty (i.e, it defines no tabbed pages):

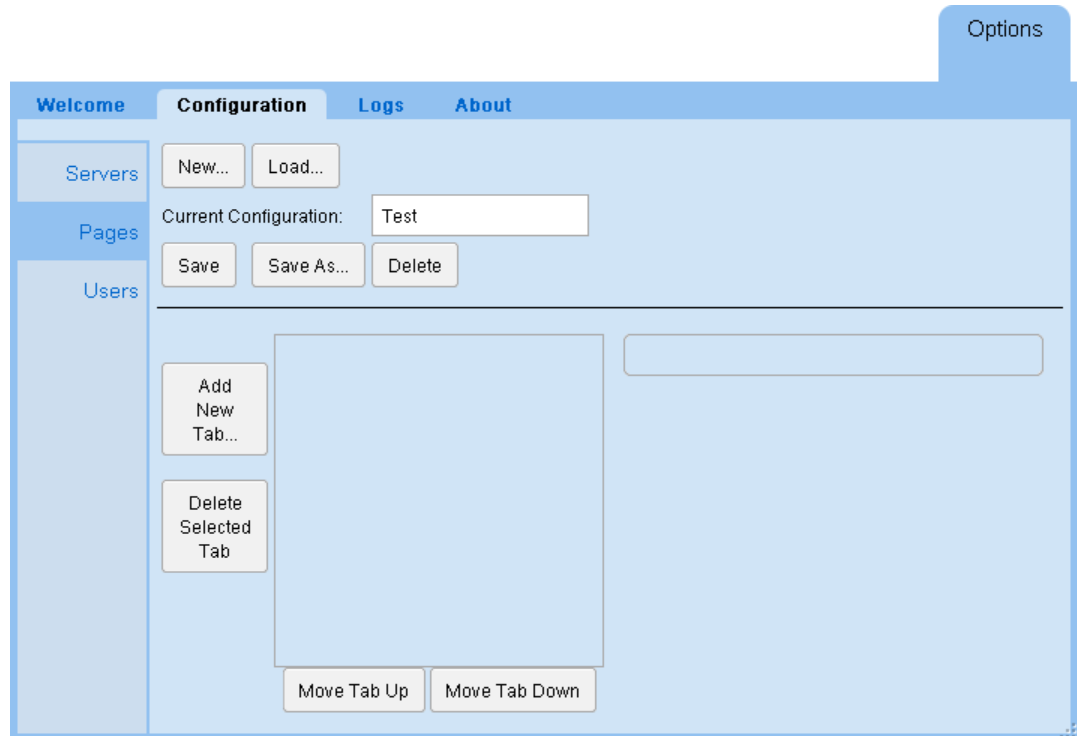

The 'Add Tab . . .' button creates tabbed pages. The 'Delete Tab' button removes tabbed pages that you have created.

Managing Configurations

These are the 5 configurations buttons at the top of the 'Pages' configuration page:

- New

Click this button to create a new web suite configuration. A dialog appears in which to specify the configuration name:


A dialog box titled 'New Configuration'. It contains a text input field labeled 'Configuration Name:'. Below the input field are two buttons: 'OK' and 'Cancel'.

Enter a name and click 'OK'.

The new configuration cannot be used until you save it. After saving it, you can load it for editing or assign it to users. You can edit the configuration at any time and you can delete the configuration at any time.


- Load . . .

Click this button to load an existing web suite configuration. A dialog appears in which to specify the configuration name:

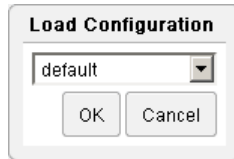


- Save

Click this button to save the web suite configuration you have been editing. A dialog appears in which you must confirm that you wish to save the configuration:

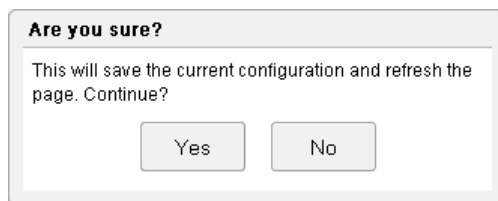

- Save as . . .

Click this button to save an existing web suite configuration as another configuration. You can also use this button to save a new configuration. A dialog appears in which to specify the new configuration name:

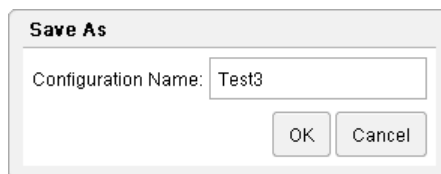

Click 'OK'. Then respond affirmatively to the confirmation message.

- Delete

Click this button to delete the configuration that you have loaded. Then respond affirmatively to this confirmation message:




(If the configuration is presently assigned to a user, you will not be allowed to delete it. The message is "Error: configuration is assigned to a user — cannot delete.")

Adding Tabbed Pages

You can create additional tabbed pages and delete any that you have created.

Click 'Add Tab . . .' to create a tabbed page. A dialog appears in which you can name the page:


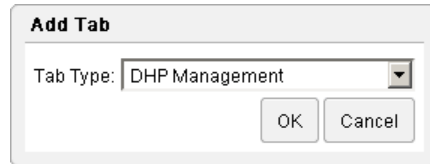


The 'Add Tab' dialog box features a 'Tab Type:' label followed by a drop-down menu currently set to 'DHP Management'. Below the menu are two buttons: 'OK' and 'Cancel'.

Choose one of the 5 tab types in the drop-down menu. These are

- DHP Management
- Tieline Management
- Multi-Level Crosspoint View
- Primary Level Crosspoint View
- Bulk Routing View
- Matrix View

When you choose a tab type, the new tab appears at the bottom of the page list. Added (or modified) tabs are highlighted in green. Selected tabs are highlighted in blue. Click the new tab to change its name and edit its parameters:

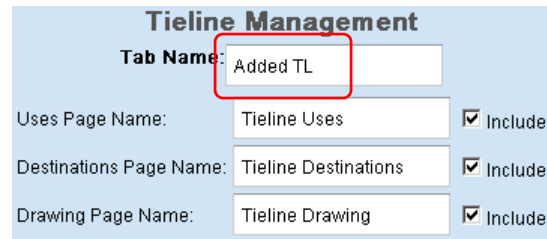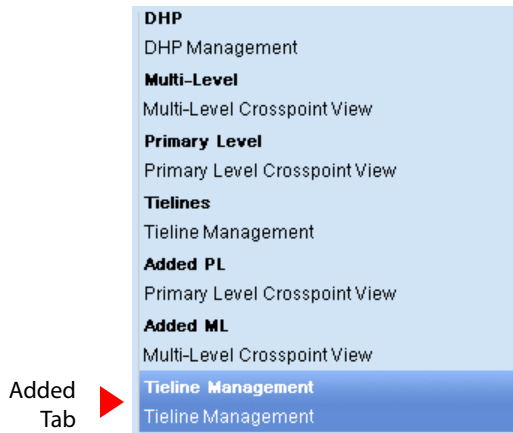


The 'Tieline Management' configuration dialog has a 'Tab Name:' field with 'Added TL' entered. Below are three rows, each with a label, a text field, and a checked 'Include' checkbox: 'Uses Page Name:' with 'Tieline Uses', 'Destinations Page Name:' with 'Tieline Destinations', and 'Drawing Page Name:' with 'Tieline Drawing'.

You can click the 'Save' button, at the top of the screen, at any time to save the changes you have made. (Respond affirmatively to the confirmation message that appears when you save.)

(You could also click 'Save as . . .')

After you save, the newly added tab appears in the list of tabs normally, with its new name:

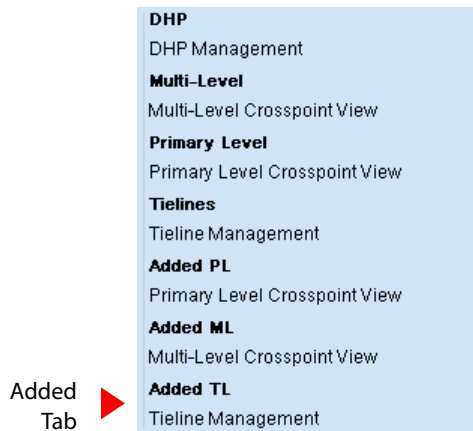

Ordering Tabbed Pages

You can cause the tabs to appear in your web suite window in any order you like.

To position a tabbed page in the ordering, click the name of the page in the list of pages. Then click the 'Move Up' or 'Move Down' button one or more times so that it is in the desired place (or near to the desired place).

- ▲ These are the 'Move Up' and 'Move Down' buttons directly below the tabbed page list. There are other 'Move Up' and 'Move Down' buttons elsewhere on the page. Those are for re-ordering the lists you have defined for a page.

Repeat this process for other pages until all the pages in the list are in the desired order.


The ordering takes effect the next time you click 'Save' (or 'Save As . . .').

Deleting Tabbed Pages

Select the tab you want to delete in the list of tabs at the left.

Click the 'Delete Tab' button.

The tab and its parameter fields become highlighted in gray:

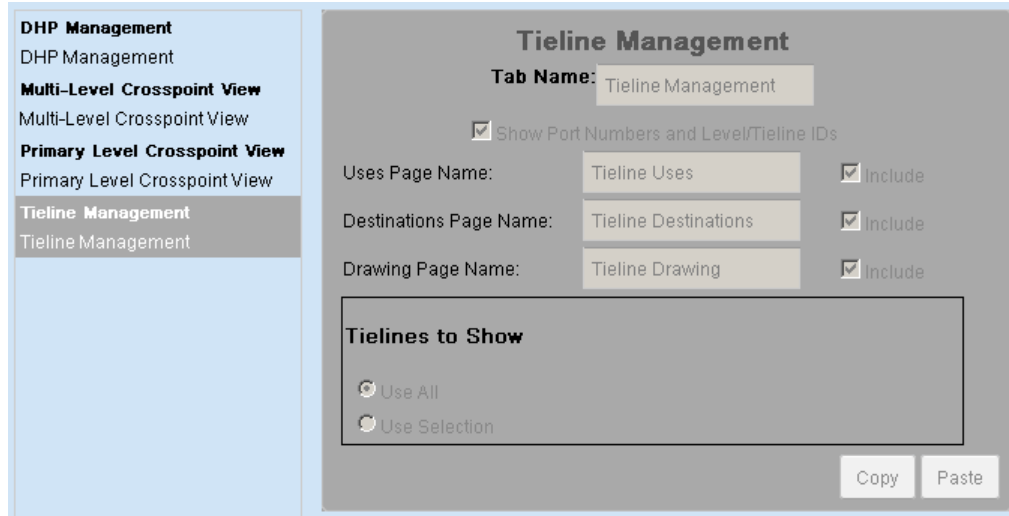

Click the 'Save' button to complete the deletion. The configuration is redisplayed, now without the tabs that were deleted.

If you change your mind about deleting a tab, there is no direct way to unselect tabs marked for deletion. To cause the tab(s) to become unselected, switch momentarily to another page of the web suite and return to the 'Page' page. The tabs will appear normally — unselected.

Editing a DHP Tab


You can control the appearance and content of a DHP tab by editing its parameters in the 'Pages' configuration page.

A DHP tab has up to 4 sub tabs:

Disembedder Embedder Reentry Drawing

You can also control the appearance of any of these subtabs by indicating your preferences on the sidebar of a particular DHP subtab when the subtab is displayed. (Click the blue bar at the left of the web suite window to reveal the sidebar.)

Click on a DHP tab in the list of tabs at the left of the 'Pages' configuration page. The DHP tab entry becomes highlighted and the DHP tab configuration fields of the page appear:

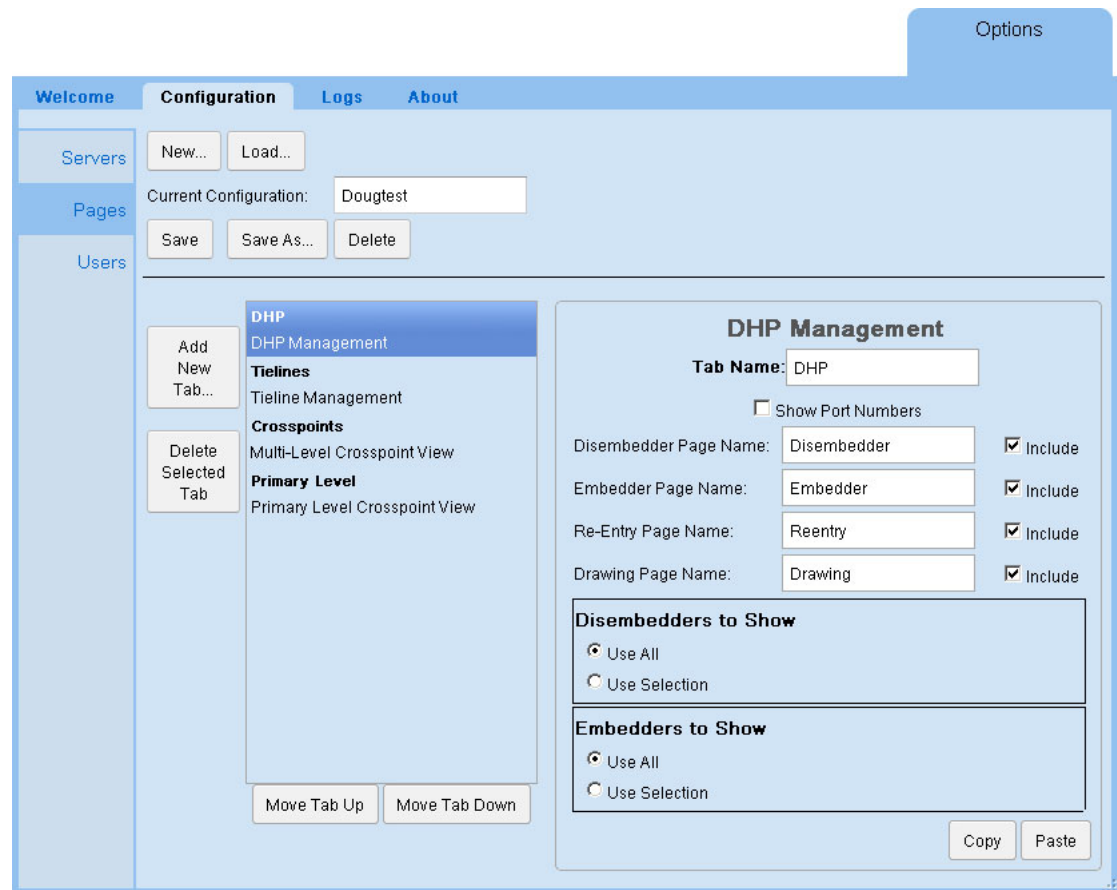

Use the check boxes at the right to enable or disable the display of any of the four DHP subtabs.

Specify the names (or titles) of the subtabs in the fields just to the left of the check boxes. You can specify the title of the DHP tab as well.

Check the 'Show Port Numbers' check box if you want the DHP subtabs to display port numbers in addition to port names.

▲ You can click the 'Save' button at any time to retain your changes.

Disembedders to Show

Below the fields for the names of the DHP subtabs is a region in which you can specify for which of DHP's disembedders the web suite displays status. In this section are two radio buttons:

- Use All
- Use Selection

The default choice is 'Use All' as shown in the preceding illustration. In this case, the web suite provides status for all disembedders and embedders that are defined in the NV9000 system at the time the page is displayed.

Choose 'Use Selection' in the 'Disembedders to Show' region if you want to specify which disembedders the DHP subtabs are to report. The 'Disembedders to Show' region expands to allow you to form the disembedder selection:

The 'Use Selection' fields include filtering options. See [Filter Options for Disembedders](#), following.

The items on the left—under “Don’t Include”—are the disembedders that do *not* appear in the DHP subtabs.

The items on the right—under “Include”—are the disembedders that *do* appear in the DHP subtabs.

To move disembedders from the “Don’t Include” list to the “Include” list, select one or more entries in the “Don’t Include” list and click the ‘Append >’ button or click ‘Append All >>’.

To move disembedders from the “Include” list to the “Don’t Include” list, select one or more entries in the “Include” list and click the ‘< Remove’ button or click ‘<< Remove All’.

Click ‘Append Blank Entry’ if you want to create a blank line that functions as a separator in your ‘Include’ list. The separator can help you organize the list. The separator also creates a blank row in the table that is displayed in the page (or pages) of the tab you are editing.

Use the ‘Move Up’ and ‘Move Down’ buttons under the “Include” list to reorder the disembedders. Select one or more disembedders in the “Include” list and click ‘Move Up’ or ‘Move Down’ as appropriate to create the ordering you want.

Filter Options for Disembedders

Click the triangle for the ‘Filter Options’ to expose the filter options:

There is one option: a 'Search' field. If you specify some text in the 'Search' field, the filter use a substring matching method: if the substring you enter as the filter appears in the disembedder name or its ID, the disembedder can be in the lists.

The filter ignores the search field if it is blank.

Embedders to Show

Below the fields for the names of the DHP subtabs is a region in which you can specify for which of DHP's embedders the web suite displays status. In this section are two radio buttons:

- Use All
- Use Selection

The default choice is 'Use All' as shown in the illustration above. In this case, the web suite provides status for all embedders that are defined in the NV9000 system at the time of the status report.

Choose 'Use Selection' in the 'Embedders to Show' region if you want to specify which embedders the DHP subtabs are to report. The 'Embedders to Show' region expands to allow you to form the embedder selection:

Embedders to Show

Use All
 Use Selection

▶ Filter Options

Don't Include	Include										
<table border="1"><thead><tr><th>Embedder</th></tr></thead><tbody><tr><td>Embedder 19</td></tr><tr><td>Embedder 20</td></tr></tbody></table>	Embedder	Embedder 19	Embedder 20	<table border="1"><thead><tr><th>Embedder</th></tr></thead><tbody><tr><td>Embedder 21</td></tr><tr><td>Embedder 22</td></tr><tr><td>Embedder 23</td></tr><tr><td>Embedder 24</td></tr><tr><td>Embedder 25</td></tr><tr><td>Embedder 26</td></tr></tbody></table>	Embedder	Embedder 21	Embedder 22	Embedder 23	Embedder 24	Embedder 25	Embedder 26
Embedder											
Embedder 19											
Embedder 20											
Embedder											
Embedder 21											
Embedder 22											
Embedder 23											
Embedder 24											
Embedder 25											
Embedder 26											

Append >
< Remove
Append All >>
<< Remove All
Append Blank Entry >

Move Up Move Down

The 'Use Selection' fields include filtering options. See [Filter Options for Embedders](#), following.

The items on the left—under "Don't Include"—are the embedders that do *not* appear in the DHP subtabs. The items on the right—under "Include"—are the embedders that *do* appear in the DHP subtabs.

To move embedders from the "Don't Include" list to the "Include" list, select one or more entries in the "Don't Include" list and click the 'Append >' button or click 'Append All >>'.

 
To move embedders from the "Include" list to the "Don't Include" list, select one or more entries in the "Include" list and click the '< Remove' button or click '<< Remove All'.

Click 'Append Blank Entry' if you want to create a blank line that functions as a separator in your 'Include' list. The separator can help you organize the list. The separator also creates a blank row in the table that is displayed in the page (or pages) of the tab you are editing.

Use the 'Move Up' and 'Move Down' buttons under the "Include" list to reorder the embedders. Select one or more embedders in the "Include" list and click 'Move Up' or 'Move Down' as appropriate to create the ordering you want.

Filter Options for Embedders

Click the triangle for the 'Filter Options' to expose the options:



There is one option: a 'Search' field. If you specify some text in the 'Search' field, the filter use a substring matching method: if the substring you enter as the filter appears in the embedder name or its ID, the embedder can be in the lists.

The filter ignores the search field if it is blank.

Copy and Paste Buttons

The 'Copy' and 'Paste' buttons allow you to transfer page configuration data from one tab to another tab.

It is *not* possible to copy the lists from the web suite to another application such as Notepad or Excel.

- ▲ Data for the configuration of DHP pages are not applicable in any other web suite page. Although you can "copy" DHP data, the 'Paste' button remains disabled in all other pages.

Editing a Tieline Tab


You can control the appearance and content of a tieline tab by editing its parameters in the 'Pages' configuration page.

A tieline tab has up to 3 sub tabs:

Tieline Uses Tieline Destinations Tieline Drawings

You can also control the appearance of any of these subtabs by indicating your preferences on the sidebar of a particular tieline subtab when the subtab is selected. (Click the blue bar at the left of the web suite window to reveal the sidebar.)

Click on a tieline tab in the list of tabs at the left of the 'Pages' configuration page. The tieline tab entry becomes highlighted and the tieline tab configuration fields of the page appear:

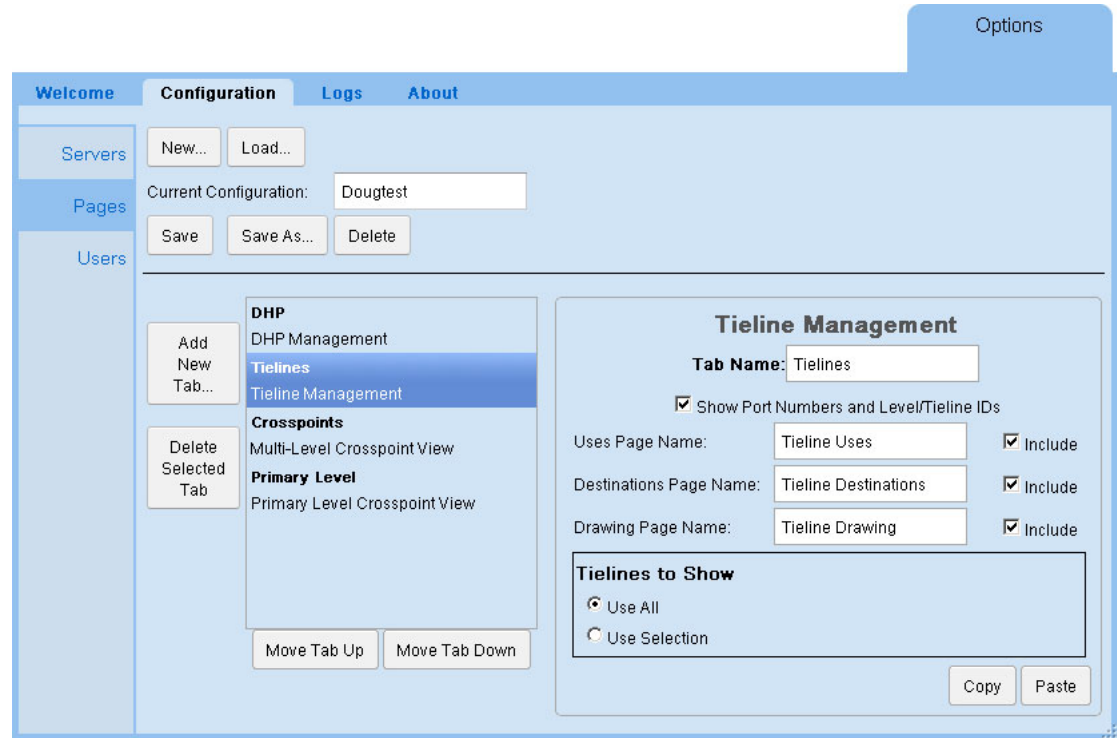

Use the check boxes to enable or disable the display of any of the three tieline subtabs.

Specify the names (or titles) of the subtabs in the fields just to the left of the check boxes. You can specify the name of the tieline tab as well.

Check the 'Show Port Numbers and Level/Tieline IDs' check box if you want the subtabs to display port numbers in addition to port names and level IDs and tieline IDs.

▲ You can click the 'Save' button at any time to retain your changes.

Tielines to Show

Below the fields for the names of the tieline subtabs is a region in which you can specify for which tielines the NV9000 Web Suite displays status. In this section are two radio buttons:

- Use All
- Use Selection

The default choice is 'Use All' as shown in the illustration above. In this case, the web suite provides status for all tielines that are defined in the NV9000 system at the time the page is displayed.

Choose 'Use Selection' in the 'Tielines to Show' region if you want to specify which tielines the tielines tab is to report. The 'Tielines to Show' region expands to allow you to form the tieline selection:

Tielines to Show

Use All
 Use Selection

▶ Filter Options

Don't Include

ID	Name
5	BC1
6	BC2
7	BC3
8	BC4

Include

ID	Name
1	AB1
2	AB2
3	AB3
4	AB4

Append >
< Remove
Append All >>
<< Remove All
Append Blank Entry >

Move Up Move Down

The 'Use Selection' fields include filtering options. See [Filter Options for Tielines](#), following.

The items on the left — under "Don't Include" — are the tielines that do *not* appear in the tielines tab.

The items on the right — under "Include" — are the tielines that *do* appear in the tielines tab.

To move tielines from the "Don't Include" list to the "Include" list, select one or more entries in the "Don't Include" list and click the 'Append >' button or click 'Append All >>'.

To move tielines from the "Include" list to the "Don't Include" list, select one or more entries in the "Include" list and click the '< Remove' button or click '<< Remove All'.

Click 'Append Blank Entry' if you want to create a blank line that functions as a separator in your 'Include' list. The separator can help you organize the list. The separator also creates a blank row in the table that is displayed in the page (or pages) of the tab you are editing.

Use the 'Move Up' and 'Move Down' buttons under the "Include" list to reorder the tielines. Select one or more tielines in the "Include" list and click 'Move Up' or 'Move Down' as appropriate to create the ordering you want.

Filter Options for Tielines

Click the triangle for the 'Filter Options' to expose the options:

▼ Filter Options

Search:

Tieline Group: Display All ▼

The filter has 2 parts: a tieline is included in the lists if it meets both criteria.

If you specify some text in the 'Search' field, the filter use a substring matching method: if the substring you enter as the filter appears in the tieline name or its ID, the tieline can be in the lists.

If you choose a tieline group in the 'Tieline Group' drop-down list, the list is restricted to those tielines that belong to the specified group.

The filter ignores the search field if it is blank. It ignores the group criterion if you choose 'Display All'.

- ▲ Note that your system might not have tieline groups. In that case, 'Display All' is the only option in the drop-down list.

Copy and Paste Buttons

The 'Copy' and 'Paste' buttons allow you to transfer page configuration data from one tab to another tab.

It is *not* possible to copy the lists from the web suite to another application such as Notepad or Excel.

- ▲ Data for the configuration of tieline pages are not applicable in any other web suite page. Although you can "copy" tieline data, the 'Paste' button remains disabled in all other pages.


Editing a Multi-Level Crosspoint Tab

You can control the appearance and content of a multi-level crosspoint tab by editing its parameters in the 'Pages' configuration page.

A multi-level crosspoint tab has no subtabs.

You can also control the appearance of the tab by indicating your preferences on the sidebar of when the tab is selected. (Click the blue bar at the left of the web suite window to reveal the sidebar.)

To edit a multi-level crosspoint tab, click on a multi-level crosspoint tab in the list of tabs at the left of the 'Pages' configuration page. The multi-level crosspoint tab entry becomes highlighted and the multi-level configuration fields of the page appear:

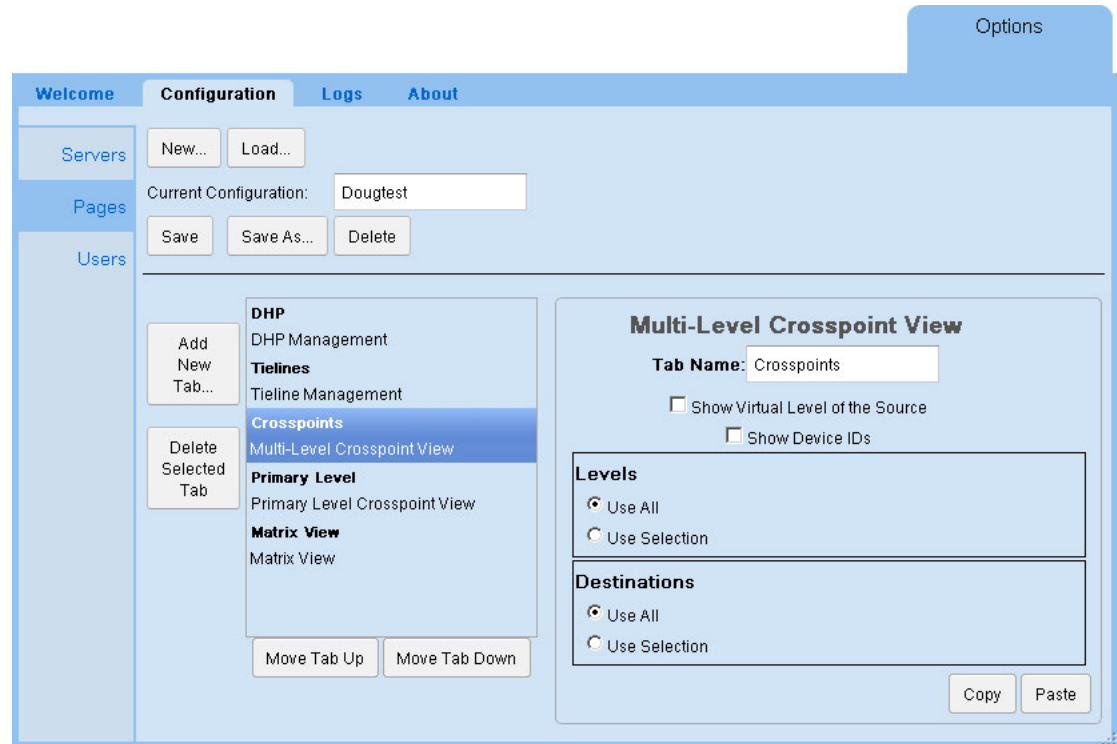

You can specify the name (or title) of the multi-level crosspoint tab.

There are several editing options. There are two check boxes that control how sources are displayed. There are 4 radio buttons in two regions.

The first region is for the levels that this particular multi-level page displays. The multi-level page can display data either for all levels or for selected levels. (There is a table *column* for each level displayed.) If you choose 'Use Selection', the region expands to allow you to form the level selection. See [Level Selection](#), following.

The second region is for the destinations to be displayed. The page can display data for all destinations or for selected destinations. (There is a table *row* for each destination displayed.) If you choose 'Use Selection' in this region, the region expands to allow you to form the destination selection. See [Destination Selection](#), following.

▲ You can click the 'Save' button at any time to retain your changes.

Source Options

There are two check boxes that control how sources are displayed:

- Show Virtual Level of the Source.
- Show Device IDs.

These options are unchecked by default.

The rows of the table in a multi-level display represent destinations. The columns of the table represent the *destinations'* virtual levels.

The 'Show Virtual Level of the Source' check box causes the name of the virtual level of the source to appear in (non-null) table entries. This is useful for breakaway situations.

The 'Show Device IDs' check box causes the NV9000 device ID to appear in the (non-null) table entries. Device IDs are useful if the NV9000 configuration has duplicate source names. Device IDs cannot ever be duplicated.

Level Selection

Choose 'Use All' in the 'Levels' region if you want the multi-level display to report sources for all NV9000 virtual levels, regardless of what those levels are. The NV9000 configuration could change, adding or deleting virtual levels, and your multi-level page will adjust.

Choose 'Use Selection' in the 'Levels' region if you want to specify which levels the table is to report. The 'Levels' region expands to allow you to form the level selection:

Levels

Use All
 Use Selection

▶ Filter Options

Don't Include		Include	
ID	Name	ID	Name
3	VIDEO	1	HD
4	AV	2	SD
5	AA	6	AES 1/2
10	AES 9/10	7	AES 3/4
11	AES 11/12	8	AES 5/6
12	AES 13/14	9	AES 7/8
13	AES 15/16		
14	AUDIO 1		
15	AUDIO 2		
16	AUDIO 3		
17	AUDIO 4		
18	AUDIO 5		
19	AUDIO 6		
20	AUDIO 7		
21	AUDIO 8		

Append >
< Remove
Append All >>
<< Remove All
Append Blank Entry >

Move Up Move Down

The 'Use Selection' fields include filtering options. See [Filter Options for Levels](#), following.

The items on the left—under "Don't Include"—are the virtual levels that do *not* appear in the multi-level page.

The items on the right—under "Include"—are the virtual levels that *do* appear in the multi-level page.

To move levels from the "Don't Include" list to the "Include" list, select one or more entries in the "Don't Include" list and click the 'Append >' button or click 'Append All >>'.

To move levels from the "Include" list to the "Don't Include" list, select one or more entries in the "Include" list and click the '< Remove' button or click '<< Remove All'.

Click 'Append Blank Entry' if you want to create a blank line that functions as a separator in your 'Include' list. The separator can help you organize the list. The separator also creates a blank row in the table that is displayed in the page (or pages) of the tab you are editing.

Use the 'Move Up' and 'Move Down' buttons under the "Include" list to reorder the virtual levels (i.e., the table *columns*). Select one or more levels in the "Include" list and click 'Move Up' or 'Move 'Down' as appropriate to create the ordering you want.

Filter Options for Levels

Click the triangle for the 'Filter Options' to expose the options:



The image shows a light blue rectangular panel titled "Filter Options" with a downward-pointing triangle to its left. Inside the panel, there are two input fields. The first is labeled "Search:" and is an empty text box. The second is labeled "Level Set:" and is a dropdown menu with "Display All" selected and a small downward arrow to its right.

The filter has 2 parts: a level is included in the lists if it meets both criteria.

If you specify some text in the 'Search' field, the filter use a substring matching method: if the substring you enter as the filter appears in the level name or its ID, the level can be in the lists.

If you choose a level set in the 'Level Set' drop-down list, the list is restricted to those levels that belong to the level set.

The filter ignores the search field if it is blank. It ignores the level set criterion if you choose 'Display All'.

Destination Selection

Choose 'Use All' in the 'Destinations' region if you want the multi-level display to report all NV9000 destinations, regardless of what those destinations are. The NV9000 configuration could change, adding or deleting destinations, and your multi-level page will adjust.

Choose 'Use Selection' in the 'Destinations' region if you want to specify which destinations the table is to report. The 'Destinations' region expands to allow you to form the destination selection:

Destinations

Use All
 Use Selection

▶ Filter Options

Don't Include		Include	
ID	Name	ID	Name
25	AOUT 9	17	AOUT 1
26	AOUT 10	18	AOUT 2
27	AOUT 11	19	AOUT 3
28	AOUT 12	20	AOUT 4
29	AOUT 13	21	AOUT 5
30	AOUT 14	22	AOUT 6
31	AOUT 15	23	AOUT 7
32	AOUT 16	24	AOUT 8
49	BOUT 1		
50	BOUT 2		
51	BOUT 3		
52	BOUT 4		
53	BOUT 5		
54	BOUT 6		
55	BOUT 7		

Append >
< Remove
Append All >>
<< Remove All
Append Blank Entry >

Move Up Move Down

The 'Use Selection' fields include filtering options. See [Filter Options for Destinations](#), following.

The items on the left—under "Don't Include"—are the destinations that do *not* appear in the multi-level page.

The items on the right—under "Include"—are the destinations that *do* appear in the multi-level page.

To move destinations from the "Don't Include" list to the "Include" list, select one or more entries in the "Don't Include" list and click the 'Append >' button or click 'Append All >>'.


To move destinations from the "Include" list to the "Don't Include" list, select one or more entries in the "Include" list and click the '< Remove' button or click '<< Remove All'.

Click 'Append Blank Entry' if you want to create a blank line that functions as a separator in your 'Include' list. The separator can help you organize the list. The separator also creates a blank row in the table that is displayed in the page (or pages) of the tab you are editing.

Use the 'Move Up' and 'Move Down' buttons under the "Include" list to reorder the destinations (i.e., the table rows). Select one or more destinations in the "Include" list and click 'Move Up' or 'Move Down' as appropriate to create the ordering you want.

Filter Options for Destinations

Click the triangle for the 'Filter Options' to expose the options:

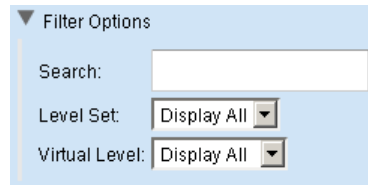

The screenshot shows a light blue panel titled 'Filter Options' with a downward-pointing triangle icon. Below the title are three input fields: a text box labeled 'Search:', a dropdown menu labeled 'Level Set:' with 'Display All' selected, and another dropdown menu labeled 'Virtual Level:' also with 'Display All' selected.

The filter has 3 parts: a destination is included in the lists if it meets all 3 criteria.

If you specify some text in the 'Search' field, the filter use a substring matching method: if the substring you enter as the filter appears in the destination name or its ID, the destination can be in the lists.

If you choose a level set in the 'Level Set' drop-down list, the list is restricted to those destination devices that are associated with the level set.

If you choose a virtual level in the 'Virtual Level' drop-down list, the list is restricted to those destination devices that include the virtual level in their level set.

The filter ignores the search field if it is blank. It ignores the level set criterion if you choose 'Display All'. It ignores the virtual level criterion if you choose 'Display All' for that.

Copy and Paste Buttons

The 'Copy' and 'Paste' buttons allow you to transfer page configuration data from one tab to another tab.

When you click 'Copy', all configuration data for that page— all option flags, all 'Don't Include' lists, all 'Include' lists—are captured in a private buffer ready for pasting elsewhere.

When you click 'Paste', presumably in another page, all applicable data are transferred from the private buffer to the fields of the page. Data in the buffer that do not apply to the page are not transferred.

Data that were present in the fields that are affected by the 'Paste' operation are overwritten. Fields not applicable to the 'Paste' are not affected.

It is *not* possible to copy the lists from the web suite to another application such as Notepad or Excel.

- ▲ Data for the configuration of multi-level pages are not applicable in DHP or tieline pages. Although you use the 'Copy' button, the 'Paste' button remains disabled in those pages. Portions of the data from multi-level pages are applicable to primary level pages and matrix views. These data can be copied.


Editing a Primary Level Tab

You can control the appearance and content of a primary level crosspoint tab by editing its parameters in the 'Pages' configuration page.

A primary level crosspoint tab has no subtabs.

You can also control the appearance of the tab by indicating your preferences on the sidebar of when the tab is selected. (Click the blue bar at the left of the web suite window to reveal the sidebar.)

To edit a primary level crosspoint tab, click on a primary level tab in the list of tabs at the left of the 'Pages' configuration page. The primary level tab entry becomes highlighted and the primary level tab configuration fields of the page appear:

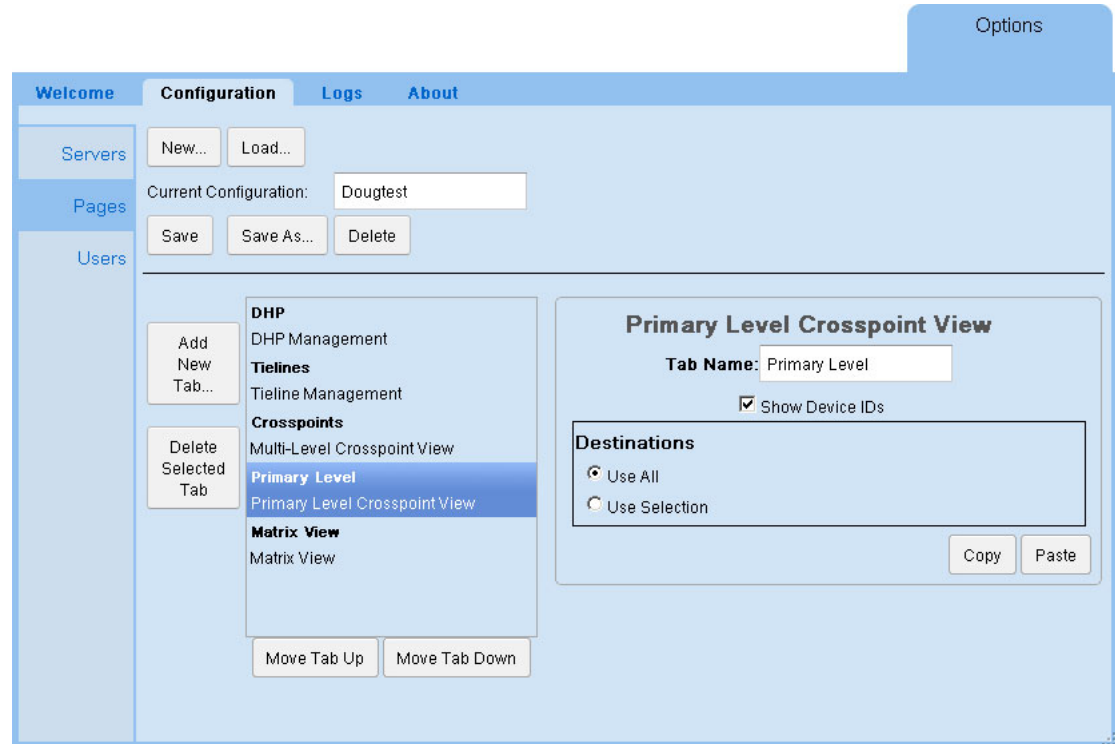

You can specify the name (or title) of the primary level tab.

- ▲ The primary level page displays destination/source pairs. The source paired with the destination is the source routed to the destination on the destination's *primary level*.
- ▲ The number of destination/source pairs displayed in the primary level tab can be specified in the preferences for that tab.

There are several editing options.

Checking the 'Show Device IDs' check box causes the NV9000 device ID to appear in the (non-null) table entries. Device IDs are useful if the NV9000 configuration has duplicate source names. Device IDs are never duplicated.

The 'Destinations' region is for the destinations to be displayed. The page can display data for all destinations or for selected destinations. If you choose 'Use Selection', the region expands to allow you to form the destination selection. See [Destination Selection](#), following.

- ▲ You can click the 'Save' button at any time to retain your changes.

Destination Selection

Choose 'Use All' in the 'Destinations' region if you want the primary level display to report all NV9000 destinations, regardless of what those destinations are. The NV9000 configuration could change, adding or deleting destinations, and your primary level page will adjust.

Choose 'Use Selection' in the 'Destinations' region if you want specify which destinations the table is to report. The 'Destinations' region expands to allow you to form the destination selection:

Destinations

Use All
 Use Selection

▶ Filter Options

Don't Include		Include	
ID	Name	ID	Name
25	AOUT 9	17	AOUT 1
26	AOUT 10	18	AOUT 2
27	AOUT 11	19	AOUT 3
28	AOUT 12	20	AOUT 4
29	AOUT 13	21	AOUT 5
30	AOUT 14	22	AOUT 6
31	AOUT 15	23	AOUT 7
32	AOUT 16	24	AOUT 8
49	BOUT 1		
50	BOUT 2		
51	BOUT 3		
52	BOUT 4		
53	BOUT 5		
54	BOUT 6		
55	BOUT 7		

Append >
< Remove
Append All >>
<< Remove All
Append Blank Entry >

Move Up Move Down

The 'Use Selection' fields include filtering options. See [Filter Options for Destinations](#), following.

The items on the left—under "Don't Include"—are the destinations that do *not* appear in the multi-level page.

The items on the right—under "Include"—are the destinations that *do* appear in the multi-level page.

To move destinations from the "Don't Include" list to the "Include" list, select one or more entries in the "Don't Include" list and click the 'Append >' button or click 'Append All >>'.

To move destinations from the "Include" list to the "Don't Include" list, select one or more entries in the "Include" list and click the '< Remove' button or click '<< Remove All'.

Click 'Append Blank Entry' if you want to create a blank line that functions as a separator in your 'Include' list. The separator can help you organize the list. The separator also creates a blank row in the table that is displayed in the page (or pages) of the tab you are editing.

Use the 'Move Up' and 'Move Down' buttons under the "Include" list to reorder the destinations (i.e., the table rows). Select one or more destinations in the "Include" list and click 'Move Up' or 'Move Down' as appropriate to create the ordering you want.

Filter Options for Destinations

Click the triangle for the 'Filter Options' to expose the options:

The screenshot shows a light blue panel titled 'Filter Options' with a downward-pointing triangle icon. Below the title are three input elements: a text box labeled 'Search:', a dropdown menu labeled 'Level Set:' with 'Display All' selected, and another dropdown menu labeled 'Virtual Level:' also with 'Display All' selected.

The filter has 3 parts: a destination is included in the lists if it meets all 3 criteria.

If you specify some text in the 'Search' field, the filter use a substring matching method: if the substring you enter as the filter appears in the destination name or its ID, the destination can be in the lists.

If you choose a level set in the 'Level Set' drop-down list, the list is restricted to those destination devices that are associated with the level set.

If you choose a virtual level in the 'Virtual Level' drop-down list, the list is restricted to those destination devices that include the virtual level in their level set.

The filter ignores the search field if it is blank. It ignores the level set criterion if you choose 'Display All'. It ignores the virtual level criterion if you choose 'Display All' for that.

Copy and Paste Buttons

The 'Copy' and 'Paste' buttons allow you to transfer page configuration data from one tab to another tab.

When you click 'Copy', all configuration data for that page— all option flags, all 'Don't Include' lists, all 'Include' lists—are captured in a private buffer ready for pasting elsewhere.

When you click 'Paste', presumably in another page, all applicable data are transferred from the private buffer to the fields of the page. Data in the buffer that do not apply to the page are not transferred.

Data that were present in the fields that are affected by the 'Paste' operation are overwritten. Fields not applicable to the 'Paste' are not affected.

It is **not** possible to copy the lists from the web suite to another application such as Notepad or Excel.

- ▲ Data for the configuration of primary level pages are not applicable in DHP or tieline pages. Although you use the 'Copy' button, the 'Paste' button remains disabled in those pages. Portions of the data from primary level pages are applicable to multi-level pages and matrix views. These data can be copied.

Editing a Matrix View Tab

You can control the appearance and content of a matrix view tab by editing its parameters in the 'Pages' configuration page.

The matrix view presents a two-dimensional grid. The horizontal axis represents sources in the router control system. The vertical axis represents destinations. If your router control system has M sources and N destinations, then the view shows an M × N grid.

The square button at each point in the grid represents a crosspoint in a conceptual matrix. Clicking a square button performs a take at that crosspoint on the levels you have selected.

- ▲ The matrix is not the physical crosspoint matrix of any particular router.
- ▲ A third axis of the grid represents levels. Although you can't see the third axis, the buttons show the effect of the third axis. The buttons at each point in the grid show the logical OR of takes on the levels you have selected for viewing. That is, a button is highlighted if there is a take on any of the levels at that (cross)point.

A matrix view has no subtabs. But unlike other tabbed pages, it is interactive: you can perform takes, locks, and protects, set up breakaway and level mapping for takes, and release locks and protects.

You can also control the appearance of the tab by indicating your preferences in the sidebar when the tab is selected. (Click the blue bar at the left of the web suite window to reveal the sidebar.)

To edit a matrix view, click on a matrix view tab in the list of tabs at the left of the 'Pages' configuration page. The matrix view tab entry becomes highlighted and the matrix view tab configuration fields of the page appear:



You can specify the name (or title) of the matrix view.

There are several editing options. There are two check boxes that control how sources and destinations are displayed. There are 6 radio buttons in 3 regions.

The first region is for the destinations to be displayed in the matrix. The page can display information either for *all* destinations or for selected destinations. (The matrix view provides a table *row* for each destination of the matrix.) If you choose 'Use Selection' in this region, the region expands to allow you to form the destination selection. See [Destination Selection](#), following.

The second region is for the sources to be displayed in the matrix. The page can display information for *all* sources or for selected sources. (The matrix view provides a table *column* for each source of the matrix.) If you choose 'Use Selection' in this region, the region expands to allow you to form the source selection. See [Source Selection](#), following.

The third region is for the levels that this matrix view can display. The matrix view can display information for *all* levels or for selected levels. If you choose 'Use Selection' in this region, the region expands to allow you to form the level selection. See [Level Selection](#), following.

(Level buttons appear in a section at the top of the matrix view page that the user can enable or disable. When the section is enabled, the buttons in that section select or deselect levels. The configuration page lets you determine the levels that the user is allowed to select.)

▲ You can click the 'Save' button at any time to retain your changes.

Options

There are two check boxes that control how sources and destinations are displayed:

- Show Destination Device IDs.
- Show Source Device IDs.

These options are unchecked by default.


If you place a check in the 'Show Destination Device IDs' check box, destination device IDs are displayed where destination names are displayed. Otherwise only the names are displayed.

If you place a check in the 'Show Source Device IDs' check box, source device IDs are displayed where source names are displayed. Otherwise only the names are displayed.

Destination Selection

Choose 'Use All' in the 'Destinations' region if you want the matrix view to use *all* NV9000 destinations, regardless of what those destinations are. The NV9000 configuration could change from time to time, adding or removing destinations, and your matrix view will adjust.

Choose 'Use Selection' in the 'Destinations' region if you want to specify which destinations the are used in the matrix. The 'Destinations' region expands to allow you to form the destination selection:

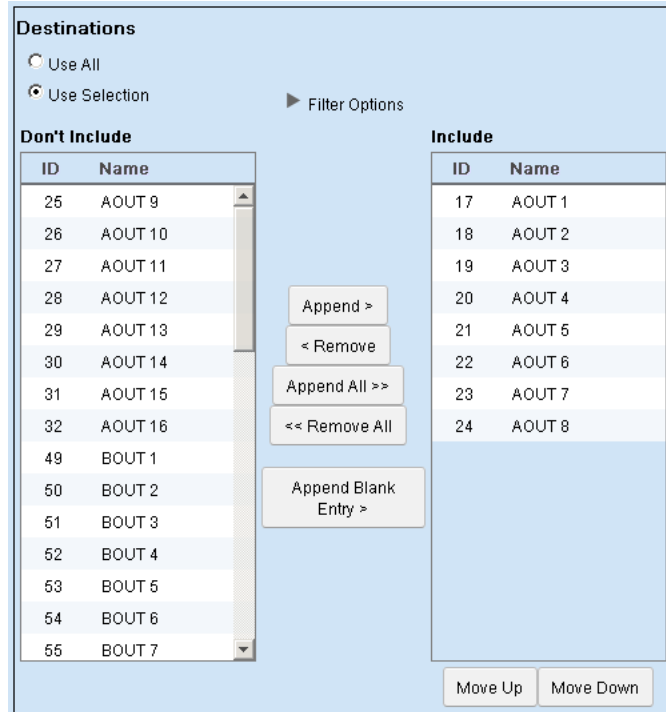

The 'Use Selection' fields include filtering options. See [Filter Options for Destinations](#), following.

The items on the left — under “Don’t Include” — are the destinations that are *not* used in the matrix view.

The items on the right — under “Include” — are the destinations that *are* used in the matrix view.

The *filter options* control what destinations you can see (or select) in either list of destinations. The filters do not affect which destinations are actually present in the lists. If you do not use the filters, all destinations in the list are displayed. See [Filter Options for Destinations](#), following.

To move destinations from the “Don’t Include” list to the “Include” list, select one or more entries in the “Don’t Include” list and click the ‘Append >’ button. (Or click ‘Append All >>’.)


To move destinations from the “Include” list to the “Don’t Include” list, select one or more entries in the “Include” list and click the ‘< Remove’ button. (Or click ‘<< Remove All’.)

Click ‘Append Blank Entry’ if you want to create a blank line that functions as a separator in your ‘Include’ list. The separator can help you organize the list. The separator also creates a blank row in the table that is displayed in the page (or pages) of the tab you are editing.

Use the ‘Move Up’ and ‘Move Down’ buttons under the “Include” list to reorder the destinations (i.e., the table *rows*). Select one or more destinations in the “Include” list and click ‘Move Up’ or ‘Move Down’ as appropriate to create the ordering you want.

Filter Options for Destinations

Click the dark triangle for the 'Filter Options' to expose the filter options:

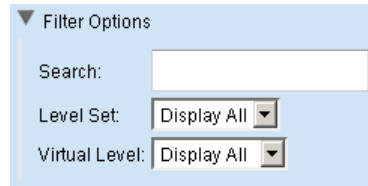

The screenshot shows a light blue panel titled 'Filter Options' with a dark triangle icon on the left. Inside the panel, there are three input fields: a text box labeled 'Search:', a dropdown menu labeled 'Level Set:' with 'Display All' selected, and another dropdown menu labeled 'Virtual Level:' also with 'Display All' selected.

The filter has 3 parts: a destination is included in the lists if it meets all 3 criteria.

If you specify some text in the 'Search' field, the filter use a substring matching method: if the substring you enter as the filter appears in the destination name or its ID, the destination can be in the lists.

If you choose a level set in the 'Level Set' drop-down list, the list is restricted to those destinations that belong to the specified level set.


If you choose a level in the 'Virtual Level' drop-down list, the list is restricted to those destinations that include the level specified.

The filter ignores the search field if it is blank. It ignores the level set criterion if you choose 'Display All'. It ignores the level criterion if you choose 'Display All' for that.

Source Selection

Choose 'Use All' in the 'Sources' region if you want the matrix view to use *all* NV9000 sources, regardless of what those sources are. The NV9000 configuration could change from time to time, adding or removing sources, and your matrix view will adjust.

Choose 'Use Selection' in the 'Sources' region if you want to specify which sources the are used in the matrix. The 'Sources' region expands to allow you to form the source selection:

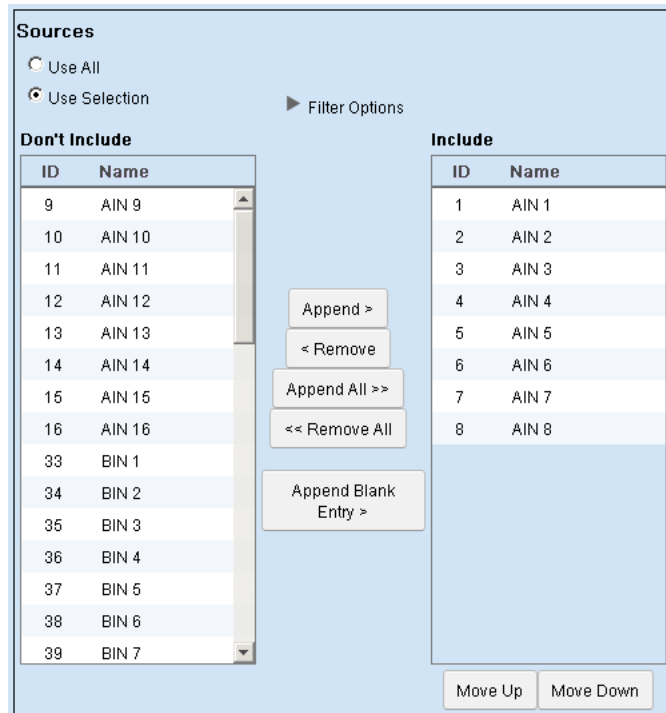

The items on the left—under “Don’t Include”—are the sources that are *not* used in the matrix view.

The items on the right—under “Include”—are the sources that *are* used in the matrix view.

The *filter options* control what sources you can see (or select) in either list of sources. The filters do not affect which sources are actually present in the lists. If you do not use the filters, all sources in the list are displayed. See [Filter Options for Sources](#), following.

To move sources from the “Don’t Include” list to the “Include” list, select one or more entries in the “Don’t Include” list and click the ‘Append >’ button or click ‘Append All >>’.


To move sources from the “Include” list to the “Don’t Include” list, select one or more entries in the “Include” list and click the ‘< Remove’ button or click ‘<< Remove All’.

Click ‘Append Blank Entry >’ if you want to create a blank line that functions as a separator in your ‘Include’ list. The separator can help you organize the list. The separator also creates a blank row in the table that is displayed in the page (or pages) of the tab you are editing.

Use the ‘Move Up’ and ‘Move Down’ buttons under the “Include” list to reorder the sources (i.e., the table *columns*). Select one or more sources in the “Include” list and click ‘Move Up’ or ‘Move Down’ as appropriate to create the ordering you want.

Filter Options for Sources

Click the dark triangle for the 'Filter Options' to expose the filter options:

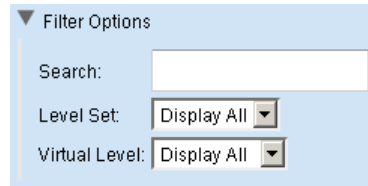

The screenshot shows a light blue panel titled 'Filter Options' with a dark triangle icon on the left. Inside the panel, there are three input fields: a text box labeled 'Search:', a dropdown menu labeled 'Level Set:' with 'Display All' selected, and another dropdown menu labeled 'Virtual Level:' also with 'Display All' selected.

The filter has 3 parts: a source is included in the lists if it meets all 3 criteria.

If you specify some text in the 'Search' field, the filter use a substring matching method: if the substring you enter as the filter appears in the source name or its ID, the source can be in the lists.

If you choose a level set in the 'Level Set' drop-down list, the list is restricted to those sources that belong to the specified level set.

If you choose a level in the 'Virtual Level' drop-down list, the list is restricted to those sources that include the level specified.


The filter ignores the search field if it is blank. It ignores the level set criterion if you choose 'Display All'. It ignores the level criterion if you choose 'Display All' for that.

Level Selection

Choose 'Use All' in the 'Levels' region if you want the matrix view to allow the use of *all* NV9000 levels.

- ▲ The long list of levels that is normally available is the "universal set" of all "virtual" levels ever used by NVISION series routers and includes levels that are probably not defined in your router control system. This list is defined in the virtual levels table of NV9000-SE Utilities. You can trim the list in NV9000-SE Utilities if you find it cumbersome.

Choose 'Use Selection' in the 'Levels' region if you want to specify which levels are available to the user. The 'Levels' region expands to allow you to form the level selection:

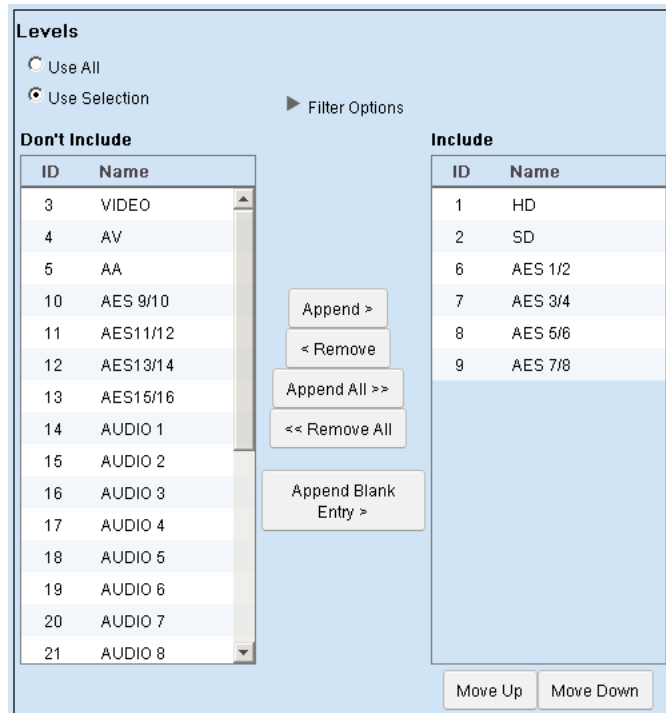

The items on the left—under "Don't Include"—are the levels that are *not* available in the matrix view.

The items on the right—under "Include"—are the levels that *are* available in the matrix view.

The *filter options* control what levels you can see (or select) in either list of levels. The filters do not affect which levels are actually present in the lists. If you do not use the filters, all levels in the list are displayed. See [Filter Options for Levels](#), following.

To move levels from the "Don't Include" list to the "Include" list, select one or more entries in the "Don't Include" list and click the 'Append >' button or click 'Append All >>'.

To move levels from the "Include" list to the "Don't Include" list, select one or more entries in the "Include" list and click the '< Remove' button or click '<< Remove All'.

Click 'Append Blank Entry' if you want to create a blank line that functions as a separator in your 'Include' list. The separator can help you organize the list. The separator also creates a blank row in the table that is displayed in the page (or pages) of the tab you are editing.

Use the 'Move Up' and 'Move Down' buttons under the "Include" list to reorder the levels. Select one or more levels in the "Include" list and click 'Move Up' or 'Move Down' as appropriate to create the ordering you want.

Filter Options for Levels

Click the dark triangle for the 'Filter Options' to expose the filter options:



The filter has 2 parts: a level is included in the lists if it meets both criteria.

If you specify some text in the 'Search' field, the filter use a substring matching method: if the substring you enter as the filter appears in the level name or its ID, the level can be in the lists.

If you choose a level set in the 'Level Set' drop-down list, the list is restricted to those levels that belong to the specified level set.

The filter ignores the search field if it is blank. It ignores the level set criterion if you choose 'Display All'.

Copy and Paste Buttons

The 'Copy' and 'Paste' buttons allow you to transfer page configuration data from one tab to another tab.

When you click 'Copy', all configuration data for that page— all option flags, all 'Don't Include' lists, all 'Include' lists— are captured in a private buffer ready for pasting elsewhere.

When you click 'Paste', presumably in another page, all applicable data are transferred from the private buffer to the fields of the page. Data in the buffer that do not apply to the page are not transferred.

Data that were present in the fields that are affected by the 'Paste' operation are overwritten. Fields not applicable to the 'Paste' are not affected.

It is *not* possible to copy the lists from the web suite to another application such as Notepad or Excel.

- ▲ Data for the configuration of matrix view pages are not applicable in DHP or tieline pages. Although you use the 'Copy' button, the 'Paste' button remains disabled in those pages. Portions of the data from matrix view pages are applicable to multi-level pages and primary level pages. These data can be copied.


Editing a Bulk Routing Tab

You can control the appearance and content of a 'Bulk Routing' tab by editing its parameters in the 'Pages' configuration page.

A bulk routing tab has no sub tabs. It has only its single page.

Click on a bulk routing tab in the list of tabs at the left of the 'Pages' configuration page. (Or click the 'Add New Tab' button and **do whatever**).

The bulk routing tab entry becomes highlighted and the bulk routing tab configuration fields of the page appear:

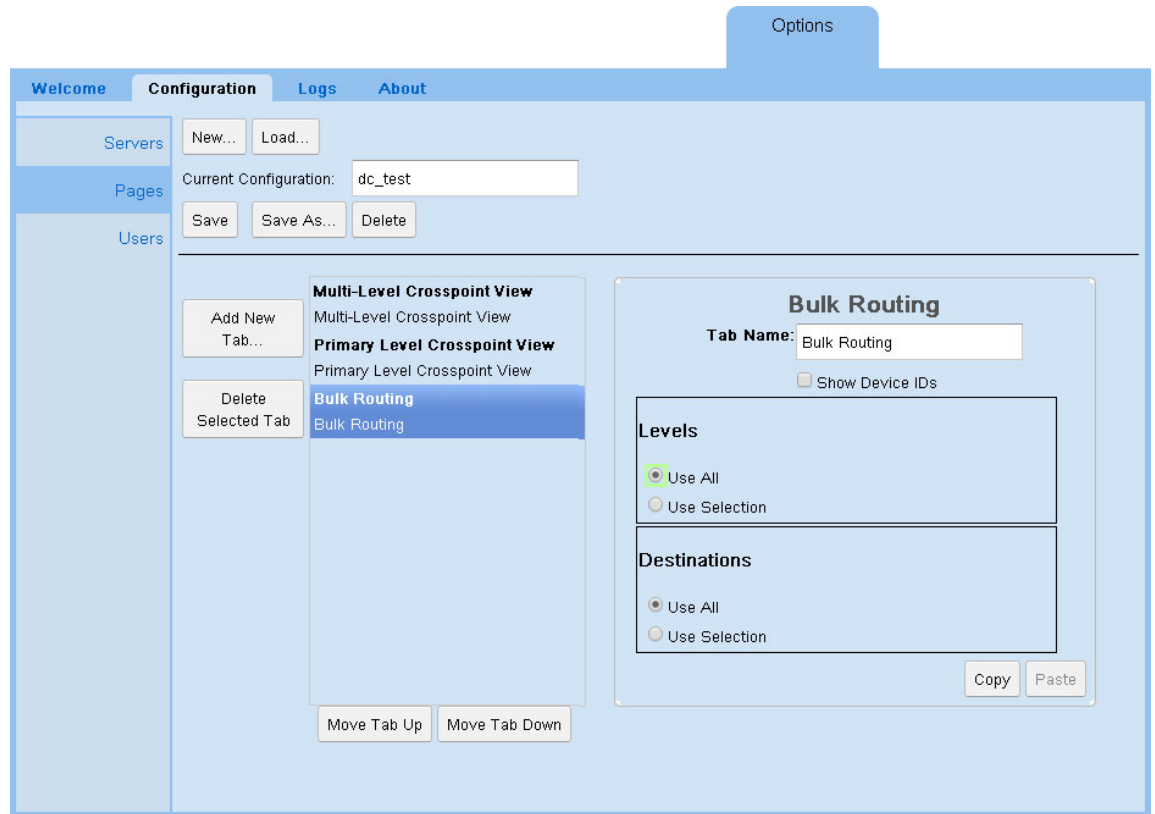

Specify the title of the tab in the field at the right.

Check the 'Show Device IDs' check box if you want device IDs to appear next to the source names in the levels columns of the displayed page.

- ▲ You can click the 'Save' button, at the upper left, at any time to retain your changes.

Level Selection

Choose 'Use All' in the 'Levels' region if you want the bulk routing tab to report sources for all NV9000 virtual levels, regardless of what those levels are. The NV9000 configuration could change, adding or deleting virtual levels, and your bulk routing tab will adjust.

- ▲ Note that when you "fire" a snapshot (i.e., write the source data for selected destinations), *all* levels of the destination are written.

Choose 'Use Selection' in the 'Levels' region if you want to specify which levels the table is to report. The 'Levels' region expands to allow you to form the level selection:

The screenshot shows the 'Levels' configuration window. At the top, there are two radio buttons: 'Use All' (unselected) and 'Use Selection' (selected). Below them is a 'Filter Options' section with a search box and a 'Level Set' dropdown menu currently set to 'Display All'. The main area is divided into two columns: 'Don't Include' on the left and 'Include' on the right. The 'Don't Include' list contains 14 items with IDs 18 through 31 and names like AUDIO 5 through TIMECODE. The 'Include' list contains 8 items with IDs 1 through 32 and names like HD, 4K 1, AES 1/2, etc. Between the lists are several buttons: 'Append >', '< Remove', 'Append All >>', '<< Remove All', and 'Append Blank Entry >'. At the bottom right of the 'Include' list are 'Move Up' and 'Move Down' buttons.

The 'Use Selection' fields include filtering options. See [Filter Options for Levels](#), following.

The items on the left — under “Don’t Include” — are the virtual levels that do *not* appear in the bulk routing page.

The items on the right — under “Include” — are the virtual levels that *do* appear in the bulk routing page.

To move levels from the “Don’t Include” list to the “Include” list, select one or more entries in the “Don’t Include” list and click the ‘Append >’ button or click ‘Append All >>’.

To move levels from the “Include” list to the “Don’t Include” list, select one or more entries in the “Include” list and click the ‘< Remove’ button or click ‘<< Remove All’.

Click ‘Append Blank Entry’ if you want to create a blank line that functions as a separator in your ‘Include’ list. The separator can help you organize the list. The separator also creates a blank row in the table that is displayed in the page (or pages) of the tab you are editing.

Use the ‘Move Up’ and ‘Move Down’ buttons under the “Include” list to reorder the virtual levels (i.e., the table *columns*). Select one or more levels in the “Include” list and click ‘Move Up’ or ‘Move Down’ as appropriate to create the ordering you want.

Filter Options for Levels

Click the triangle for the 'Filter Options' to expose the options:



The screenshot shows a light blue panel titled 'Filter Options' with a downward-pointing triangle icon. Below the title, there is a 'Search:' label followed by a white text input field. Underneath that, there is a 'Level Set:' label followed by a dropdown menu currently displaying 'Display All'.

The filter has 2 parts: a level is included in the lists if it meets both criteria.

If you specify some text in the 'Search' field, the filter use a substring matching method: if the substring you enter as the filter appears in the level name or its ID, the level can be in the lists.

If you choose a level set in the 'Level Set' drop-down list, the list is restricted to those levels that belong to the level set.

The filter ignores the search field if it is blank. It ignores the level set criterion if you choose 'Display All'.

Destination Selection

Choose 'Use All' in the 'Destinations' region if you want the bulk routing page to report all NV9000 destinations, regardless of what those destinations are. The NV9000 configuration could change, adding or deleting destinations, and your bulk routing page will adjust.

Choose 'Use Selection' in the 'Destinations' region if you want to specify which destinations the table is to report. The 'Destinations' region expands to allow you to form the destination selection:

Destinations

Use All
 Use Selection

▼ Filter Options

Search:

Level Set:

Virtual Level:

Don't Include		Include	
ID	Name	ID	Name
588	MV 103	478	RPLYIN01
589	MV 104	479	RPLYIN02
590	MV 111	480	RPLYIN03
591	MV 112	481	RPLYIN04
592	MV 113	482	RPLYIN05
593	MV 114	483	RPLYIN06
594	MV 121	484	RPLYIN07
595	MV 122	485	RPLYIN08
596	MV 123	486	SDI0 009
597	MV 124	487	RPLYIN09
598	MV 131	488	RPLYIN10
599	MV 132	489	RPLYIN11
600	MV 133	490	RPLYIN12
601	MV 134	491	RPLYIN13

Append >
< Remove
Append All >>
<< Remove All
Append Blank Entry >

Move Up Move Down

The 'Use Selection' fields include filtering options. See [Filter Options for Destinations](#), following.

The items on the left—under "Don't Include"—are the destinations that do *not* appear in the multi-level page.

The items on the right—under "Include"—are the destinations that *do* appear in the multi-level page.

To move destinations from the "Don't Include" list to the "Include" list, select one or more entries in the "Don't Include" list and click the 'Append >' button or click 'Append All >>'.


To move destinations from the "Include" list to the "Don't Include" list, select one or more entries in the "Include" list and click the '< Remove' button or click '<< Remove All'.

Click 'Append Blank Entry' if you want to create a blank line that functions as a separator in your 'Include' list. The separator can help you organize the list. The separator also creates a blank row in the table that is displayed in the page (or pages) of the tab you are editing.

Use the 'Move Up' and 'Move Down' buttons under the "Include" list to reorder the destinations (i.e., the table rows). Select one or more destinations in the "Include" list and click 'Move Up' or 'Move Down' as appropriate to create the ordering you want.

Filter Options for Destinations

Click the triangle for the 'Filter Options' to expose the options:

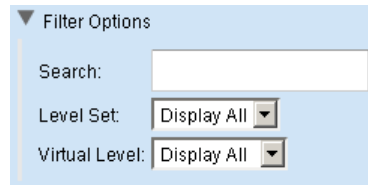

The screenshot shows a light blue panel titled 'Filter Options' with a downward-pointing triangle icon. Below the title are three input fields: a text box labeled 'Search:', a dropdown menu labeled 'Level Set:' with 'Display All' selected, and another dropdown menu labeled 'Virtual Level:' also with 'Display All' selected.

The filter has 3 parts: a destination is included in the lists if it meets all 3 criteria.

If you specify some text in the 'Search' field, the filter use a substring matching method: if the substring you enter as the filter appears in the destination name or its ID, the destination can be in the lists.

If you choose a level set in the 'Level Set' drop-down list, the list is restricted to those destination devices that are associated with the level set.

If you choose a virtual level in the 'Virtual Level' drop-down list, the list is restricted to those destination devices that include the virtual level in their level set.

The filter ignores the search field if it is blank. It ignores the level set criterion if you choose 'Display All'. It ignores the virtual level criterion if you choose 'Display All' for that.

Copy and Paste Buttons

The 'Copy' and 'Paste' buttons allow you to transfer page configuration data from one tab to another tab.

When you click 'Copy', all configuration data for that page— all option flags, all 'Don't Include' lists, all 'Include' lists—are captured in a private buffer ready for pasting elsewhere.

When you click 'Paste', presumably in another page, all applicable data are transferred from the private buffer to the fields of the page. Data in the buffer that do not apply to the page are not transferred.

Data that were present in the fields that are affected by the 'Paste' operation are overwritten. Fields not applicable to the 'Paste' are not affected.

It is **not** possible to copy the lists from the web suite to another application such as Notepad or Excel.

- ▲ Data for the configuration of bulk routing pages are not applicable in DHP or tieline pages. Although you use the 'Copy' button, the 'Paste' button remains disabled in those pages. Portions of the data from multi-level pages are applicable to primary level pages and matrix views. These data can be copied.

Users Page

The 'Users' page lists all the users authorized to use the web suite. (Note that if you are using the web suite, you are logged in as a user.)

Associated with each user is a password (which is optional), a flag indicating whether the user has admin privilege, a web suite configuration, and an NV9000 user name (from the NV9000 system).

The page does not actually list passwords. If you want to change a password, you can click the 'Change Password' button for a user. A dialog appears in which you can enter the password. After you close the dialog, you must remember the password you entered. It is not recoverable if you forget it.

If a user has the "default" configuration, the configuration entry is colored yellow.

Adding a User to the List

Click the 'Add New User' button. A new row appears in the table:

Save Users Add User Search: *Username is empty Default detected*

DELETE	USERNAME	PASSWORD	ADMIN	CONFIGURATION	NVUSER
<input type="checkbox"/>	<input type="text" value="Admin"/>	<input type="button" value="Change Password"/>	<input checked="" type="checkbox"/>	<input type="text" value="default"/>	<input type="text" value="EnvyUser"/>
<input type="checkbox"/>	<input type="text" value="Doug"/>	<input type="button" value="Change Password"/>	<input checked="" type="checkbox"/>	<input type="text" value="Dougtest"/>	<input type="text" value="Alpha"/>
<input type="checkbox"/>	<input type="text" value="ENG"/>	<input type="button" value="Change Password"/>	<input checked="" type="checkbox"/>	<input type="text" value="ENG"/>	<input type="text" value="Bravo"/>
<input type="checkbox"/>	<input type="text" value="Stephanie"/>	<input type="button" value="Change Password"/>	<input checked="" type="checkbox"/>	<input type="text" value="StephanieConfig"/>	<input type="text" value="Charlie"/>
<input type="checkbox"/>	<input type="text" value=""/>	<input type="button" value="Change Password"/>	<input type="checkbox"/>	<input type="text" value="default"/>	<input type="text" value="EnvyUser"/>

The 'Username' field is filled with red and a message appears at the top right: "Username is empty."

This message is a prompt for you to click in the 'Username' field and enter a user name. When you do (and follow the entry by pressing <enter> or <tab>) the field turns green and the prompt disappears:

Save Users Add User Search: *Default detected*

DELETE	USERNAME	PASSWORD	ADMIN	CONFIGURATION	NVUSER
<input type="checkbox"/>	<input type="text" value="Admin"/>	<input type="button" value="Change Password"/>	<input checked="" type="checkbox"/>	<input type="text" value="default"/>	<input type="text" value="EnvyUser"/>
<input type="checkbox"/>	<input type="text" value="Doug"/>	<input type="button" value="Change Password"/>	<input checked="" type="checkbox"/>	<input type="text" value="Dougtest"/>	<input type="text" value="Alpha"/>
<input type="checkbox"/>	<input type="text" value="ENG"/>	<input type="button" value="Change Password"/>	<input checked="" type="checkbox"/>	<input type="text" value="ENG"/>	<input type="text" value="Bravo"/>
<input type="checkbox"/>	<input type="text" value="Stephanie"/>	<input type="button" value="Change Password"/>	<input checked="" type="checkbox"/>	<input type="text" value="StephanieConfig"/>	<input type="text" value="Charlie"/>
<input type="checkbox"/>	<input type="text" value="Fred"/>	<input type="button" value="Change Password"/>	<input type="checkbox"/>	<input type="text" value="default"/>	<input type="text" value="Delta"/>

The new user has been assigned the default configuration, which is highlighted in yellow. You can assign a different configuration to the user by selecting a configuration name from the drop-down list in the user's 'Configuration' field.

You can also assign the user an NV9000 user name in the 'NVuser' field.

The chosen configuration is highlighted in green:

DELETE	USERNAME	PASSWORD	ADMIN	CONFIGURATION	NVUSER
<input type="checkbox"/>	Admin	Change Password	<input checked="" type="checkbox"/>	default	EnvyUser
<input type="checkbox"/>	Doug	Change Password	<input checked="" type="checkbox"/>	Dougtest	Alpha
<input type="checkbox"/>	ENG	Change Password	<input checked="" type="checkbox"/>	ENG	Bravo
<input type="checkbox"/>	Stephanie	Change Password	<input checked="" type="checkbox"/>	StephanieConfig	Charlie
<input type="checkbox"/>	Fred	Change Password	<input type="checkbox"/>	workman	Delta

Click 'Save Users' to accept any new users you have added. The list refreshes and displays the users in alphabetical order:

DELETE	USERNAME	PASSWORD	ADMIN	CONFIGURATION	NVUSER
<input type="checkbox"/>	Admin	Change Password	<input checked="" type="checkbox"/>	default	EnvyUser
<input type="checkbox"/>	Doug	Change Password	<input checked="" type="checkbox"/>	Dougtest	Alpha
<input type="checkbox"/>	ENG	Change Password	<input checked="" type="checkbox"/>	ENG	Bravo
<input type="checkbox"/>	Fred	Change Password	<input type="checkbox"/>	workman	Charlie
<input type="checkbox"/>	Stephanie	Change Password	<input checked="" type="checkbox"/>	StephanieConfig	Delta

Changing a User's Password

By default, new users are added with no password required. If you want to assign a password to a user, click the 'Change Password' button for that user. A dialog appears in which you can enter the new password:

Change Password

Enter Password:

Confirm Password:

Enter a password, confirm it, and click 'OK'.

Make a note of the password, or remember it, because you cannot recover the password if you forget it. (You can always assign a new password however.)

Admin Privilege

Check the 'Admin' check box for a user to give that user administrative privilege.

Administrative privilege means that the user can add and remove users, change passwords, and create and modify web suite configurations.

Users without administrative privilege can use the status pages of the configuration they have been assigned. They cannot redefine their configurations.

User IDs

NV9000-SE Utilities allows persons configuring the router control system to define user IDs. User IDs are normally associated with control panels.

In NV9000-SE Utilities, user IDs are alphanumeric strings that usually form readable names.

The web suite allows you to associate any user name defined in the NV9000 router control system with a user in the list. There are drop-down lists in the NVUSER column from which you can choose a user name. The NV9000 user name and its database ID are subsequently used to indicate which user has issued a lock or a protect on destinations in the router control system.

- ▲ It is advisable to have all NV9000 user names defined (in NV9000-SE Utilities) and assigned (in the web suite) at the earliest opportunity. Users who perform locks and protects under one NV9000 user name cannot release those locks and protects if they change to a different NV9000 user name.

Saving the User List

Click 'Save Users' to save the list and click 'Yes' in the confirmation dialog that appears.

If you made a data entry mistake before you save, you can discard the mistake(s) by using your browser's refresh button to refresh the 'Users' page. Doing so reloads the saved user list from the NV9000 database. (You will be warned if you about to lose unsaved data.)

Removing a User from the List

- ▲ You cannot remove a new user from the list until you have saved the user list. New users and new data are characterized by green-highlighted fields in the list.

To remove a user or users from the list, place a check mark in the 'Delete' check box for the user(s). The row(s) for those user(s) are greyed out:

DELETE	USERNAME	PASSWORD	ADMIN	CONFIGURATION	NVUSER
<input type="checkbox"/>	Admin	Change Password	<input checked="" type="checkbox"/>	default	EnvyUser
<input type="checkbox"/>	Doug	Change Password	<input checked="" type="checkbox"/>	Dougtest	Alpha
<input type="checkbox"/>	ENG	Change Password	<input checked="" type="checkbox"/>	ENG	Bravo
<input checked="" type="checkbox"/>	Fred	Change Password	<input type="checkbox"/>	workman	Charlie
<input type="checkbox"/>	Stephanie	Change Password	<input checked="" type="checkbox"/>	StephanieConfig	Delta

Then click 'Save Users' and click 'Yes' in the confirmation dialog that appears. The web suite displays the updated user list

Log Pages

The Logs subtab provides 3 or 4 status pages—4 when instrumentation mode is enabled:

Disabled	Enabled
Server Log	Server Log
Client Log	Client Log
System Status	System Status
	Data Store

The 'Data Store' are for Grass Valley engineers and technicians only.

- ▲ Instrumentation mode is a checkbox option under the 'Servers' page under the 'Configuration' subtab.

System Status

The 'System Status' page presents statistics and data about the web suite:

Category	Value
Heap Memory Used	127 MiB
Current active thread count	23
Total page load time	438 milliseconds
Total network latency	11 milliseconds

These are the statistics:

- Heap memory used by the NV9000 Web Suite, in mebibytes. (A *mebibyte* is 2^{20} bytes.)
- Current active thread count.
- Total page load time (in milliseconds).
- Total network latency (in milliseconds).

Client Log Page

This is the 'Client Log' page:

```

Tue Mar 05 15:56:37 GMT-800 2013 nv.gwt.client.ui.options.logs.ClientLogPresenter INFO:
Window.getClientWidth()xWindow.getClientHeight(): {954x607}
Tue Mar 05 15:56:37 GMT-800 2013 nv.gwt.client.ui.options.logs.ClientLogPresenter FINE:
Didn't get initial NV9000 data from server
Tue Mar 05 15:56:38 GMT-800 2013 nv.gwt.client.ui.options.logs.ClientLogPresenter FINE:
Didn't get initial NV9000 data from server
Tue Mar 05 15:56:39 GMT-800 2013 nv.gwt.client.ui.options.logs.ClientLogPresenter FINE:
Didn't get initial NV9000 data from server
  
```


This page usually contains a great amount of event history regarding the web suite client.

Green text is used for debugging or informative messages.

Red text is used for warnings or error messages.

Server Log Page

This is the 'Server Log' page:

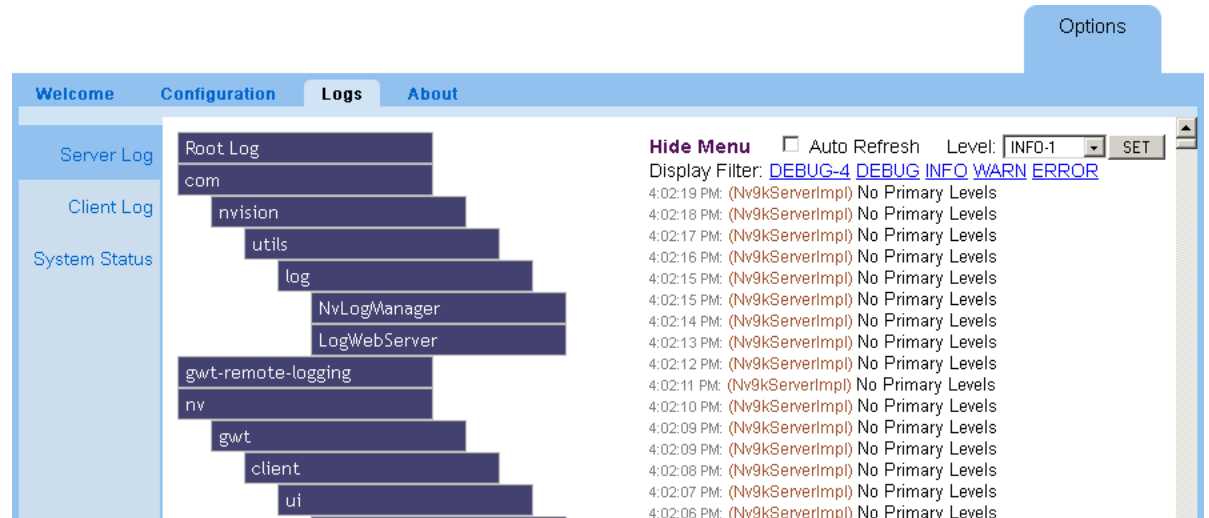


This page usually contains a great amount of event history regarding the NV9000 Web Suite server.

You might have to use this information to diagnose a system failure or a network problem.

Hide Menu

You can hide the menu by clicking the text 'Hide Menu'. This is the page without the menu:

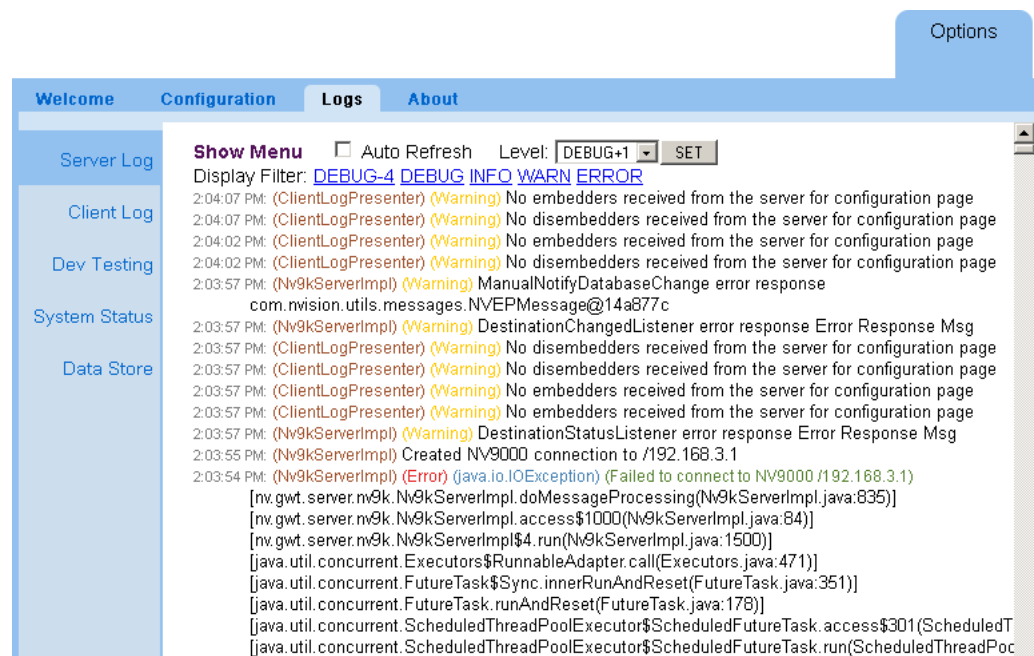


(The text changes to 'Show Menu')

Place a check mark in the 'Auto Refresh' check box if you want the page to refresh its display at every reported event. If the check box is not checked, the NV9000 Web Suite refreshes the page every time you switch to the page (or click your browser's refresh icon).

Reporting Level

You can choose the level of reporting in this log. (Other users can choose a different reporting level.) To choose a reporting level, select a level from the drop-down list:

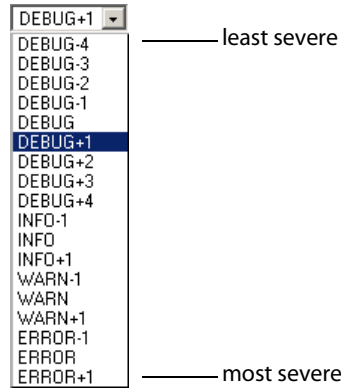

The levels are listed in order of severity.

You can also choose one of the 5 display filters directly:

DEBUG-4 DEBUG INFO WARN ERROR

in the text below the level drop-down menu.

Data Store Page

Do not use this page. It is for web suite developers.

3 DHP Tab

Chapter 3 provides information and instructions regarding the web suite's DHP tab.

Summary

<i>Summary</i>	65
<i>Disembedder Page</i>	67
<i>Embedder Page</i>	68
<i>Reentry Page</i>	71
<i>Drawing Page</i>	73

Summary

When you click on the DHP tab, the DHP subtabs and their pages appear. By default, there are 4 pages:

Disembedder	Embedder
Reentry	Drawing

However, you can configure the DHP tab to have a subset of these pages. Use the 'Options' tab and its 'Configuration > Pages' page to do so.

The four DHP pages show information about the current state of the DHP core of a single NV8500 series router (NV8140, NV8144, NV8280, NV8576, or NV8576-Plus).

- ▲ DHP is any option that applies only to an NV8500 series router. Your system might not have DHP.

Three of its pages present tables of DHP core data. The fourth page presents the data as a drawing. The table data present all the signal detail of the DHP core. The drawing page is a diagrammatic view of the current core.

The following sections describe the pages.

The examples shown in this section refer to a demonstration NV9000 system. The configuration data for that system are listed in the [Sample NV9000 Configuration](#), on page 76.

- ▲ **Caution:** the DHP pages are *status* pages. You cannot control the DHP service, or stop it, or restart it, from the NV9000 Web Suite.
- ▲ Because of the way DHP is defined, it can communicate with **only one** DHP client. The client can be a PC running the NV9000 Web Suite or it can be an instance of DHP-D.¹
If DHP-D is running, no PC client will obtain correct DHP information and any PC applications attempting to do so might display incorrect data. Further, PC clients are

1. DHP-D is Miranda diagnostic software.

services that run in the background on your PCs whether the user has a web browser open or not. Only one such service may be started at a given time and DHP-D cannot also be running. Otherwise, the DHP tab of the web suite will not function correctly or will not function at all.

Configuration Options

The 4 DHP pages can be individually enabled or disabled. The 4 DHP pages can be configured:

- To show all or selected disembedders. For selected disembedders, a name/ID filter can apply.
- To show all or selected embedders. For selected embedders, a name/ID filter can apply.
- To show port numbers next to port names.

For information about configuring DHP pages, see [Editing a DHP Tab](#), on page 28.

Example

Figure 3-1 shows an DHP routing example for the 4 tabbed pages described in the following sections:

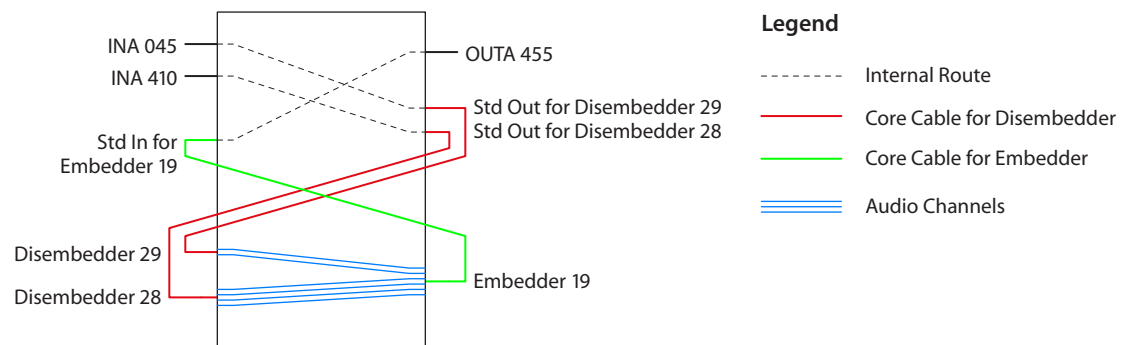


Fig. 3-1: Sample DHP Route

Standard source INA 410 is taken to standard destination OUTA 455 on all levels but two. The remaining two levels (levels 3 and 4) are taken from standard source INA 045. Except for the breakaway involved, DHP would not be required. Because a breakaway occurred, the DHP software routed INA 410 through DHP disembedder port 28 and INA 045 through DHP disembedder port 29. The audio from these two ports are recombined in DHP embedder port 19 and forwarded, with the original video from INA 410 to standard output OUTA 455.

Disembedder Page

The 'Disembedder' page shows details of the DHP core's *disembedders*:

DHP						
Disembedder	Embedder	Reentry	Drawing			
DISEMBEDDER	SDI	DISEMBEDDER PORT	FEEDING 1	FEEDING 2	FEEDING 3	FEEDING 4
DISEMBEDDER 1	INA 410	Port 28	EMBEDDER 19			
DISEMBEDDER 2	INA 045	Port 29	EMBEDDER 19			
DISEMBEDDER 5	*****	Port 32	OUTA 072 (hybrid)			
DISEMBEDDER 3*		Port 30				
DISEMBEDDER 4*		Port 31				
DISEMBEDDER 6*		Port 33				
DISEMBEDDER 7*		Port 34				

Fig. 3-2: Disembedder Page

The page displays a table of all the disembedder ports in the DHP core, one row for each port. The disembedder ports are identified in column 1. If a disembedder is not in use, its table row is empty (except for the label in column 1 and port number in column 3).

Fields for unused disembedders are greyed out.

Entries in the column labeled 'SDI' show the name of the standard input port connected to the disembedder port. It represents the video signal. If there is no name or the name cannot be determined the entry shows "*****".

An entry in the column labeled 'Disembedder Port' identifies the standard output that is connected to (i.e., feeds) the disembedder. *That output port is part of the DHP core.*

The entries in the columns labeled 'Feeding 1', 'Feeding 2', and so on, show either embedders or output ports that are fed by the disembedder port. The table can have from 0 to 10 "Feeding" columns.


Table Ordering

By clicking the header of any table column you can cause the table to be reordered according the entries in that column. Click the header once and the table is put in ascending order for that column. Click the header again to put the table in descending order of that column. An arrow (up or down) appears in the column header to indicate that the table is ordered according to that column.

To revert to the default table ordering, click the page refresh icon of your browser.

Preferences

The 'Disembedder' page has several user-selectable preferences, available in the sidebar:

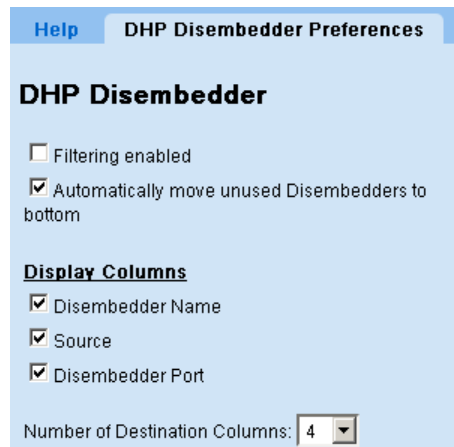

These are the preferences:

- Filtering enabled

Checking this option places a search filter on the 'Disembedder' page:



You can place text in this field to limit the number of rows that are displayed. Only those rows in which the search text appears—in any column—are displayed.

- Automatically move unused disembedders to bottom

It might be more convenient for you to display all the disembedders that are in use in the upper rows of the table. That way, you can minimize scrolling and confusion as you navigate to view different disembedders that are in use.

- Display columns

These 4 items let you select exactly what is displayed for each disembedder. The 3 check boxes refer to the first 3 columns of the table.

The number of destination columns (i.e., 'Feeding' columns) defaults to 8 but you can increase or decrease the number of these columns. It makes sense to decrease the number of the 'Feeding' columns because they often contain no information.

Embedder Page

The 'Embedder' page shows details of the DHP core's *embedders*. The page displays a table of all the embedder ports in the DHP core, one row for each port. The embedder ports are identified in column 1. If an embedder is not in use, its table row is empty (except for column 1).

This view shows the left side of the page:

DHP											
Disembedder	Embedder	Reentry	Drawing								
EMBEDDER	SDI	AUDIO 1	AUDIO 2	AUDIO 3	AUDIO 4	AUDIO 5	AUDIO 6	AUDIO 7	AUDIO 8	AUDIO 9	
EMBEDDER 19	INA 410	INA 410	INA 410	INA 045	INA 045	INA 410	INA 410	INA 410	INA 410	INA 410	
EMBEDDER 20*											
EMBEDDER 21*											
EMBEDDER 22*											
EMBEDDER 23*											
EMBEDDER 24*											
EMBEDDER 25*											
EMBEDDER 26*											

Fig. 3-3: Embedder Page, Left Portion

Unused embedders are greyed out. Here, only one embedder is in use.

Entries in the column labeled 'SDI' show the name of the standard input port connected to the disembedder port that feeds the video to the embedder port.

The entries in the columns labeled 'Audio 1', 'Audio 2', and so on, show the audio channels that are fed to the embedder port. The audio signals can come from any disembedder in the DHP core, from a MADi card, or from any hybrid card not in the DHP core.

The audio channels are identified by their associated video port names. Bold purple text indicates that the audio channel is either a breakaway channel or the result of level mapping.


Table Ordering

By clicking the header of any table column you can cause the table to be reordered according to the entries in that column. Click the header once and the table is put in ascending order for that column. Click the header again to put the table in descending order of that column. An arrow (up or down) appears in the column header to indicate that the table is ordered according to that column.

To revert to the default table ordering, click the page refresh icon of your browser.

Preferences


The 'Embedder' page has several user-selectable preferences, available in the sidebar:

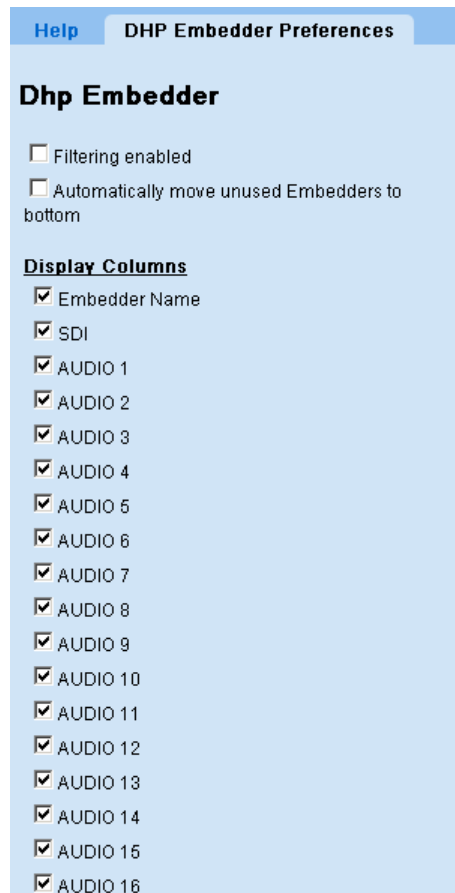

These are the preferences:

- Filtering enabled

Checking this option places a search filter on the 'Embedder' page:

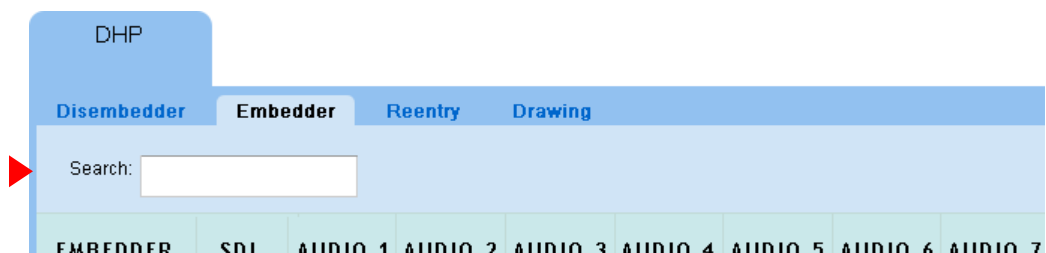

You can place text in this field to limit the number of rows that are displayed. Only those rows in which the search text appears—in any column—are displayed.

- Automatically move unused embedders to bottom

It might be more convenient for you to display all the embedders that are in use in the upper rows of the table. That way, you can minimize scrolling and confusion as you navigate to view different embedders that are in use.

- Display columns

These 18 items let you select exactly what is displayed for each embedder. The check boxes refer to the columns of the table.

The default shows all 16 embedded audio channels. Some systems might have fewer embedded channels. Disabling the display of unused channels can make it easier to use the embedder page.

Reentry Page

The 'Reentry' page shows which standard video input and standard video outputs are connected to each embedder port:

DHP						
Disembedder	Embedder	Reentry	Drawing			
EMBEDDER	SDI SRC	REENTRY	DEST 1	DEST 2	DEST 3	DEST 4
EMBEDDER 19	INA 410	Source Port 1	OUTA 455			
EMBEDDER 20*		Source Port 2				
EMBEDDER 21*		Source Port 3				
EMBEDDER 22*		Source Port 4				
EMBEDDER 23*		Source Port 5				
EMBEDDER 24*		Source Port 6				
EMBEDDER 25*		Source Port 7				
EMBEDDER 26*		Source Port 8				

Fig. 3-4: DHP Reentry Page

The page displays a table of all the embedder ports in the DHP core, one row for each port. The embedder ports are identified in column 1. If an embedder is not in use, its table row is empty (except for column 1 and column 3).

The 'Reentry' column of this page identifies the standard input port that is connected to the embedder output port. *That input port is part of the DHP core.*

The 'Dest' columns identify the standard outputs fed by the embedder—through the standard input port.

The 'SDI SRC' column identifies the video-level input to the embedder.

Unused embedders are greyed out. In the illustration, only one embedder is in use.


Table Ordering

By clicking the header of any table column you can cause the table to be reordered according to the entries in that column. Click the header once and the table is put in ascending order for that column. Click the header again to put the table in descending order of that column. An arrow (up or down) appears in the column header to indicate that the table is ordered according to that column.

To revert to the default table ordering, click the page refresh icon of your browser.

Preferences

The 'Reentry' page has several user-selectable preferences, available in the sidebar:

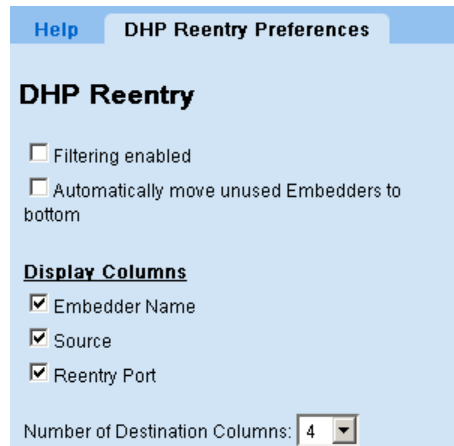

These are the preferences:

- Filtering enabled

Checking this option places a search filter on the 'Reentry' page:



You can place text in this field to limit the number of rows that are displayed. Only those rows in which the search text appears—in any column—are displayed.

- Automatically move unused embedders to bottom

It might be more convenient for you to display all the embedders that are in use in the upper rows of the table. That way, you can minimize scrolling and confusion as you navigate to view different embedders that are in use.

- Display columns

These 4 items let you select exactly what is displayed for each embedder. The 3 check boxes refer to the first 3 columns of the table.

The number of destination columns defaults to 8 but you can increase or decrease the number of these columns. It makes sense to reduce the number of the 'Dest' columns because they often contain no information.

Drawing Page

The 'DHP Drawing' page gives you a graphic or "schematic" view of the DHP core. This is a sample:

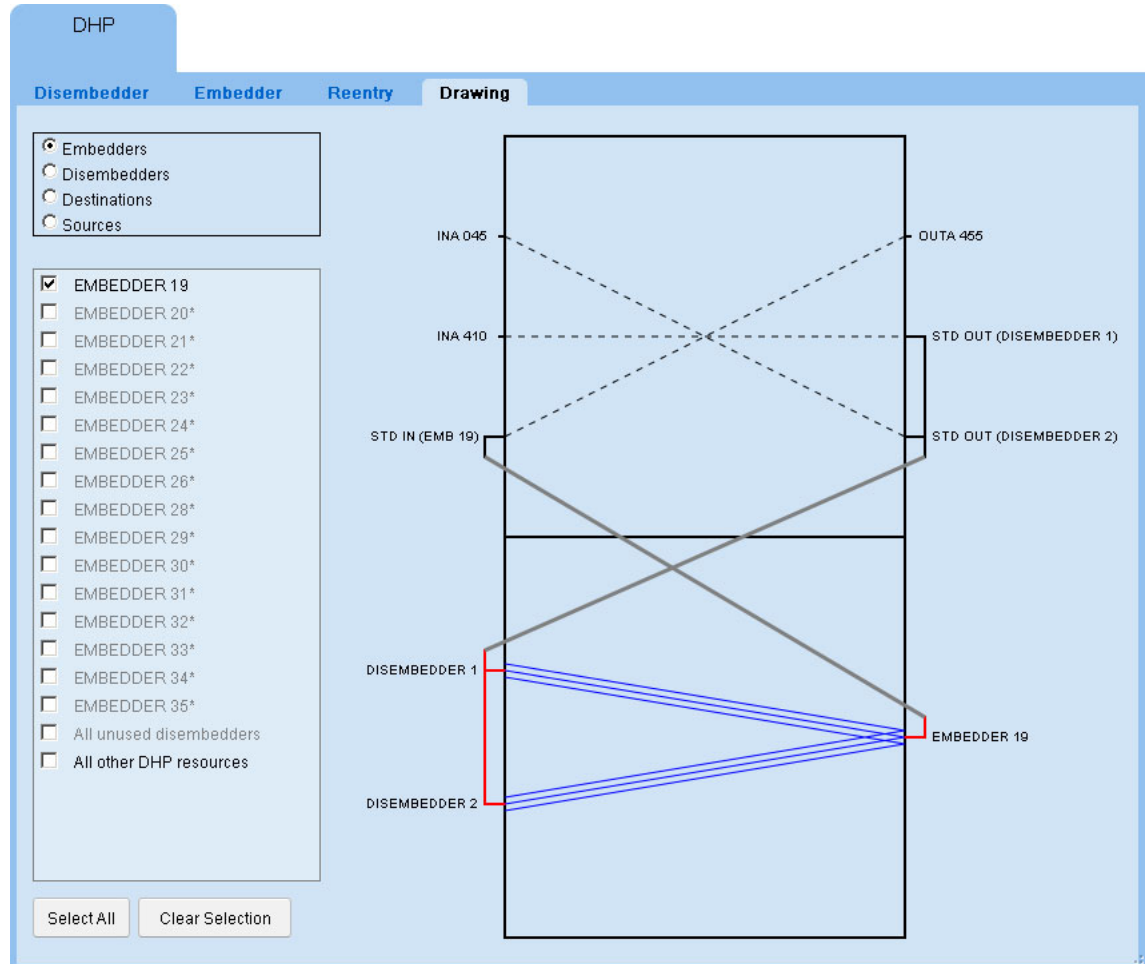


Fig. 3-5: Drawing Page

This sample shows the DHP route of the example used throughout this chapter. To reiterate:

Standard source INA 410 is taken to standard destination OUTA 455 on all levels but two. The remaining two levels (levels 3 and 4) are taken from standard source INA 045. Except for the breakaway involved, DHP would not be required. Because a breakaway occurred, the DHP software routed INA 410 through DHP disembedder port 28 and INA 045 through DHP disembedder port 29. The audio from these two ports are recombined in DHP embedder port 19 and forwarded, with the original video from INA 410 to standard output OUTA 455.

Central to the page is a rectangle representing the router connected to the system controller's DHP service.

The top half of the rectangle represents *standard* input and output ports, some of which are part of the DHP core. (The ports belonging to the core are labeled with their associated disembedder or embedder port. See the [Sample NV9000 Configuration](#), on page 76.

The bottom half of the rectangle represents *hybrid* inputs and outputs, some of which **might not** be part of the DHP core. Hybrid I/O includes disembedder ports, embedder ports, and MAD I input or output connections.

Signal Paths

Dashed lines represent standard inputs and outputs connected to the core. For instance, in the illustration, INA 045 is a standard input and OUTA 455 is a standard output. See the [Sample NV9000 Configuration](#), on page 76.

Solid lines represent paths within the DHP core. Single black lines represent video with or without embedded audio. Blue 3-line groups represent audio disembedding and re-embedding. The 3-line groups represent any number of audio channels (from 1 to 16), not just 3.

Short red lines represent connections to the disembedders and embedders of the core.

Usage

At the left side of the page are two regions:

- Radio buttons.

The 4 radio buttons allow you to select what appears in the check boxes in the second region. For instance, if you select the 'Embedders' radio button, a list of the embedders appears in the second region.

- Check boxes.

When you check a box in this region, the drawing shows all DHP elements that relate to what you have checked. For example, Figure 3-5, on page 73, has embedder 19 checked. The drawing shows the disembedders, standard inputs, and standard outputs that connect to embedder 19.

Depending on which radio button you chose, the check box list will include special check boxes: 'All unused disembedders', 'All unused embedders', or 'All other DHP resources'. Checking one of these boxes will result in the display of the named items.

Also at the left side of the page are two buttons:


- Select All.

This is a shortcut that checks all the check boxes in the list and causes the drawing to show all the items corresponding to all the check boxes.

- Clear Selection.

This shortcut clears all the check boxes in the list. The result is that the drawing shows nothing (except the rectangle representing the router).


When you select many or all items in the check box list, the drawing shows many connections:

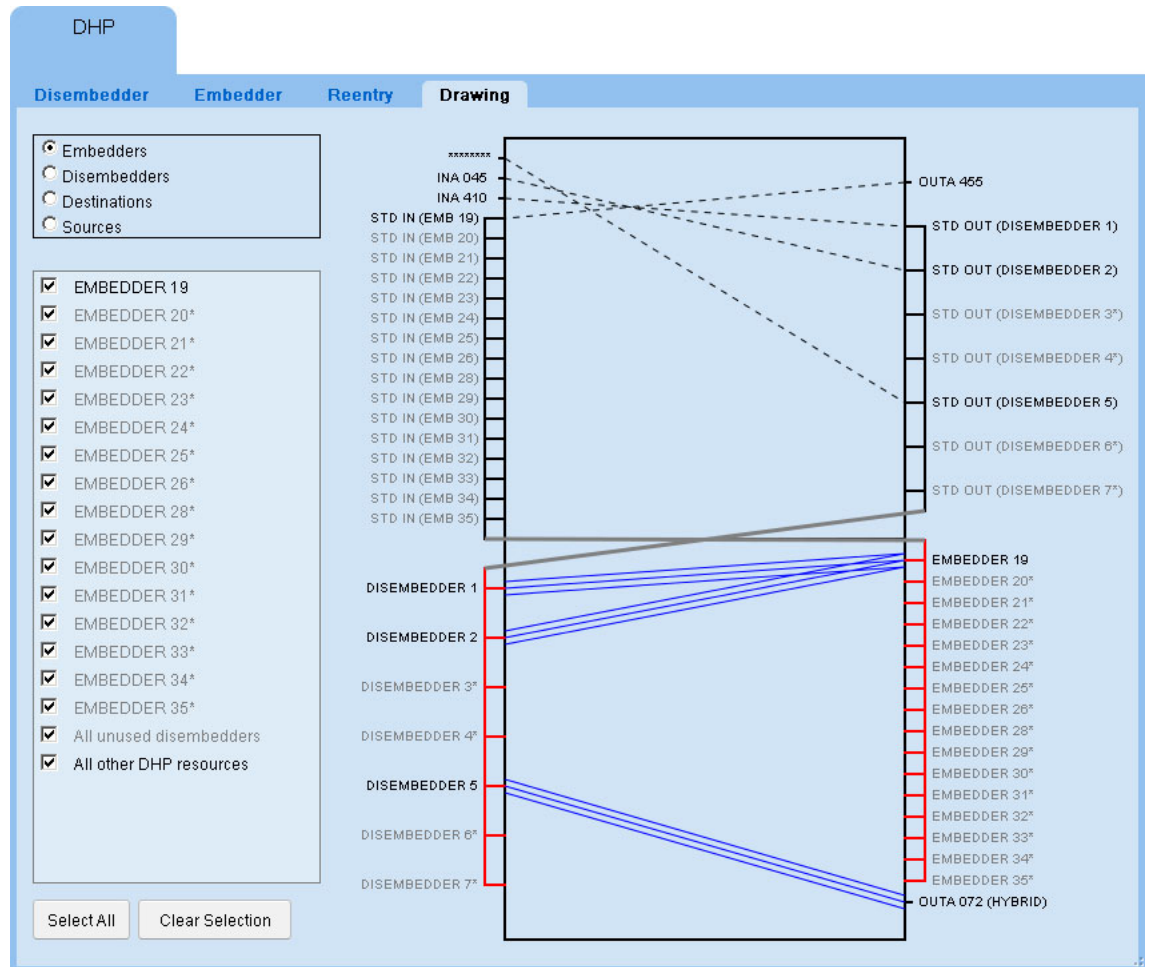

This kind of view obscures individual connection details. We recommend that you view one or two core connections at a time.

Preferences


The 'Drawing' page has several user-selectable preferences, available in the sidebar:

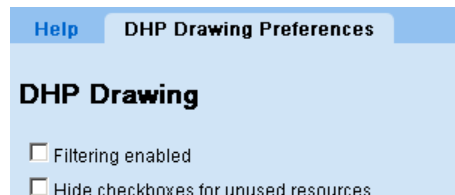

These are the preferences:

- Filtering enabled

Checking this option places a search filter on the 'Drawing' page:

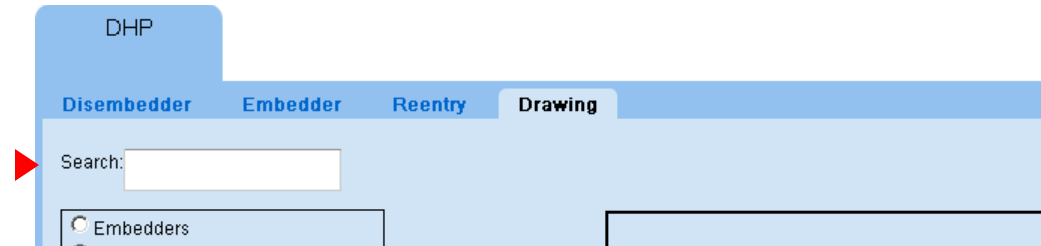

You can place text in this field to limit the number of items that are displayed. Only those items in which the search text appears are displayed.

- Hide check boxes for unused resources.

It might be more convenient for you if your drawing page does not have check boxes to show unused disembedders, embedders, and so on.

Sample NV9000 Configuration

These are the data of the NV9000 configuration from which the DHP example was taken.

Non-Core Ports

These are the ports — *not in the DHP core* — that are used in the examples. These were configured in NV9000-SE Utilities.

Input

These are all standard inputs, each having video and 16 audio channels.

Device	HD Port	Audio Ports
INA 37	37	577–592
through INA 576	576	9201–9216

There are also MAD I ports 1–64 from input card 1.

Output

These are all standard outputs, each having video and 16 audio channels.

Device	HD Port	Audio Ports
OUTA 37	37	577–592
through OUTA 576	576	9201–9216

There are also MAD I ports 1–64 on output card 1.

DHP Core Ports

These are the ports of the DHP core, as configured in the `HybridPorts_XXXX` file (one of the two DHP configuration files).

Re-embedders tied to Standard Inputs

Embedder Port	Standard Input Port
19	1
20	2
21	3
22	4
23	5
24	6
25	7
26	8
28	10
29	11
30	12
31	13
32	14
33	15
34	16
35	17

(These embedder outputs are all on output card 2. Note that the ports that would be numbered 27 and 36 do not exist.)

Disembedders tied to Standard Outputs

Disembedder Port	Standard Output Port
28	1
29	2
30	3
31	4
32	5
33	6
34	7

4

Tielines Tab

Chapter 4 provides information and instructions regarding the web suite's 'Tielines' tab.

Summary

<i>Summary</i>	79
<i>Background Information</i>	80
<i>Tieline Uses Page</i>	82
<i>Tieline Destinations Page</i>	86
<i>Tieline Drawing Page</i>	89

Summary

When you click on the tielines tab, the tieline subtabs and their pages appear. By default, there are 3 pages:

Tieline Uses Tieline Destinations Tieline Drawing

However, you can configure the tieline tab to have a subset of these pages. Use the 'Options' tab and its 'Configuration > Pages' page to do so.

The three tieline pages show information about the current state of tielines in the entire NV9000 system controlled by the system controller you are monitoring with the web suite. The system can include several routers.

Two tieline pages present tables of tieline data. The third page presents the data as a drawing. The drawing page is a "schematic" view of the routers and tielines.


The following sections describe the pages.

The examples shown in this section refer to a demonstration NV9000 system. The configuration data for that system are listed in [Sample NV9000 Data](#), on page 81.

- ▲ Note: tielines are a purchase option of NV9000 systems. Your system might not actually support tielines. If it does not, the web suite will not show any tieline data.


Background Information

A tieline (or a "simple" tieline) is defined as a connection from an output of an *upstream* router to the input of a *downstream* router:

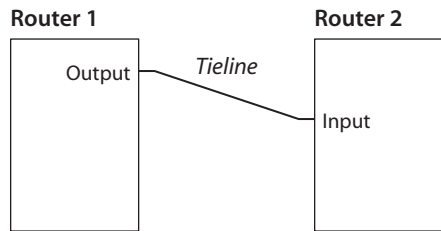

Sources and destinations that are connected using tielines and that comprise multiple levels (perhaps on different routers) must have a tieline connection on each of the applicable levels.

A multi-hop tieline is a set of simple tielines between multiple routers, perhaps at remote geographical locations.

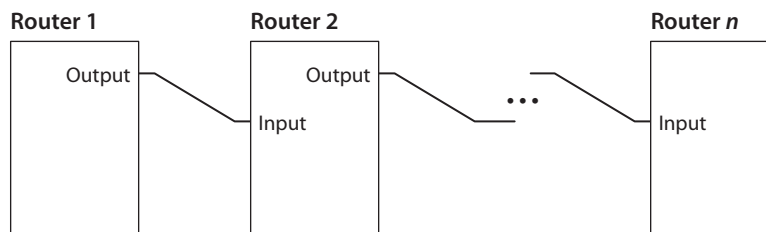

A tieline route is one taken from a source on an upstream router to a destination on a downstream router.

The NV9000 system uses tielines as a pool of resources. When the NV9000 needs to use a tieline to perform a route, it determines all the tielines necessary to make the route. If the pool of tielines is depleted, of course, it cannot make the route.

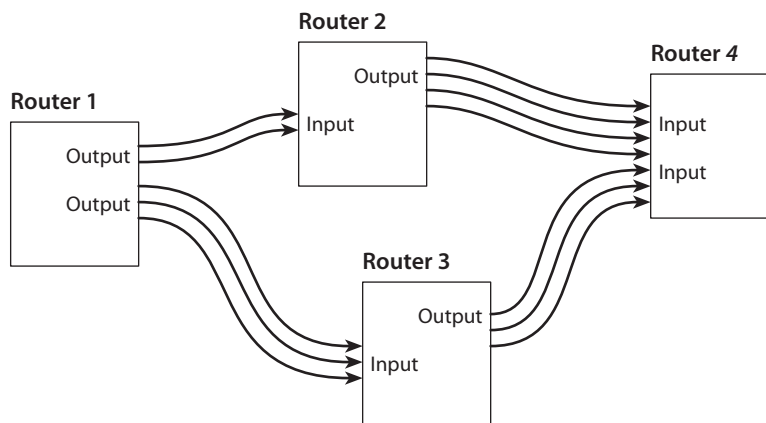


Fig. 4-1: Pooled Tielines


In Figure 4-1, there are no tieline paths from router 2 to router 3. If the NV9000 system cannot find a tieline path for a route, it cannot make the route.

The tieline pages of the web site show (1) the routes used by the tielines in your system and (2) the tielines that remain unused. (The latter are shown greyed out.)

The demonstration system used in the examples in this chapter has a small set of tielines that allow multi-hop routes.

Sample NV9000 Data

The (simple) demonstration setup for tielines has 3 routers, A, B, and C.

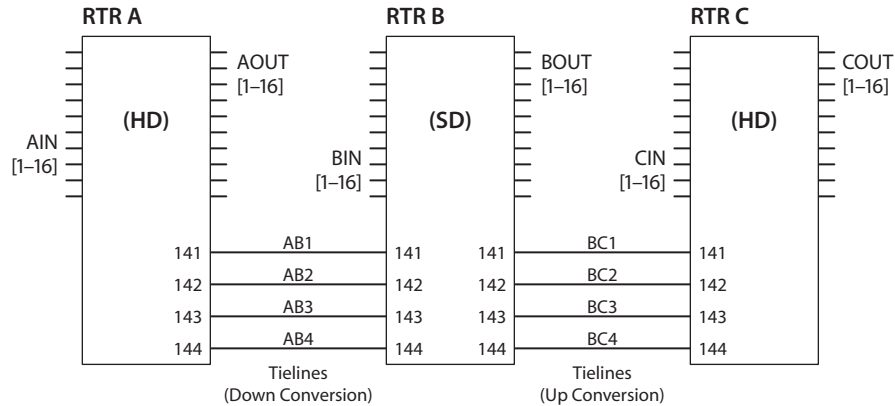

The routers are identical in size, each having 16 general inputs and outputs, except that router B routes SD, not HD. Tielines that perform up- and down-conversion are required between A and B and between B and C.

Thus, between A and B, there are 4 tielines, AB1 through AB4. Between B and C, there are 4 tielines, BC1 through BC4.

A route from router A to router C (through router B) is a 2-hop route.

The tielines form pool of resources from which the router control system can draw when it wants to perform routers from A to B, from B to C, or from A to C.

(Routes from C to A, B to A, and C to B are not defined in this demonstration system.)

Sample Tieline Routes

Using the sample system, three tieline routes were made, one from A to C, one from A to B, and one from B to C:

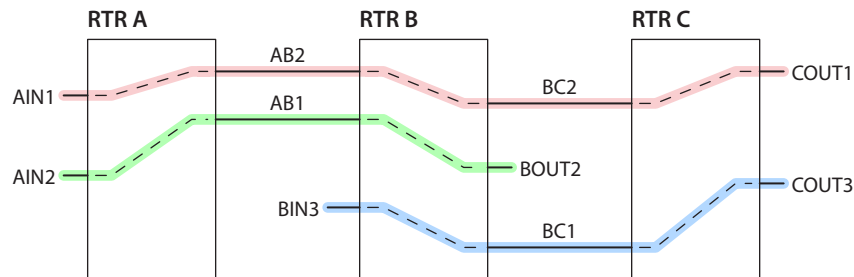



Fig. 4-2: Sample Tieline Routes

The route from AIN1 to COUT1 is considered "multi-hop."

These routes are depicted in the following sections.

Tieline Uses Page

The 'Tieline Uses' page shows simple tielines that are used for routes:

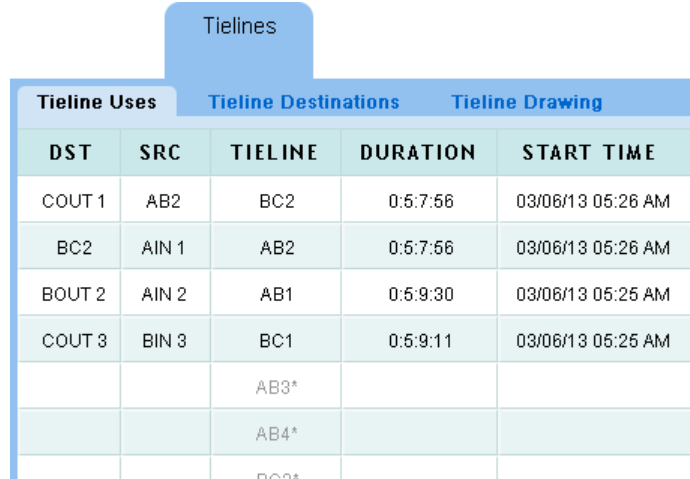

Tielines				
Tieline Uses		Tieline Destinations		Tieline Drawing
DST	SRC	TIELINE	DURATION	START TIME
COUT1	AB2	BC2	0:5:7:56	03/06/13 05:26 AM
BC2	AIN1	AB2	0:5:7:56	03/06/13 05:26 AM
BOUT2	AIN2	AB1	0:5:9:30	03/06/13 05:25 AM
COUT3	BIN3	BC1	0:5:9:11	03/06/13 05:25 AM
		AB3*		
		AB4*		
		BC3*		

Fig. 4-3: Tieline Uses Page

Tielines that are not in use are greyed out.

The page shown in Figure 4-3 illustrates the three tielines of Figure 4-2.


Table Ordering

By clicking the header of any table column you can cause the table to be reordered according to the entries in that column. Click the header once and the table is put in ascending order for that column. Click the header again to put the table in descending order of that column. An arrow (up or down) appears in the column header to indicate that the table is ordered according to that column.

To revert to the default table ordering, click the page refresh icon of your browser.

Interpretation


The first two rows of the table represent the multi-hop tieline from AIN1 to COUT1:

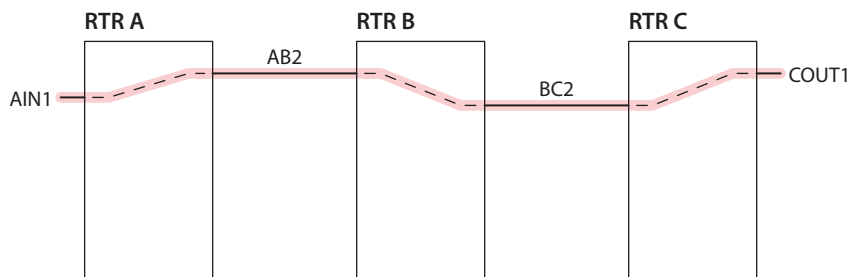


Each row is one hop.

In a multi-hop tieline, some of the sources and destinations are tieline ports, indicated by the names of the tielines. In the first row, for example, the source for the second hop is the tieline port AB2.

The third row represents a simple tieline route from AIN2 to BOUT2:

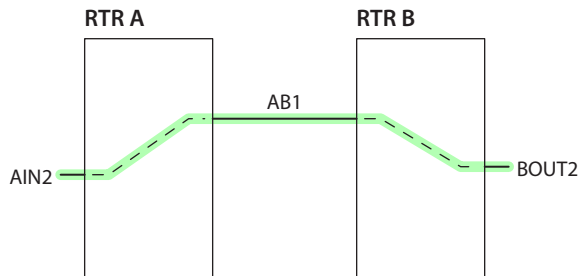

The fourth row represents a simple tieline route from BIN3 to COUT3:

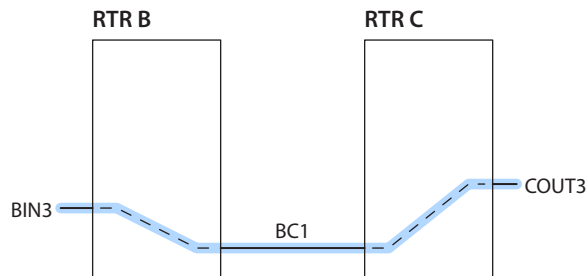

The other rows in the table represent tielines that are not used.

(The tieline drawing illustrated in Figure 4-5 also shows these routes.)

Preferences

The 'Uses' page has several user-selectable preferences, available in the sidebar:

Help
Tieline Uses Preferences

Tieline Uses

- Filtering enabled
- Automatically move unused Tielines to bottom
- Highlighting enabled
- Display use information
- Releasing Tielines enabled

Display Columns

- Destination
- Destination Level
- Source
- Source Level
- Name
- Description
- User
- Duration
- Start Time
- Group
- IP

These are the preferences:

- Filtering enabled

Checking this option places a name filter and a group filter on the 'Uses' page:



You can place text in the 'Search' field to limit the number of rows that are displayed. Only those rows in which the search text appears — in any column — are displayed.

You can select a tieline group in the 'Group' drop-down menu to restrict the tielines displayed only to those belonging to that group.

- Automatically move unused tielines to bottom

It might be more convenient for you to display all the tielines that are in use in the upper rows of the table. That way, you can minimize scrolling and confusion as you navigate to view different tielines that are in use.

- Highlighting enabled

Checking this option allows you to highlight table rows belonging to a tieline (in green, yellow, purple, or blue):

	DST	SRC	TIELINE	DURATION	START TIM
	BOUT 2 (2)	AIN 2 (2)	AB1 (1)		
Clicked this row →	BC2 (142)	AIN 1 (1)	AB2 (2)		
	COUT 3 (3)	BIN 3 (3)	BC1 (5)		
	COUT 1 (1)	AB2 (142)	BC2 (6)		

This is particularly useful to show the rows of a multi-hop tieline, which might be difficult to locate without this aid.

(In a multi-hop tieline, the row you click is the one that is highlighted green. Tieline hops upstream of that one are highlighted in yellow and tieline hops that are downstream of that one are highlighted in purple. Here is the same (multi-hop) tieline highlighted in yellow and green:

	DST	SRC	TIELINE	DURATION	START TIM
	BOUT 2 (2)	AIN 2 (2)	AB1 (1)		
	BC2 (142)	AIN 1 (1)	AB2 (2)		
	COUT 3 (3)	BIN 3 (3)	BC1 (5)		
Clicked this row →	COUT 1 (1)	AB2 (142)	BC2 (6)		

If a tieline goes to multiple destinations, the additional destinations are highlighted in blue. (It is a blue-violet color and distinguishable from the blue tones of the web suite page.)

- Display use information

Checking this option causes the page to display the number of tielines that are in use and the number that are available:




- Releasing tielines enabled

Checking this option causes the page to display a 'Release Tieline' button:



When the 'Release Tielines' button is enabled, you can release tielines. To do so, select a tieline path in the uses table and click the button. the software displays a warning:

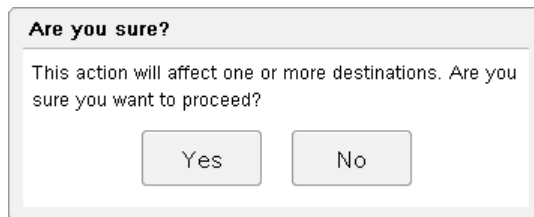

Click 'Yes' to proceed or 'No' to cancel the release.

- Display columns

These 11 check boxes let you select exactly what is displayed for each tieline row (or hop). Each check box corresponds to a column in the 'Tieline Uses' table. (Figure 4-3 shows just a few of these columns.)

These are the meanings of the optional columns of the table:

- 'Dst' — the destination of this simple tieline.
- 'Dst Level' — the physical level on which the tieline route is made, in the downstream router.
- 'Source' — the source of this simple tieline.
- 'Src Level' — the physical level on which the tieline route is made, in the upstream router.
- 'Tieline' — the name of the tieline.
- 'Description' — a description of the tieline that was defined at the time the tieline was defined in NV9000-SE Utilities.
- 'User' — the user name assigned to the control panel at which the route was made.

- 'Duration' — how long the tieline has been in effect, in days, hours, minutes, and seconds.
- 'Start Time' — the start time and date of the route that used the tielines.
- 'Group' — the tieline group to which the tieline belongs. (Your system might not have tieline groups, in which case you might leave this option unchecked.)
- 'IP' — either 0.0.0.0 or the loopback address of the system controller.

Numbers in parentheses in the source and destination fields are input or output port numbers. (The presence of these numbers is a page configuration option.)

The numbers in parentheses in the tieline and physical level fields are the NV9000 database IDs for the entries in those fields. (The presence of these numbers is a page configuration option.)

Tieline Destinations Page

The 'Tieline Destinations' page shows tielines that are used for routes:

Tielines									
Tieline Uses		Tieline Destinations			Tieline Drawing				
TIELINE	SOURCE	DEST 1	DEST 2	DEST 3	DEST 4	DEST 5	DEST 6	DEST 7	DEST 8
BC2	AIN 1	COUT 1							
AB2	AIN 1	COUT 1							
AB1	AIN 2	BOUT 2							
BC1	BIN 3	COUT 3							
AB3*									
AB4*									
BC3*									
BC4*									

Fig. 4-4: Tieline Destinations Page

Tielines that are not in use are greyed out.

The page shown in Figure 4-4 illustrates one 2-hop tieline (from AIN1 to COUT1) and two single-hop tielines (from AIN2 to BIN2 and from BIN3 to CIN3).

The 'Tieline Destinations' page shows the same tielines as the 'Tieline Uses' page.

Here, however, the page shows multiple destinations (if there are any) for each of the tielines. The tieline service in the NV9000 can connect one tieline source to multiple tieline destinations. This page shows those destinations.

If the tieline has more destinations than the number of 'Dest' columns in the table, then the additional destinations wrap around in the same row as the first set of destinations. (The height of the row increases.)

The page shows the originating source in the 'Source' column. In Figure 4-4, the rows for the "C" tielines show multi-hop routes. The page, in general, shows a mix of simple tieline routes and multi-hop routes.

Table Ordering

By clicking the header of any table column you can cause the table to be reordered according to the entries in that column. Click the header once and the table is put in ascending order for that column. Click the header again to put the table in descending order of that column. An arrow (up or down) appears in the column header to indicate that the table is ordered according to that column.

To revert to the default table ordering, click the page refresh icon of your browser.

Interpretation

Figure 4-4 shows the tieline example of Figure 4-2.

The first two rows belong to the multi-hop tieline from AIN1 to COUT1.


The third row shows the single-hop tieline from AIN2 to BOUT2.

The fourth row shows the single-hop tieline from BIN3 to COUT3.

The rows identify the most upstream source and the most downstream destination of the tieline route. Each row gives the name of a tieline "hop" for the route.

Preferences

The 'Destinations' page has several user-selectable preferences, available in the sidebar:

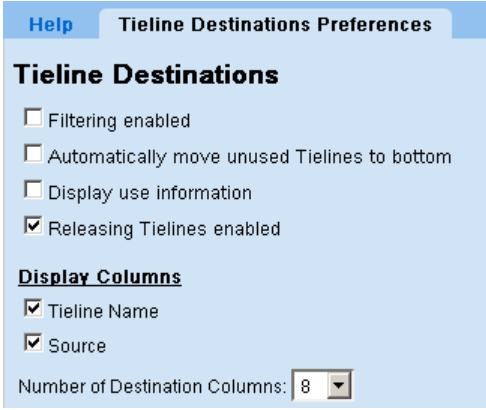

Help | **Tieline Destinations Preferences**

Tieline Destinations

- Filtering enabled
- Automatically move unused Tielines to bottom
- Display use information
- Releasing Tielines enabled

Display Columns

- Tieline Name
- Source

Number of Destination Columns: 8

These are the preferences:

- Filtering enabled

Checking this option places a name filter and a group filter on the 'Uses' page:



You can place text in the 'Search' field to limit the number of rows that are displayed. Only those rows in which the search text appears — in any column — are displayed.


You can select a tieline group in the 'Group' drop-down menu to restrict the tielines displayed only to those belonging to that group.

- Automatically move unused tielines to bottom

It might be more convenient for you to display all the tielines that are in use in the upper rows of the table. That way, you can minimize scrolling and confusion as you navigate to view different tielines that are in use.

- Display use information

Checking this option causes the page to display the number of tielines that are in use and the number that are available:

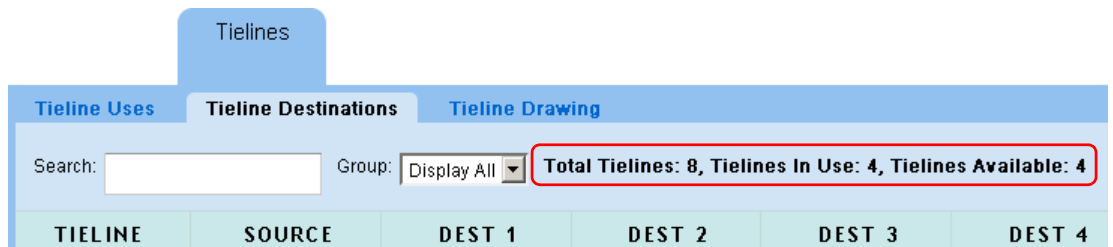


- Releasing tielines enabled

Checking this option causes the page to display a 'Release Tieline' button:



When the 'Release Tielines' button is enabled, you can release tielines. To do so, select a tieline path in the uses table and click the button. the software displays a warning:

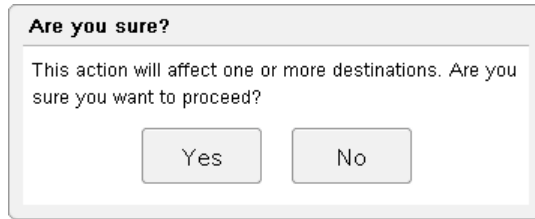

Click 'Yes' to proceed or 'No' to cancel the release.

- Display columns

These 3 items let you select exactly what is displayed for each tieline. The 2 check boxes refer to the first 2 columns of the table.

The number of destination columns defaults to 8 but you can increase or decrease the number of these columns. It makes sense to reduce the number of the 'Dest' columns because they often contain no information.

Numbers in parentheses in the source and destination fields are input or output port numbers. (The presence of these numbers is a page configuration option.)

The numbers in parentheses in the tieline field are the NV9000 database IDs for the entries in those fields. (The presence of these numbers is a page configuration option.)

Tieline Drawing Page

The 'Tieline Drawing' page presents a graphical view of tielines used for routes:

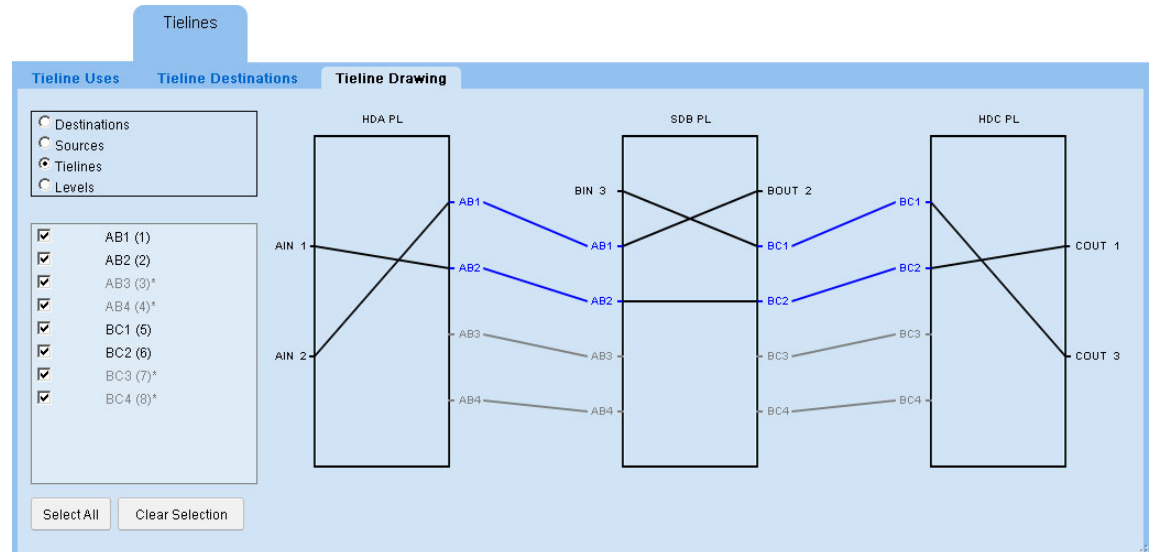


Fig. 4-5: Tieline Drawing Page

At the left side of the page are controls (radio buttons and check boxes) that let you select for display only the items you want to see.

The radio buttons select the category of items that you can choose in the section of check boxes below the radio buttons. If you click the 'Destinations' radio button, the check boxes correspond to destinations related to the tielines.

By checking and unchecking the items (such as destinations) in the check box list, you can control which tielines are shown in the drawing.

In Figure 4-5 above, the 'Tielines' radio button was chosen. Therefore, the names of tielines appear in the checkbox list. In this case, all check boxes are selected. The drawing includes unused tielines. (To include or exclude unused tielines is a tieline preference that you can set. See [Preferences](#), following)

There are two buttons below the check box list: 'Select All' and 'Clear Selection'. These are shortcuts that allow you to select all check boxes in the list or unselect all check boxes in the list.

Interpretation

Figure 4-5 shows a drawing representing the tieline example of Figure 4-2.

Each rectangle represents a physical level of a router. The rectangles are labeled with the level name (which is defined in NV9000-SE Utilities). In many cases, a router has a single physical level, so in those cases, the rectangle represents the router as well.

Dark lines that connect sources (at the left side of the rectangles) to destinations (at the right side of the rectangles) are tieline routes. Black lines are connections within the router; dark blue lines are connections between routers. The dark blue lines are the actual tielines.


Light gray lines represent unused tielines.

In Figure 4-5, you can see the tielines of the example: one 2-hop tieline running from AIN1 to COUT1 and two single-hop tielines (AIN2 to BOUT2 and BIN3 to COUT3).

If the tieline configuration page enables it, the drawings page will show port numbers next to the port names in the drawing. See [Editing a Tieline Tab](#), on page 32.

Preferences


The 'Drawings' page has several user-selectable preferences, available in the sidebar:

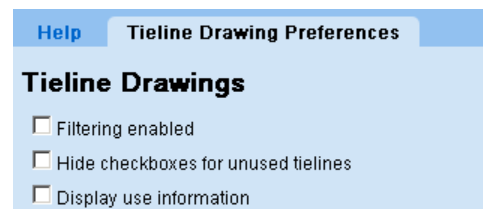

These are the preferences:

- Filtering enabled

Checking this option places a name filter on the 'Drawing' page:

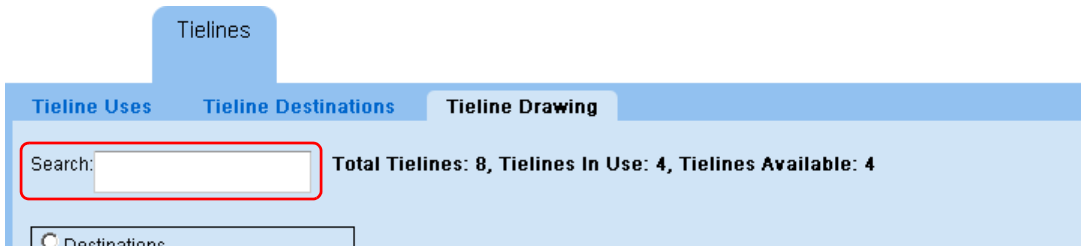


You can place text in the 'Search' field to limit the number of items that are displayed. Only those items in which the search text appears are displayed.

- Hide check boxes for unused tielines

If you wish to disregard unused tielines, checking this option will prevent their being displayed in the check box list or in the drawing.

- Display use information

Checking this option causes the page to display the number of tielines that are in use and the number that are available:

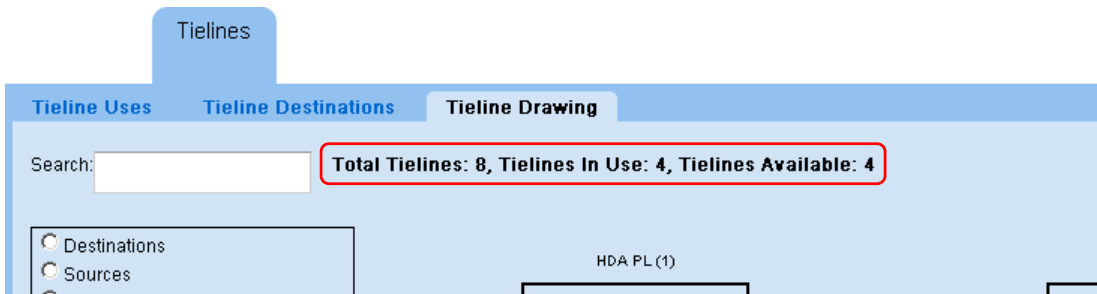

5 Multi-Level Tab

Chapter 5 provides information and instructions regarding the NV9000 Web Suite's 'Multi-Level' tab.

Summary

Summary 93
Locks and Protects 95

Summary

The 'Multi-Level' tab presents a list of destinations and for each destination, the sources that feed the destinations on one or more (virtual) levels.

Crosspoints

DESTINATION	HD	AUDIO 1	AUDIO 2	AUDIO 3	AUDIO 4	AUDIO 5	A
rtrA 046	RTRA 068	RTRA 068	RTRA 068	RTRA 068	RTRA 068	RTRA 068	
rtrA 047	RTRA 049	RTRA 049	RTRA 049	RTRA 049	RTRA 049	RTRA 049	
rtrA 048	RTRA 050	RTRA 050	RTRA 050	RTRA 050	RTRA 050	RTRA 050	
rtrA 049	RTRA 060	FREE	FREE	FREE	FREE	FREE	
rtrA 050	RTRA 028	RTRA 028	RTRA 028	RTRA 028	RTRA 028	RTRA 028	
rtrA 051	RTRA 028	RTRA 028	RTRA 028	RTRA 028	RTRA 028	RTRA 028	
rtrA 052	RTRA 029	RTRA 029	RTRA 029	RTRA 029	RTRA 029	RTRA 029	
rtrA 053	RTRA 028	RTRA 028	RTRA 028	RTRA 028	RTRA 028	RTRA 028	
rtrA 054	RTRA 069	RTRA 069	RTRA 069	RTRA 069	RTRA 069	RTRA 069	
rtrA 055	RTRA 051	RTRA 051	RTRA 051	RTRA 051	RTRA 051	RTRA 051	
rtrA 056	RTRA 028	RTRA 028	RTRA 028	RTRA 028	RTRA 028	RTRA 028	
rtrA 057	RTRA 028	RTRA 028	RTRA 028	RTRA 028	RTRA 028	RTRA 028	

Thus, each field to the right of the destination column is a source on the level indicated by the column header. If there is no source on a particular level, the field displays a dash.

▲ Sources from a tieline are displayed in *italics*.

By default, the 'Multi-Level' page displays all destinations and all virtual levels defined in the system controller's configuration. The web suite's configuration page, however, lets you specify exactly which destinations and exactly which virtual levels are displayed in the list.

You can create more than one 'Multi-Level' tab. Several 'Multi-Level' tabs can display different views of different data.

See [Editing a Multi-Level Crosspoint Tab](#), on page 35 for information about creating new tabbed pages and specifying the levels that appear in the page.


Table Ordering

By clicking the header of any table column you can cause the table to be reordered according to the entries in that column. Click the header once and the table is put in ascending order for that column. Click the header again to put the table in descending order of that column. An arrow (up or down) appears in the column header to indicate that the table is ordered according to that column.

To revert to the default table ordering, click the page refresh icon of your browser.

Preferences


The 'Multi-Level' page has several user-selectable preferences, available in the sidebar:

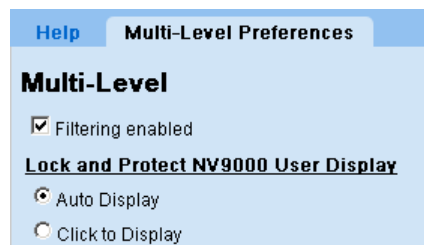

These are the preferences:

- Filtering enabled

Checking this option places a name filter, a level set filter, and a virtual level filter on the page:

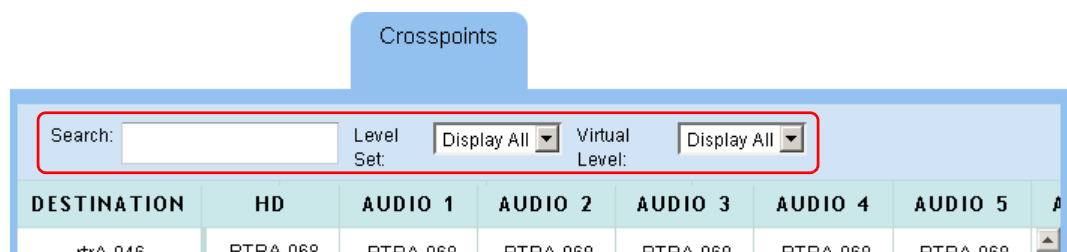

You can place text in the 'Search' field to limit the number of rows that are displayed. Only those rows in which the search text appears—in any column—are displayed.

You can select a level set in the 'Level Set' drop-down menu to restrict the destinations displayed to only those belonging to that level set. (The sources displayed will correspondingly be limited to the same level set.)

You can select a level in the 'Virtual Level' drop-down menu to restrict the destinations displayed to only those having that level.

- Lock and Protect NV9000 User Display

There are two radio button options for the display of locks and protects in the 'Multi-Level' page:

'Auto Display' causes a locked or protected field to show the NV9000 user name (and its database ID) of the user who locked or protected the destination automatically. (The NV9000 user name is defined in NV9000-SE Utilities and assigned in the web suite.)

'Click to Display' causes a locked or protected field to show the NV9000 user name (and its database ID) of the user who locked or protected the destination only when you click the field. The field reverts to its normal content when you click the field again.

Locked fields are always highlighted in red. Protected fields are always highlighted in yellow.

- ▲ It is the destination that is locked or protected, on particular levels. The highlighting in the source fields in the page's table indicate on which levels.
- ▲ Whether sources are locked or protected is not indicated on the 'Multi-Level' page.

Display Options

The multi-level page you are viewing might have been configured so that its table entries prefix a number (with a colon) to the source name. These numbers are device IDs for the destinations and sources.

The page also might have been configured so that its table entries show the source level name, in parentheses, for each source. (Note that the column names of the table are level names that apply to the *destinations*.)

Locks and Protects

Destinations that are locked are indicated by a red field in the columns representing the levels on which they are locked. Destinations that are protected are indicated by a yellow field in the column representing the levels on which they are protected:

AOUT 11	AIN 11	—	—	—
AOUT 12	AIN 6 Charlie (4)	—	—	—
AOUT 13	AIN 4	—	—	—
AOUT 14	AIN 4 Alpha (2)	—	—	—
AOUT 15	AIN 15	—	—	—

If a level is not displayed on the page, no lock or protection can be indicated for that level.

There is a page preference (available in the sidebar) that lets you specify whether the NV9000 user name (and its database ID) of the user who performed the lock or protect is displayed automatically or just when you click a particular field in the table. See [Preferences](#), on page 94.

The number in parentheses is the database ID of the NV9000 user name.

Multi-Level Tab

Multi-Level Tab

6 Primary Level Tab

Chapter 6 provides information and instructions regarding the NV9000 Web Suite's 'Primary Level' tab.

Summary

Summary 97
Locks and Protects 99

Summary

The 'Primary Level' tab presents a list of destinations and for each destination, the source that feeds the destination on the destination's *primary* level:

Primary Level							
DESTINATION	SOURCE	DESTINATION	SOURCE	DESTINATION	SOURCE	DESTINATION	SOURCE
AOUT 1	AIN 1	AOUT 2	AIN 2	AOUT 3	AIN 3	AOUT 4	AIN 4
AOUT 5	AIN 5	AOUT 6	AIN 6	AOUT 7	AIN 7	AOUT 8	AIN 8
AOUT 9	AIN 9	AOUT 10	AIN 10	AOUT 11	AIN 11	AOUT 12	AIN 12
AOUT 13	AIN 13	AOUT 14	AIN 14	AOUT 15	AIN 15	AOUT 16	AIN 16
BOUT 1	BIN 1	BOUT 2	AIN 2	BOUT 3	BIN 3	BOUT 4	BIN 4
BOUT 5	BIN 5	BOUT 6	BIN 6	BOUT 7	BIN 7	BOUT 8	BIN 8
BOUT 9	BIN 9	BOUT 10	BIN 10	BOUT 11	BIN 11	BOUT 12	BIN 12
BOUT 13	BIN 13	BOUT 14	BIN 14	BOUT 15	BIN 15	BOUT 16	BIN 16
COUT 1	AIN 1	COUT 2	CIN 2	COUT 3	BIN 3	COUT 4	CIN 4
COUT 5	CIN 5	COUT 6	CIN 6	COUT 7	CIN 7	COUT 8	CIN 8
COUT 9	CIN 9	COUT 10	CIN 10	COUT 11	CIN 11	COUT 12	CIN 12
COUT 13	CIN 13	COUT 14	CIN 14	COUT 15	CIN 15	COUT 16	CIN 16

This is a more compact view of the destinations than presented by the 'Multi-Level' page because (1) each line shows more than one destination and (2) less information is displayed for each destination.

The primary level for any destination is the first level defined for the device¹ in the NV9000 configuration. In typical cases, that level is a video level.

1. More accurately, the primary level is the first level defined for the level set to which the device belongs.

By default, the 'Primary Level' page displays all destinations defined in the system controller's configuration. The web suite's configuration page, however, lets you specify exactly which destinations are displayed in the list.

You can also specify the number of destination/source pairs to be displayed in each line (in the page preferences).


You can create more than one 'Primary Level' tab. Several 'Primary Level' tabs can display different views of different data.

- ▲ Sources from tielines are displayed in *italics*.
- ▲ Destinations with a breakaway or a level mapping are displayed with the primary source in underlined text.

See [Editing a Primary Level Tab](#), on page 40 for information about creating new tabbed pages.

Preferences


The 'Primary Level' page has several user-selectable preferences, available in the sidebar:

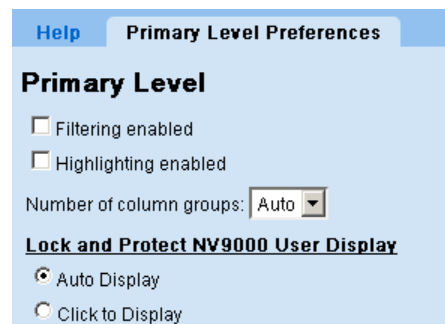

These are the preferences:

- Filtering enabled

Checking this option places a name filter on the page:

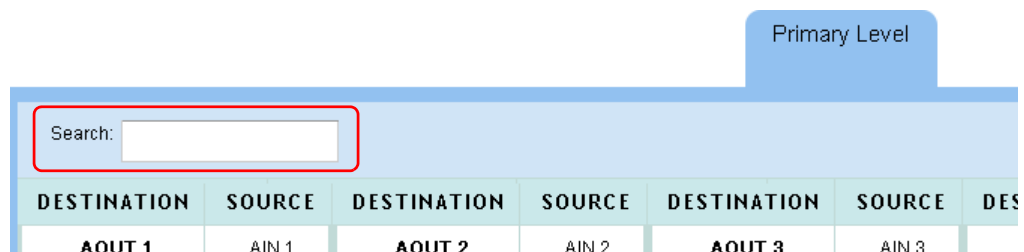

You can place text in the 'Search' field to limit the number of destination/source pairs that are displayed. Only those pairs in which the search text appears—in either the destination or the source—are displayed.

- Highlighting enabled

This option allows you to highlight any particular destination/source pair by clicking a field. The fields are highlighted in a shade of purple.

- Number of column groups

This option lets you specify the number of column pairs in the page. You can set this value to a number between 1 and 10 or you can specify 'Auto' to let the software determine the number of column pairs to display, according to the size of your browser window. (The default is 'Auto!')

- Lock and Protect NV9000 User Display

There are two radio button options for the display of locks and protects in the 'Primary Level' page:

'Auto Display' causes a locked or protected field to show automatically the NV9000 user name (and its database ID) of the user who locked or protected the destination.

'Click to display' causes a locked or protected field to show the NV9000 user name (and its database ID) of the user who locked or protected the destination only when you click the field. The field reverts to its normal content when you click the field again.

Locked fields are always highlighted in red. Protected fields are always highlighted in yellow.

- ▲ The lock or protect highlighting is present only if the destination is locked on its primary level.
- ▲ Whether sources are locked or protected is not indicated on the 'Primary Level' page.

Display Options

The primary level page you are viewing might have been configured so that its table entries prefix a number (with a colon) to the source name. These numbers are device IDs for the destinations and sources.

Locks and Protects

Locked destinations are represented by a red field in the destination column. Protected destinations are represented by a yellow field in the destination column:

Primary Level

Search: <input type="text"/>					
DESTINATION	SOURCE	DESTINATION	SOURCE	DESTINATION	SOURCE
AOUT 1	AIN 1	AOUT 2 Charlie (4)	AIN 6	AOUT 3	AIN 4
AOUT 4 Alpha (2)	AIN 4	AOUT 5	AIN 5	AOUT 6	AIN 4
AOUT 7	AIN 2	AOUT 8	AIN 3		

This illustration also shows a destination/source pair highlighted in purple.

There is a page preference (available in the sidebar) that lets you specify whether the NV9000 user name (and its database ID) of the user who performed the lock or protect is displayed automatically or just when you click a particular field in the table. See [Preferences](#), on page 98.

The number in parentheses is the database ID of the NV9000 user name.

Table Ordering

By clicking the header of any table column you can cause the table to be reordered according the entries in that column. Click the header once and the table is put in ascending order for that column. Click the header again to put the table in descending order of that column. An arrow (up or down) appears in the column header to indicate that the table is ordered according to that column.

To revert to the default table ordering, click the page refresh icon of your browser.

7 Matrix View

Chapter 7 provides information and instructions regarding the NV9000 Web Suite’s ‘Matrix View’ tab.

Summary

Summary 101

Summary

The ‘Matrix View’ tab presents a view of the sources and destinations of your router control system as a matrix. Rows in the matrix represent destinations; columns in the matrix represent sources. A third dimension to the matrix (not readily visible) represents levels. Those levels can be displayed at the top of the page, as an option. A crosspoint of the matrix appears as a colored round-corner square (which we are calling a “button”).

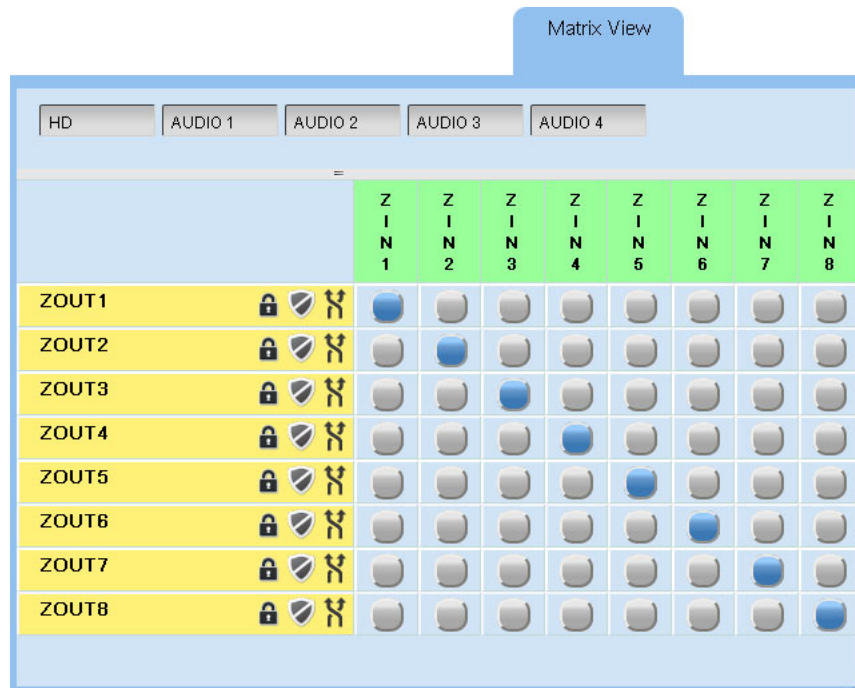


Fig. 7-1: Matrix View (Default Router State)

Unlike other pages in the web suite, the matrix view is *interactive*, allowing you to perform takes, breakaway, level mapping, and locks and protects.

The examples in this chapter show a simplified system that has 8 sources (ZINx) and 8 destinations (ZOUTx). Each source and destination has 5 levels: HD and AUDIO1–AUDIO4.

Figure 7-1, on the previous page, shows that system in an initial state, which is a diagonal matrix. That is, ZIN1 is routed to ZOUT1, on all levels, and so on, through ZIN8 and ZOUT8.

Figure 7-2 shows the matrix after a few takes, locks, and protects:

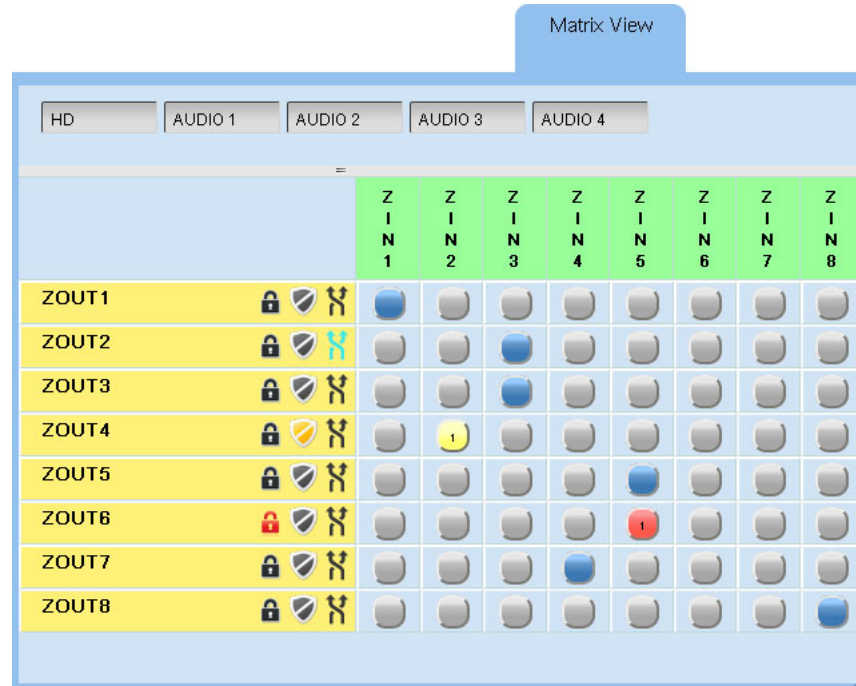


Fig. 7-2: Matrix View (Showing Locks, Protects, and Level-Mapping)

Level Display

An option among the page preferences causes the page to show buttons for the levels (that were selected for the page) at the top of the page. Each of these buttons is a toggle that selects or deselects a level for which to display crosspoint information. When the level is selected, the selection button is dark gray; when the level is not selected, it is light gray.

Each button in the matrix is highlighted if a route exists at that point for at least one of the levels selected for display.

- ▲ The level buttons do not control on which levels a take, a lock, or a protect is performed. They merely affect which levels are displayable. Use the breakaway feature to select levels for takes, locks, and protects.

Performing Simple Takes

To perform a simple take, just click the button in the row for the destination and the column for the source. (A breakaway or level mapping is slightly more complex. See [Breakaway and Level Mapping](#), on page 103.) The button turns blue—if the levels on which the take occurred are displayed.

Performing Simple Locks and Protects

To lock a destination, click the lock icon for the destination. The lock icon turns red and the highlighted button(s) for the destination also turn red.

To protect a destination, click the shield icon for the destination, as shown. The shield icon turns yellow and the highlighted button(s) for the destination also turn yellow.

The number within the square is the database ID of the NV9000 user name for the user who performed the lock or protect. The NV9000 user name is also displayed in the button when the buttons are medium or large size. (See [Preferences](#), on page 107.)

To release a lock or protect, simply click the lock or protect icon for the appropriate destination.

- ▲ To release a lock or protect, (1) you must be logged in as the person who made the lock or protect and (2) your current user name must be the one you had at the time you made the lock or protect. You cannot release a lock or protect made by someone else.
- ▲ There is no forced release in the web suite.

Breakaway and Level Mapping


Breakaway and level mapping are slightly more complex than simple takes. They require a dialog in which to specify the details of the breakaway or level mapping.

Definitions

In the web suite, breakaway is where you *deselect* at least one level for the take. Otherwise, the take is all-level and is not treated as a breakaway.

In the web suite, level mapping is where at least one level of the source is routed to a different level in the destination.


To open the breakaway/level-mapping dialog, click the double arrow icon for the destination to which you want to route. The dialog appears:

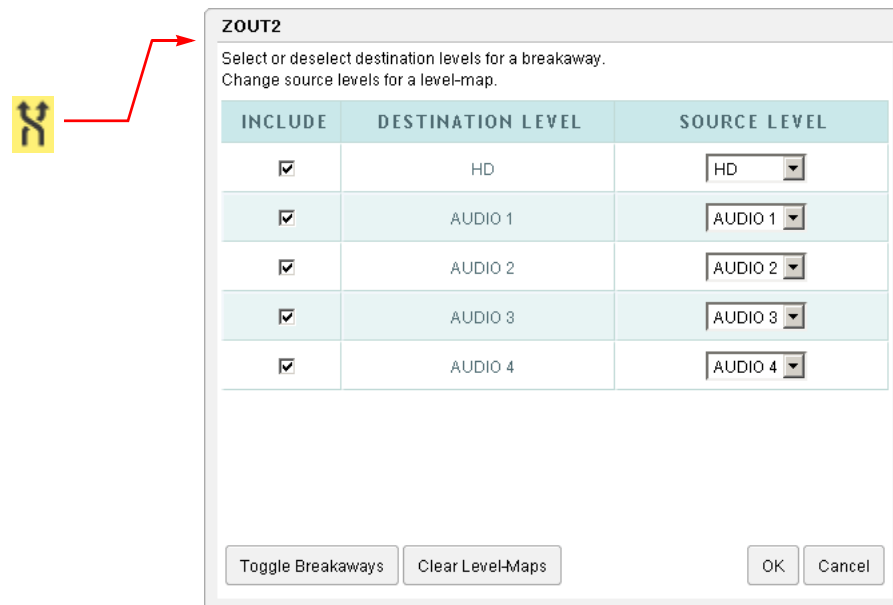


The dialog lists all the levels that were configured for the matrix view.

Breakaway

At the left of the dialog are check boxes. A check in the check box enables the level for a take, a lock (or unlock), or a protect (or unprotect). When a level is deselected for breakaway, the row representing that level is highlighted in gray:

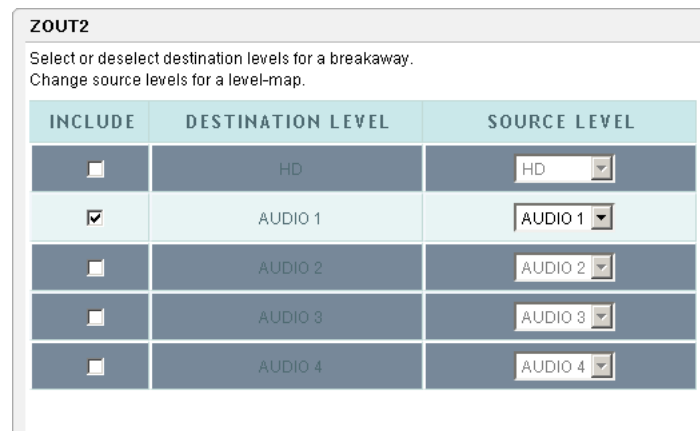

 There is a 'Toggle Breakaway' button at the bottom left of the dialog:



Click this button to invert the selection of levels. Check boxes that were checked become unchecked and vice versa. Highlighted rows become unhighlighted and vice versa.

Level Mapping

At the right of the dialog are drop-down lists for each level. Each drop-down list contains all the configured levels as well. Selecting a different level in the drop-down list creates a level mapping, that is to say, a *non-identity mapping from the level space of the source device to the level space of the destination device*. Where the mapping shows a difference in level, the entry in the drop-down list turns green:

ZOUT2


Select or deselect destination levels for a breakaway.
Change source levels for a level-map.

INCLUDE	DESTINATION LEVEL	SOURCE LEVEL
<input checked="" type="checkbox"/>	HD	HD ▼
<input checked="" type="checkbox"/>	AUDIO 1	AUDIO 2 ▼
<input checked="" type="checkbox"/>	AUDIO 2	AUDIO 1 ▼
<input checked="" type="checkbox"/>	AUDIO 3	AUDIO 4 ▼
<input checked="" type="checkbox"/>	AUDIO 4	AUDIO 3 ▼

In this example, channels AUDIO1 and AUDIO2 are swapped and channels AUDIO3 and AUDIO4 are swapped.

If none of the drop-down menus are green, the mapping is the identity mapping, but for convenience, we say that there is no mapping.

 There is a 'Clear Level-Maps' button at the bottom left of the dialog:



Click this button to restore the level mapping to no mapping (or really, the *identity* mapping).

Performing Breakaway or Level-Mapped Takes

First set up a breakaway or a level map or a combination of the two using the dialog.

Then perform a take by clicking the crosspoint button for the source and the destination.

The breakaway and level-map parameters persist until you change them or until you refresh the display.

Display of Breakaway and Level-Mapping

If a destination has a breakaway or a level mapping, or both, its double arrow icon is aqua-blue (although it appears green because of the yellow background):



Reclicking the double arrow icon can tell you whether this destination has a breakaway or a level mapping or both.

As mentioned, the level buttons at the top of the page (when enabled as a page preference) can select which levels are represented in the display of the "crosspoints."

For instance, if you perform a breakaway take of AUDIO1 from ZIN3 to ZOUT2, leaving all else the same, and display all available levels, the display shows two highlighted buttons:



When you display only level AUDIO1, the display shows that it is from ZIN3 (for ZOUT2):




When you display levels other than AUDIO1, the display shows that they are from ZIN2:



Preferences


The 'Matrix View' page has several user-selectable preferences, available in the sidebar:

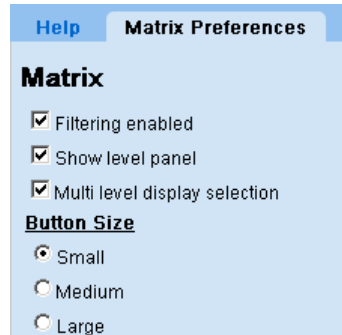

These are the preferences:

- Filtering enabled

Checking this option places a name filter and a level set filter on the page:

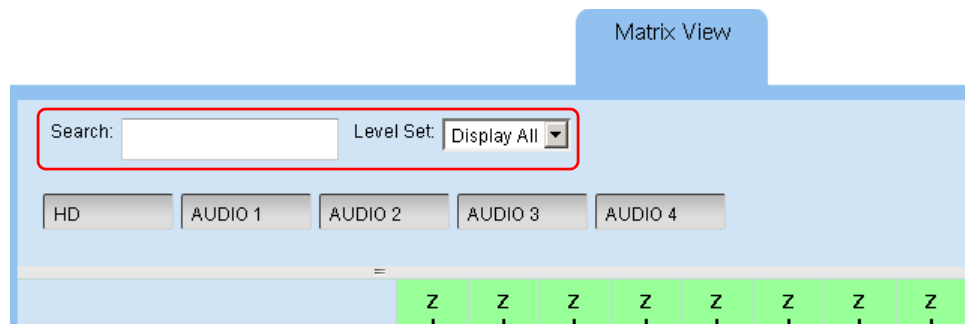

You can place text in the 'Search' field to limit the number of rows that are displayed. Only those destinations (rows) in which the search text appears are displayed.

You can select a level set in the 'Level Set' drop-down menu to restrict the destinations displayed to only those belonging to that level set. (The sources displayed will correspondingly be limited to the same level set.)

- Show level panel

This option enables the display of level buttons at the top of the page when the check box is checked. Level buttons select the levels that contribute to the display of the matrix.

If you do not check this option, the levels panel does not appear on the page and the matrix displays only primary level data.

- ▲ The level buttons do not select the levels on which takes, locks, and protects occur.

- Multi-level display selection

If you check this option, you can select more than one level in the levels panel.

If you uncheck this option, you can select *at most* one level in the levels panel.

- Button size

Three radio buttons allow you to choose the size of the buttons displayed in the matrix: small, medium, or large.

When the buttons are medium or large, and the destination is locked or protected on a visible level, they show the NV9000 user name of the user who locked or protected the destination as well as the database ID of the NV9000 user name. The small buttons show only the database ID.

Display Options

The matrix you are viewing might have been configured so that its table entries prefix a number (with a colon) to the source name or destination name. These numbers are device IDs for the destinations and sources.

See [Editing a Matrix View Tab](#), on page 43 for information about creating new tabbed pages and specifying the levels that appear in the page.

8 Bulk Routing

Chapter 8 provides information and instructions regarding the NV9000 Web Suite's 'Bulk Routing' tab.

Summary

Summary 109
Preferences 110
Display Options 111
Locks and Protects 112
Table Ordering 112
Functions 113

Summary

The 'Bulk Routing' tab presents a list of destinations and for each destination, the sources that feed the destination on one or more of the destination's levels:

Bulk Routing									
		Clear Filters							
Paste Levels:				<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
DESTINATION		SNAPSHOT	DEVICE	HD	AUDIO 1	AUDIO 2	AUDIO 3	AUDIO 4	
<input type="checkbox"/>	RPLYIN01	<input type="checkbox"/>	CCU 01	CCU 01	CCU 01	CCU 01	CCU 01	CCU 01	
<input type="checkbox"/>	RPLYIN02	<input type="checkbox"/>	CCU 02	CCU 02 (4K 1)	CCU 02	CCU 02	CCU 02	CCU 02	
<input type="checkbox"/>	RPLYIN03	<input type="checkbox"/>	BARS	BARS	BARS	BARS	BARS	BARS	
<input type="checkbox"/>	RPLYIN04	<input type="checkbox"/>	CCU 3	CCU 3 (4K 4)	CCU 12	CCU 12 (AUDIO 1)	CCU 12 (AUDIO 1)	CCU 12 (AUDIO 1)	
<input type="checkbox"/>	RPLYIN05	<input type="checkbox"/>	4KUPCON1	4KUPCON1 (4K 1)	FS 01	FS 01	FS 01	FS 01	
<input type="checkbox"/>	RPLYIN06	<input type="checkbox"/>	4KUPCON1	4KUPCON1 (4K 1)	FS 01	FS 01	FS 01	FS 01	
<input type="checkbox"/>	RPLYIN07	<input type="checkbox"/>	4KUPCON1	4KUPCON1 (4K 1)	FS 01	FS 01	FS 01	FS 01	
<input type="checkbox"/>	RPLYIN08	<input type="checkbox"/>	4KUPCON1	4KUPCON1 (4K 1)	FS 01	FS 01	FS 01	FS 01	
<input type="checkbox"/>	SDIO 009	<input type="checkbox"/>	CCU 1	CCU 1 (4K 1)	—	—	—	—	
<input type="checkbox"/>	RPLYIN09	<input type="checkbox"/>	CCU 1	CCU 1 (4K 3)	CCU 03	CCU 03 (AUDIO 1)	CCU 03 (AUDIO 1)	CCU 03 (AUDIO 1)	
<input type="checkbox"/>	RPLYIN10	<input type="checkbox"/>	CCU 08	CCU 08	CCU 08	CCU 08	CCU 08	CCU 08	
<input type="checkbox"/>	RPLYIN11	<input type="checkbox"/>	SONY F55	SONY F55 (4K 2)	FS 01	FS 01	FS 01 (AUDIO 1)	FS 01 (AUDIO 2)	
<input type="checkbox"/>	RPLYIN12	<input type="checkbox"/>	SONY F55	SONY F55 (4K 2)	FS 01	FS 01	FS 01 (AUDIO 1)	FS 01 (AUDIO 2)	
<input type="checkbox"/>	RPLYIN13	<input type="checkbox"/>	SONY F55	SONY F55 (4K 2)	FS 01	FS 01	FS 01 (AUDIO 1)	FS 01 (AUDIO 2)	
<input type="checkbox"/>	RPLYIN14	<input type="checkbox"/>	SONY F55	SONY F55 (4K 2)	FS 01	FS 01	FS 01 (AUDIO 1)	FS 01 (AUDIO 2)	
<input type="checkbox"/>	RPLYIN15	<input type="checkbox"/>	SONY F55	SONY F55 (4K 2)	FS 01	FS 01	FS 01 (AUDIO 1)	FS 01 (AUDIO 2)	
<input type="checkbox"/>	RPLYIN16	<input type="checkbox"/>	SONY F55	SONY F55 (4K 2)	FS 01	FS 01	FS 01 (AUDIO 1)	FS 01 (AUDIO 2)	

Each destination is identified by name in the 'Destination' column. The other columns represent the *levels* assigned to the page when page was configured. Each cell in a level column displays a source for that destination on that level.

You can change the source in any field. You can copy the contents from one destination to another. You can create *snapshots* of selected destinations. A snapshot is a file of destinations and their sources (stored in the PC on which the web suite is running). You can use snapshots to save and restore different states of the crosspoint map for the NV9000 you are examining.

By default, the bulk routing tab displays all destinations defined in the system controller's configuration. The web suite's configuration page, however, lets you specify exactly which destinations are displayed in the list.


You can create more than one bulk routing tab. Several bulk routing tabs can display different views of different data.

▲ Sources from tielines are displayed in *italics*.

See [Editing a Bulk Routing Tab](#), on page 51 for information about creating new 'Bulk Routing' pages.

Preferences

The bulk routing page has user-selectable preferences available in its sidebar:

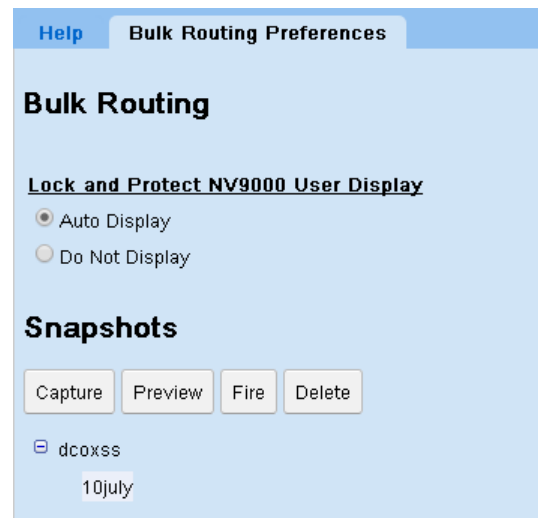

These are the preferences:

- Bulk Routing

There is a single item here: 'Lock and Protect NV9000 User Display'. There are two radio button options for the display of locks and protects in the 'Primary Level' page:

- 'Auto Display' causes a locked or protected field to show automatically the NV9000 user name (and its database ID) of the user who locked or protected the destination.
- 'Do not display' causes the software to ignore locks and protects.

Locked fields are always highlighted in red. Protected fields are always highlighted in yellow.

- Snapshots
There are 4 buttons and a list of snapshot files organized into folders. Please refer to [Snapshots](#), on page 115 for information.


Display Options

Device IDs

The bulk routing page you are viewing might have been configured so that its table entries prefix a number (with a colon) to the source name. These numbers are device IDs for the destinations and sources.

Most Recent Cell

Generally, the cell in which you last placed your cursor is highlighted in pale yellow:

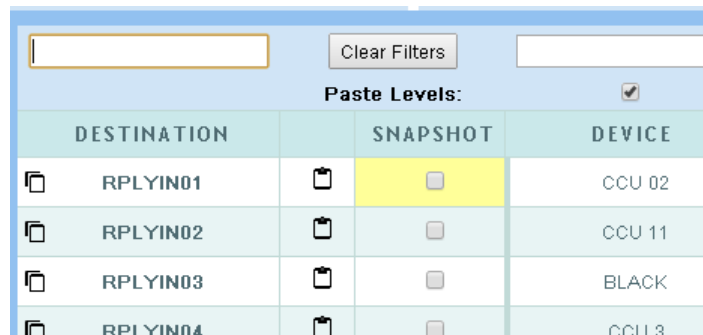

DESTINATION		SNAPSHOT	DEVICE
<input type="checkbox"/>	RPLYIN01	<input type="checkbox"/>	CCU 02
<input type="checkbox"/>	RPLYIN02	<input type="checkbox"/>	CCU 11
<input type="checkbox"/>	RPLYIN03	<input type="checkbox"/>	BLACK
<input type="checkbox"/>	RPLYIN04	<input type="checkbox"/>	CCU 3

Locks and Protects

Locked destinations are represented by a red field in the destination column. Protected destinations are represented by a yellow field in the destination column:

Bulk Routing						
		Clear Filters				
Paste Levels:		<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
DESTINATION		SNAPSHOT	DEVICE	HD	AUDIO 1	AUDIO 2
<input type="checkbox"/> RPLYIN01	<input type="checkbox"/>	<input type="checkbox"/>	CCU 01	CCU 01	CCU 01	CCU 01
<input type="checkbox"/> RPLYIN02	<input type="checkbox"/>	<input type="checkbox"/>	CCU 02	CCU 02 (4K 1)	CCU 02	CCU 02
<input type="checkbox"/> RPLYIN03	<input type="checkbox"/>	<input type="checkbox"/>	BARS	BARS	BARS	BARS
<input type="checkbox"/> RPLYIN04	<input type="checkbox"/>	<input type="checkbox"/>	CCU 3	CCU 3 (4K 4)	CCU 12	CCU 12 (AUDIO 1)
<input type="checkbox"/> RPLYIN05	<input type="checkbox"/>	<input type="checkbox"/>	4KUPCON1	4KUPCON1 (4K 1)	FS 01	FS 01
<input type="checkbox"/> RPLYIN06	<input type="checkbox"/>	<input type="checkbox"/>	4KUPCON1	4KUPCON1 (4K 1)	FS 01	FS 01
<input type="checkbox"/> RPLYIN07	<input type="checkbox"/>	<input type="checkbox"/>	4KUPCON1	4KUPCON1 (4K 1)	FS 01	FS 01
<input type="checkbox"/> RPLYIN08	<input type="checkbox"/>	<input type="checkbox"/>	4KUPCON1	4KUPCON1 (4K 1)	FS 01	FS 01
<input type="checkbox"/> SDI0 009	<input type="checkbox"/>	<input type="checkbox"/>	CCU 1	CCU 1 (4K 1)	—	—
<input type="checkbox"/> RPLYIN09	<input type="checkbox"/>	<input type="checkbox"/>	CCU 1	CCU 1 (4K 3)	CCU 03	CCU 03 (AUDIO 1)
<input type="checkbox"/> RPLYIN10	<input type="checkbox"/>	<input type="checkbox"/>	CCU 08	CCU 08	CCU 08	CCU 08
<input type="checkbox"/> RPLYIN11	<input type="checkbox"/>	<input type="checkbox"/>	SONY F55	SONY F55 (4K 2)	FS 01	FS 01

There is a page preference (available in the sidebar) that lets you specify whether the NV9000 user name (and its database ID) of the user who performed the lock or protect is displayed automatically or just when you click a particular field in the table. See [Preferences](#), on page 110.

Table Ordering

By clicking the header of the 'Destination' column or any 'Level' column, you can cause the table to be reordered according the entries in that column. Click the header once and the table is put in ascending order for that column. Click the header again to put the table in descending order of that column. An arrow (up or down) appears in the column header to indicate that the table is ordered according to that column.

To revert to the default table ordering, click the page refresh icon of your browser.

When you click the 'Snapshot' column header, all the checkboxes in the 'Snapshot' column are selected. If you click the 'Snapshot' column header again, all the checkboxes in the column become unselected.


Functions

The page lets you do the following:

- Change any source.
- Copy the sources feeding one destination to other destinations. (The check boxes at the top of the columns indicates which levels are actually copied.)
- Filter the destinations and filter the sources that apply to the destinations. Doing so reduces the number of entries in the table.
- Take “snapshots” of the destinations and organize and control different sets of snapshots. You can save and restore the crosspoint matrix (or portions of it) using snapshots.

Changing a Source

You can change the source in any source field. To do so, click the field. A drop-down menu appears in which you can pick a source from a list:

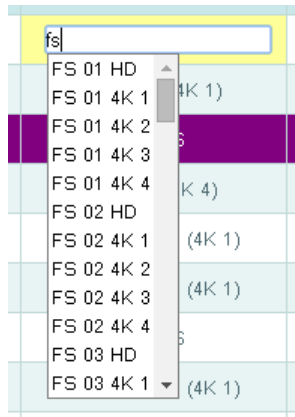

You can either scroll the drop-down list and pick a source from the list or type the source name in the field.

If, as indicated here, you type the first few letters of source names, the drop-down list is trimmed to those source names that contain the text you typed. You can then pick a source from the trimmed list.

Copying Destinations

You can copy the sources from one destination to another.

You can restrict the levels on which the copy is made by checking (or unchecking) the check boxes at the top of the levels columns. When a level column is checked, will be included in the “paste” -- hence the phrase “Paste Levels” next to the check boxes.

The process is a “copy and paste” operation.

To “copy” one destination, click the name of the destination in a ‘Destination’ field. The entire row becomes highlighted in purple.

To “paste” the source data, click the paste icon (i.e., the clipboard icon) in one or more other destinations:

Bulk Routing

		Clear Filters						
		Paste Levels:						
		<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
DESTINATION		SNAPSHOT	DEVICE	HD	AUDIO 1	AUDIO 2	AUDIO 3	
	RPLYIN01		<input type="checkbox"/>	CCU 01	CCU 01	CCU 01	CCU 01	CCU 01
	RPLYIN02		<input type="checkbox"/>	CCU 02	CCU 02 (4K 1)	CCU 02	CCU 02	CCU 02
	RPLYIN03		<input type="checkbox"/>	BARS	BARS	BARS	BARS	BARS
	RPLYIN04		<input type="checkbox"/>	CCU 3	CCU 3 (4K 4)	CCU 12	CCU 12 (AUDIO 1)	CCU 12 (AUDIO 1)
	RPLYIN05		<input type="checkbox"/>	4KUPCON1	4KUPCON1 (4K 1)	FS 01	FS 01	FS 01
	RPLYIN06		<input type="checkbox"/>	4KUPCON1	4KUPCON1 (4K 1)	FS 01	FS 01	FS 01
	RPLYIN07		<input type="checkbox"/>	4KUPCON1	4KUPCON1 (4K 1)	FS 01	FS 01	FS 01
	RPLYIN08		<input type="checkbox"/>	BARS	BARS	BARS	BARS	BARS
	SDI0 009		<input type="checkbox"/>	CCU 1	CCU 1 (4K 1)	—	—	—
	RPLYIN09		<input type="checkbox"/>	CCU 1	CCU 1 (4K 3)	CCU 03	CCU 03 (AUDIO 1)	CCU 03 (AUDIO 1)
	RPLYIN10		<input type="checkbox"/>	CCU 08	CCU 08	CCU 08	CCU 08	CCU 08
	RPLYIN11		<input type="checkbox"/>	SONY F55	SONY F55 (4K 2)	FS 01	FS 01	FS 01 (AUDIO 1)

This example shows RPLYIN02 copied to RPLYIN08.

Immediately after you click the paste icon, the source fields turn green for a few seconds and then fade to white. The paste icon remains highlighted in pale yellow until you click something else.

Once you have selected a destination you can paste it many times. You must paste destinations one at a time; there is no bulk paste operation.

Filters

At the top of the destination column and at the top of each level column are text fields. If you enter text in any of the text fields, the set of destinations displayed is trimmed to those cells that contain the text string you typed in that column.

If you enter text in multiple columns, the number of destinations displayed diminishes rapidly. Be careful: it is possible to trim the table to zero entries.

You can use the ‘Clear Filters’ button at the top of the page to erase text from all the filter text fields.

Snapshots

What is a snapshot?

A snapshot is a file that contains a set (or a subset) of destinations in the 'Bulk Routing' window. For each destination, the data in the snapshot file identifies the sources assigned to the destination's current levels. (These are **all** the levels defined for the destination, not just the levels displayed in the Bulk Routing page.)


You can use snapshots to save and restore different states of the crosspoint map for the NV9000 you are examining.

- ▲ It is possible for a customer to obtain a snapshot file and mail it to Grass Valley service. If you wish to do this, contact Grass Valley customer service.

The page has a column of checkboxes entitled 'Snapshot'. Use these checkboxes to specify which destinations you want to include in your snapshot.

- ▲ If you click the 'Snapshot' column header, you can select all displayed destinations. There is no matching unselect function. It is necessary to click your browser's refresh page button to clear the checkboxes for all destinations.

It is with the 4 'snapshot' buttons in the preferences section of the (blue) sidebar that you perform snapshot operations:

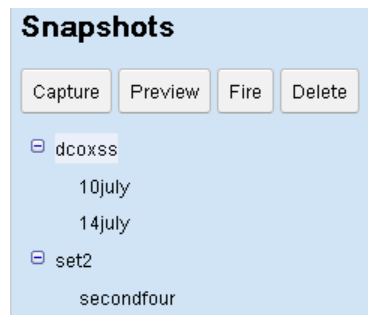

These buttons are


- [Capture Button](#)
- [Preview Button](#)
- [Fire Button](#)
- [Delete Button](#)

Below these buttons is a set of "folder" (or directory) names. Each folder can contain one or more snapshots. (The saved snapshot file is a set of data stored in the PC on which the web suite is running.)

Capture Button

Use the capture button to save a snapshot.

First, place a checkbox in the 'Snapshot' column for all the destinations you want to include in the snapshot. Then open the sidebar and click 'Capture'. The software displays a capture dialog:

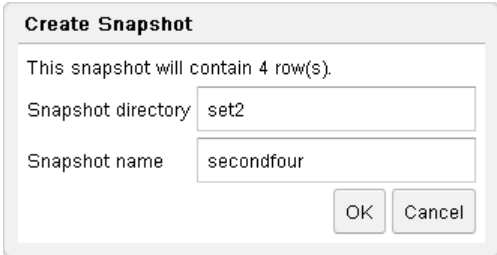

The 'Create Snapshot' dialog box shows a message: "This snapshot will contain 4 row(s)." Below this, there are two input fields: "Snapshot directory" with the value "set2" and "Snapshot name" with the value "secondfour". At the bottom right, there are "OK" and "Cancel" buttons.

Enter a directory (or "folder") name and a name for the snapshot file and click OK.


(You can enter spaces and other odd characters in the name, but the software removes them from the names before using those names.)

When you have clicked OK, the folder name and the snapshot file name appear in the preferences window of the sidebar.

You can then refer to any of the snapshot files you have created.

Preview Button

Use the 'Preview' button to view only the destinations belonging to your snapshot:

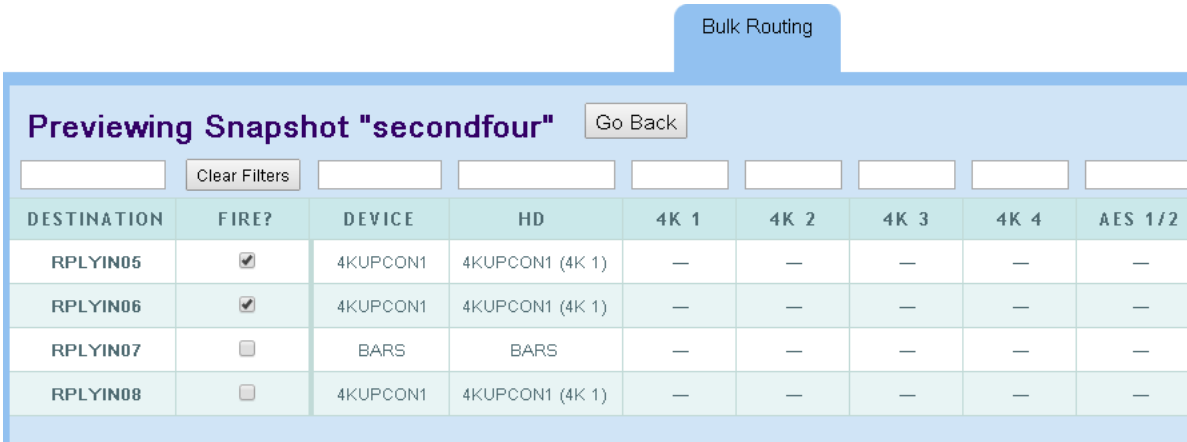

The 'Previewing Snapshot "secondfour"' dialog shows a table of destinations. At the top, there is a "Go Back" button. Below the title bar, there is a "Clear Filters" button and several empty input fields. The table has columns: DESTINATION, FIRE?, DEVICE, HD, 4K 1, 4K 2, 4K 3, 4K 4, and AES 1/2. The rows are:

DESTINATION	FIRE?	DEVICE	HD	4K 1	4K 2	4K 3	4K 4	AES 1/2
RPLYIN05	<input checked="" type="checkbox"/>	4KUPCON1	4KUPCON1 (4K 1)	—	—	—	—	—
RPLYIN06	<input checked="" type="checkbox"/>	4KUPCON1	4KUPCON1 (4K 1)	—	—	—	—	—
RPLYIN07	<input type="checkbox"/>	BARS	BARS	—	—	—	—	—
RPLYIN08	<input type="checkbox"/>	4KUPCON1	4KUPCON1 (4K 1)	—	—	—	—	—

The features of the 'Preview' display are similar to the features of the 'Bulk Routing' display, with a few differences:

- 'Go Back' button.

Press the 'Go Back' button to return to the normal 'Bulk Routing' view.

- 'Fire?' column instead of a 'Snapshot' column.


Use the check boxes in the 'Fire?' column to specify which destinations in the snapshot are to be executed when you press the 'Fire' button in the sidebar. See [Fire Button](#), next page.

- All the levels of the destination are displayed.
The level display of the 'Preview' view is without consideration of the levels you have chosen to display in the 'Bulk Routing' page.
- There are no paste icons (or copy icons) for each destination. They are not needed.

Fire Button

Use the 'Fire' button in the sidebar to "execute" the destinations in the snapshot which remain checked in the 'Fire?' column of the 'Preview' window.

It is not possible to execute 'Fire' unless you have the snapshot previewed. If no snapshot is previewed, you will get a message:

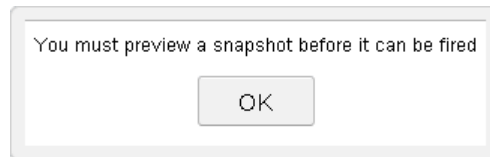

If you are previewing a snapshot, you will see a confirmation dialog something like this:



The number of destinations checked in the 'Fire?' column is reported in the confirmation dialog.

Delete Button

Use the 'Delete' button in the sidebar to delete a snapshot.

First select the snapshot in the sidebar and then click the 'Delete' button.

If the snapshot is the only member of a "folder," the deletion will delete the folder as well.

Appendix A gives additional notes regarding the NV9000 Web Suite.

Summary

DHP Restriction 119

DHP Restriction

DHP—a service running in an NV9000 system controller—can communicate with only one instance of the web suite at a time. Therefore, if multiple users are to access the NV9000 system and monitor DHP, those users must use the same instance of the web suite. (The multiple users would specify the IP address of the PC running the service as the URL in their browser.)

Because the web suite is a service, it is always in communication with the system controller, whether a user has a browser open or not. Therefore, when the system controller supports a router with DHP, all but one instance of the web suite must be stopped.

- ▲ Multiple accesses to DHP might include an instance of DHP-D¹ running somewhere. If DHP-D is running, no instance of the web suite can access DHP data.

The web suite’s tieline and crosspoint views (including the matrix view) do *not* have this restriction because the restriction is only in the DHP implementation.

1. A Grass Valley diagnostic utility not generally available to customers.

index

Index

A

About (page)17, 19
Add new user (button)12, 57
Add Tab ... (button) 26
Adding tabbed pages25, 27
Adding users 12
Admin (check box) 59
Admin privilege15, 17, 19, 22
Append (button) 30–31, 34, 37, 39, 42, 46, 48, 50,
53,55
Append all (button) 30–31, 34, 37, 39, 42, 46, 48, 50,
.....53, 55
Appendices
 A, Special Features 119
Audio (columns) 69

B

Benchmarks 21
Bold purple text 69
Bulk routing (tab)3, 26, 51, 109
Buttons
 add new user12, 57
 add tab 26
 append 30–31, 34, 37, 39, 42, 46, 48, 50, 53, 55
 append all 30–31, 34, 37, 39, 42, 46, 48, 50, 53,
 55
 delete 25
 delete tab 27
 force server data reload 20
 load 25
 move down39, 42, 46, 48, 50, 55
 move up 39, 42, 46, 48, 50, 55
 new 10
 remove 30–31, 34, 37, 39, 42, 46, 48, 50, 53, 55
 remove all 30–31, 34, 37, 39, 42, 46, 48, 50, 53,
 55
 restart application server 20
 run server benchmark 21
 save 11, 25–26
 save as 25

save configuration 20
save user59–60

C

Chapters
 1, Introduction 1
 2, Options 17
 3, DHP 65
 4, Tielines 79
 5, Multi-Level Tab 93
 6, Primary Level Tab 97
 7, Matrix View Tab 101
 8, Bulk Routing Tab 109
Check box
 admin 59
Chrome 1, 22
Client log (page)18, 61
Configuration subtab 17, 19
Configuration, GUI 8–10, 19, 24
Contact Grass Valley 125
Core, DHP65, 68, 73–74, 76–77
Corporate head office, contact 125
Creating tabs .. 3, 15, 22, 25, 27, 94, 98, 108, 110
Customer support 125

D

Dashes, long 16
Data store (page)18, 63
Debug dump file 21
Delete (buttons) 25
Delete (check box) 60
Delete tab (button) 27
Deleting tabbed pages 27
Destination selection 36, 38, 41, 45, 54
Device IDs 36, 41, 45, 95, 108
DHP (dynamic hybrid path-finding) 2
DHP (tab) 2, 26, 28, 65
DHP core65, 68, 73–74, 76–77
DHP disembedder (page) 2

DHP drawing (page) 2, 65, 73
 DHP embedder (page) 2
 DHP IP address 20
 DHP reentry (page) 2, 65, 71
 Dialog
 login 9
 new configuration 10
 Disembedder (page) 65, 67
 Disembedder ports 67, 74, 77
 Disembedder preferences 68, 70, 72, 75
 Don't include list 30–31, 34, 37, 39, 42, 46, 48, 50,
 53, 55
 Dst Level (column) 85
 Duration (column) 86
 Dynamic hybrid path-finding (see DHP)

E

Embedder (page) 65, 68
 Embedder ports 68, 74, 77

F

Firefox 1, 21
 Force server data reload (button) 20

G

Grass Valley, contact 125
 Green text 61
 GUI configuration 9, 19, 24
 defining 8, 10

H

Head office, contact 125
 Help (in logout pane) 14
 Help (in the logout pane) 20
 HTML 5.0 1
 Hybrid inputs 74
 Hybrid outputs 74
 HybridPorts_XXXX file 77

I

Include list 30–31, 34, 37, 39, 42, 46, 48, 50, 53, 55
 Instrumentation mode 20
 Internet Explorer 10 1
 IP (column) 86
 IP address 8
 IP address, DHP 20
 IP address, NV9000 20

L

Level selection 36–37, 45, 49, 52
 List of users 8–9, 11, 13, 56, 59
 Load ... (button) 25
 Locks and protects 16, 95, 99, 112
 Logging level 63
 Logging out 13, 15
 Login dialog 9
 Logout pane 14, 20
 Logs subtab 17–18, 20, 60
 Long dashes 16

M

MADI ports 74
 Matrix view (tab) 3, 43, 101
 MCE (master control engine)
 special features 119
 Move down (button) 39, 42, 46, 48, 50, 55
 Move up (button) 39, 42, 46, 48, 50, 55
 Multi-level (tab) 2, 26, 35, 93
 Multiple (tieline) destinations 86

N

New ... (button) 10
 New configuration dialog 10
 New users 12–13
 No password (option) 13
 null 20
 NV8140 65
 NV8144 65
 NV8280 65
 NV8500 family routers 65
 NV8576 65
 NV8576-Plus 65

NV9000 database IDs86, 89
 NV9000 router control system1–2
 NV9000 Status GUI 1
 revision number 19
 NV9000, IP address20
 NV9000-SE Utilities76

O

Offline routers 16
 Options (tab) 3, 17, 20, 65, 79

P

Pages

about17, 19
 client log18, 61
 data store18, 63
 DHP disembedder 2
 DHP drawing 2, 65, 73
 DHP embedder 2
 disembedder65, 67
 embedder65, 68
 pages 19, 22, 65, 79, 94, 98, 108, 110
 reentry 2, 65, 71
 server 19
 server log18, 62
 servers 19
 system status18, 61
 tieline destinations 2, 79, 86
 tieline drawing 2, 79, 89
 tielines uses 2, 79, 82
 users19, 56
 welcome 17
 Pages (page) 19, 22, 65, 79, 94, 98, 108, 110
 Password 9
 Passwords 13, 56, 58
 Port numbers86, 89
 Preferences
 disembedder68, 70, 72, 75
 Primary level (tab)3, 26, 40, 97
 Protects 16, 95, 99, 112

R

Red fields 16, 95, 99, 112
 Red text 62

Reentry (page)2, 65, 71
 Releasing85, 88
 Releasing tielines enabled85, 88
 Remove (button) 30–31, 34, 37, 39, 42, 46, 48, 50,
 53, 55
 Remove all (button) 30–31, 34, 37, 39, 42, 46, 48,
 50,53, 55
 Removing users 59
 Reporting level 63
 Restart application server (button) 20
 Restarting the GUI 20
 Revision, status GUI 19
 Run server benchmark (button) 21

S

Safari 22
 Sample NV9000 configuration65, 73–74, 76
 Sample NV9000 data 79
 Save (button) 11, 25–26
 Save as... (button) 25
 Save configuration (button) 20
 Save users (button)59–60
 SDI (column)67, 69
 Selection
 destinations 36, 38, 41, 45, 54
 level 49
 levels36–37, 45, 52
 source 47
 Server log (page)18, 62
 Servers (page) 19
 Show destination device IDs (check box) 45
 Show device IDs (check box)36–37, 41, 45
 Show device IDs (option) 95, 99, 108, 111
 Show source device IDs (check box) 45
 Show virtual level of the source (check box) 36–37,
 45
 Show virtual levels of the source (option) 95
 Source selection 47
 Special features 119
 Src (column) 85
 Src level (column) 85
 Standard inputs73, 77
 Standard outputs 73
 Start time (column) 86
 Status GUI 1
 revision number 19
 Support, contact 125
 System status (page)18, 61

T

Tabbed pages 1, 22
Tabs
 bulk routing 3, 26, 51, 109
 creating 3, 15, 22, 25, 27, 94, 98, 108, 110
 DHP 2, 26, 28, 65
 matrix view 3, 43, 101
 multi-level 2, 26, 35, 93
 options 3, 17, 20, 65, 79
 primary level 3, 26, 40, 97
 tielines 2, 26, 32, 79
Technical support 125
Tieline destinations (page) 2, 79, 86
Tieline drawing (page) 2, 79, 89
Tieline theory 80
Tieline uses (page) 2, 79, 82
Tielines (tab) 2, 26, 32, 79

U

Use all (option) 37–38, 41, 45, 47, 49, 52, 54
Use selection (option) 30–31, 34, 37, 39, 42, 46, 48,
 50, 53, 55
User (column) 85
Username 9, 12–13, 57
Users (page) 19, 56
Users, list 8–9, 11, 13, 56, 59

W

Welcome (page) 17

Y

Yellow fields 16, 95, 99, 112



Grass Valley Technical Support

For technical assistance, contact our international support center, at 1-800-547-8949 (US and Canada) or +1 530 478 4148.

To obtain a local phone number for the support center nearest you, please consult the Contact Us section of Grass Valley's website (www.grassvalley.com).

An online form for e-mail contact is also available from the website.

Corporate Head Office

Grass Valley
3499 Douglas-B.-Floreani
St-Laurent, Quebec H4S 2C6
Canada
Telephone: +1 514 333 1772
Fax: +1 514 333 9828
www.grassvalley.com