

# Kaleido-Modular-X

High picture count, ultra-flexible and scalable multiviewer

## Quick Start Guide

M933-9805-106

11 June 2014



## Copyright & Trademark Notice

Copyright © 2013–2014, Grass Valley, a Belden Brand. All rights reserved.

Belden, Belden Sending All The Right Signals, and the Belden logo are trademarks or registered trademarks of Belden Inc. or its affiliated companies in the United States and other jurisdictions. Grass Valley, Miranda, Kaleido-Modular-X, iControl, NVISION, and Densité are trademarks or registered trademarks of Grass Valley, a Belden Brand. Belden Inc., Grass Valley, a Belden Brand, and other parties may also have trademark rights in other terms used herein.

## Terms and Conditions

Please read the following terms and conditions carefully. By using Kaleido multiviewer documentation, you agree to the following terms and conditions.

Grass Valley, a Belden Brand (“Grass Valley”) hereby grants permission and license to owners of Kaleido multiviewers to use their product manuals for their own internal business use. Manuals for Grass Valley products may not be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose unless specifically authorized in writing by Grass Valley.

A Grass Valley manual may have been revised to reflect changes made to the product during its manufacturing life. Thus, different versions of a manual may exist for any given product. Care should be taken to ensure that one obtains the proper manual version for a specific product serial number.

Information in this document is subject to change without notice and does not represent a commitment on the part of Grass Valley.

Warranty information is available in the Support section of the Grass Valley Web site ([www.miranda.com](http://www.miranda.com)).

The SDHC Logo is a trademark of SD-3C, LLC.

|             |                                     |
|-------------|-------------------------------------|
| Title       | Kaleido-Modular-X Quick Start Guide |
| Part Number | M933-9805-106                       |
| Revision    | 11 June 2014, 5:53 pm               |

## Electromagnetic Compatibility

**FC** This equipment has been tested for verification of compliance with FCC Part 15, Subpart B requirements for class A digital devices.

---

**Note:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy, and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

---

**CE** This equipment has been tested and found to comply with the requirements of the Electromagnetic Compatibility directive 2004/108/EC:

- EN 55022 Class A Radiated and conducted emissions
- EN 61000-3-2 Limits for harmonic current emissions
- EN 61000-3-3 Limitation of voltage fluctuations and flicker
- EN 61000-4-2 Electrostatic discharge immunity
- EN 61000-4-3 Radiated, radio-frequency, electromagnetic field immunity
- EN 61000-4-4 Electrical fast transient immunity
- EN 61000-4-5 Surge transient immunity
- EN 61000-4-6 Conducted disturbances immunity
- EN 61000-4-11 Voltage dips, short interruptions and voltage variations immunity



# Kaleido-Modular-X

## Setting Up Your Kaleido-Modular-X System

Welcome to the Kaleido family of multiviewers! This Quick Start Guide is designed to help you get your Kaleido-Modular-X multiviewer up and running for the first time. The following sections will guide you through the installation of a Kaleido-Modular-X system in its default configuration. For more information about the Kaleido-Modular-X hardware, refer to the *Kaleido-Modular-X Hardware Description & Installation Manual* (on the DVD that shipped with your system).

### Summary

|  |    |
|--|----|
| <i>Introduction</i> .....                | 1  |
| <i>Getting Organized</i> .....           | 2  |
| <i>Step 1: Physical Setup</i> .....      | 5  |
| <i>Step 2: Networking Setup</i> .....    | 20 |
| <i>Step 3: XEdit Installation</i> .....  | 37 |
| <i>Step 4: System Verification</i> ..... | 41 |
| <i>RS-422 Connection Diagram</i> .....   | 46 |

### Introduction

Grass Valley's Kaleido family of multiviewers ranges from quad-splits to large-scale, multi-room monitoring systems, with outstanding image quality and signal flexibility. The Kaleido multiviewers are available in different models: the Kaleido-MX, the Kaleido-IP, the Kaleido-X (7RU), the Kaleido-X (4RU), the Kaleido-X16, and the Kaleido-XQUAD frames, as well as the Kaleido-Modular-X cards, and the Kaleido-Modular KMV-3901/3911 cards.

The **Kaleido-Modular-X** offers a flexible and scalable multiviewer solution for TV production optimized for the space, power and weight considerations found in studios and outside broadcast trucks. FlexBridge coax cable bridging between the input and output modules allows for the installation of the input stage next to the router or sources, and the output stage next to displays, for simpler, cost-effective cabling with none of the risk associated with HDMI extenders. The Kaleido-Modular-X supports up to 64 video inputs, and up to four multiviewer outputs.


At the heart of every multiviewer system is the **Kaleido-X software**, which includes two client applications:

- **XAdmin** is a Web client that your system administrator will use to manage the multiviewer system.
- **XEdit** is a client application used to create layouts for the monitor wall, and to configure the multiviewer, from your PC or laptop.


A Kaleido-Modular-X multiviewer system in its default configuration includes a number of layout presets. Each preset shows the video signals from a specific input module (card).

Refer to the *Kaleido-X User's Manual* (on the DVD that shipped with your multiviewer) for instructions on how to create rooms and layouts according to your specific requirements.

## Functional block diagrams

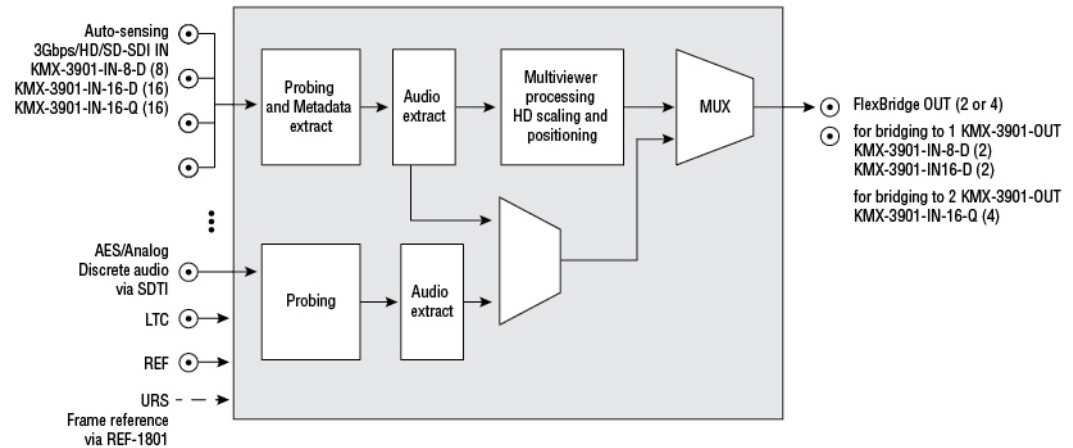

*Kaleido-Modular-X functional block diagram: KMX-3901-IN input module*

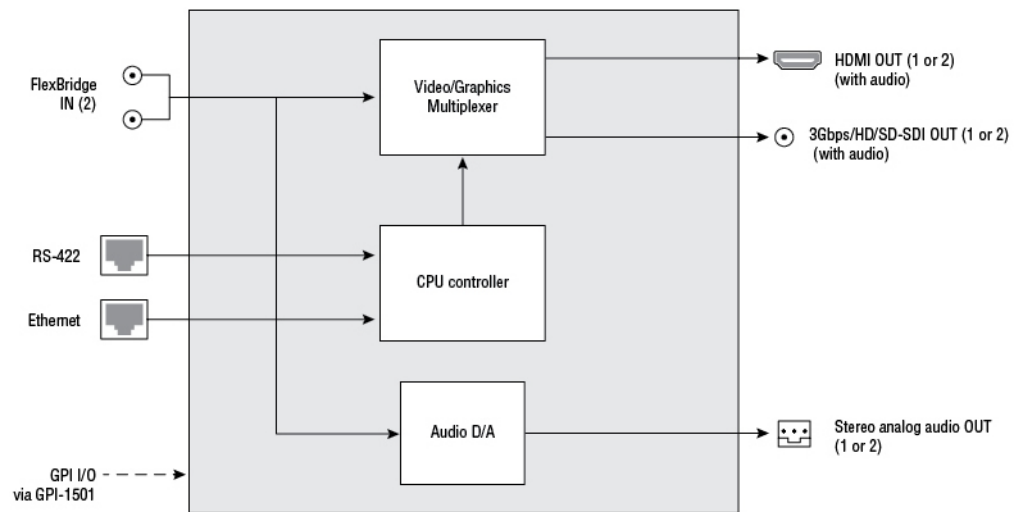

*Kaleido-Modular-X functional block diagram: KMX-3901-OUT output module*

## Getting Organized

This section provides information about system requirements, and items shipped with your Kaleido-Modular-X.

### Required Materials

Your Kaleido-Modular-X system package includes the following:

- 1–4 KMX-3901-IN input cards with matching rear modules, as per order

| Input module parts    | Description   |
|-----------------------|---|
| KMX-3901-IN-8-D       | 8 input HD/SD-SDI and 3 Gbps input module with dual FlexBridge outputs.                                     |
| KMX-3901-IN-8-D-3TRP  | Triple rear connector panel with bypass relay.  |
| KMX-3901-IN-16-D      | 16 input HD/SD-SDI and 3 Gbps input module with dual FlexBridge outputs.                                    |
| KMX-3901-IN-16-D-3QRP | Quadruple rear connector panel with bypass relay.   |
| KMX-3901-IN-16-Q      | 16 input HD/SD-SDI and 3 Gbps input module with quad FlexBridge outputs. convertible to a 4K UHD prescaler. |
| KMX-3901-IN-16-Q-3PRP | Quintuple rear connector panel with bypass relay.   |

- 1–4 KMX-3901-IN-M3 rear modules, M3 cables, and NVISION router-side rears, as per order

| M3 module parts       | Description   |
|-----------------------|---|
| KMX-3901-IN-M3-D-3PRP | Quadruple rear connector panel with bypass relay for the M3 cable. Use with KMX-3901-IN-16-D. |
| KMX-3901-IN-M3-Q-3PRP | Quintuple rear connector panel with bypass relay for the M3 cable. Use with KMX-3901-IN-16-Q. |

- 1 or 2 KMX-3901-OUT output cards, with rear modules, as per order

| Output module parts  | Description   |
|----------------------|---|
| KMX-3901-OUT-S       | Single head output module, upgradable to dual head outputs.       |
| KMX-3901-OUT-D       | Dual head output module.  |
| KMX-3901-OUT-D-3DRP  | Double rear connector panel.                                      |
| KMX-3901-OUT-D-3+SRP | Single rear connector panel. Compatible with Densité 3+ FR1 only. |

- 1–16 12-inch FlexBridge cables (DIN-DIN coax cables), as per order

| Model  | FlexBridge | Model  | FlexBridge | Model  | FlexBridge |
|--------|------------|--------|------------|--------|------------|
| 8 × 1  | 1          | 24 × 1 | 2          | 48 × 2 | 6          |
| 8 × 2  | 2          | 24 × 2 | 4          | 48 × 4 | 12         |
| 16 × 1 | 1          | 32 × 2 | 4          | 64 × 2 | 8          |
| 16 × 2 | 2          | 32 × 4 | 8          | 64 × 4 | 16         |
| 16 × 4 | 4          |        |            |        |            |

- 2 WECO analog audio mating connectors for each output card
- 2 serial port adapters (1 with straight cabling and 1 with crossover cabling — see [RS-422 Connection Diagram](#), on page 46) for every output card ordered with a double rear connector panel

| Part number   | Adapter cabling | RS-422 pinout at the DE-9P connector |
|---------------|-----------------|--------------------------------------|
| 1737-3000-102 | Straight        | Controller (SMPTE master) mode       |
| 1792-3700-100 | Crossover       | Tributary (SMPTE slave) mode         |

---

**Note:** The single rear connector panel KMX-3901-OUT-D-3+SRP does not have a serial port. To support a serial device, your Kaleido-Modular-X system must have at least one output card with a double rear connector panel (KMX-3901-OUT-D-3DRP).

---

- The Kaleido-Modular-X Quick Start Guide (this document)
- DVD including the Release Notes for the current version of the Kaleido-X software, the Kaleido-X User's Manual, database samples, Quick Start guides and hardware reference manuals for all multiviewer models

---

**Note:** In line with our commitment to environmental preservation, only the Quick Start Guide for your multiviewer model, and some ancillary documents (e.g. welcome letters, warranty cards) are distributed in printed form. All manuals and the Release Notes are available on the DVD that shipped with your multiviewer. See the *Documentation* section of the Release Notes for a complete list. You can obtain the latest version of the manuals, the Release Notes, as well as software and useful data, from the *Software and documentation* section of Grass Valley's support portal.

---

**In addition to the above, you will need the following (not supplied):**

- At least one Densité 3 housing frame
- For a quad-head system with 64 inputs, or if you wish to have separate input and output stages, then you will also need a separate Densité 3 or Densité 3+ FR1 frame to house your output cards

---

**Note:** Output cards with a single rear connector panel (KMX-3901-OUT-D-3+SRP) are compatible with Densité 3+ FR1 only.

---

- A Densité CPU-ETH2 controller card for each housing frame  
(Optionally: a GPI-1501 GPI I/O module, a REF-1801 HD/SD frame reference module)
- Up to 4 displays
- A dedicated 100Base-T Ethernet switch with enough ports for the KMX-3901-OUT output cards, the housing frames' Densité CPU-ETH2 controller cards, client PCs, Kaleido-RCP2 units, and Audio Bridge Terminals
- Client PC (see below for system requirements)
- Cables (to connect your multiviewer to video sources, to displays, and to the network):



| Cable type     | Purpose  |
|----------------|--|
| CAT-5          | For Ethernet connectivity  |
| Display cables | Either standard HDMI cables, or extension modules. For example Grass Valley's DXF-200 DVI/HDMI Optical Extension System: <ul style="list-style-type: none"> <li>part number DXF-200-B, for output cards with a double rear connector panel (KMX-3901-OUT-D-3DRP)</li> <li>part number DXF-200-C, for output cards with a single rear connector panel (KMX-3901-OUT-D-3+SRP)</li> </ul> |
| Video cables   | Standard coaxial cables with DIN 1.0/2.3 connectors  |

**Note:** On all Kaleido multiviewers, the network adapters are set to auto-negotiate. By default, the connection speed and duplex mode will be set automatically based on the corresponding port settings on the switch.

## System Requirements for a Client PC

A client PC running Windows XP (or Windows 7) is required to access the XAdmin Web client, as well as to run the XEdit application.

|                       |  |
|-----------------------|--|
| Minimum configuration | 1 GB of RAM<br>Pentium 4 at 1 GHz                      |
| Recommended           | At least 2 GB of RAM<br>Core 2 Duo at 2 GHz, or better |
| Hard disk             | At least 125 MB free                                   |

## Step 1: Physical Setup

### To set up the Kaleido-Modular-X hardware

- 1 Install your Densité 3 and Densité 3+ FR1 housing frames in their designated rack position, if they are not installed already (refer to the appropriate manuals for your frames: the *Densité 3+ FR1 User Manual*, or the *Densité 3 Housing Frame Guide to Installation and Operation*, available from the Grass Valley support portal).
- 2 Identify the appropriate slots for your new cards.

The following table shows the number of slots required for every available input and output cards. In a Densité 3 or Densité 3+ FR1 frame, there is a special slot for the CPU-ETH2 controller card. The Densité 3+ FR1 frame has another special slot for the GPI-1501. In a Densité 3 frame, allow one slot for the GPI-1501 (if available).

| Card                                       | Description   | Rear panel |
|--|---|------------|
| KMX-3901-IN-8-D                            | 8-input HD/SD-SDI and 3 Gbps input module with dual FlexBridge outputs                                      | 3 slots    |
| KMX-3901-IN-16-D                           | 16-input HD/SD-SDI and 3 Gbps input module with dual FlexBridge outputs                                     | 4 slots    |
| KMX-3901-IN-16-Q                           | 16-input HD/SD-SDI and 3 Gbps input module with quad FlexBridge outputs (convertible to a 4K UHD prescaler) | 5 slots    |
| KMX-3901-OUT-S (with KMX-3901-OUT-D-3DRP)  | Single-head output module, with double rear connector panel   | 2 slots    |
| KMX-3901-OUT-S (with KMX-3901-OUT-D-3+SRP) | Single-head output module, with single rear connector panel   | 1 slot     |
| KMX-3901-OUT-D (with KMX-3901-OUT-D-3DRP)  | Dual-head output module, with double rear connector panel   | 2 slots    |
| KMX-3901-OUT-D (with KMX-3901-OUT-D-3+SRP) | Dual-head output module, with single rear connector panel   | 1 slot     |

The following tables show examples of slot distributions for typical Kaleido-Modular-X configurations. (In these examples, the output cards have a double rear connector panel. A Densité 3+ FR1 frame can house up to 4 output cards with single rear panels.)

#### 64 × 4 in two separate housing frames

| Card     | Model            | Rear panel covers...                | Insert card at... |
|----------|------------------|-------------------------------------|-------------------|
| Output A | KMX-3901-OUT-D   | Slots 1–2 (e.g., in Densité 3+ FR1) | Slot 1            |
| Output B | KMX-3901-OUT-D   | Slots 3–4 (e.g., in Densité 3+ FR1) | Slot 3            |
| Input A  | KMX-3901-IN-16-Q | Slots 1–5                           | Slot 3            |
| Input B  | KMX-3901-IN-16-Q | Slots 6–10                          | Slot 8            |
| Input C  | KMX-3901-IN-16-Q | Slots 11–15                         | Slot 13           |
| Input D  | KMX-3901-IN-16-Q | Slots 16–20                         | Slot 18           |

#### 64 × 2

| Card     | Model            | Rear panel covers... | Insert card at... |
|----------|------------------|----------------------|-------------------|
| Output A | KMX-3901-OUT-D   | Slots 1–2            | Slot 1            |
| Input A  | KMX-3901-IN-16-D | Slots 3–6            | Slot 5            |
| Input B  | KMX-3901-IN-16-D | Slots 7–10           | Slot 9            |
| Input C  | KMX-3901-IN-16-D | Slots 11–14          | Slot 13           |
| Input D  | KMX-3901-IN-16-D | Slots 15–18          | Slot 17           |

**48 × 4**

| Card     | Model            | Rear panel covers... | Insert card at... |
|----------|------------------|----------------------|-------------------|
| Output B | KMX-3901-OUT-D   | Slots 2–3            | Slot 2            |
| Output A | KMX-3901-OUT-D   | Slots 4–5            | Slot 4            |
| Input A  | KMX-3901-IN-16-Q | Slots 6–10           | Slot 8            |
| Input B  | KMX-3901-IN-16-Q | Slots 11–15          | Slot 13           |
| Input C  | KMX-3901-IN-16-Q | Slots 16–20          | Slot 18           |

**48 × 2**

| Card     | Model            | Rear panel covers... | Insert card at... |
|----------|------------------|----------------------|-------------------|
| Output A | KMX-3901-OUT-D   | Slots 1–2            | Slot 1            |
| Input A  | KMX-3901-IN-16-D | Slots 3–6            | Slot 5            |
| Input B  | KMX-3901-IN-16-D | Slots 7–10           | Slot 9            |
| Input C  | KMX-3901-IN-16-D | Slots 11–14          | Slot 13           |

**32 × 4**

| Card     | Model            | Rear panel covers... | Insert card at... |
|----------|------------------|----------------------|-------------------|
| Output B | KMX-3901-OUT-D   | Slots 2–3            | Slot 2            |
| Output A | KMX-3901-OUT-D   | Slots 4–5            | Slot 4            |
| Input A  | KMX-3901-IN-16-Q | Slots 6–10           | Slot 8            |
| Input B  | KMX-3901-IN-16-Q | Slots 11–15          | Slot 13           |

**32 × 2**

| Card     | Model            | Rear panel covers... | Insert card at... |
|----------|------------------|----------------------|-------------------|
| Output A | KMX-3901-OUT-D   | Slots 1–2            | Slot 1            |
| Input A  | KMX-3901-IN-16-D | Slots 3–6            | Slot 5            |
| Input B  | KMX-3901-IN-16-D | Slots 7–10           | Slot 9            |

**24 × 2**

| Card     | Model            | Rear panel covers... | Insert card at... |
|----------|------------------|----------------------|-------------------|
| Output A | KMX-3901-OUT-D   | Slots 2–3            | Slot 2            |
| Input A  | KMX-3901-IN-16-D | Slots 4–7            | Slot 6            |
| Input B  | KMX-3901-IN-8-D  | Slots 8–10           | Slot 9            |

### 16 × 4

| Card     | Model            | Rear panel covers... | Insert card at... |
|----------|------------------|----------------------|-------------------|
| Output B | KMX-3901-OUT-D   | Slots 2–3            | Slot 2            |
| Output A | KMX-3901-OUT-D   | Slots 4–5            | Slot 4            |
| Input A  | KMX-3901-IN-16-Q | Slots 6–10           | Slot 8            |

### 16 × 2, 16 × 1

| Card     | Model            | Rear panel covers... | Insert card at... |
|----------|------------------|----------------------|-------------------|
| Output A | KMX-3901-OUT-D   | Slots 1–2            | Slot 1            |
| Input A  | KMX-3901-IN-16-D | Slots 3–6            | Slot 5            |

### 8 × 2, 8 × 1

| Card     | Model           | Rear panel covers... | Insert card at... |
|----------|-----------------|----------------------|-------------------|
| Output A | KMX-3901-OUT-D  | Slots 2–3            | Slot 2            |
| Input A  | KMX-3901-IN-8-D | Slots 4–6            | Slot 5            |

- 3 Remove the blank rear panels that cover the slots where you wish to install your cards, by releasing their captive screws.
- 4 Position the new rear panels, and secure them in place with the captive screws at the bottom (or on the right, in the case of a Densité 3+ FR1 frame).
- 5 Slide each of your new input and output cards into the appropriate slot (refer to the table matching your intended configuration, above, if needed), and push gently on the handle to seat the connectors. Seating an input card requires more pressure.

#### IMPORTANT

- If you need to replace or momentarily remove a rear panel, make sure to first remove the corresponding card itself from its slot (see *Replacing Cards*, in the Kaleido-Modular-X Hardware Description & Installation Manual).
- Removing more than one input card at a time from a Kaleido-Modular-X system in operation is not supported.


- 6 Verify that each card is securely seated in its slot, and leave the frame door open so that you can monitor all the card's LEDs.

**Note:** For more information on the card's LEDs, refer to the *Kaleido-Modular-X Hardware Description & Installation Manual*, available on the DVD that shipped with your system.

- 7 Make the physical connections between your input and output cards, by using the FlexBridge cables that shipped with your system. See [Bridging the Input and Output Cards in a Kaleido-Modular-X](#), on page 13.
- 8 Power up the frame, if it was not in operation already.

Once the networking parameters are correctly configured on your Kaleido-Modular-X output cards, it will not be necessary to switch off the housing frame's power when installing or removing cards.


The Kaleido-Modular-X system starts up. The startup sequence takes approximately four minutes, during which time every card's status LED is blinking orange.

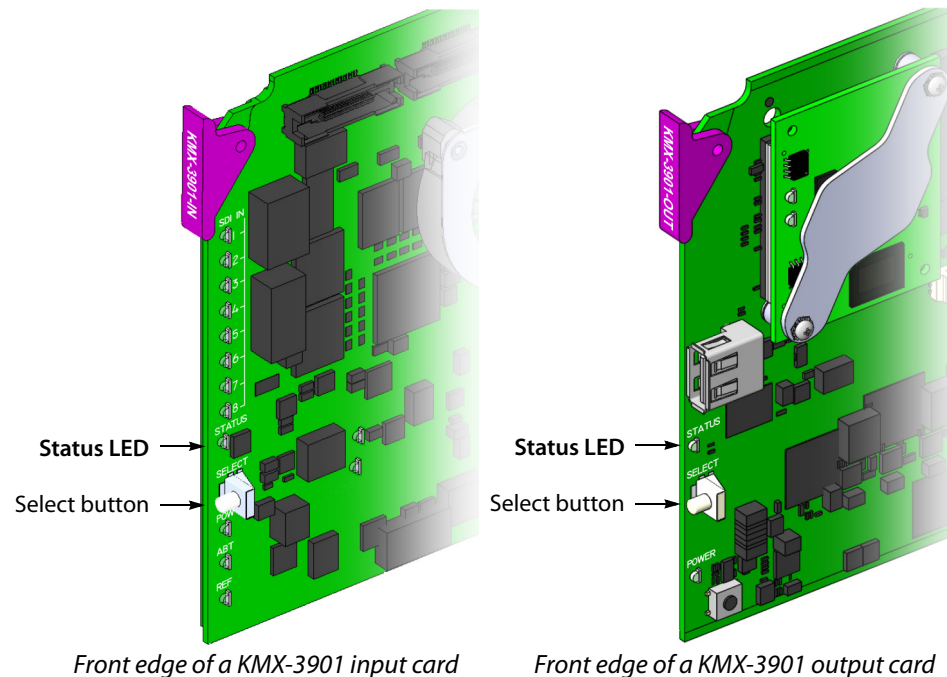

Once the startup has completed, the status LEDs on the *output cards* should be red (steady) because the cards are not connected to the network yet:

|                 |   |
|-----------------|---|
| Green           | Normal  |
| Blinking orange | Booting (or the card is selected for local control)               |
| Red             | Firmware initialization in progress / no Ethernet / SD card error |
| Blinking red    | Fan failure / no rear / duplicate IP address                      |

- If your system includes KMX-3901-IN-16-Q input cards to be used as 4K UHD prescalers, connect their FlexBridge outputs **A1** and **B1** to the 3G/HD SDI inputs you wish to use for your 4K monitoring purposes, at the rear of a KMX-3901 input card, and then see [Converting a KMX-3901-IN-16-Q Input Card to a 4K UHD Prescaler](#), on page 19, to enable these cards' prescaler mode.

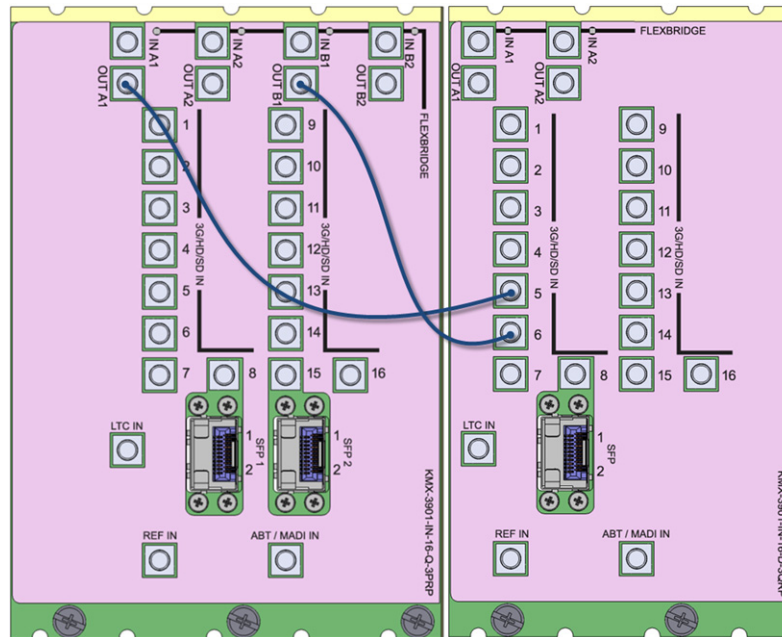

Example: 4K UHD prescaler's FlexBridge outputs A1 and B1, connected to 3G/HD SDI inputs 5 and 6, at the rear of a KMX-3901-IN-16-D input card


- 10 Connect the Kaleido-RCP2 and the Audio Bridge Terminal (if available) to a dedicated 100Base-T Ethernet switch. You can also connect a mouse and a keyboard to your Kaleido-RCP2.

### Notes


- The Kaleido-RCP2, and Audio Bridge Terminal (ABT) are optional devices, and may not have been shipped with your Kaleido-Modular-X system. For information on these and other Kaleido-Modular-X options, please contact your Grass Valley sales representative.
- You may need to upgrade your Audio Bridge Terminal and Kaleido-RCP2 devices (if available) to the latest firmware. The update files can be found on the DVD that shipped with your multiviewer, and on Grass Valley's support portal. Please refer to the *Kaleido-RCP2 Guide to Installation and Operation*, and to the *Audio Bridge Terminal Guide to Installation and Operation* (available on the DVD, and from the portal) for instructions on how to determine the firmware level, and how to perform the upgrade for these devices.
- The Kaleido-Modular-X supports one ABT device. With a 3RU model, you can achieve redundancy by connecting the ABT to more than one input card, in which case the Kaleido-Modular-X system uses the signal from the input card that is the farthest from the output cards (i.e., Input D, if you have 4 input cards, Input C if you have 3 input cards, Input B if you have 2 input cards).

Kaleido-Modular-X output cards automatically detects the resolution of any connected display. If the required information is not available, then a fall-back resolution of 1920 × 1080 @ 60 Hz (HDTV) is used.

11 Connect your Kaleido-Modular-X output cards to displays that support this resolution.

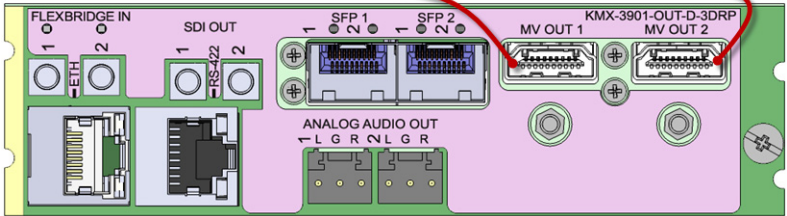

HDMI outputs on double rear module, connected to displays

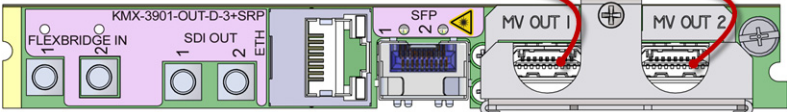

HDMI outputs on single rear module, connected to displays

If you wish to use a different resolution, see [Changing the Output Resolution](#), on page 18, for detailed instructions.

**IMPORTANT**  
Within a Kaleido-Modular-X system, all output heads must be configured with the same refresh rate. If your system is referenced, then the heads' refresh rate must also match the reference signal's refresh rate.

- 12 Connect one or more video sources to the Kaleido-Modular-X input cards.
- 13 If you have configured 4K UHD prescaler cards (at [step 9](#), above), connect one or two quad link 3G-SDI signal sources to each prescaler card, as follows:


| Description  | Connector      |
|--|----------------|
| Link 1A – Top left quadrant of 4K UHD signal A     | 3G/HD/SD IN 1  |
| Link 2A – Top right quadrant of 4K UHD signal A    | 3G/HD/SD IN 2  |
| Link 3A – Bottom left quadrant of 4K UHD signal A  | 3G/HD/SD IN 9  |
| Link 4A – Bottom right quadrant of 4K UHD signal A | 3G/HD/SD IN 10 |

| Description  | Connector      |
|--|----------------|
| Link 1B – Top left quadrant of 4K UHD signal B     | 3G/HD/SD IN 5  |
| Link 2B – Top right quadrant of 4K UHD signal B    | 3G/HD/SD IN 6  |
| Link 3B – Bottom left quadrant of 4K UHD signal B  | 3G/HD/SD IN 13 |
| Link 4B – Bottom right quadrant of 4K UHD signal B | 3G/HD/SD IN 14 |


**IMPORTANT**

The 4K UHD prescaler card and its 4K UHD source signals must be referenced together.

- 14 If your system configuration involves M3 cables, connect them between the appropriate output modules on the router side, and the KMX-3901-IN-M3 rear modules on the multiviewer side.

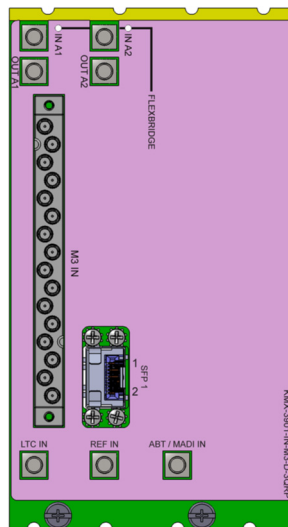

KMX-3901-IN-M3-D-3QRP rear module

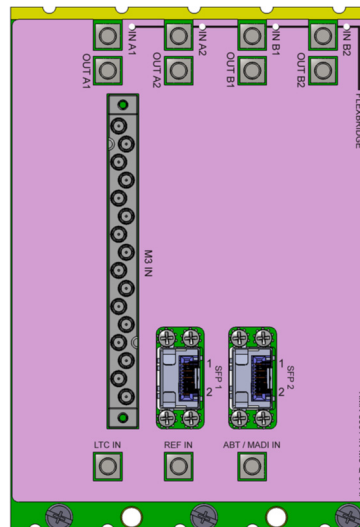

KMX-3901-IN-M3-Q-3PRP rear module

- 15 Connect a reference source (if available) to one or more reference inputs.

**Note:** Unless your system includes a 4K UHD prescaler card (see [step 9](#), and [step 13](#) above), a reference is optional. If minimal processing delay is required for your monitoring purposes, then you must reference your system. However, if you must monitor 50 Hz input signals on 60 Hz displays (or vice-versa), then do not reference your system.

To properly reference a Kaleido-Modular-X system, either:

- Connect all reference inputs on all the KMX-3901-IN input cards, or
- Use a REF-1801 card externally connected to the house reference, in every Densité frame that contains KMX-3901-IN input cards. The REF-1801 will distribute the reference to all cards in the frame internally through the URS on the frame mid-plane.

You can now proceed with the networking setup (see [Step 2: Networking Setup](#), on page 20).




## Bridging the Input and Output Cards in a Kaleido-Modular-X

The Kaleido-Modular-X requires FlexBridge connections between the input and output cards. Use the DIN-DIN coax cables that shipped with your system to make these physical connections. The number of cables required depends on the number of input and output cards (see [Required Materials](#), on page 2).

### FlexBridge wiring for a 8 × 1 or 16 × 1 system

To connect the input and output cards in a Kaleido-Modular-X 8 × 1 or 16 × 1

- Bridge **Input A** to **Output A**, by connecting:
  - INPUT A FLEXBRIDGE OUT A1 to OUTPUT A FLEXBRIDGE IN 1

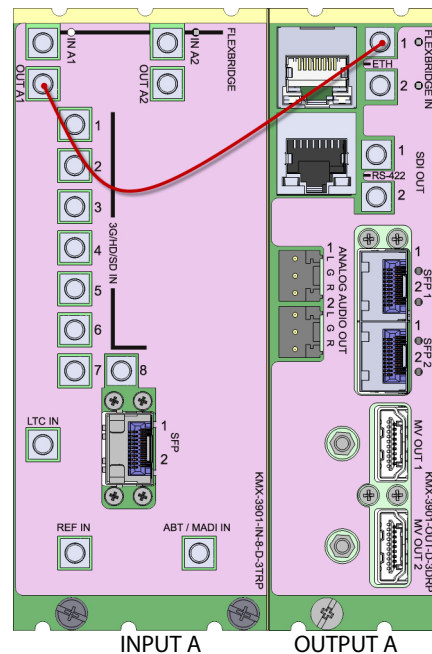


Rear panels for a KMX-3901-IN-8-D (left), and KMX-3901-OUT-D (double panel shown on right). The Flexbridge connectors are the same on the KMX-3901-IN-8-D and KMX-3901-IN-16-D card's rear panels, and on the output card's single and double rear panels.

### FlexBridge wiring for a 8 × 2 or 16 × 2 system

To connect the input and output cards in a Kaleido-Modular-X 8 × 2 or 16 × 2

- Bridge **Input A** to **Output A**, by connecting:
  - INPUT A FLEXBRIDGE OUT A1 to OUTPUT A FLEXBRIDGE IN 1
  - INPUT A FLEXBRIDGE OUT A2 to OUTPUT A FLEXBRIDGE IN 2

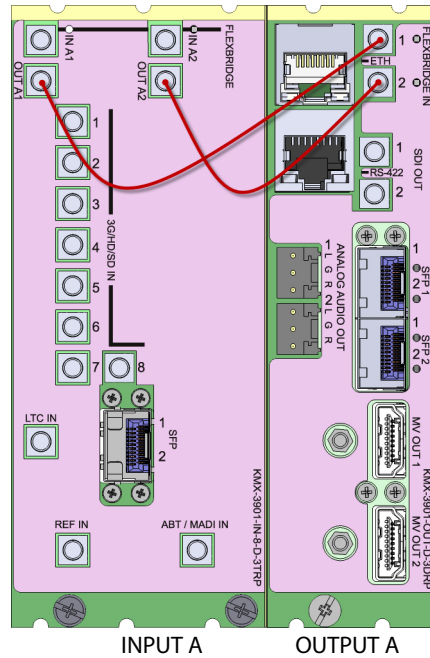


Rear panels for a KMX-3901-IN-8-D (left), and KMX-3901-OUT-D (double panel shown on right). The Flexbridge connectors are the same on the KMX-3901-IN-8-D and KMX-3901-IN-16-D card's rear panels, and on the output card's single and double rear panels.

### FlexBridge wiring for a 32 × 2 system

To connect the input and output cards in a Kaleido-Modular-X 32 × 2

- 1 Complete the bridging for a 16 × 2 configuration (see [FlexBridge wiring for a 8 × 2 or 16 × 2 system](#), above).
- 2 Bridge **Input B** to **Input A**, by connecting:
  - INPUT B FLEXBRIDGE OUT A1 to INPUT A FLEXBRIDGE IN A1
  - INPUT B FLEXBRIDGE OUT A2 to INPUT A FLEXBRIDGE IN A2

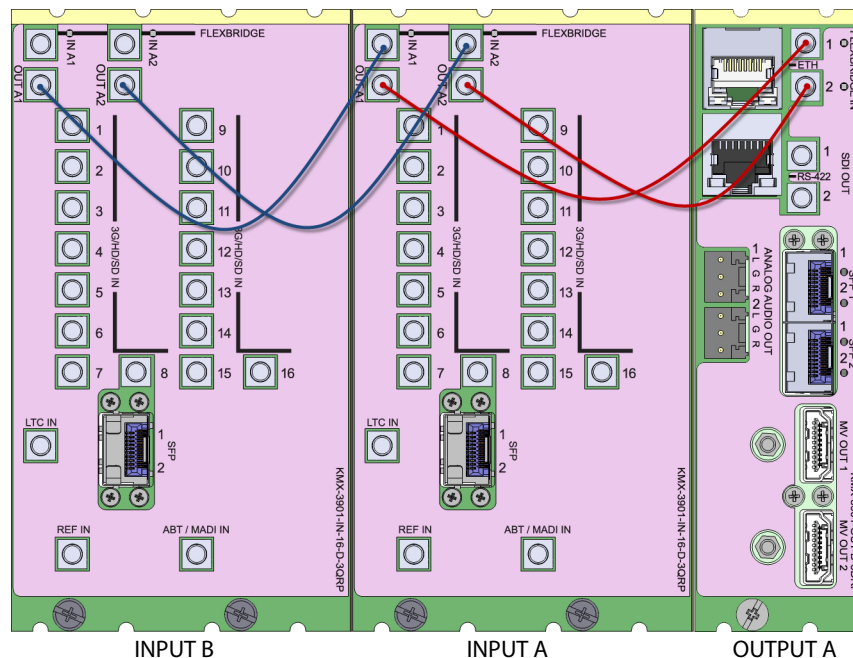

### FlexBridge wiring for a 48 × 2 system

To connect the input and output cards in a Kaleido-Modular-X 48 × 2

- 1 Complete the bridging for a 32 × 2 configuration (see [FlexBridge wiring for a 32 × 2 system](#), above).
- 2 Bridge **Input C** to **Input B**, by connecting:
  - INPUT C FLEXBRIDGE OUT A1 to INPUT B FLEXBRIDGE IN A1
  - INPUT C FLEXBRIDGE OUT A2 to INPUT B FLEXBRIDGE IN A2

### FlexBridge wiring for a 64 × 2 system


To connect the input and output cards in a Kaleido-Modular-X 64 × 2

- 1 Complete the bridging for a 48 × 2 configuration (see [FlexBridge wiring for a 48 × 2 system](#), above).
- 2 Bridge **Input D** to **Input C**, by connecting:
  - INPUT D FLEXBRIDGE OUT A1 to INPUT C FLEXBRIDGE IN A1
  - INPUT D FLEXBRIDGE OUT A2 to INPUT C FLEXBRIDGE IN A2


### FlexBridge wiring for a 16 × 4 system

To connect the input and output cards in a Kaleido-Modular-X 16 × 4

- 1 Bridge **Input A** to **Output A**, by connecting:
  - INPUT A FLEXBRIDGE OUT A1 to OUTPUT A FLEXBRIDGE IN 1
  - INPUT A FLEXBRIDGE OUT A2 to OUTPUT A FLEXBRIDGE IN 2

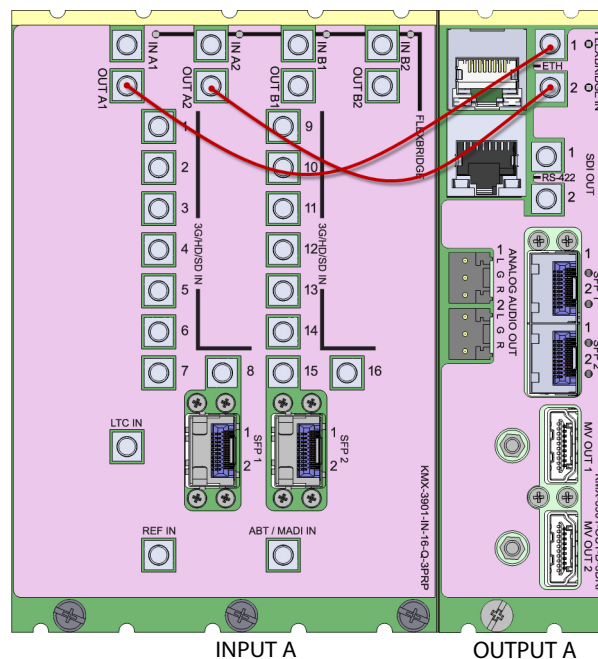


- 2 Bridge **Input A** to **Output B**, by connecting:
  - INPUT A FLEXBRIDGE OUT B1 to OUTPUT B FLEXBRIDGE IN 1
  - INPUT A FLEXBRIDGE OUT B2 to OUTPUT B FLEXBRIDGE IN 2

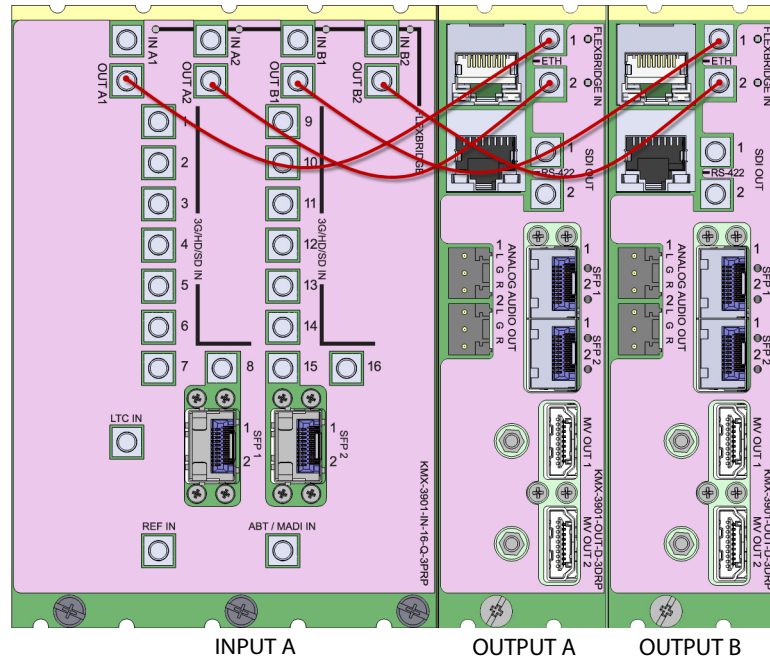

### FlexBridge wiring for a 32 × 4 system

To connect the input and output cards in a Kaleido-Modular-X 32 × 4

- 1 Complete the bridging for a 16 × 4 configuration (see [FlexBridge wiring for a 16 × 4 system](#), above).
- 2 Bridge **Input B** to **Input A**, by connecting:
  - INPUT B FLEXBRIDGE OUT A1 to INPUT A FLEXBRIDGE IN A1
  - INPUT B FLEXBRIDGE OUT A2 to INPUT A FLEXBRIDGE IN A2
  - INPUT B FLEXBRIDGE OUT B1 to INPUT A FLEXBRIDGE IN B1
  - INPUT B FLEXBRIDGE OUT B2 to INPUT A FLEXBRIDGE IN B2

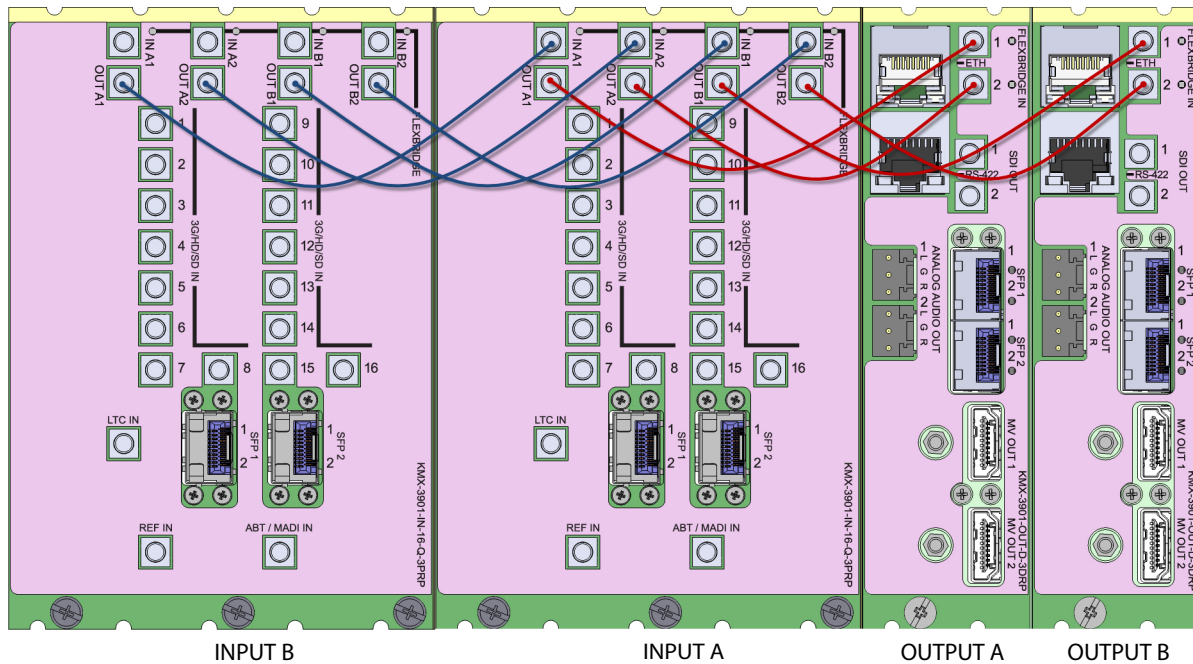

### FlexBridge wiring for a 48 × 4 system

#### To connect the input and output cards in a Kaleido-Modular-X 48 × 4

- 1 Complete the bridging for a 32 × 4 configuration (see [FlexBridge wiring for a 32 × 4 system](#), above).
- 2 Bridge **Input C** to **Input B**, by connecting:
  - INPUT C FLEXBRIDGE OUT A1 to INPUT B FLEXBRIDGE IN A1
  - INPUT C FLEXBRIDGE OUT A2 to INPUT B FLEXBRIDGE IN A2
  - INPUT C FLEXBRIDGE OUT B1 to INPUT B FLEXBRIDGE IN B1
  - INPUT C FLEXBRIDGE OUT B2 to INPUT B FLEXBRIDGE IN B2

### FlexBridge wiring for a 64 × 4 system

#### To connect the input and output cards in a Kaleido-Modular-X 64 × 4

- 1 Complete the bridging for a 48 × 4 configuration (see [FlexBridge wiring for a 32 × 4 system](#), above).
- 2 Bridge **Input D** to **Input C**, by connecting:
  - INPUT D FLEXBRIDGE OUT A1 to INPUT C FLEXBRIDGE IN A1
  - INPUT D FLEXBRIDGE OUT A2 to INPUT C FLEXBRIDGE IN A2
  - INPUT D FLEXBRIDGE OUT B1 to INPUT C FLEXBRIDGE IN B1
  - INPUT D FLEXBRIDGE OUT B2 to INPUT C FLEXBRIDGE IN B2


## Changing the Output Resolution

### IMPORTANT

Within a Kaleido-Modular-X system, all output heads must be configured with the same refresh rate. If your system is referenced, then the heads' refresh rate must also match the reference signal's refresh rate. If you must monitor 50 Hz input signals on 60 Hz displays (or vice-versa), then do not reference your system.


### To change the display resolution from the Densité controller's local control panel

- 1 Press the Select button on the front edge of the *output card* whose heads you wish to configure.

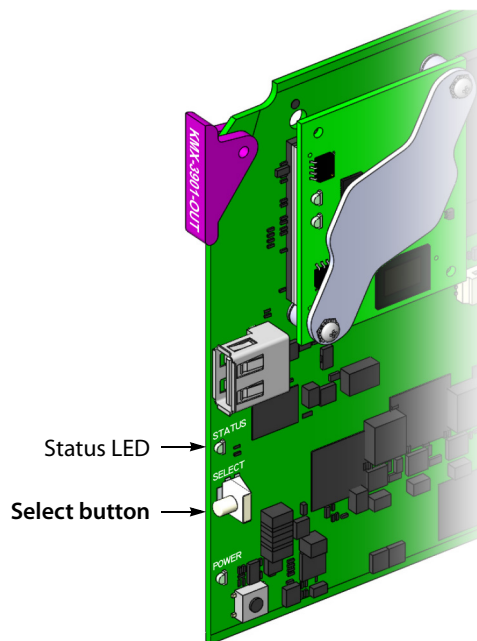

The Status LED on the selected card flashes orange, and the associated control menu appears on the LCD display of the Densité frame's local control panel.

- 2 On the local control panel, press the [-] button twice, until RESOLUTION appears on the LCD display.

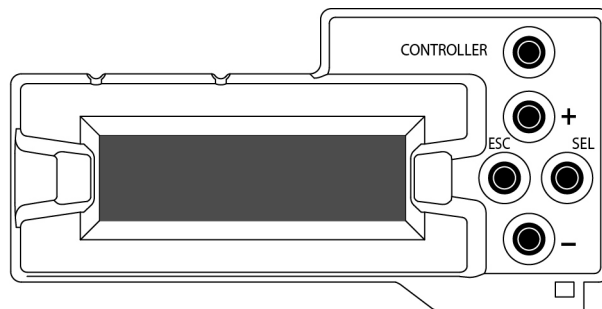

- 3 Press the SEL button.  
HEAD 1 appears on the LCD display.

- 4 Press the SEL button again.
- 5 The current resolution for the monitor wall display that is connected to the multiviewer's output head 1 (i.e. through the MV OUT 1 connector) appears on the LCD display.
- 6 Press the [+] and [-] buttons, to navigate to a suitable output resolution for your monitor wall display.
- 7 Press SEL to apply the value shown on the LCD display.  
The selected resolution is applied to the multiviewer's output head 1.
- 8 Press ESC to return to the previous level in the local control menu.  
HEAD 1 appears again on the LCD display.
- 9 If you wish to change the resolution on the second output head (if available), then press the [-] button.  
HEAD 2 appears on the LCD display and you can repeat [step 4](#) to [step 8](#) above to verify or configure the resolution of the display that is connected to the multiviewer's output head 2 (i.e. through the MV OUT 2 connector).
- 10 When you are satisfied with the selected output resolution settings, press the Select button *on the front edge of the output card* to exit the control menu.

---


#### Notes

- If you do not press any button on the local control panel, the Densité CPU-ETH2 controller will revert to its normal standby mode, and the selected card's status LED will revert to its normal operating mode, after 30 seconds.
  - If you changed a parameter from the card's control menu, but have not applied your change (you did not press the SEL button on the local control panel), once the 30-second timeout has occurred, the parameters will be confirmed as if you had pressed the SEL button.
- 

## Converting a KMX-3901-IN-16-Q Input Card to a 4K UHD Prescaler

### To configure a KMX-3901-IN-16-Q input card as a 4K UHD prescaler

- 1 Press the Select button on the front edge of the *KMX-3901-IN-16-Q input card* you wish to configure.

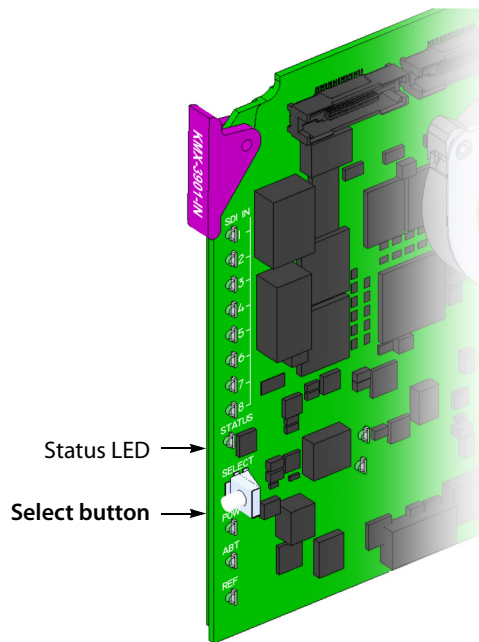

The Status LED on the selected card flashes orange, and the associated control menu appears on the LCD display of the Densité frame's local control panel.

- 2 On the local control panel, press the [-] button.  
CONFIG appears on the LCD display.
- 3 Press the SEL button.  
4K UHD PRESCALER appears on the LCD display.
- 4 Press the SEL button.
- 5 Press the [+] or [-] buttons, if needed, until ENABLE appears on the LCD display.
- 6 Press the SEL button.  
ENABLE appears on the top line of the LCD display, and then, after 10 seconds, a message appears on the second line to let you know that the card will restart in 20 seconds.
- 7 After the card has restarted, notice that the SDI LEDs 3, 4, 7, 8, 11, 12, 15, and 16 are not lit.  
This indicates that the card is now configured as a 4K UHD prescaler.

## Step 2: Networking Setup

For the Kaleido-Modular-X multiviewer to join a TCP/IP network, it must be configured with a system name, appropriate IP addresses, network mask, and gateway settings. You may also need to configure the Densité CPU-ETH2 networking parameters (if your housing frames were not already in operation), any new Kaleido-RCP2 and Audio Bridge Terminal units you ordered, and a client PC to communicate with the multiviewer and its peripheral devices.

A quad-head Kaleido-Modular-X multiviewer system requires three IP addresses (one for each output card, one for the system), while a dual- or single-head requires only one (the



output card's IP address doubles as the system IP address). Kaleido-Modular-X output cards are shipped with the following default settings:

#### **KMX-3901-OUT default IP settings**

|          |              |               |
|----------|--------------|---------------|
| System   | IP address   | 192.168.3.31  |
|          | Network mask | 255.255.255.0 |
|          | Gateway      | 0.0.0.0       |
| Output A | IP address   | 192.168.3.31  |
| Output B | IP address   | 0.0.0.0       |

Densité 3 and Densité 3+ FR1 housing frames are shipped with their CPU-ETH2 controller configured with the following default settings:

#### **Densité CPU-ETH2 controller default IP settings**

|              |               |
|--------------|---------------|
| IP address 1 | 192.168.3.1   |
| Network mask | 255.255.255.0 |
| Gateway      | 0.0.0.0       |
| IP address 2 | 0.0.0.0       |
| Network mask | 0.0.0.0       |
| Gateway      | 0.0.0.0       |

Once the networking parameters are correctly configured on your Kaleido-Modular-X output cards, it will not be necessary to switch off the housing frame's power when installing or removing cards.

#### **To set the system name and IP addresses for your Kaleido-Modular-X multiviewer**

- 1 If any frame housing your Kaleido-Modular-X input and output cards was not already in operation, configure its Densité CPU-ETH2 controller's networking parameters. See [Setting a Densité CPU-ETH2 Controller's IP Address](#) on page 22.
- 2 For every frame housing Kaleido-Modular-X input or output cards, verify that the Densité CPU-ETH2 controller's automatic restore feature is enabled (see [Enabling the CPU-ETH2 Automatic Restore Feature](#), on page 23).

---

**Note:** For the card hot swap feature to function properly, the CPU-ETH2 automatic restore feature must be activated on all frames housing Kaleido-Modular-X cards (i.e., both input and output cards).

---

- 3 Configure your output cards' networking parameters:
  - If you are setting up a **quad-head** Kaleido-Modular-X, replace the system IP address, network mask, default gateway, and both output cards' IP addresses as appropriate. See [Configuring the Network Settings for a Quad-Head System](#) on page 26.

The *system* IP address will be your system's virtual IP address. This is the address you will use to access your system from XEdit and XAdmin, for example.

- If you are setting up a **single-head** or a **dual-head** Kaleido-Modular-X, then replace the IP address for Output A with an appropriate IP address, and change the network mask and default gateway as appropriate. See [Configuring the Network Settings for a Single- or Dual-Head System](#) on page 24.

The output card's IP address will automatically become your system's virtual IP address.

- 4 Configure the Kaleido-RCP2, and Audio Bridge Terminal units you have connected to your system, if any. See [Using the Kaleido-RCP2 with Default Settings](#) on page 32, and [Configuring an Audio Bridge Terminal](#), on page 33.
- 5 Complete your Kaleido-Modular-X system configuration by changing the system name, if desired. See [Setting the System Name](#) on page 29.

---

**Note:** If there are more than one multiviewer in the same network environment, it is important to assign each a unique system name, so that you can tell them apart (for example, when using a remote control panel such as the Kaleido-RCP2 or RCP-200).


---

You are now ready to open XAdmin and XEdit, from a client PC or laptop within the same subnet, and verify your system communication status (see [Step 3: XEdit Installation](#), on page 37, and [Step 4: System Verification](#), on page 41).

## Setting a Densité CPU-ETH2 Controller's IP Address

### To set the Densité controller's IP address

- 1 On the housing frame's local control panel, press the CONTROLLER button.

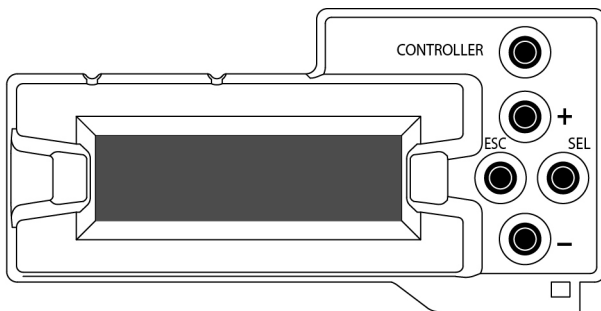

- 2 Press the [-] button repeatedly until ETH1 OPTIONS appears on the display, and then press the SEL button.
- 3 Press the [-] button repeatedly until IP ADDRESS appears on the display.
- 4 Press the SEL button.  
The current value appears on the display.
  - Press the [+] and [-] buttons, to change the digit at the current input position.
  - Press SEL to move one position to the right.
  - Press ESC to move one position to the left.
- 5 When the display shows the desired value, press SEL repeatedly until you reach the last position (if needed), and then press SEL once more to save your changes and return to the previous menu level.

---

**Note:** Pressing ESC when the input focus is in the first position returns to the previous menu level. Pressing SEL when the input focus is in the last position saves the changes and returns to the previous menu level.

---

- IP ADDRESS appears on the control panel's display.
- 6 Press the [-] button.  
NETWORK MASK appears on the control panel's display.
  - 7 Repeat [step 4](#) and [step 5](#) to configure the netmask.
  - 8 Once you have set the network mask, press the [-] button again.  
GATEWAY appears on the control panel's display.
  - 9 Repeat [step 4](#) and [step 5](#) to configure the gateway.
  - 10 Once you have set the gateway, press the CONTROLLER button to exit the controller's menu.  
The Densité controller restarts.
  - 11 Connect the controller card's ETHERNET 1 port to your Ethernet switch.

---

#### Notes

- The Kaleido-Modular-X does not support the controller card's second Ethernet port (ETHERNET 2).
  - To avoid IP-address conflicts, you should wait until you have configured the appropriate network settings for your KMX-3901 output cards before connecting the output cards' ETH ports to the network.
- 

---

#### IMPORTANT

**Make sure the controller's internal clock is set to the correct date and time.**

The clock settings will persist for 10 days after a power loss. Should you later need to change the time on a CPU-ETH2 controller, then you will have to restart any multiviewer system housed in the same frame. Refer to the Densité CPU-ETH2 Enhanced Ethernet Controller Card Guide to Installation and Operation, for more information.

---

## Enabling the CPU-ETH2 Automatic Restore Feature

### To enable the CPU-ETH2 automatic restore feature


- 1 On the Densité frame's local control panel, press the CONTROLLER button.
- 2 Press the [-] button repeatedly until RESTORE POINTS appears on the display, and then press the SEL button.
- 3 Press the [-] button repeatedly until DEFAULT ACTION appears on the display, and then press the SEL button.
  - If the control panel's display shows UPDATE SETTINGS, then the automatic restore feature is already enabled.

- If the control panel's display shows KEEP SETTINGS, navigate to UPDATE SETTINGS by pressing the [-] button, and then press the SEL button to apply your change.
- 4 Press the CONTROLLER button to exit the controller's menu.

## Configuring the Network Settings for a Single- or Dual-Head System


To configure the network settings for a Kaleido-Modular-X with one output card

- 1 Press the Select button on the front edge of the *output* card.

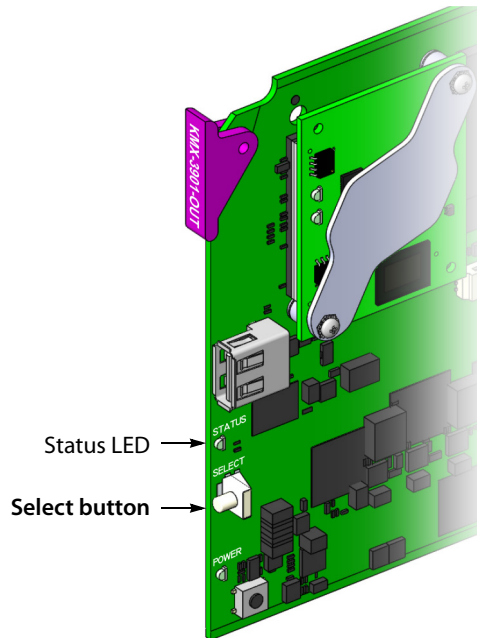

The Status LED on the selected card flashes orange, and the associated control menu appears on the display of the Densité frame's local control panel.

- 2 On the local control panel, press the [-] button repeatedly until NETWORK SETTINGS appears on the display, and then press the SEL button.

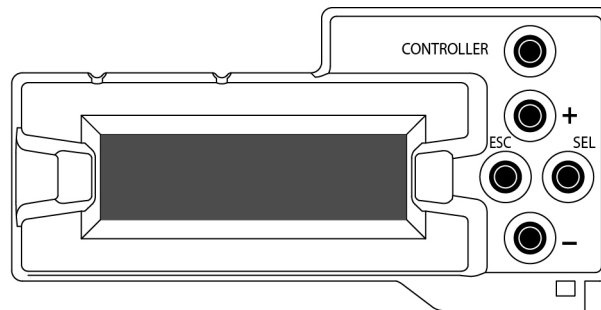

FRAME IP ADDRESS EDIT appears on the display.

- 3 Press the [-] button to skip this option (the system will automatically receive the IP address you configure for Output A, once the card will have restarted).

NETMASK EDIT appears on the display.

- 4 Press the SEL button.

The current value appears on the display.

- Press the [+] and [-] buttons, to change the digit at the current input position.
  - Press SEL to move one position to the right.
  - Press ESC to move one position to the left.
- 5 When the display shows the desired value, press SEL repeatedly until you reach the last position (if needed), and then press SEL once more to save your changes and return to the previous menu level.

---

Note: Pressing ESC when the input focus is in the first position returns to the previous menu level. Pressing SEL when the input focus is in the last position saves the changes and returns to the previous menu level.

---

- NETMASK EDIT appears on the display.
- 6 Once you have set the network mask, press the [-] button.  
DEFAULT GW EDIT appears on the display.
- 7 Repeat [step 4](#) and [step 5](#) to configure the gateway.
- 8 Once you have configured the gateway and navigated back to the previous menu level, press the [-] button again.  
LINK MODE EDIT appears on the display.
- 9 Press the SEL button.
- 10 The current link mode appears on the display.

---

Note: On all Kaleido multiviewers, the network adapters are set to auto-negotiate. By default, the connection speed and duplex mode will be set automatically based on the corresponding port settings on the switch.

---

- 11 If your network's mode of operation requires you to change the link mode, press the [+] and [-] buttons to navigate to the suitable option (100 Mbps half-duplex, or 100Mbps full-duplex), and then press SEL to apply the value shown on the display.  
The selected link mode is applied.
- 12 Press ESC to return to the previous level in the local control menu.  
LINK MODE EDIT appears again on the display.
- 13 Press the [-] button.  
OUTPUT A IP EDIT appears on the display.
- 14 Repeat [step 4](#) and [step 5](#) to configure the IP address for Output A.
- 15 Once you have set the IP address for Output A, press the Select button *on the front edge of the output card* to exit the control menu.

---

#### Notes

- If you do not press any button on the Densité frame local control panel, the Densité controller will revert to its normal standby mode, and the selected card's Status LED will revert to its normal operating mode, after 30 seconds.

---

Notes *(continued)*

- If you changed a parameter from the card's control menu, but have not applied your change (you did not press the SEL button on the local control panel), once the 30-second timeout has occurred, the parameters will be confirmed as if you had pressed the SEL button.
- 

After a moment, the card restarts. The startup sequence takes approximately four minutes, during which time the Status LED is first red and then blinking orange. Once the startup has completed, the Status LED should be red (steady) because the card is not connected to the network yet.

- 16 Connect the output card's ETH port to your Ethernet switch.
- 17 Check the card's Status LED again, and make sure that it does not indicate an error condition.

|                 |   |
|-----------------|---|
|                 |   |
| Green           | Normal  |
| Blinking orange | Booting (or the card is selected for local control)               |
| Red             | Firmware initialization in progress / no Ethernet / SD card error |
| Blinking red    | Fan failure / no rear / duplicate IP address                      |


Should the Status LED indicate an error condition, refer to your Kaleido-Modular-X Hardware Description & Installation Manual to find out what the other LEDs might be indicating.

- 18 Verify that the new IP address is effective, by referring to [Verifying an Output Card's IP Address and Application Version](#), on page 45.

## Configuring the Network Settings for a Quad-Head System


### To configure the network settings for a Kaleido-Modular-X with two output cards

- 1 Press the Select button on the front edge of one of your system's *output* cards.

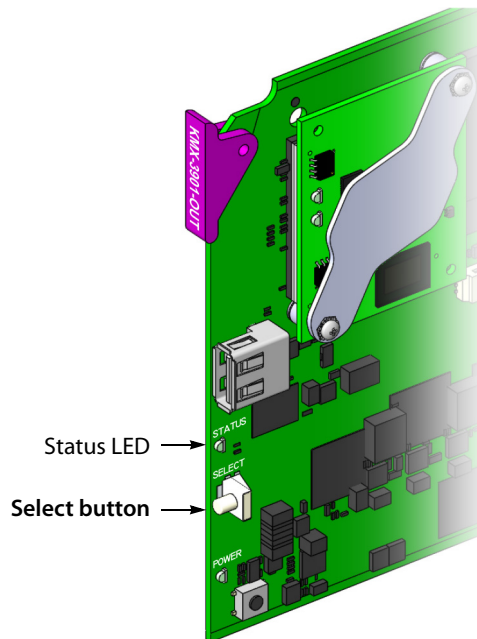

The Status LED on the selected card flashes orange, and the associated control menu appears on the display of the Densité frame's local control panel.

- 2 On the local control panel, press the [-] button repeatedly until NETWORK SETTINGS appears on the display, and then press the SEL button.

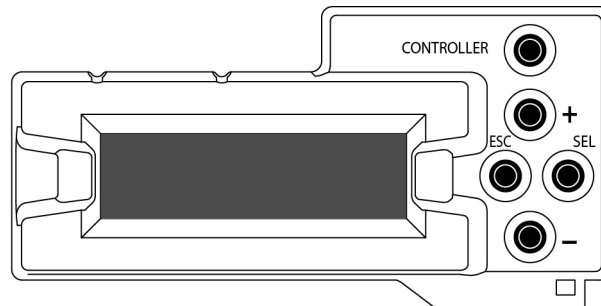

FRAME IP ADDRESS EDIT appears on the display.

- 3 Press the SEL button again.

The current value appears on the display.

- Press the [+] and [-] buttons, to change the digit at the current input position.
- Press SEL to move one position to the right.
- Press ESC to move one position to the left.

- 4 When the display shows the desired value, press SEL repeatedly until you reach the last position (if needed), and then press SEL once more to save your changes and return to the previous menu level.

---

**Note:** Pressing ESC when the input focus is in the first position returns to the previous menu level. Pressing SEL when the input focus is in the last position saves the changes and returns to the previous menu level.

---

- FRAME IP ADDRESS EDIT appears on the control panel's display.
- 5 Press the [-] button.  
NETMASK EDIT appears on the control panel's display.
  - 6 Repeat [step 3](#) and [step 4](#) to configure the netmask.
  - 7 Once you have set the network mask and navigated back to the previous menu level, press the [-] button again.  
DEFAULT GW EDIT appears on the control panel's display.
  - 8 Repeat [step 3](#) and [step 4](#) to configure the gateway.
  - 9 Once you have configured the gateway and navigated back to the previous menu level, press the [-] button again.  
LINK MODE EDIT appears on the control panel's display.
  - 10 Press the SEL button.
  - 11 The current link mode ("Auto-negotiate") appears on the LCD display.
- 
- Note: On all Kaleido multiviewers, the network adapters are set to auto-negotiate. By default, the connection speed and duplex mode will be set automatically based on the corresponding port settings on the switch.
- 
- 12 If your network's mode of operation requires you to change the link mode, press the [+] and [-] buttons to navigate to the suitable option (100 Mbps half-duplex, or 100Mbps full-duplex), and then press SEL to apply the value shown on the display.  
The selected link mode is applied.
  - 13 Press ESC to return to the previous level in the local control menu.  
LINK MODE EDIT appears again on the LCD display.
  - 14 Press the [-] button.  
OUTPUT A IP EDIT appears on the control panel's display.
  - 15 Repeat [step 3](#) and [step 4](#) to configure the IP address for Output A.
  - 16 Once you have set the IP address for Output A, and navigated back to the previous menu level, press the [-] button again.  
OUTPUT B IP EDIT appears on the control panel's display.
  - 17 Repeat [step 3](#) and [step 4](#) to configure the IP address for Output B.
  - 18 Once you have set the IP address for Output B, press the Select button *on the front edge of the output card* to exit the control menu.

---

#### Notes

- If you do not press any button on the Densité frame local control panel, the Densité controller will revert to its normal standby mode, and the selected card's Status LED will revert to its normal operating mode, after 30 seconds.
  - If you changed a parameter from the card's control menu, but have not applied your change (you did not press the SEL button on the local control panel), once the 30-second timeout has occurred, the parameters will be confirmed as if you had pressed the SEL button.
-



After a moment, the card restarts. The startup sequence takes approximately four minutes, during which time the Status LED is first red and then blinking orange. Once the startup has completed, the Status LED should be red (steady) because the card is not connected to the network yet.

- 19 Press the Select button on the front edge of *the other output card*, and repeat from [step 2](#), to configure the second output card with the same network settings.
- 20 Connect both output cards' ETH ports to your Ethernet switch.
- 21 The system momentarily reports a duplicate IP address on the monitor wall, after which Output B restarts. Once the startup has completed, check both cards' Status LEDs again, and make sure that they do not indicate an error condition.

|                 |   |
|-----------------|---|
| Green           | Normal  |
| Blinking orange | Booting (or the card is selected for local control)               |
| Red             | Firmware initialization in progress / no Ethernet / SD card error |
| Blinking red    | Fan failure / no rear / duplicate IP address                      |

Should the Status LED indicate an error condition, refer to your Kaleido-Modular-X Hardware Description & Installation Manual to find out what the other LEDs might be indicating.


- 22 Verify that both cards' and the system's new IP addresses are effective, by referring to [Verifying the Multiviewer's IP Addresses and Application Version](#), on page 44.

## Setting the System Name


Once you have configured the output cards from the local control panel, use XAdmin to complete your system's network setup.

### To set your Kaleido-Modular-X system name


- 1 Configure your client PC or laptop with an IP address in the same range as the multiviewer's current IP addresses if needed (see [Configuring a Client PC](#), on page 35).
- 2 Open a Web browser window and enter the multiviewer's *system* IP address in the address bar (see [Finding the System IP Address](#), on page 44, if needed).
- 3 The Kaleido-X home page appears.

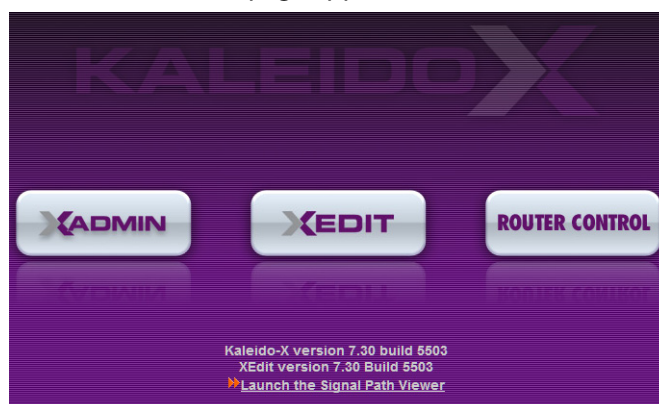

- 4 Click the XAdmin button.
- 5 If you see a security warning, or a certificate error message, then refer to *Registering your Multiviewer's Security Credentials with your Browser*, in the Kaleido-X User's Manual.
- 6 If the "Log in to XAdmin" page appears, type the password, and then click **Log in**.

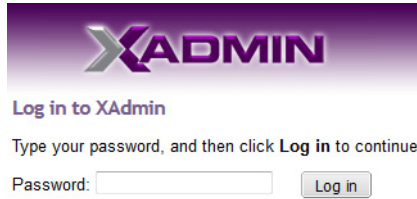

- 7 **Internet Explorer users:** If a blank page appears, then refer to *Enabling the Compatibility View in Internet Explorer 10*, in the Kaleido-X User's Manual. The XAdmin Status and Options page appears.

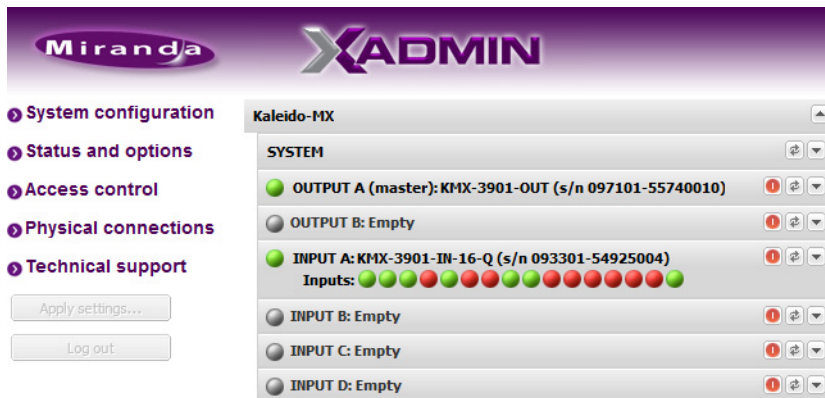

- 8 Click **System configuration**, in the navigation area on the left of the page. The System Configuration page appears, showing the current system name, IP addresses, network mask, default gateway, connection-speed and duplex-mode settings, information about your housing frame, the input cards and the output card you are currently connected to, as well as date and time settings.

The screenshot shows the Miranda XADMIN web interface. On the left, there is a navigation menu with the following items: System configuration (selected), Status and options, Access control, Physical connections, and Technical support. Below the menu are two buttons: 'Apply settings...' and 'Log out'. The main content area is titled 'General' and contains several sections:

- System name:** A text input field containing 'S6-0-104'.
- Ethernet section:**
  - Frame IP address:** A dotted decimal input field with '10', '6', '0', and '104'.
  - Network mask:** A dotted decimal input field with '255', '255', '0', and '0'.
  - Default gateway:** A dotted decimal input field with '10', '6', '0', and '1', followed by a 'Remove' button.
  - Detected link mode:** A text field showing '100Mbps full-duplex'.
  - Configured link mode:** A dropdown menu currently set to 'Auto-negotiate'.
  - Output A:** A dotted decimal input field with '10', '6', '0', and '104', followed by a 'Next IP' button.
  - Output B:** A text input field with an 'Add' button.
- Housing frame section:**
  - Input A:**
    - Controller IP address:** '10.6.0.100'
    - Slot:** '13'
  - Output A:**
    - Controller IP address:** '10.6.0.100'
    - Slot:** '17'
- Date and Time section:**
  - Current date and time:** 'Monday June 24, 2013 05:14:53 PM UTC-4'
  - Date and time format:** A dropdown menu set to 'English (United States)'.

At the bottom of the configuration area, there is a message: 'Click **Save** to save your settings and continue.' followed by a 'Save' button.

9 Under **General**, type the name you wish to use for your system.

If there are more than one multiviewer in the same network environment, it is important to assign each a unique system name, so that you can tell them apart (for example, when using a remote control panel such as the Kaleido-RCP2 or RCP-200). Only lower-ASCII characters are allowed in the system name. Braces and tilde are not allowed.


---

**Note:** Under **Ethernet**, you may review the IP addresses, network mask, gateway settings, and the detected connection speeds and duplex modes. Should you wish to make any further changes to the network settings, you may find it more convenient to use XAdmin's System configuration page, from now on.

---

10 Click **Save**.


The new settings are saved locally, and XAdmin reminds you to click **Apply Setting** before closing your session.

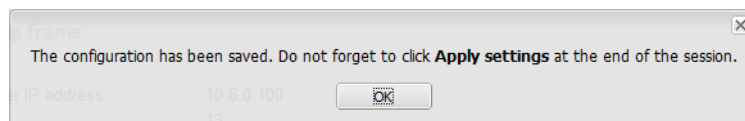

11 Click **OK**.

The **Apply settings** button becomes available.

- 1 System configuration
- 2 Status and options
- 3 Access control
- 4 Physical connections
- 5 Technical support

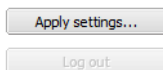

12 Click **Apply settings**.

The multiviewer must restart for changes to the network configuration to take effect. A message appears prompting you to restart the system immediately.

13 Click **OK**.

---

**Note:** Settings cannot be applied to a multiviewer system while an upgrade is in progress. If the multiviewer does not restart after 10 seconds or so, try clicking **Apply settings** again after a minute or two.

---

## Using the Kaleido-RCP2 with Default Settings

---

**Note:** The Kaleido-RCP2 unit is optional and is not included in the standard Kaleido-Modular-X package.

---

### To start using the Kaleido-RCP2 with its default settings

- 1 Physically connect the Kaleido-RCP2 unit to the network using an Ethernet cable.  
By default, the Kaleido-RCP2 is configured with DHCP enabled, so it will automatically be assigned an IP address by a DHCP server. If no DHCP server can be found, the Kaleido-RCP2 will fall back to its default static IP address, subnet mask, and gateway settings:

|                     |             |
|---------------------|-------------|
| Default IP address  | 10.0.3.191  |
| Default subnet mask | 255.255.0.0 |
| Default gateway     | 0.0.0.0     |

---

#### Notes

- If you need to operate with a fixed IP address, you must use the Configuration menu to disable DHCP and set up the correct IP address, Network Mask, and Gateway (see *Enabling or Disabling DHCP*, and *Setting an IP Address, Subnet Mask and Gateway*, in the Kaleido-RCP2 Guide to Installation and Operation, available on the DVD that shipped with your system.)
  - To access rooms located in other subnets, the Kaleido-RCP2 must be configured with the appropriate unicast IP addresses (see *Configuring Unicast IP Addresses*, in the Kaleido-RCP2 Guide to Installation and Operation, available on the DVD that shipped with your system.)
-

- 2 On the Kaleido-RCP2 unit, press the ENTER button and hold it until the ESC button lights up.

The following message appears on the LCD display:

**Configuration**  
**ROOM SELECTION**

- 3 Press ENTER again to obtain the room list from the multiviewers that are currently available on the network.

The message **ROOM Select** followed by the name of the first room available appears on the LCD display.

- 4 Press the **2** key (to move up in the list) or the **8** key (to move down the list) until **Room 1** is displayed.

- 5 Press ENTER, and then press ESC to exit the configuration menu.

- 6 Press the LOGIN button.

The following message appears on the LCD display:

**LOGIN Position**  
**Admin**

- 7 Press ENTER to log on to your system as "Admin".

A message prompting you for a password appears on the LCD display.


- 8 Press ENTER again (by default, there is no password).

The message "Access granted" will appear on the LCD display if the login is successful. If a mouse is connected to the Kaleido-RCP2, then you should be able to see and move the mouse pointer on the monitor wall.

- 9 Press any of the LAYOUT PRESETS buttons to load a predefined layout on the monitor wall.

If your system was configured prior to shipment, then a layout will appear on all displays. Otherwise, a gray screen will appear with the following message in the middle:

"No layout has been assigned to this room. Please load a layout."

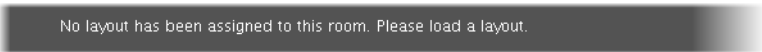

No layout has been assigned to this room. Please load a layout.

---

**Note:** To access other layouts, press the LOAD button. To assign a layout to a preset button, press and hold the button for more than six seconds while the desired layout is showing on the monitor wall.


---

## Configuring an Audio Bridge Terminal

The optional Audio Bridge Terminal (ABT) is an external audio multiplexer/serializer for the Kaleido-Modular-X. The Kaleido-Modular-X supports audio channel inputs from the ABT-64 or ABT-128 series of Audio Bridge Terminal panels through the KMX-3901-IN input cards ABT/MADI inputs. The ABT-64 supports 64 channels and the ABT-128 supports 128 channels.

There is not enough space on the Kaleido-Modular-X rear panels to also include discrete audio connectors. An ABT provides connector space for multiple audio signal inputs, and

multiplexes all the audio signals into combined serial feeds on coaxial cables that connect to the KMX-3901-IN input cards.

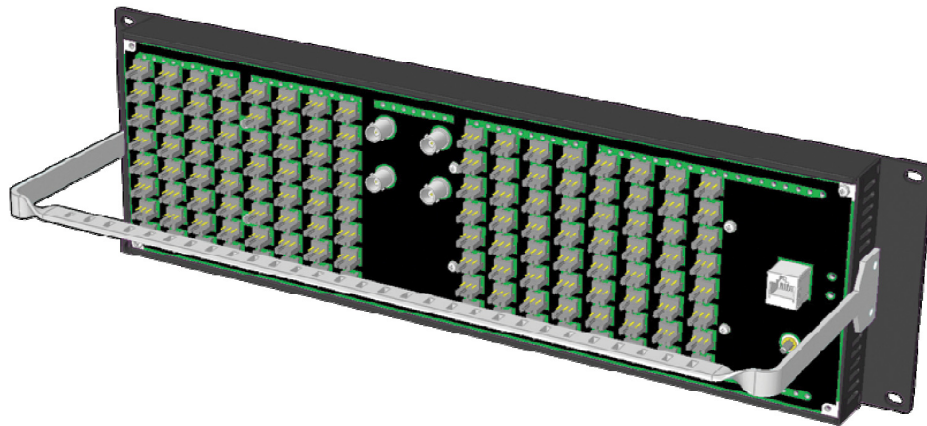

---

**Note:** The ABT is powered through the RJ-45 Ethernet connector. There is no power ON/OFF button, so the device is ON whenever a powered Ethernet cable (PoE) is connected.

---

**To configure the IP address and other network settings of the ABT**

- 1 Connect a PC to a switch.
- 2 Referring to [Configuring a Client PC](#), on page 35, configure the PC with the following network settings:

|                   |             |
|-------------------|-------------|
| DHCP              | OFF         |
| Static IP address | 10.0.0.1    |
| Subnet mask       | 255.255.0.0 |
| Default gateway   | 10.0.0.1    |

- 3 Apply power to the Audio Bridge Terminal and make sure it is connected to the same switch as the PC.
  - If the switch is Power over Ethernet (PoE) enabled, simply connect it to the unit using an Ethernet cable.
  - If not, PoE mid-span (*inserter*) equipment must be placed between the switch and the Audio Bridge Terminal.
- 4 Press the RESET button (located on the right-hand side of the ABT rear panel beside the ETHERNET/POWER RJ-45 connector) for at least 1 second.

The Audio Bridge Terminal will reboot with the following static network configuration:

|                   |             |
|-------------------|-------------|
| DHCP              | OFF         |
| Static IP address | 10.0.3.190  |
| Subnet mask       | 255.255.0.0 |
| Default gateway   | 10.0.0.1    |

- Using a Web browser on the PC, connect to the ABT using the following address:  
10.0.3.190.

The home page of the ABT's built-in Web server is displayed.

- Click **Network Configuration** (in the navigation pane).

The **Network Configuration** page is displayed.

**Miranda - Audio Bridge Terminal**

[Status](#)  
[Parameters](#)  
[Network Configuration](#)  
[Information](#)

**Network Configuration**

MAC Address: 00:50:1E:01:FF:DD

Label:  Valid characters: a-z A-Z 0-9 - \_ \*

DHCP:  Disabled  Enabled

Static IP Address:  .  .  .

Static Network Mask:  .  .  .

Static Default Gateway:  .  .  .

- Change the ABT's network settings, as necessary, and then click **Apply & Reboot**.

#### Notes

- The Kaleido-Modular-X supports one ABT device. With the current Kaleido-Modular-X (3RU) models, you can achieve redundancy by connecting the ABT to more than one input card, in which case the Kaleido-Modular-X uses the signal from the input card that is the farthest from the output cards (i.e., Input D, if you have 4 input cards, Input C if you have 3 input cards, Input B if you have 2 input cards).
- Keep in mind that all ABTs ship with the same default static IP address. If you are adding more than one ABT to your network and do not use DHCP, make sure to assign each ABT a different static IP address before connecting them to the network.

For more information about the ABT, refer to the *Audio Bridge Terminal Guide to Installation and Operation*, available on the DVD that shipped with your system.

## Configuring a Client PC


The client PC that you will use to communicate with the Kaleido-Modular-X multiviewer (via XAdmin and XEdit), and the multiviewer itself, must have IP addresses within the same subnet. The following procedure applies to a typical Windows 7 system. For Windows XP, see [Changing an IP Address on Windows XP](#), on page 37.

### Changing an IP Address on Windows 7

#### To change the IP address of a client PC that has Windows 7

- Click the **Start** button, and then click **Control Panel**. In the search box, type "adapter", and then, under **Network and Sharing Center**, click **View network connections**.
- In **Network Connections**, right-click **Local Area Connection**, and then click **Properties**. If the system prompts you for an administrator password or confirmation, type the password or provide confirmation.


The **Local Area Connection Properties** window opens.

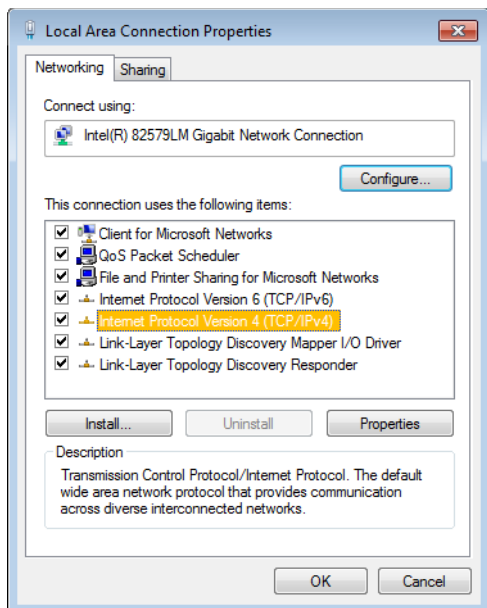

- 3 On the **Networking** tab, under **This connection uses the following items**, click **Internet Protocol Version 4 (TCP/IPv4)**, and then click **Properties**.

The **Internet Protocol Version 4 (TCP/IPv4) Properties** window opens.

- 4 On the **General** tab, click **Use the following IP address**.
- 5 Type an IP address in the same range as the current IP address of the device you need to access from this client PC. For example, if the frame IP address of the Kaleido-Modular-X is 192.168.3.31, then the IP address of your client PC could be 192.168.3.123. If you are unsure, contact your network administrator.
- 6 Type a subnet mask in the same range.

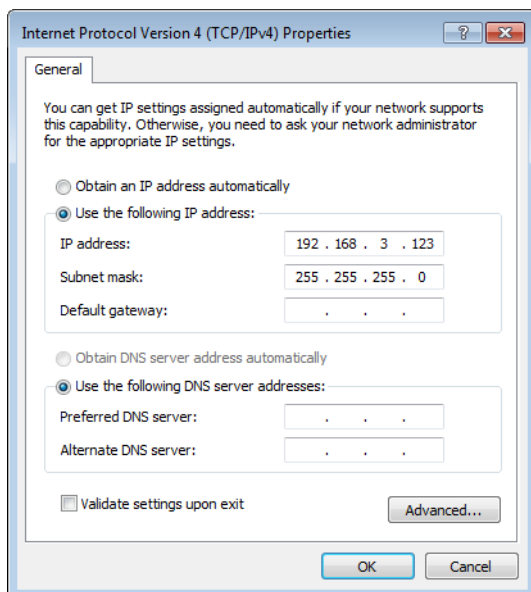

- 7 Click **OK**.



- 8 In **Local Area Connection Properties**, click **Close**.

### Changing an IP Address on Windows XP

#### To change the IP address of a client PC that has Windows XP

- 1 On the **Start** menu, point to **Control Panel**, right-click **Network Connections**, and then click **Open** on the shortcut menu.
- 2 In **Network Connections**, right-click **Local Area Connection**, and then click **Properties** on the shortcut menu.
- 3 In **Local Area connection Properties**, select **Internet Protocol (TCP/IP)** from the list on the **General** tab, and then click **Properties**.  
The **Internet Protocol (TCP/IP) Properties** window opens.
- 4 On the **General** tab, click **Use the following IP address**.
- 5 Type an IP address in the same range as the current IP address of the device you need to access from this client PC. For example, if the frame IP address of the Kaleido-Modular-X is 192.168.3.31, then the IP address of your client PC could be 192.168.3.123. If you are unsure, contact your network administrator.
- 6 Type a subnet mask in the same range.
- 7 Click **OK**.
- 8 In **Local Area Connection Properties**, click **Close**.

## Step 3: XEdit Installation

XEdit is a client application used to create layouts for the monitor wall, and to configure your multiviewer system, from your PC or laptop. When the computer with XEdit is connected to the multiviewer through a TCP/IP network, you can use XEdit to modify layouts and settings directly on the multiviewer, or you can work locally on the computer and then export your changes to the multiviewer.

#### To install XEdit from your multiviewer's home page

- 1 From a workstation on the same subnet as the multiviewer, open a Web browser window and type the multiviewer's IP address in the address bar.  
The Kaleido-X home page appears.




- 2 Click the **XEdit** button.

The browser prompts you to save an executable file to your hard drive (Kaleido-windows32-online.exe<sup>1</sup>). This file is an online installer, which will download XEdit and other companion elements from your multiviewer, and install them. Some browsers may allow you to run the file directly. Depending on your browser's security features, warnings may appear, which you may safely dismiss.

- 3 Unless your browser let you run the file (and you chose to do so), navigate to the location were you saved the installer file and open it.

A security warning appears.

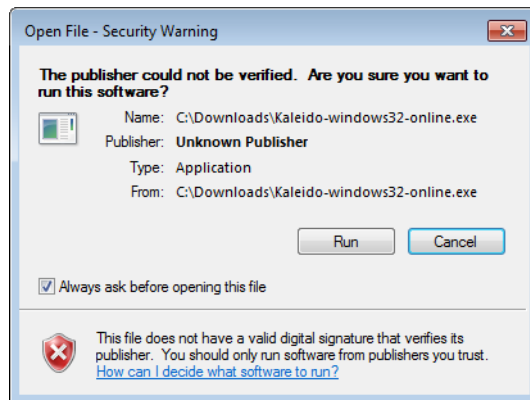


- 4 Click **Run**.


A window appears, showing the download and installation progress.

---

1. Installers for Linux or Mac OS X are not yet available.



At the end of the installation process, launcher icons (  ) are added to your desktop and to the Start menu (under **All Programs**).

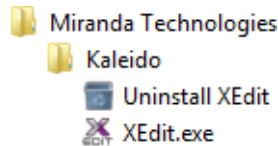


Once the installation has completed, the XEdit startup screen appears.




Depending on your Windows Firewall settings, a security alert may appear.

- Click **Allow access** to unblock the application.


If XEdit cannot find all of the fonts it needs already on your PC or laptop, it downloads them from the multiviewer automatically, in which case a message will appear to confirm the font update, and instruct you to restart the application.

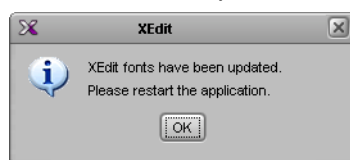


- Click **OK** to continue, and then open XEdit again, by using the launcher icon on your desktop (or on the Start menu).
- 5 When prompted to specify a database, choose one from the **Path** list, or click **Browse** to navigate to the database you wish to use as your local workspace, and then click **OK**.

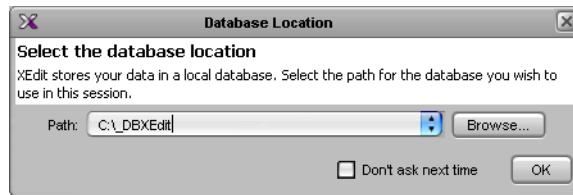

- 6 Once the database has completed loading, XEdit's main application window appears.

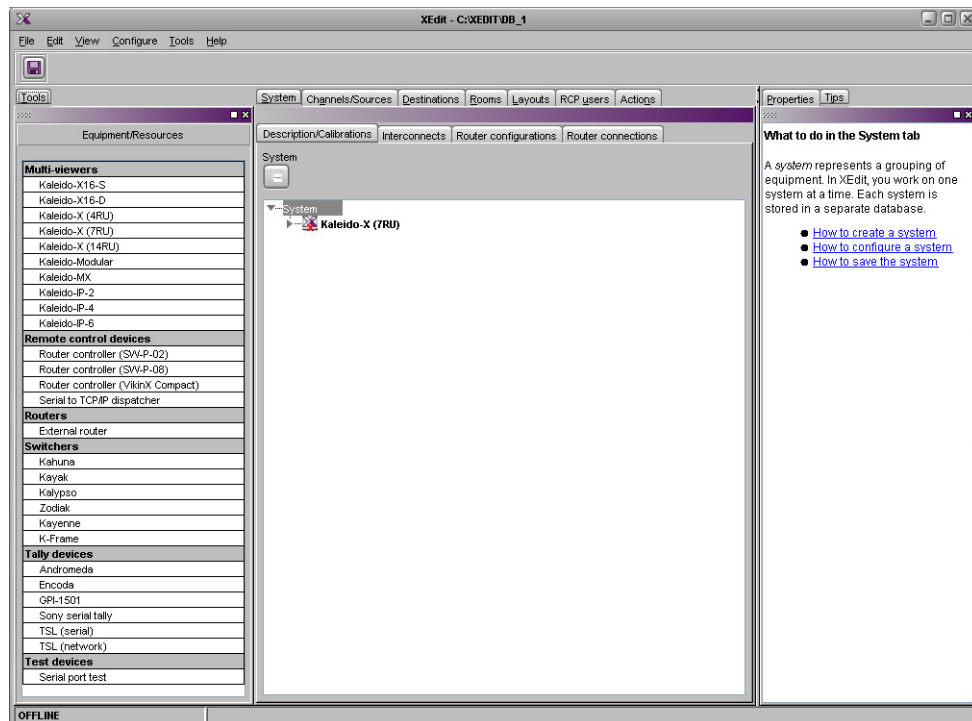

**Note:** Once it has been installed from the multiviewer, XEdit remains on your PC or laptop, and can be launched from the  icon that was added to your desktop (see [page 39](#)). Whenever you install a new version of the Kaleido-X software on the multiviewer, the next time you open XEdit, your installed copy of the application will be automatically updated from the multiviewer.

For more information about calibrating your system, configuring rooms, creating layouts, and operating the monitor wall, refer to the *Kaleido-X User's Manual*, available on the DVD that shipped with your system, and from Grass Valley's support portal.

## Step 4: System Verification

### Verifying the Kaleido-Modular-X Multiviewer Status

You can check internal system statuses via the Web-based XAdmin application.


#### To verify the status of your Kaleido-Modular-X multiviewer

- 1 Open a Web browser window and type your multiviewer's *system* IP address (the IP address you configured for Output A, in the case of a single- or dual-head system (see [step 14](#) on page 25), or the virtual IP address you configured at [step 4](#) on page 27, in the case of a quad-head system) in the address bar.


The Kaleido-X home page appears.




- 2 Click the XAdmin button.
- 3 If you see a security warning, or a certificate error message, then refer to *Registering your Multiviewer's Security Credentials with your Browser*, in the Kaleido-X User's Manual.
- 4 If the "Log in to XAdmin" page appears, type the password, and then click **Log in**.

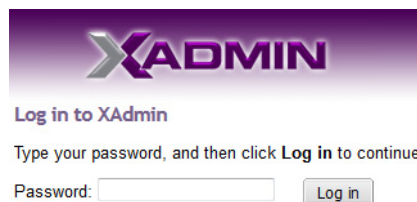


- 5 **Internet Explorer users:** If a blank page appears, then refer to *Enabling the Compatibility View in Internet Explorer 10*, in the Kaleido-X User's Manual.  
The XAdmin Status and Options page appears, displaying a list of all modules and their statuses.

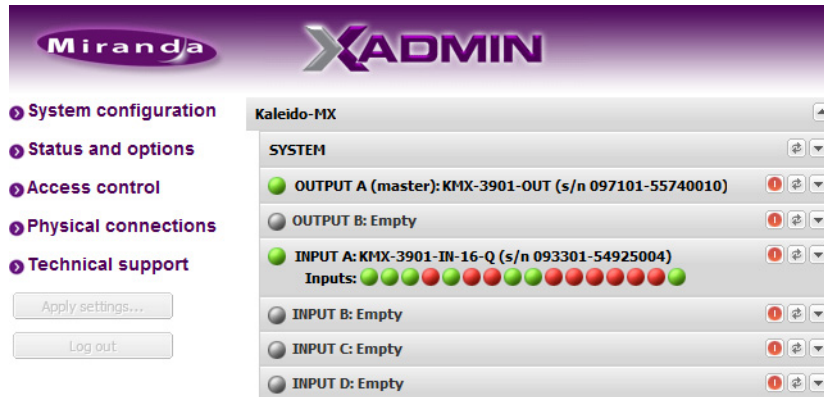


- Click **Physical connections**, in the navigation area on the left of the page. The Physical Connections page appears, showing the current connection status for your system, with a visual representation of the physical connections between the detected input cards and the output cards associated with the frame IP address.

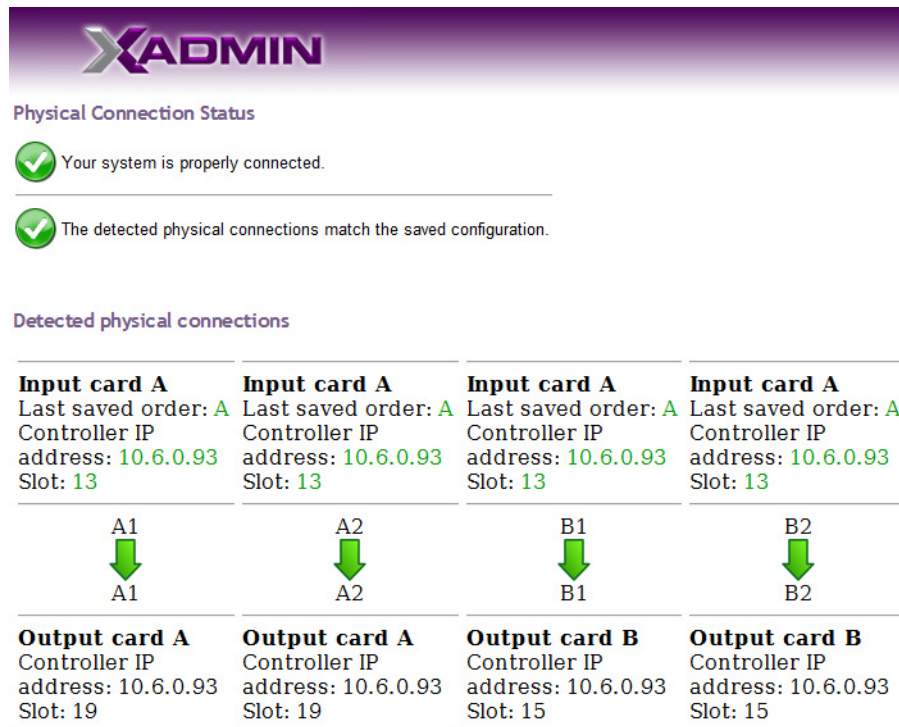

- Review the information on this page, to make sure your input and output cards are all properly interconnected. Information in red indicates the location where a problem was detected.
- Click **Status and options**, in the navigation area on the left of the page, to go back to the Status and Options page. The module headings show the card type and serial number for the input and output cards, and a summary view of the input signals for each input card.
- Move the pointer to an input signal status icon to view the associated signal format.

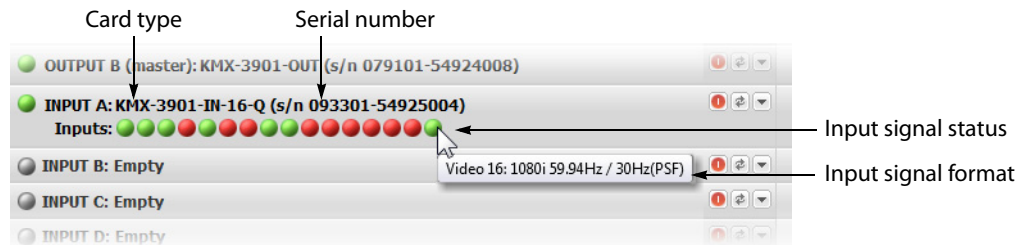

- 10 Click the arrow button (▼) at the end of a module's heading row to view detailed information.

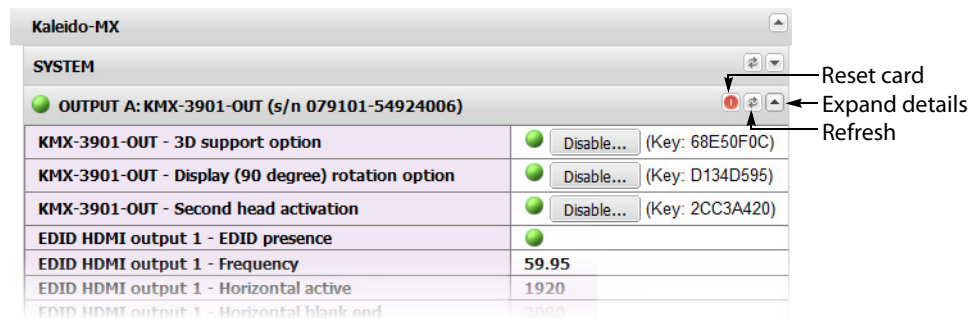

- 11 Review the enabled input and output options, and the main system statuses of the Kaleido-Modular-X frame, to make sure that there are no status errors, and no alerts related to system temperature, fan operation, FlexBridge connectivity, or card fault conditions.

### Notes

- At any time you can click the **Refresh** button to make sure the data displayed for the selected card is up to date. Click the **Reset card** button at the end of a card's heading row to reset the card remotely, directly from your Web browser.
- See *Managing Hardware and Software Options*, in the Kaleido-X User's Manual, for more information on the available options.

## Verifying the Kaleido-RCP2

### To verify that the Kaleido-RCP2 is functioning normally

- Log on to the Kaleido-RCP2 (see [Using the Kaleido-RCP2 with Default Settings](#), on page 32), and then test various operations using the Kaleido-RCP2 keyboard and the mouse (e.g. load a predefined layout).


## Loading a Layout

### To load a layout on the monitor wall

- 1 Connect a mouse to the Kaleido-RCP2 (if available) and log on to the appropriate room, if you have not already done so (see [Using the Kaleido-RCP2 with Default Settings](#), on page 32).

Alternatively, connect the mouse directly to the USB port at the front of one of your system's output card.

- 2 Right-click anywhere on the monitor wall, point to **Monitor wall** (if you clicked a monitor), and then click **Load layout** on the menu.

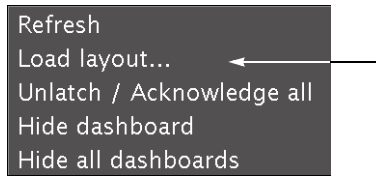

*Monitor wall shortcut menu*

A layout browser appears on the displays associated with the current room.

- 3 Select the layout you wish to load from the list of available layouts for this room, and then click **OK**.

The selected layout appears on the room displays.

## Verifying the Audio Bridge Terminal

### To verify that the ABT is functioning normally

- Inspect the ACTIVITY and front panel LEDs on the unit to make sure there are no error conditions:

The ACTIVITY indicator is located on the right-hand side of the rear panel. This LED reports the status of the Ethernet connection as indicated in the table below.

Two LEDs are visible on the front panel, one for each power supply. When lit, they both indicate the same status.

When the ABT is powered up, all three LEDs will be orange until the boot sequence is terminated. This is a visual indicator that the LEDs are functioning properly.

| ACTIVITY Indicator on Rear Panel |                    | Power-Supply LEDs on Front Panel |                    |
|----------------------------------|--------------------|----------------------------------|--------------------|
| Color                            | Status             | Color                            | Status             |
| Off                              | No link detected   | Green                            | Normal             |
| Green                            | Normal (good link) | Flashing green                   | Normal, rebooting  |
| Orange                           | Activity           | Orange                           | Warning            |
| Red                              | Hardware fault     | Flashing orange                  | Warning, rebooting |
| Flashing red                     | Upgrading firmware | Red                              | Hardware fault     |
|                                  |                    | Flashing red                     | Upgrading firmware |

## Verifying the Multiviewer's IP Addresses and Application Version


### Finding the System IP Address

#### To find your multiviewer's system IP address

- 1 Press the Select button on the front edge of a Kaleido-Modular-X *output* card.  
The Status LED on the selected card flashes orange, and the associated control menu appears on the display of the Densité frame's local control panel.



- 2 On the local control panel, press the [-] button repeatedly until NETWORK SETTINGS appears on the display, and then press the SEL button.

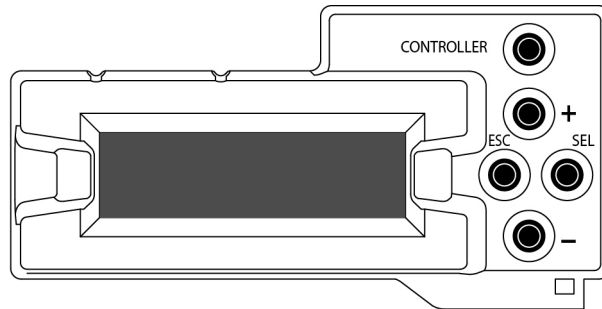

FRAME IP ADDRESS EDIT appears on the control panel's display.

- 3 Press the SEL button again.  
The current system IP address appears on the display. This is your system's virtual IP address (i.e., the address you will use to access your system from XEdit and XAdmin).
- 4 Press the Select button *on the front edge of the output card* to exit the control menu.

## Verifying an Output Card's IP Address and Application Version

### To verify the IP address and application version on an output card

- 1 Press the Select button on the front edge of the Kaleido-Modular-X *output card*.  
The Status LED on the selected card flashes orange, and the associated control menu appears on the display of the Densité frame's local control panel.
- 2 Note the position indication *A* or *B* in the card information shown on the first line of the LCD display: either KMX-OUTA, or KMX-OUTB, followed with the slot number (e.g., KMX-OUTA Slot 4).
- 3 On the local control panel, press the [-] button.  
The version of the Kaleido-X Software that is running on the card (e.g. "7.10-build.5201") appears on the display.
- 4 On the local control panel, press the [-] button repeatedly until NETWORK SETTINGS appears on the display, and then press the SEL button.  
FRAME IP ADDRESS EDIT appears on the control panel's display.
- 5 If the card was identified as KMX-OUTA on the display, then press the [-] button repeatedly until OUTPUT A IP EDIT appears. If the card is identified as KMX-OUTB, then press the [-] button until OUTPUT B IP EDIT appears.
- 6 Press the SEL button.  
The current IP address for this card appears on the display.

---

**Note:** If you have a single- or dual-head Kaleido-Modular-X multiviewer, then this IP address doubles as the system IP address.


---

- 7 Press the Select button *on the front edge of the output card* to exit the control menu.

## Verifying an Input Card's Application Version

### To verify the application version on an input card

- 1 Press the Select button on the front edge of the Kaleido-Modular-X *input* card.

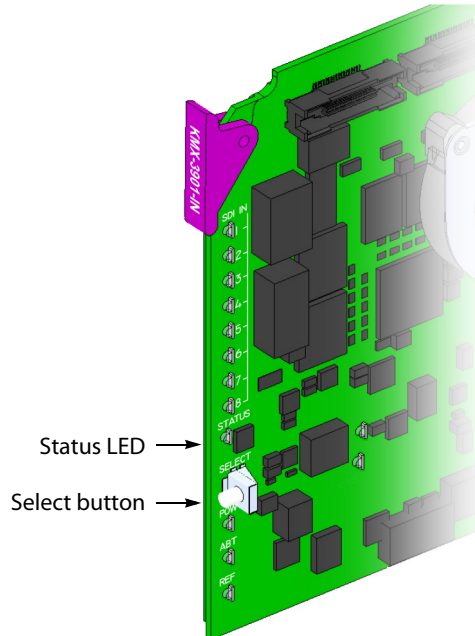

The Status LED on the selected card flashes orange, and the associated control menu appears on the display of the Densité frame's local control panel.

- 2 On the local control panel, press the [-] button.  
The version of the Kaleido-X Software that is running on the card (e.g. "7.10-build.5201") appears on the display.
- 3 Press the Select button *on the front edge of the input card* to exit the control menu.

## RS-422 Connection Diagram


Output cards paired with a double rear connector panel support one RS-422 port over an RJ-45 connector. This port allows the Kaleido-Modular-X to connect to external serial devices such as a router, production switcher, or router controller.

---


### Notes

- The single rear connector panel KMX-3901-OUT-D-3+SRP does not have a serial port. To support a serial device, your Kaleido-Modular-X system must have at least one output card with a double rear connector panel (KMX-3901-OUT-D-3DRP).
  - The RS-422 ports each have an RJ-45 connector in order to preserve space on a busy panel. The RS-422 interface specifies a DE-9 connector, so if you are using this interface, you will require a DE-9-to-RJ-45 adapter. Grass Valley supplies two adapter models, correctly wired for this application: a straight adapter (part no. 1737-3000-102), and a crossover adapter (part no. 1792-3700-100).
-

The pinout for the RS-422 signals on the RJ-45 connectors, and the wiring diagrams for the appropriate adapters, are shown here:

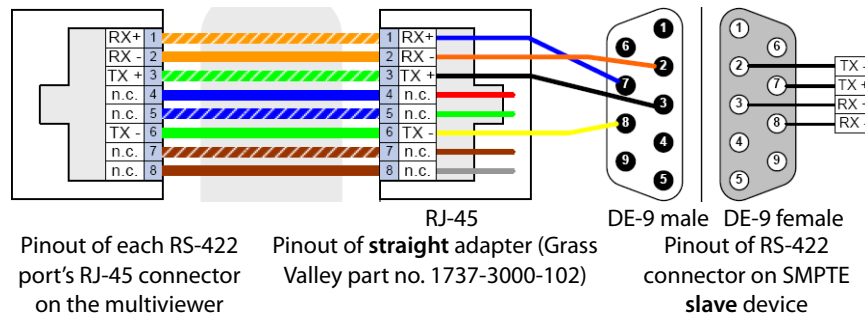

*Standard wiring between multiviewer and devices wired to SMPTE "slave" specification (e.g. most routers, Ross Synergy switchers, Neveion ETH-CON)*

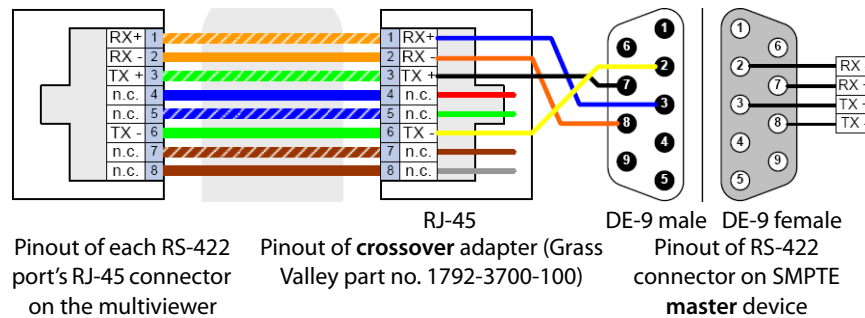

*Standard wiring between multiviewer and devices wired to SMPTE "master" specification (e.g. Philips Jupiter router control system, Miranda Presmaster PCS)*

**Note:** The two RS-422 ports on the multiviewer side have no ground pin. Using the appropriate DE-9S-to-RJ-45 adapter, an external device should be able to communicate with a multiviewer despite the lack of a ground.

For more information about the RS-422 specifications, see the "Communication" section in the *Specifications* chapter of the Kaleido-Modular-X Hardware Description & Installation Manual. For more information about the RS-422 serial connections, see the "Serial Connections" section in the *Routers* chapter of the Kaleido-Modular-X User's Manual.





## Grass Valley Technical Support

For technical assistance, please contact the Grass Valley Technical Support center nearest you:

### Americas

Office hours: 9:00 a.m. – 9:00 p.m. (EST)  
Telephone: 1-800-224-7882  
Fax: +1 514 335 1614  
E-mail: support@miranda.com

### Asia

Office hours: 9:00 a.m. – 6:00 p.m. (GMT+8)  
Telephone: +852 2539 6987  
Fax: +852 2539 0804  
E-mail: asiotech@miranda.com

### Europe, Middle East, Africa, UK

Office hours: 9:00 a.m. – 6:00 p.m. (GMT)  
Telephone: +44 118 952 3444  
Fax: +44 118 952 3401  
E-mail: eurotech@miranda.com

### China

Office hours: 9:00 a.m. – 6:00 p.m. (GMT+8)  
Telephone: +86 10 5873 1814  
E-mail: asiotech@miranda.com

### France

Office hours: 9:00 a.m. – 5:00 p.m. (GMT+1)  
Telephone: +33 1 55 86 87 88  
Fax: +33 1 55 86 00 29  
E-mail: eurotech@miranda.com

### Malaysia

Telephone: +60 3 2247 1808

### EMERGENCY After Hours (Global)

Toll Free: 1-800-224-7882 (US and Canada)  
Telephone: +1 514 333 1772

## Corporate Head Office

Grass Valley  
3499 Douglas-B.-Floreani, St-Laurent, Quebec, Canada H4S 2C6  
Telephone: +1 514 333 1772  
Fax: +1 514 333 9828  
Web: www.miranda.com