



Thor-DA

1x4 HDMI Distribution Amplifier

(TH-DA-HDMI-1X4)



User's Manual

Telecast Fiber Systems, Inc. Locations

Telecast Fiber Systems, Inc.
324 Clark Street
Worcester, MA 01606
U.S.A.
Tel: 1 (508) 758-4858
Fax: 1 (508) 752-1520

For order support, please contact your Distribution Amplifier or Reseller.

For technical support, check with the with the Telecast Fiber Systems, Inc. web site <http://www.telecast-fiber.com> or contact carolyn.borrelli@belden.com

2011 **Telecast Fiber Systems, Inc.** A Belden Brand. All Rights Reserved

Package Includes

Each **THOR** HDMI Distribution Amplifier package includes the following items:

- (1) **TH-DA-HDMI-1x4 Distribution Unit**
- (1) **5V, 2.6A Power Supply Universal adapter**
- (1) **User manual**

Safety Precautions

1. To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
2. Never spill liquid of any kind on or into this product.
3. Do not attach the power supply cabling to building surfaces.
4. To protect the equipment from overheating, do not block the slots and openings in the module housing that provide ventilation.

Contents

1. Package Contents	2
2. Safety Precautions	2
3. Introduction	2
4. Features	3
5. Installation	3
6. Product Picture	4
7. Front Panel	5
8. Specification	5
9. Troubleshooting	6
10. Warranty	7

Introduction

THOR HDMI Distribution Amplifiers allow one digital video sources to be split into multiple digital displays. The built-in amplification function enables HDMI signal distribution without signal loss.

High Quality Picture - No Signal Loss and Digital Noise Free

Our HDMI Distribution Amplifiers are built to deliver the highest quality picture preserving the native resolutions of the video sources without any signal loss. At the same time, the digital noises that may affect the picture quality are eliminated. Due to the nature of the digital signals and passing through multiple stages of connection when using distribution amplifiers, it is important to eliminate the digital noises and boost the signal strength to preserve/enhance the video signal quality.

Signal Distribution for signal reliability and long length signal transmission.

Our 5V power adapter supplies adequate power to amplify the video signals from the video source. This is necessary as the overall length from the video source to the displays is longer when using the HDMI Distribution Amplifiers (distance from the video source to the distribution amplifier + distance from the distribution amplifier to the display). In most cases, the overall distance that the HDMI signal will need to travel is over 15ft. Due to the nature of HDMI signals, distribution is necessary to warrant the video quality and reliability. (Without distribution, there may be occasional blackouts or blinking effects) With this distribution feature, your video display can be extended using our fiber optical HDMI cables.

Features

- ▶ Deep color video up to 12bit, 1080p@(24/60)Hz
- ▶ Simultaneously displays one HDMI source on four displays.
- ▶ HDCP keys that allow each output to work independently when connected to an HDMI display
- ▶ Splits a single HDMI source into four outputs without signal loss
- ▶ Supports DVI source and display via an HDMI to/from DVI adaptor cable
- ▶ Supports a wide range of PC and HDTV resolutions from VGA to WUXGA and 480p to 1080i/p
- ▶ Can be cascaded up to 2 layers.

Note:

Supports Int. EDID feature for Deep Color and color space. When EDID is switched to Ext mode, the system will automatically detect Deep Color (8bits or 12bits) and color space (RGB or YCbCr) settings from the source's EDID and record it into the unit.

- ▶ System standby only will be active once the last TV is switched to standby

Installation

It is recommended to choose settings compatible with all connected displays. Users can also switch between RGB and YCbCr for the EDID's color space. But again, all output displays need to comply with the selected settings.

Most TV monitors support both RGB and YCbCr but some monitors only support RGB. When the EDID color space is set to YCbCr some monitors may not display any image and/or display a "reddish" image. In this case, switching the EDID to RGB is a must. Factory default is set as YCbCr.

When the EDID is switched to Ext, the unit will detect the first HDMI output EDID and record/save it in the unit. If the attached display to the first output source is DVI, it will skip to next output until the first HDMI is detected.

Reset switch: It's always suggested to turn this setting OFF, unless performing a system reset. By turning

it to on, the system will reset all connected displays to HDMI input 1 once every 8~10 minutes. Factory default is set as OFF.

Installation (cont.)

1. Connect your video source's HDMI output port to the HDMI input port using standard HDMI cables (not included). Make sure all your HDMI sources and the displays are turned off before connecting the cables.
2. Connect your HDMI display's HDMI input port to TH-DA-HDMI output port. Make sure your HDMI display is turned off before connecting the cables.
3. Plug the 5V power supply into the power input port.
4. Plug the 5V wall mount power supply into the wall outlet.
5. Turn on the power switch, your displays, and video source.
6. Turn on your video source.

Note:

- 1) Power LED indicator: This Led is green/red when power is on/off
- 2) Sync LED: When an HDMI source is connected to the input port, this LED will be turned on only when the Distribution Amplifier has established a link.

Product picture (TH-DA-HDMI-1x4)

[Dimensions] 200 x 104 x 25 mm




FRONT



REAR

Front Panel

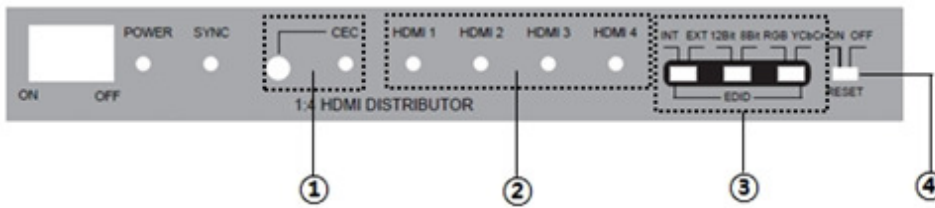

① CEC button & LED: Press this button to switch the CEC function on/off. The LED will be turned yellow when it is switched on. The factory default setting is on.

Note:

- 1) In order to perform the CEC function, both source and display must have CEC support.
- 2) The Standby mode only will be active when the last display has been switched to standby

② Output LED: When the HDMI display has been connected to the outputs, the LED will be turned on.

③ EDID switch Int/Ext: When switched to Int, EDID’s manual settings of Deep Color(12 or 8bits) and color space (RGB or YCbCr) are allowed. When switched to Ext, the Distribution Amplifier will use the external EDID. If the EDID is switched to Int, users can change the EDID’s Deep Color value between 8 and 12bits, under the condition that all outputs support same color bits. For example, if the EDID is switched to 12bits but only 3 output displays support 12bits and one supports 8bits, the 8bits display will not be able to display any media.

Specification

Model Name	TH-DA-HDMI-1x4
Input Signal	HDMI (TMDS),Single Link
Output Signal	HDMI Single Link , 4port,
Resolution	VGA to WUXGA , 480p to 1080i/p
Receptacle	DC Power Jack
Input TMDS Signal	1.2V
Input DDC Signal	5V
Power Supply	DC +5V , 2.6A
Dimension(mm)	200 x 104 x 25
Weight(kg)	0.28

Operating Temp.	0~40°C	
Storage Temp.	-20~60°C	
Operating Humidity	30%~80%	
Storage Humidity	60%	
Power Consumption	5.5W	

Troubleshooting

Problem	Solution
Distribution Amplifier does not operate	<p>Make sure the 5V power is plugged in the back of the unit.</p> <p>Check to see if the power LED light is on.</p>
No picture (or signal) Or Poor picture	<ol style="list-style-type: none"> 1. If you are using copper based HDMI cable, overall length of the cables (length of the cable from video source to switch and length of the cable from switch to display) should not exceed 15ft. Exceeding 15ft. with copper based cables will result in no or poor picture quality. To extend beyond 15ft, please use fiber optical HDMI extension cables such as Telecast Fiber Systems, Inc. OC cables. 2. Use high quality HDMI cables. 3. If you are using computers, try other refresh rate settings. Most HDTVs have refresh rate of 60Hz and computer's video cards are usually set at higher refresh rate. Try lower refresh rates. 4. Make sure all HDMI connectors are tightly secured to all HDMI ports. Loose screws on the HDMI connectors will result in no or poor picture. 5. Turn off all equipment (video source, switch and HDTV) and restart all equipments.
Incorrectly sized picture / resolution or No picture	<p>Please remember that your video source will only support one resolution setting. To connect 1600x1200 resolution display and 800x600 resolution display, the resolution setting of your video source must be set to the lower resolution setting (800x600)</p>

Warranty Information

1 (One) Year Warranty

Telecast Fiber Systems, Inc. warrants **THOR** HDMI Distribution Amplifiers to be free from defects in workmanship and materials, under normal use and service, for a period of one (1) year from the date of purchase from Telecast Fiber Systems, Inc. or its authorized resellers.

If a product does not work as warranted during the applicable warranty period, Telecast Fiber Systems, Inc. shall, at its option and expense, repair the defective product or part, deliver to customer an equivalent product or part to replace the defective item.

All products that are replaced will become the property of Telecast Fiber Systems, Inc.

Replacement products may be new or reconditioned.

Any replaced or repaired product or part has a ninety (90) day warranty or the remainder of the initial warranty period, whichever is longer.

Telecast Fiber Systems, Inc. shall not be responsible for any software, firmware, information, or memory data of customer contained in, stored on, or integrated with any products returned to Telecast Fiber Systems, Inc. for repair under warranty or not.

Warranty Limitation and Exclusion

Telecast Fiber Systems, Inc. shall have no further obligation under the foregoing limited warranty if the product has been damaged due to abuse, misuse, neglect, accident, unusual physical or electrical stress, unauthorized modifications, tampering, alterations, or service other than by Telecast Fiber Systems, Inc. or its authorized agents, causes other than from ordinary use or failure to properly use the Product in the application for which said Product is intended.