

DENSITÉ series

FOL-1601 L-Band Fiber Receiver Guide to Installation and Operation

M830-9800-102

3 Mar 2009



Miranda

Technologies Inc.

3499 Douglas-B.-Floreani
St-Laurent, Québec, Canada H4S 1Y6

Tel. 514-333-1772

Fax. 514-333-9828

www.miranda.com

© 2009 Miranda Technologies Inc..

Safety Compliance Information

Safety Compliance

This equipment complies with:

- CSA C22.2 No. 60950-1-03 / Safety of Information Technology Equipment, Including Electrical Business Equipment.
- UL 60950-1 (1st Edition) / Safety of Information Technology Equipment, Including Electrical Business Equipment.
- IEC 60950-1 (1st Edition) / Safety of Information Technology Equipment, Including Electrical Business Equipment.

CAUTION

These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so. Refer all servicing to qualified service personnel. Servicing should be done in a static-free environment.

Electromagnetic Compatibility

- This equipment has been tested for verification of compliance with FCC Part 15, Subpart B, class A requirements for Digital Devices.
- This equipment complies with the requirements of:
EN 55022 Class A, Electromagnetic Emissions,
EN 61000-3-2 & -3-3, Disturbance in Supply Systems
EN 61000-4-2, -3, -4, -5, -6, -8 & -11 Electromagnetic Immunity

How to contact us:

For technical assistance, please contact the Miranda Technical support centre nearest you:

Americas

Telephone:

+1-800-224-7882

e-mail:

techsupp@miranda.com

Asia

Telephone:

+852-2539-6987

e-mail:

asiatech@miranda.com

Europe, Middle East, Africa, UK

Telephone:

+44 (0) 1491 820222

e-mail:

eurotech@miranda.com

China

Telephone:

+86-10-5873-1814

e-mail:

asiatech@miranda.com

France (only)

Telephone:

+33 (0) 1 55 86 87 88

e-mail:

eurotech@miranda.com

Visit our web site at www.miranda.com

Table of Contents

1 FOL-1601 L-Band Fiber Receiver 1

 1.1 Introduction 1

 1.2 Features 1

 1.3 Block Diagram 1

 1.4 Front Card-edge Interface 2

2 Installation 3

 2.1 Unpacking 3

 2.2 Installation in the Densité frame 3

 2.3 Rear Panel Connectors 3

3 Operation 4

 3.1 Control options 4

 3.2 Card-Edge Status LED 4

 3.3 Local control using the Densité frame control panel 5

 3.3.1 Overview 5

 3.3.2 Menu for local control 5

 3.4 Remote Control Using the RCP-100 7

4 Specifications 8

GUIDE TO INSTALLATION AND OPERATION

1 FOL-1601 L-Band Fiber Receiver

1.1 Introduction

The FOL-1601 is a fiber optic receiver that allows an L-band satellite signal to be generated from a single mode fiber. The fiber transmission is totally protocol transparent and the FLO-1601 / FOL-1601 maintains high signal fidelity over the whole transmission.


The FOL-1601 accepts a wide range optical input (1270nm-1610nm) and incorporates manual gain control (MGC). The RF link gain, when using an FLO-1601 coupled with a FOL-1601, can be adjusted to unity using the MGC in the FOL-1601, thus preserving the input RF level regardless of the optical power or distance between the transmitter and the receiver.

Housed in the DENSITÉ frame, and easily controllable via the iControl software or the frame controller menu, the FOL-1601 occupies only one slot, which makes it an ideal cost-efficient solution for connecting satellite dishes to a studio or any other application involving seamless terrestrial transmission of L-band satellite signals.

1.2 Features

- Broadband operation: 950MHz to 2150MHz
- Protocol transparent: receives all video, audio and data modulation formats
- Two RF outputs for extra signal distribution or monitoring
- Manual gain control
- Single-mode fiber, SC/APC connectors
- Remote monitoring and control
- High density – up to 20 channels in a 2RU frame

1.3 Block Diagram

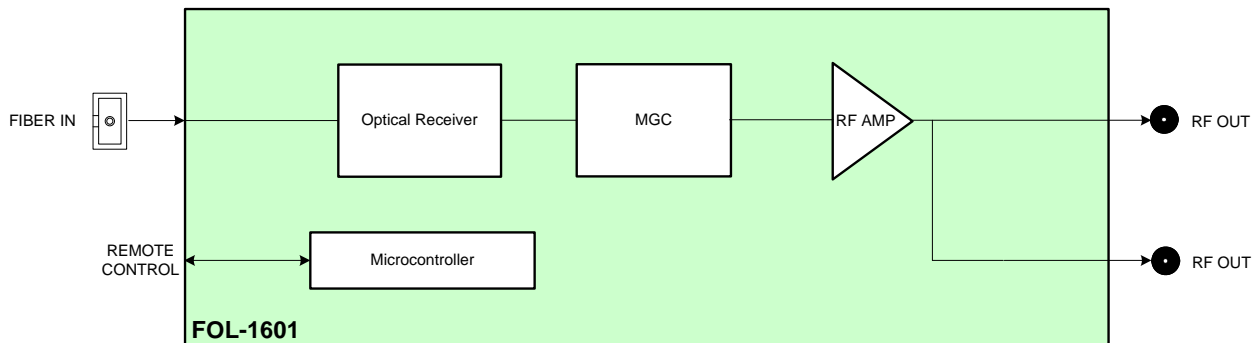

FOL-1601 Functional Block Diagram

1.4 Front Card-edge Interface

The front card-edge of the FOL-1601 incorporates two elements:

- Status LED (see section 3.2)
- Select Button (see section 3.3)

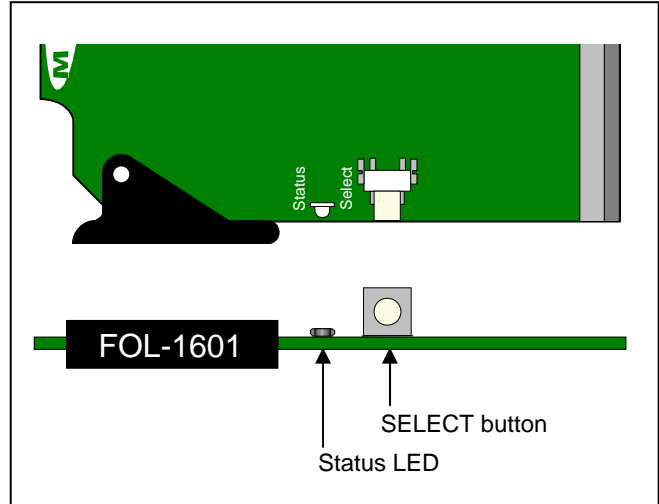


Figure 1.6 Front card-edge layout

2 Installation

2.1 Unpacking

Make sure the following items have been shipped with your FOL-1601. If any of the following items are missing, contact your distributor or Miranda Technologies Inc.

- FOL-1601 L-Band Fiber Receiver
- FOL-1601-SC-SRP Single Rear Panel (see figure 2.1)

2.2 Installation in the Densité frame

The FOL-1601 and its associated rear connector rear panel must be mounted in a DENSITÉ frame. It is not necessary to switch off the frame's power when installing or removing the card. See the DENSITÉ Frame manual for detailed instructions for installing cards and their associated rear panels.

- NOTE: When you connect the optical fiber to the rear of the frame, the fiber plugs onto the card itself and not the rear panel. Because a considerable amount of pressure is required to ensure a good optical connection, the card must be firmly held in place to avoid being unseated. This is achieved by using RF connectors between the rear panel and the card which require even more force to connect and disconnect, thus preventing the card from moving when the optical fiber is connected.
- THEREFORE, be sure to press the FOL-1601 card FIRMLY into place when installing it, to be sure that all connectors are properly mated.

2.3 Rear Panel Connectors

The FOL-1601 rear panel is shown in figure 2.1

The following connectors are found on this panel:

FIBER IN – optical input (SC/APC connector)

- Connect the input from the fiber link to this connector.

L-BAND OUT 1 – RF input (75Ω F connector)

- Output broadband RF signal (950 MHz to 2150MHz).

L-BAND OUT 2 – RF monitoring output (75Ω F connector)

- Output broadband RF signal (950 MHz to 2150MHz)



Figure 2.1 FOL-1601-SC-SRP Rear Panel

3 Operation

3.1 Control options

The FOL-1601 can be controlled in three different ways:

- The local control panel and its push-buttons can be used to move through a menu of parameters and to adjust parameter values (see section 3.3).
- Miranda's RCP-100 remote control panel can be used to access the same menu structure from a remote location (see section 3.4).
- Miranda's iControl system can be used to access the card's operating parameters from a remote computer, using a convenient graphical user interface (GUI). (*not yet available*)

3.2 Card-Edge Status LED

The status monitor LED is located on the front card-edge of the FOL-1601, and is visible through the front access door of the DENSITÉ frame. This multi-color LED indicates the status of the FOL-1601 by color, and by flashing/steady illumination.

The chart shows how the various error conditions that can be flagged on the FOL-1601 affect the LED status.

- If a cell is gray, the error condition cannot cause the LED to assume that status
- If more than one LED status is possible for a particular error condition, the status is configurable. (via the menu, and/or via iControl).
- The factory default status is shown by a ⚙

The LED will always show the most severe detected error status that it is configured to display, and in the chart error severity increases from left to right, with green representing no error/disabled, and flashing red the most severe error.

Error Condition	LED Status			
	Green	Yellow	Red	Flashing Red
Status OK	⚙			
No Optical input			⚙	
No RF output			⚙	
Optical Overload				⚙

⚙ : Factory default.

If the LED is Flashing Yellow, it means that the card is selected for local control using the Densité frame's control panel. See Section 3.3 for details.

3.3 Local control using the Densité frame control panel

3.3.1 Overview

Push the SELECT button on the FOL-1601 card edge (see Section 1.4) to assign the local control panel to operate the FOL-1601. Use the control panel buttons to navigate through the menu, as described below.

All of the cards installed in a Densité frame are connected to the frame's controller card, which handles all interaction between the cards and the outside world. There are no operating controls located on the cards themselves. The controller supports remote operation via its Ethernet ports, and local operation using its integrated control panel.

The local control panel is fastened to the controller card by a hinged connector, and when installed is located in the front center of the frame, positioned in front of the power supplies. The panel consists of a display unit capable of displaying two lines of text, each 16 characters in length, and five pushbuttons.

The panel is assigned to operate any card in the frame by pushing the SELECT button on the front edge of that card.

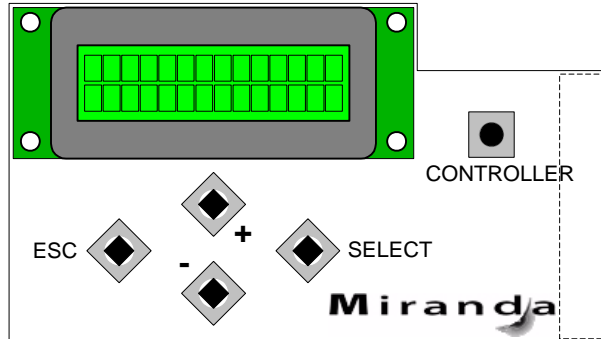


Figure 3.1 Densité Frame local control panel

- Pushing the CONTROLLER button on the control panel selects the Controller card itself.
- The STATUS LED on the selected card flashes yellow.

The local control panel displays a menu that can be navigated using the four pushbuttons located beneath the display. The functionality of the pushbuttons is as follows:

[+] [-] Used for menu navigation and value modification

[SELECT] Gives access to the next menu level. When a parameter value is shown, pushing this button once enables modification of the value using the [+] and [-] buttons; a second push confirms the new value

[ESC] Cancels the effect of parameter value changes that have not been confirmed; pushing [ESC] causes the parameter to revert to its former value.

Pushing [ESC] moves the user back up to the previous menu level. At the main menu, [ESC] does *not* exit the menu system. To exit, re-push the [SELECT] button for the card being controlled.

If no controls are operated for 30 seconds, the controller reverts to its normal standby status, and the selected card's STATUS LED reverts to its normal operating mode.


3.3.2 Menu for local control

The FOL-1601 has operating parameters which may be adjusted locally at the controller card interface.

- Press the SELECT button on the FOL-1601 front card edge to assign the Densité frame's local control panel to the FOL-1601

- Use the keys on the local control panel to step through the displayed menu to configure and adjust the FOL-1601.

FOL-1601 MENU

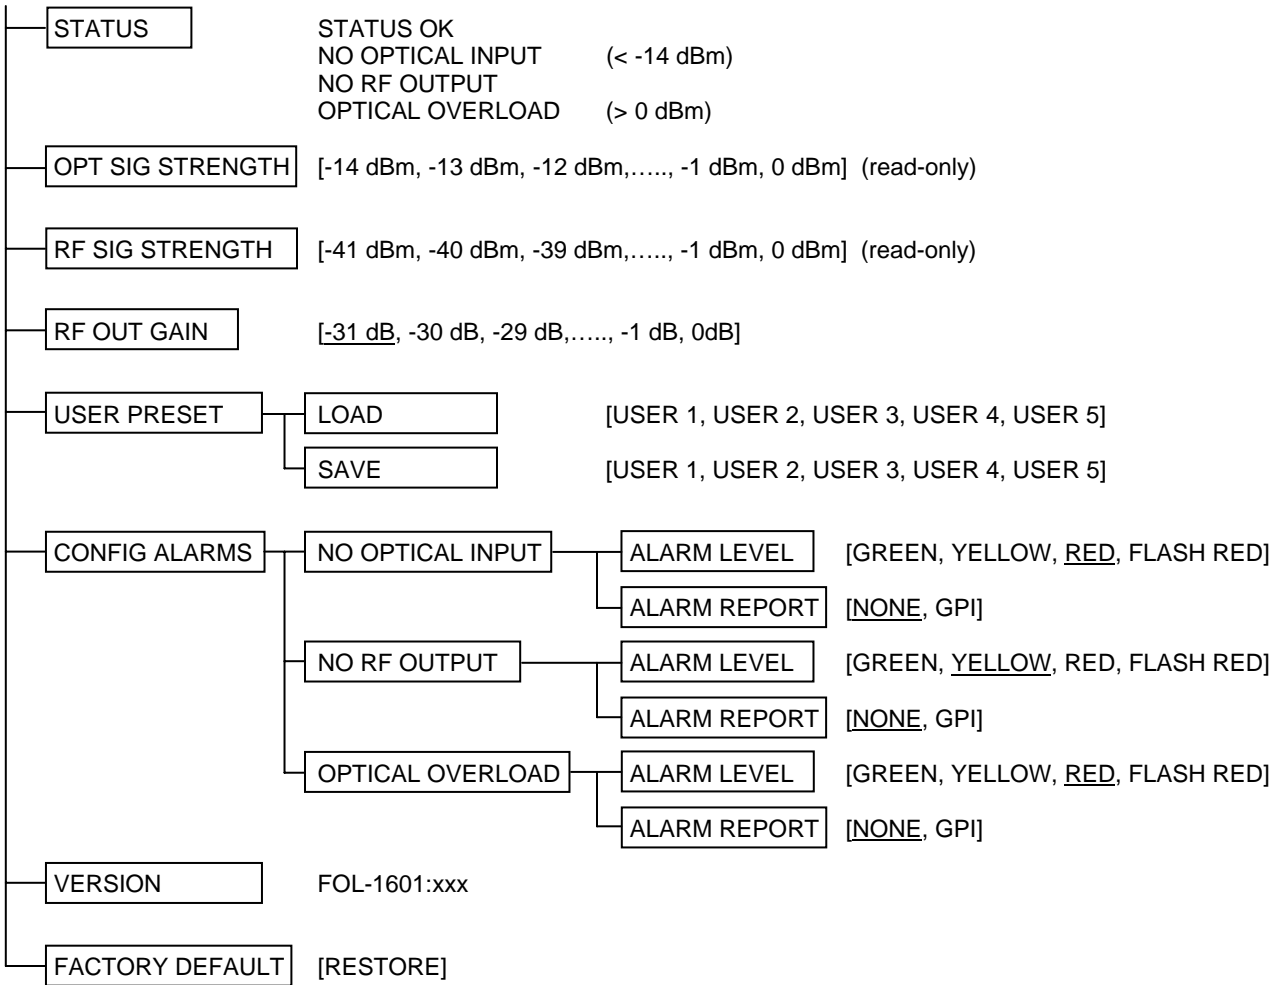

Notes on the menu items:

RF OUT GAIN – adjust for the correct output level to compensate for optical loss after system installation.

USER PRESET – the FOL-1601 has 5 registers that can store full configuration data. Use the LOAD and SAVE menu items to select a register (USER 1 to USER 5) and either save the current configuration into that register (SAVE) or reconfigure the FOL-1601 according to the contents of the register (LOAD).

CONFIG ALARMS / ALARM LEVEL – for each alarm, set the color that will be displayed on the FOL-1601’s status LED.

CONFIG ALARMS/ ALARM REPORT – for each alarm, select whether that alarm will be reported on the Densité frame’s GPI output. See the manual for the frame’s controller card for more information about this feature.

FACTORY DEFAULT – restore settings to factory-default values (shown underlined in the parameter value lists above)

FACTORY DEFAULT – activate this command to restore the configuration of the FOL-1601 to a factory default state. The settings of the factory default state are indicated in the menu by an underline in the list of possible values in square brackets, e.g. [OFF, ON] indicates that OFF is the factory default value.

3.4 Remote Control Using the RCP-100

The FOL-1601 can be controlled through a menu accessible using Miranda's RCP-100 remote control panel.

Please refer to the RCP-100 Guide to Installation and Operation for detailed instructions on installing and operating the RCP-100, and for instructions on how to connect the RCP-100 to the FOL-1601 (or any other supported card) so that the menu can be accessed.

4 Specifications

Optical Input

Connector	SC/APC	
Fiber Type	Single Mode 9/125µm step index [SI] fiber complying with ITU-T recommendation G.652, TIA/EIA-492CAAA, IEC Publication 60793-2 and GR-20-CORE requirements.	
	Maximum attenuation of 0.4dB/km @ 1310nm	
Wavelength	1270-1610nm	
Fiber Length	Up to 20km	
Input Power Range	-14 to 0dBm	NOTE: The output power of the companion FLO-1601 transmitter is +3dBm, so for short-haul circuits with little attenuation it may be necessary to use an optical attenuator at the FOL-1601 input to reduce the incoming power to within the specification.

RF Outputs

Manual Gain Control Range	31dB (nominal)
Output Frequency Range	950 to 2150MHz
Output Power Range	-41dBm to -0dBm
Gain Flatness	±1.5dB @ 950 to 2150MHz
Output Impedance	75Ω
Return Loss	>10dB across frequency range 950 – 2150MHz.
Connector	Type-F

Electrical Specification

Power Consumption	5W
-------------------	----