

# Acappella

## ROUTING SYSTEM



Instruction Manual  
Software Version 3.2.4



Affiliate with the N.V. KEMA in The Netherlands



# CERTIFICATE

Certificate Number: 510040.001

The Quality System of:

**Thomson Inc, and its worldwide Grass Valley division affiliates DBA GRASS VALLEY**

**Headquarters**  
400 Providence Mine Rd  
Nevada City, CA 95959  
United States

15655 SW Greystone Ct.  
Beaverton, OR 97006  
United States

10 Presidential Way  
Suite 300  
Woburn, MA 01801  
United States

Kapittelweg 10  
4827 HG Breda  
The Netherlands

7140 Baymeadows Way  
Ste 101  
Jacksonville, FL 32256  
United States

2300 So. Decker Lake Blvd.  
Salt Lake City, UT 84119  
United States

Rue du Clos Courtel  
CS 31719  
35517 Cesson-Sevigné Cedex  
France

1 rue de l'Hautil  
Z.I. des Boutries BP 150  
78702 Conflans-Sainte  
Honorine Cedex  
France

Technopole Brest-Iroise  
Site de la Pointe du Diable  
CS 73808  
29238 Brest Cedex 3  
France

40 Rue de Bray  
2 Rue des Landelles  
35510 Cesson Sevigné  
France

Spinnereistrasse 5  
CH-5300 Turgi  
Switzerland

Brunnenweg 9  
D-64331 Weiterstadt  
Germany

Carl-Benz-Strasse 6-8  
67105 Schifferstadt  
Germany

Including its implementation, meets the requirements of the standard:

## ISO 9001:2008

Scope:

The design, manufacture and support of video and audio hardware and software products and related systems.

This Certificate is valid until: June 14, 2012  
This Certificate is valid as of: June 14, 2009  
Certified for the first time: June 14, 2000

H. Pierre Sallé  
President  
KEMA-Registered Quality

The method of operation for quality certification is defined in the KEMA General Terms And Conditions For Quality And Environmental Management Systems Certifications. Integral publication of this certificate is allowed.

**KEMA-Registered Quality, Inc.**  
4377 County Line Road  
Chalfont, PA 18914  
Ph: (215)997-4519  
Fax: (215)997-3809

**Accredited By:**  
ANAB

Experience you can trust.



# Acappella

## ROUTING SYSTEM

Instruction Manual  
Software Version 3.2.4

# Contacting Grass Valley

<b>International Support Centers</b>	<b>France 24 x 7</b>	+800 8080 2020 or +33 1 48 25 20 20	<b>United States/Canada 24 x 7</b>	+1 800 547 8949 or +1 530 478 4148
<b>Local Support Centers (available during normal business hours)</b>	<b>Asia</b>	<b>Hong Kong, Taiwan, Korea, Macau:</b> +852 2531 3058 <b>Indian Subcontinent:</b> +91 22 24933476 <b>Southeast Asia/Malaysia:</b> +603 7805 3884 <b>Southeast Asia/Singapore:</b> +65 6379 1313 <b>China:</b> +861 0660 159 450 <b>Japan:</b> +81 3 5484 6868		
		<b>Australia and New Zealand:</b> +61 1300 721 495	<b>Central/South America:</b> +55 11 5509 3443	
		<b>Middle East:</b> +971 4 299 64 40 <b>Near East and Africa:</b> +800 8080 2020 or +33 1 48 25 20 20		
	<b>Europe</b>	<b>Belarus, Russia, Tadzikistan, Ukraine, Uzbekistan:</b> +7 095 2580924 225 <b>Switzerland:</b> +41 1 487 80 02 <b>S. Europe/Italy-Roma:</b> +39 06 87 20 35 28 <b>-Milan:</b> +39 02 48 41 46 58 <b>S. Europe/Spain:</b> +34 91 512 03 50 <b>Benelux/Belgium:</b> +32 (0) 2 334 90 30 <b>Benelux/Netherlands:</b> +31 (0) 35 62 38 42 1 <b>N. Europe:</b> +45 45 96 88 70 <b>Germany, Austria, Eastern Europe:</b> +49 6150 104 444 <b>UK, Ireland, Israel:</b> +44 118 923 0499		

Copyright © Grass Valley USA, LLC. All rights reserved.

This product may be covered by one or more U.S. and foreign patents.

## Grass Valley Web Site

The [www.grassvalley.com](http://www.grassvalley.com) web site offers the following:

**Online User Documentation** — Current versions of product catalogs, brochures, data sheets, ordering guides, planning guides, manuals, and release notes in .pdf format can be downloaded.

**FAQ Database** — Solutions to problems and troubleshooting efforts can be found by searching our Frequently Asked Questions (FAQ) database.

**Software Downloads** — Download software updates, drivers, and patches.



## END-OF-LIFE PRODUCT RECYCLING NOTICE

Grass Valley's innovation and excellence in product design also extends to the programs we've established to manage the recycling of our products. Grass Valley has developed a comprehensive end-of-life product take back program for recycle or disposal of end-of-life products. Our program meets the requirements of the European Union's WEEE Directive, the United States Environmental Protection Agency, and U.S. state and local agencies.

Grass Valley's end-of-life product take back program assures proper disposal by use of Best Available Technology. This program accepts any Grass Valley branded equipment. Upon request, a Certificate of Recycling or a Certificate of Destruction, depending on the ultimate disposition of the product, can be sent to the requester.

Grass Valley will be responsible for all costs associated with recycling and disposal, including freight. However, you are responsible for the removal of the equipment from your facility and packing the equipment to make it ready for pickup.



For further information on the Grass Valley product take back system please contact Grass Valley at + 800 80 80 20 20 or +33 1 48 25 20 20 from most other countries. In the U.S. and Canada please call 800-547-8949, and ask to be connected to the EH&S Department. Additional information concerning the program can be found at: [www.grassvalley.com/about/environmental-policy](http://www.grassvalley.com/about/environmental-policy)

001187401

# Contents

<b>Preface</b> .....	9
About This Manual.....	9
<b>Safety Summary</b> .....	11
Safety Terms and Symbols.....	11
Terms in This Manual.....	11
Terms on the Product.....	11
Symbols on the Product.....	12
Warnings.....	12
Cautions.....	13
<b>Regulatory Notices</b> .....	23
Certifications and Compliances.....	23
FCC Emission Control.....	23
Canadian EMC Notice of Compliance.....	23
EN55103-1/2 Class A Warning.....	24
Safety Certification.....	24
<b>Section 1 — System Overview</b> .....	25
Introduction.....	25
Features.....	26
Hardware Description.....	27
Front Panels.....	27
Backplanes.....	29
Video Configuration (Digital and Analog).....	29
Digital Audio Configuration.....	31
Analog Audio Configuration.....	33
Acappella Router and Remote Panel Variations.....	35
A84HR-CLP 8x4 HD Router Clean Switch Limitations.....	36
Prelude Configuration.....	36
Frame Sync Validated for HD Operation.....	36
<b>Section 2 — Installation</b> .....	37
Acappella Frame Rack Installation.....	37
Remote Panel Rack Installation.....	38
Acappella Cabling.....	39
Analog Audio Pinouts.....	41
Control Cabling.....	42
Ethernet Cabling.....	42
Reference Cabling.....	43
Remote Panel Cabling.....	44
Power.....	44
Digital Frames.....	44
Analog Frames.....	45

Defaults for Plug and Play .....	45
<b>Section 3 — Panel Operation</b> .....	<b>47</b>
Enable Button .....	47
Enable Button Action .....	47
Protect Button .....	48
Protect Button Action .....	48
Source Button .....	49
Single Source Button Action .....	49
Multiple Source Button Action (Local Panel) .....	50
Destination Button .....	50
Single Destination Button Action .....	50
Multiple Destination Button Action .....	50
Level Button .....	51
Single Level Button Action .....	51
Multi-Level Switching .....	52
<b>Section 4 — Software and Configuration</b> .....	<b>53</b>
Network Configuration .....	53
PC Requirements .....	53
PC Network Configuration .....	53
Default System IP Addresses .....	54
Software .....	54
Software Installation .....	54
NetConfig .....	58
NetConfig Manual .....	60
Setting IP Addresses .....	60
Load Software .....	63
Web Browser Interface .....	65
Acappella Configuration Pages .....	66
Router Configuration .....	66
Router Status Page .....	66
Router System Configuration Page .....	67
Router Network Configuration Page .....	69
Router Video Configuration Page (Non Frame Sync) .....	71
Router Video Configuration Page (With Frame Sync) .....	73
Video Frame Sync Configuration Web Page (Frame Sync Systems Only) ..	74
Router AES Configuration Page .....	78
Router Remote Configuration Page .....	82
Router Reference Configuration Page .....	88
Router Factory Defaults Page .....	90
Acap Router Applications Page .....	91
Maintenance Page .....	92
Remote Panel Configuration .....	93
Panel Description Page .....	93
Remote Panel System Configuration .....	94
Remote Panel Network Configuration .....	96
Saving Settings .....	97
Remote Panel Factory Defaults .....	98
Remote Panel Acappella Destination Configuration .....	99
Remote Panel Router Configuration .....	100
External System Control of Acappella .....	101

Serial Control . . . . .	101
Encore Control . . . . .	102
Indigo AV Mixer HD Expansion . . . . .	102
Router Reference Configuration . . . . .	102
Router Video Configuration . . . . .	103
<b>Section 5 — Maintenance and Troubleshooting</b> . . . . .	<b>105</b>
Field Replaceable Units . . . . .	105
Troubleshooting . . . . .	105
Check Connections . . . . .	105
Check Inputs . . . . .	105
Problems and Solutions . . . . .	106
Switching Problems . . . . .	106
Switching Latency . . . . .	106
SNMP Monitoring . . . . .	106
SNMP Managers . . . . .	106
NetCentral SNMP Manager . . . . .	106
Third Party SNMP Managers . . . . .	107
Acappella SNMP Agent Licensing . . . . .	107
Monitored Acappella Matrix Parameters . . . . .	109
Acappella Matrix Traps . . . . .	110
Source and Destination Signal Loss Configuration . . . . .	111
<b>Appendix A — Specifications</b> . . . . .	<b>115</b>
Mechanical and Power . . . . .	115
Video Specifications . . . . .	115
Video Reference . . . . .	115
SD Digital Video . . . . .	116
Wideband Digital Video . . . . .	116
Analog Video . . . . .	117
Audio Specifications . . . . .	118
AES Digital Audio . . . . .	118
Analog Audio . . . . .	118
<b>Appendix B — Native Protocol</b> . . . . .	<b>121</b>
<b>Index</b> . . . . .	<b>123</b>





# *Preface*

## **About This Manual**

This manual provides installation, configuration, operation, safety, and regulatory information for the Acappella small router products.



# Safety Summary

Read and follow the important safety information below, noting especially those instructions related to risk of fire, electric shock or injury to persons. Additional specific warnings not listed here may be found throughout the manual.

**WARNING** Any instructions in this manual that require opening the equipment cover or enclosure are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

## Safety Terms and Symbols

### Terms in This Manual

Safety-related statements may appear in this manual in the following form:

**WARNING** Warning statements identify conditions or practices that may result in personal injury or loss of life.

**CAUTION** Caution statements identify conditions or practices that may result in damage to equipment or other property, or which may cause equipment crucial to your business environment to become temporarily non-operational.

### Terms on the Product

The following terms may appear on the product:

**DANGER** — A personal injury hazard is immediately accessible as you read the marking.

**WARNING** — A personal injury hazard exists but is not immediately accessible as you read the marking.

**CAUTION** — A hazard to property, product, and other equipment is present.

## Symbols on the Product

The following symbols may appear on the product:



Indicates that dangerous high voltage is present within the equipment enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



Indicates that user, operator or service technician should refer to product manual(s) for important operating, maintenance, or service instructions.



This is a prompt to note fuse rating when replacing fuse(s). The fuse referenced in the text must be replaced with one having the ratings indicated.



Identifies a protective grounding terminal which must be connected to earth ground prior to making any other equipment connections.



Identifies an external protective grounding terminal which may be connected to earth ground as a supplement to an internal grounding terminal.



Indicates that static sensitive components are present which may be damaged by electrostatic discharge. Use anti-static procedures, equipment and surfaces during servicing.

## Warnings

The following warning statements identify conditions or practices that can result in personal injury or loss of life:

**Dangerous voltage or current may be present** — Disconnect power and remove battery (if applicable) before removing protective panels, soldering, or replacing components.

**Do not service alone** — Do not internally service this product unless another person capable of rendering first aid and resuscitation is present.

**Remove jewelry** — Prior to servicing, remove jewelry such as rings, watches, and other metallic objects.

**Avoid exposed circuitry** — Do not touch exposed connections, components or circuitry when power is present.

**Use proper power cord** — Use only the power cord supplied or specified for this product.

**Ground product** — Connect the grounding conductor of the power cord to earth ground.

**Operate only with covers and enclosure panels in place** — Do not operate this product when covers or enclosure panels are removed.

**Use correct fuse** — Use only the fuse type and rating specified for this product.

**Use only in dry environment** — Do not operate in wet or damp conditions.

**Use only in non-explosive environment** — Do not operate this product in an explosive atmosphere.

**High leakage current may be present** — Earth connection of product is essential before connecting power.

**Dual power supplies may be present** — Be certain to plug each power supply cord into a separate branch circuit employing a separate service ground. Disconnect both power supply cords prior to servicing.

**Double pole neutral fusing** — Disconnect mains power prior to servicing.

**Use proper lift points** — Do not use door latches to lift or move equipment.

**Avoid mechanical hazards** — Allow all rotating devices to come to a stop before servicing.

## Cautions

The following caution statements identify conditions or practices that can result in damage to equipment or other property:

**Use correct power source** — Do not operate this product from a power source that applies more than the voltage specified for the product.

**Use correct voltage setting** — If this product lacks auto-ranging power supplies, before applying power ensure that the each power supply is set to match the power source.

**Provide proper ventilation** — To prevent product overheating, provide equipment ventilation in accordance with installation instructions.

**Use anti-static procedures** — Static sensitive components are present which may be damaged by electrostatic discharge. Use anti-static procedures, equipment and surfaces during servicing.

**Do not operate with suspected equipment failure** — If you suspect product damage or equipment failure, have the equipment inspected by qualified service personnel.

**Ensure mains disconnect** — If mains switch is not provided, the power cord(s) of this equipment provide the means of disconnection. The socket outlet must be installed near the equipment and must be easily accessible. Verify that all mains power is disconnected before installing or removing power supplies and/or options.

**Route cable properly** — Route power cords and other cables so that they are not likely to be damaged. Properly support heavy cable bundles to avoid connector damage.

**Use correct power supply cords** — Power cords for this equipment, if provided, meet all North American electrical codes. Operation of this equipment at voltages exceeding 130 VAC requires power supply cords which comply with NEMA configurations. International power cords, if provided, have the approval of the country of use.

**Use correct replacement battery** — This product may contain batteries. To reduce the risk of explosion, check polarity and replace only with the same or equivalent type recommended by manufacturer. Dispose of used batteries according to the manufacturer's instructions.

**Troubleshoot only to board level** — Circuit boards in this product are densely populated with surface mount technology (SMT) components and application specific integrated circuits (ASICs). As a result, circuit board repair at the component level is very difficult in the field, if not impossible. For warranty compliance, do not troubleshoot systems beyond the board level.

# Sicherheit – Überblick

Lesen und befolgen Sie die wichtigen Sicherheitsinformationen dieses Abschnitts. Beachten Sie insbesondere die Anweisungen bezüglich Brand-, Stromschlag- und Verletzungsgefahren. Weitere spezifische, hier nicht aufgeführte Warnungen finden Sie im gesamten Handbuch.

**WARNUNG** Alle Anweisungen in diesem Handbuch, die das Abnehmen der Geräteabdeckung oder des Gerätegehäuses erfordern, dürfen nur von qualifiziertem Servicepersonal ausgeführt werden. Um die Stromschlaggefahr zu verringern, führen Sie keine Wartungsarbeiten außer den in den Bedienungsanleitungen genannten Arbeiten aus, es sei denn, Sie besitzen die entsprechende Qualifikationen für diese Arbeiten.

## Sicherheit – Begriffe und Symbole

### In diesem Handbuch verwendete Begriffe

Sicherheitsrelevante Hinweise können in diesem Handbuch in der folgenden Form auftauchen:

**WARNUNG** Warnungen weisen auf Situationen oder Vorgehensweisen hin, die Verletzungs- oder Lebensgefahr bergen.

**VORSICHT** Vorsichtshinweise weisen auf Situationen oder Vorgehensweisen hin, die zu Schäden an Ausrüstungskomponenten oder anderen Gegenständen oder zum zeitweisen Ausfall wichtiger Komponenten in der Arbeitsumgebung führen können.

### Hinweise am Produkt

Die folgenden Hinweise können sich am Produkt befinden:

**GEFAHR** — Wenn Sie diesen Begriff lesen, besteht ein unmittelbares Verletzungsrisiko.

**WARNUNG** — Wenn Sie diesen Begriff lesen, besteht ein mittelbares Verletzungsrisiko.

**VORSICHT** — Es besteht ein Risiko für Objekte in der Umgebung, den Mixer selbst oder andere Ausrüstungskomponenten.

## Symbole am Produkt

Die folgenden Symbole können sich am Produkt befinden:



Weist auf eine gefährliche Hochspannung im Gerätegehäuse hin, die stark genug sein kann, um eine Stromschlaggefahr darzustellen.



Weist darauf hin, dass der Benutzer, Bediener oder Servicetechniker wichtige Bedienungs-, Wartungs- oder Serviceanweisungen in den Produkthandbüchern lesen sollte.



Dies ist eine Aufforderung, beim Wechsel von Sicherungen auf deren Nennwert zu achten. Die im Text angegebene Sicherung muss durch eine Sicherung ersetzt werden, die die angegebenen Nennwerte besitzt.



Weist auf eine Schutzerdungsklemme hin, die mit dem Erdungskontakt verbunden werden muss, bevor weitere Ausrüstungskomponenten angeschlossen werden.



Weist auf eine externe Schutzerdungsklemme hin, die als Ergänzung zu einem internen Erdungskontakt an die Erde angeschlossen werden kann.



Weist darauf hin, dass es statisch empfindliche Komponenten gibt, die durch eine elektrostatische Entladung beschädigt werden können. Verwenden Sie antistatische Prozeduren, Ausrüstung und Oberflächen während der Wartung.

## Warnungen

Die folgenden Warnungen weisen auf Bedingungen oder Vorgehensweisen hin, die Verletzungs- oder Lebensgefahr bergen:

**Gefährliche Spannungen oder Ströme** — Schalten Sie den Strom ab, und entfernen Sie ggf. die Batterie, bevor sie Schutzabdeckungen abnehmen, löten oder Komponenten austauschen.

**Servicearbeiten nicht alleine ausführen** — Führen Sie interne Servicearbeiten nur aus, wenn eine weitere Person anwesend ist, die erste Hilfe leisten und Wiederbelebungsmaßnahmen einleiten kann.

**Schmuck abnehmen** — Legen Sie vor Servicearbeiten Schmuck wie Ringe, Uhren und andere metallische Objekte ab.



**Keine offen liegenden Leiter berühren** — Berühren Sie bei eingeschalteter Stromzufuhr keine offen liegenden Leitungen, Komponenten oder Schaltungen.

**Richtiges Netzkabel verwenden** — Verwenden Sie nur das mitgelieferte Netzkabel oder ein Netzkabel, das den Spezifikationen für dieses Produkt entspricht.

**Gerät erden** — Schließen Sie den Erdleiter des Netzkabels an den Erdungskontakt an.

**Gerät nur mit angebrachten Abdeckungen und Gehäuseseiten betreiben** — Schalten Sie dieses Gerät nicht ein, wenn die Abdeckungen oder Gehäuseseiten entfernt wurden.

**Richtige Sicherung verwenden** — Verwenden Sie nur Sicherungen, deren Typ und Nennwert den Spezifikationen für dieses Produkt entsprechen.

**Gerät nur in trockener Umgebung verwenden** — Betreiben Sie das Gerät nicht in nassen oder feuchten Umgebungen.

**Gerät nur verwenden, wenn keine Explosionsgefahr besteht** — Verwenden Sie dieses Produkt nur in Umgebungen, in denen keinerlei Explosionsgefahr besteht.

**Hohe Kriechströme** — Das Gerät muss vor dem Einschalten unbedingt geerdet werden.

**Doppelte Spannungsversorgung kann vorhanden sein** — Schließen Sie die beiden Anschlußkabel an getrennte Stromkreise an. Vor Servicearbeiten sind beide Anschlußkabel vom Netz zu trennen.

**Zweipolige, neutrale Sicherung** — Schalten Sie den Netzstrom ab, bevor Sie mit den Servicearbeiten beginnen.

**Fassen Sie das Gerät beim Transport richtig an** — Halten Sie das Gerät beim Transport nicht an Türen oder anderen beweglichen Teilen fest.

**Gefahr durch mechanische Teile** — Warten Sie, bis der Lüfter vollständig zum Halt gekommen ist, bevor Sie mit den Servicearbeiten beginnen.

## Vorsicht

Die folgenden Vorsichtshinweise weisen auf Bedingungen oder Vorgehensweisen hin, die zu Schäden an Ausrüstungskomponenten oder anderen Gegenständen führen können:

**Gerät nicht öffnen** — Durch das unbefugte Öffnen wird die Garantie ungültig.

**Richtige Spannungsquelle verwenden** — Betreiben Sie das Gerät nicht an einer Spannungsquelle, die eine höhere Spannung liefert als in den Spezifikationen für dieses Produkt angegeben.

**Gerät ausreichend belüften** — Um eine Überhitzung des Geräts zu vermeiden, müssen die Ausrüstungskomponenten entsprechend den Installationsan-

weisungen belüftet werden. Legen Sie kein Papier unter das Gerät. Es könnte die Belüftung behindern. Platzieren Sie das Gerät auf einer ebenen Oberfläche.

**Antistatische Vorkehrungen treffen** — Es gibt statisch empfindliche Komponenten, die durch eine elektrostatische Entladung beschädigt werden können. Verwenden Sie antistatische Prozeduren, Ausrüstung und Oberflächen während der Wartung.

**CF-Karte nicht mit einem PC verwenden** — Die CF-Karte ist speziell formatiert. Die auf der CF-Karte gespeicherte Software könnte gelöscht werden.

**Gerät nicht bei eventuellem Ausrüstungsfehler betreiben** — Wenn Sie einen Produktschaden oder Ausrüstungsfehler vermuten, lassen Sie die Komponente von einem qualifizierten Servicetechniker untersuchen.

**Kabel richtig verlegen** — Verlegen Sie Netzkabel und andere Kabel so, dass Sie nicht beschädigt werden. Stützen Sie schwere Kabelbündel ordnungsgemäß ab, damit die Anschlüsse nicht beschädigt werden.

**Richtige Netzkabel verwenden** — Wenn Netzkabel mitgeliefert wurden, erfüllen diese alle nationalen elektrischen Normen. Der Betrieb dieses Geräts mit Spannungen über 130 V AC erfordert Netzkabel, die NEMA-Konfigurationen entsprechen. Wenn internationale Netzkabel mitgeliefert wurden, sind diese für das Verwendungsland zugelassen.

**Richtige Ersatzbatterie verwenden** — Dieses Gerät enthält eine Batterie. Um die Explosionsgefahr zu verringern, prüfen Sie die Polarität und tauschen die Batterie nur gegen eine Batterie desselben Typs oder eines gleichwertigen, vom Hersteller empfohlenen Typs aus. Entsorgen Sie gebrauchte Batterien entsprechend den Anweisungen des Batterieherstellers.

Das Gerät enthält keine Teile, die vom Benutzer gewartet werden können. Wenden Sie sich bei Problemen bitte an den nächsten Händler.

# Consignes de sécurité

Il est recommandé de lire, de bien comprendre et surtout de respecter les informations relatives à la sécurité qui sont exposées ci-après, notamment les consignes destinées à prévenir les risques d'incendie, les décharges électriques et les blessures aux personnes. Les avertissements complémentaires, qui ne sont pas nécessairement repris ci-dessous, mais présents dans toutes les sections du manuel, sont également à prendre en considération.

**AVERTISSEMENT** Toutes les instructions présentes dans ce manuel qui concernent l'ouverture des capots ou des logements de cet équipement sont destinées exclusivement à des membres qualifiés du personnel de maintenance. Afin de diminuer les risques de décharges électriques, ne procédez à aucune intervention d'entretien autre que celles contenues dans le manuel de l'utilisateur, à moins que vous ne soyez habilité pour le faire.

## Consignes et symboles de sécurité

### Termes utilisés dans ce manuel

Les consignes de sécurité présentées dans ce manuel peuvent apparaître sous les formes suivantes:

**AVERTISSEMENT** Les avertissements signalent des conditions ou des pratiques susceptibles d'occasionner des blessures graves, voire même fatales.

**ATTENTION** Les mises en garde signalent des conditions ou des pratiques susceptibles d'occasionner un endommagement à l'équipement ou aux installations, ou de rendre l'équipement temporairement non opérationnel, ce qui peut porter préjudice à vos activités.

### Signalétique apposée sur le produit

La signalétique suivante peut être apposée sur le produit:

**DANGER** — risque de danger imminent pour l'utilisateur.

**AVERTISSEMENT** — Risque de danger non imminent pour l'utilisateur.

**MISE EN GARDE** — Risque d'endommagement du produit, des installations ou des autres équipements.

## Symboles apposés sur le produit


Les symboles suivants peut être apposés sur le produit:



Signale la présence d'une tension élevée et dangereuse dans le boîtier de l'équipement ; cette tension peut être suffisante pour constituer un risque de décharge électrique.



Signale que l'utilisateur, l'opérateur ou le technicien de maintenance doit faire référence au(x) manuel(s) pour prendre connaissance des instructions d'utilisation, de maintenance ou d'entretien.

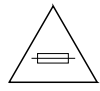

Il s'agit d'une invite à prendre note du calibre du fusible lors du remplacement de ce dernier. Le fusible auquel il est fait référence dans le texte doit être remplacé par un fusible du même calibre.



Identifie une borne de protection de mise à la masse qui doit être raccordée correctement avant de procéder au raccordement des autres équipements.



Identifie une borne de protection de mise à la masse qui peut être connectée en tant que borne de mise à la masse supplémentaire.



Signale la présence de composants sensibles à l'électricité statique et qui sont susceptibles d'être endommagés par une décharge électrostatique. Utilisez des procédures, des équipements et des surfaces antistatiques durant les interventions d'entretien.

## Avertissements

Les avertissements suivants signalent des conditions ou des pratiques susceptibles d'occasionner des blessures graves, voire même fatales:

**Présence possible de tensions ou de courants dangereux** — Mettez hors tension, débranchez et retirez la pile (le cas échéant) avant de déposer les couvercles de protection, de défaire une soudure ou de remplacer des composants.

**Ne procédez pas seul à une intervention d'entretien** — Ne réalisez pas une intervention d'entretien interne sur ce produit si une personne n'est pas présente pour fournir les premiers soins en cas d'accident.

**Retirez tous vos bijoux** — Avant de procéder à une intervention d'entretien, retirez tous vos bijoux, notamment les bagues, la montre ou tout autre objet métallique.

**Évitez tout contact avec les circuits exposés** — Évitez tout contact avec les connexions, les composants ou les circuits exposés s'ils sont sous tension.

**Utilisez le cordon d'alimentation approprié** — Utilisez exclusivement le cordon d'alimentation fourni avec ce produit ou spécifié pour ce produit.

**Raccordez le produit à la masse** — Raccordez le conducteur de masse du cordon d'alimentation à la borne de masse de la prise secteur.

**Utilisez le produit lorsque les couvercles et les capots sont en place** — N'utilisez pas ce produit si les couvercles et les capots sont déposés.

**Utilisez le bon fusible** — Utilisez exclusivement un fusible du type et du calibre spécifiés pour ce produit.

**Utilisez ce produit exclusivement dans un environnement sec** — N'utilisez pas ce produit dans un environnement humide.

**Utilisez ce produit exclusivement dans un environnement non explosible** — N'utilisez pas ce produit dans un environnement dont l'atmosphère est explosible.

**Présence possible de courants de fuite** — Un raccordement à la masse est indispensable avant la mise sous tension.

**Deux alimentations peuvent être présentes dans l'équipement** — Assurez vous que chaque cordon d'alimentation est raccordé à des circuits de terre séparés. Débranchez les deux cordons d'alimentation avant toute intervention.

**Fusion neutre bipolaire** — Débranchez l'alimentation principale avant de procéder à une intervention d'entretien.

**Utilisez les points de levage appropriés** — Ne pas utiliser les verrous de la porte pour lever ou déplacer l'équipement.

**Évitez les dangers mécaniques** — Laissez le ventilateur s'arrêter avant de procéder à une intervention d'entretien.

## Mises en garde

Les mises en garde suivantes signalent les conditions et les pratiques susceptibles d'occasionner des dommages à l'équipement et aux installations:

**N'ouvrez pas l'appareil** — Toute ouverture prohibée de l'appareil aura pour effet d'annuler la garantie.

**Utilisez la source d'alimentation adéquate** — Ne branchez pas ce produit à une source d'alimentation qui utilise une tension supérieure à la tension nominale spécifiée pour ce produit.

**Assurez une ventilation adéquate** — Pour éviter toute surchauffe du produit, assurez une ventilation de l'équipement conformément aux instructions d'installation. Ne déposez aucun document sous l'appareil — ils peuvent gêner la ventilation. Placez l'appareil sur une surface plane.

**Utilisez des procédures antistatiques** - Les composants sensibles à l'électricité statique présents dans l'équipement sont susceptibles d'être endommagés par une décharge électrostatique. Utilisez des procédures, des équipements et des surfaces antistatiques durant les interventions d'entretien.

**N'utilisez pas la carte CF avec un PC** — La carte CF a été spécialement formatée. Le logiciel enregistré sur la carte CF risque d'être effacé.

**N'utilisez pas l'équipement si un dysfonctionnement est suspecté** — Si vous suspectez un dysfonctionnement du produit, faites inspecter celui-ci par un membre qualifié du personnel d'entretien.

**Acheminez les câbles correctement** — Acheminez les câbles d'alimentation et les autres câbles de manière à ce qu'ils ne risquent pas d'être endommagés. Supportez correctement les enroulements de câbles afin de ne pas endommager les connecteurs.

**Utilisez les cordons d'alimentation adéquats** — Les cordons d'alimentation de cet équipement, s'ils sont fournis, satisfont aux exigences de toutes les réglementations régionales. L'utilisation de cet équipement à des tensions dépassant les 130 V en c.a. requiert des cordons d'alimentation qui satisfont aux exigences des configurations NEMA. Les cordons internationaux, s'ils sont fournis, ont reçu l'approbation du pays dans lequel l'équipement est utilisé.

**Utilisez une pile de remplacement adéquate** — Ce produit renferme une pile. Pour réduire le risque d'explosion, vérifiez la polarité et ne remplacez la pile que par une pile du même type, recommandée par le fabricant. Mettez les piles usagées au rebut conformément aux instructions du fabricant des piles.

Cette unité ne contient aucune partie qui peut faire l'objet d'un entretien par l'utilisateur. Si un problème survient, veuillez contacter votre distributeur local.

# *Regulatory Notices*

## **Certifications and Compliances**

### **FCC Emission Control**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense. Changes or modifications not expressly approved by Grass Valley can affect emission compliance and could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules (E4 environment). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesirable operation.

### **Canadian EMC Notice of Compliance**

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

## EN55103-1/2 Class A Warning

For products that comply with Class A. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

This product has been evaluated for Electromagnetic Compatibility under the EN 55103-1/2 standards for Emissions and Immunity and meets the requirements for E4 environment.

## Safety Certification

This product's components have been evaluated and meet the Safety Certification Standards listed in [Table 1](#).

Table 1. Safety Certification Standards

Component	Standard	Designed/Tested for compliance with:
Acappella router Acappella Remote panel	ANSI/UL 60950-1-2002	Safety of Information Technology Equipment, including Electrical Business Equipment (First edition)
	IEC 60950	Safety of Information Technology Equipment, including Electrical Business Equipment (First edition, 2001).
	CAN/CSA C22.2 NO. 60950-1-03 First edition	Safety of Information Technology Equipment, including Electrical Business Equipment.
	BS EN60950-2000	



# *System Overview*

## **Introduction**

The Acappella line of small, single- and mixed-format routers is designed for myriad broadcast and production settings, including small studios, sports arenas, and space-constrained environments such as mobile production trucks. The Acappella matrix frame is only 1 RU, and has a 14-inch (34.5 cm) depth for easy in-rack cabling.

The Acappella line supports local and remote control panels, via a built-in Ethernet connection. It also includes many control panel operational modes, such as destination gang, chop, panel enable, and destination protect.

An Acappella router comes ready to operate right out of the box—just plug it in and you can get right to work. It also supports Web browser based configuration for fast, easy customization.

An Acappella router and remote control panels can also be integrated into a Grass Valley Prelude or Encore routing system. This manual covers stand-alone Acappella systems. Refer to the separate Prelude and/or Encore documentation sets for system integration information.

Acappella software release v3.2.0 and higher support the Acappella model A84HR-CLP 8x4 HD Router with Clean Switch. This hardware provides frame sync capability on destinations DST 1 and DST 2 for applications requiring outputs timed to a single reference.

The Clean Switch hardware above is available for use with Grass Valley Indigo AV Mixer, to provide eight HD-SDI inputs. The Indigo models using this Acappella hardware are:

- INDGO1-HR-8 – Indigo AV Mixer HR Input Expansion Option
- INDGO1-HR-8-UPG – Indigo AV Mixer HR Expansion Upgrade
- INDGO1-SDHR-8-UPG – Indigo AV Mixer HR Expansion Upgrade

See [A84HR-CLP 8x4 HD Router Clean Switch Limitations on page 36](#) for more information.

## Features

- Single- or multi-format models, supporting:
  - Wideband HD digital video from 4.0 Mb/s to 1.5 Gb/s
  - SD digital video
  - ASI data
  - AES/EBU digital audio
  - Analog Video (NTSC, PAL)
  - Analog Audio (balanced)
- Many different frames available, ranging from 16 x 16 to 8 x 4.
- Clean synchronous digital audio switching.
- Redundant Power Supplies.
- Integrated Local Panel.
- Many different Remote Panels, ranging from 16 x 16 to 8 x 1.
- Standard Ethernet interface.
- Easy customization via Web browser or Grass Valley NetConfig software.
- Feature-rich digital audio processing, including sum, swap, invert, silence generation.
- Standard RS-422 serial port for computer control, automation interface, and operations with Grass Valley Jupiter and Series 7000 systems.
- Native Protocol support.
- SNMP support.
- Upgrade path for Ethernet operation with Grass Valley Prelude and Encore systems.
- A84HR-CLP 8x4 HD Router with Clean Switch - provides frame sync capability for two Acappella destinations. These outputs can be timed in reference to the distributed Genlock reference in the frame or from an external reference.
- Optional Indigo AV Switcher Expansion, providing 8 HD-SDI inputs using the Clean Switch hardware above.

# Hardware Description

## Front Panels

The front of the Acappella frame and the related remote panels will vary with the configuration of the system. All Acappella frames can be ordered with a local panel installed in the frame. When a local panel is ordered, the front will appear with the button configuration that matches the Acappella frame's Input and Output configuration. Remote panels can be ordered in several configurations and do not have to match the Acappella frame's Input and Output configuration. The panel's appearance is related to how many Sources and Destinations are available, not how many Levels are used.

Any Acappella frame ordered without a Local Panel will appear as shown in [Figure 1](#).

Figure 1. Acappella Front with no Local Panel




8300\_00\_02r0

All panel fronts (except frames with no Local Panel) will have four Level buttons, a green Enable button, and a red Protect button. The number of Source and Destination buttons will change depending on the frame's configuration for local panels and the desired configuration for remote panels.

[Figure 2](#) is a panel with 16 Sources and 16 Destinations.


Figure 2. 16x16 Front

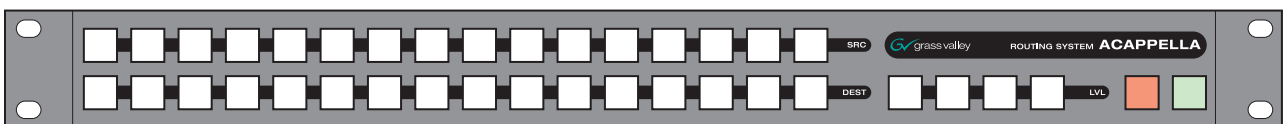

8300\_00\_08r0

[Figure 3](#) is a panel with 16 Sources and 8 Destinations.

Figure 3. 16x8 Front

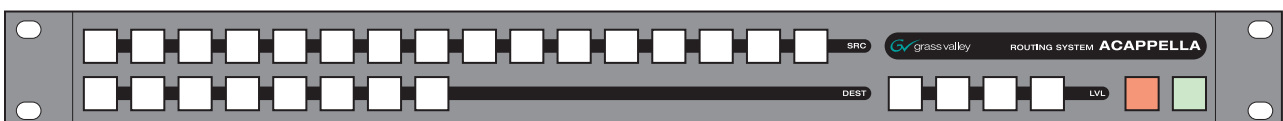

8300\_00\_09r0

Figure 4 is a panel with 16 Sources and 4 Destinations.

Figure 4. 16x4 Front

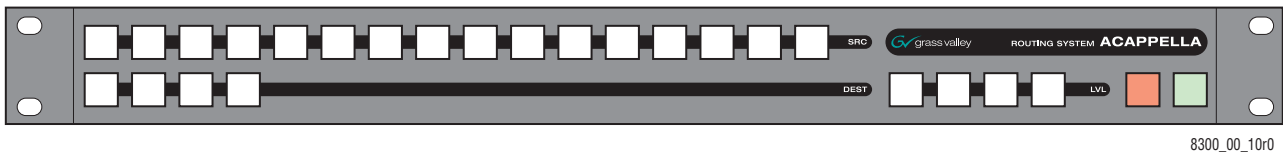


Figure 5 is a panel with 16 Sources and 2 Destinations.

Figure 5. 16x2 Front

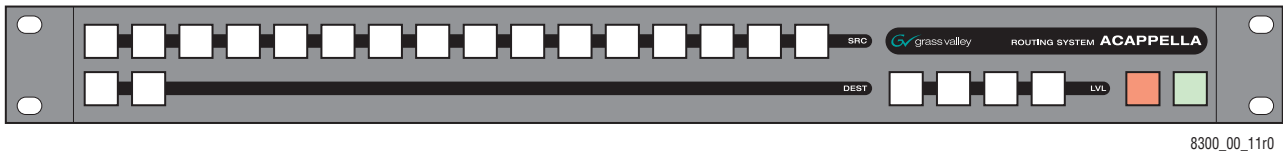


Figure 6 is a Remote panel with 16 Sources and 1 Destination.

Figure 6. 16x1 Single Destination Front (Remote Panel Only)

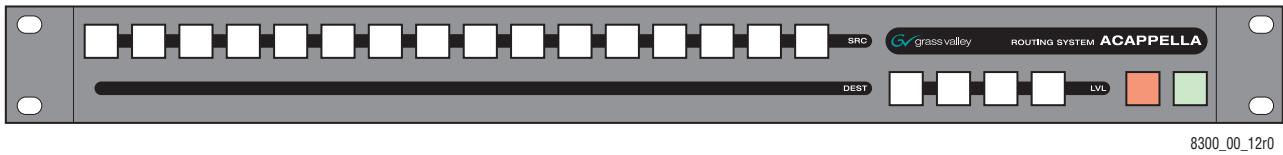


Figure 7 is a panel with 8 Sources and 8 Destinations.

Figure 7. 8x8 Front



Figure 8 is a panel with 8 Sources and 4 Destinations.

Figure 8. 8x4 Front



Figure 9 is a Remote panel with 8 Sources and 1 Destination.


Figure 9. 8x1 Single Destination Front (Remote Panel Only)



## Backplanes

When viewed from the rear, the Acappella backplane is divided as shown in Figure 10. The control area in the center will appear on all frames. The Audio section on the right and the Video section on the left will change depending upon the configuration of the frame. Inputs are indicated by white numbers in the black area, are located in the top and bottom row of the black area, and the entire middle row. Outputs are indicated by black numbers in the white areas and are located in the top and bottom rows of the white areas.

Figure 10. Acappella Backplane

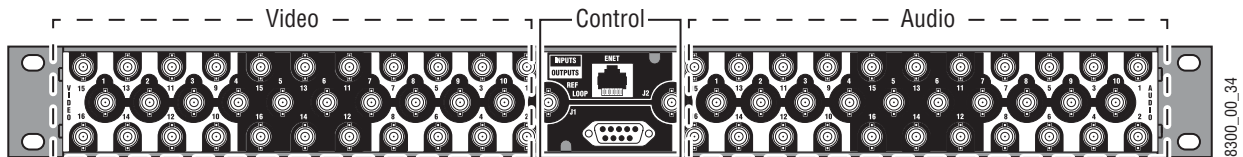


## Video Configuration (Digital and Analog)

The video BNC backplanes are used with all signal types including High Definition, Standard Definition, relocking or non relocking, and Analog.


The configuration shown in Figure 11 is 16 Inputs by 16 Outputs.

Figure 11. 16x16 Video BNC Backplane

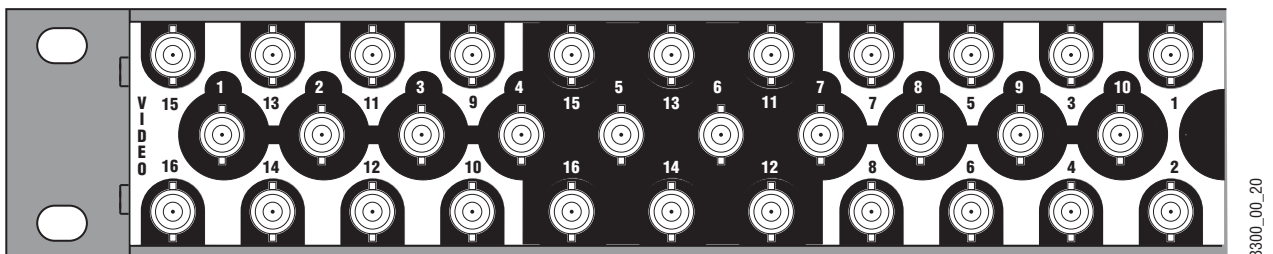


The configuration shown in [Figure 12](#) is 16 Inputs by 8 Outputs.

Figure 12. 16x8 Video BNC Backplane

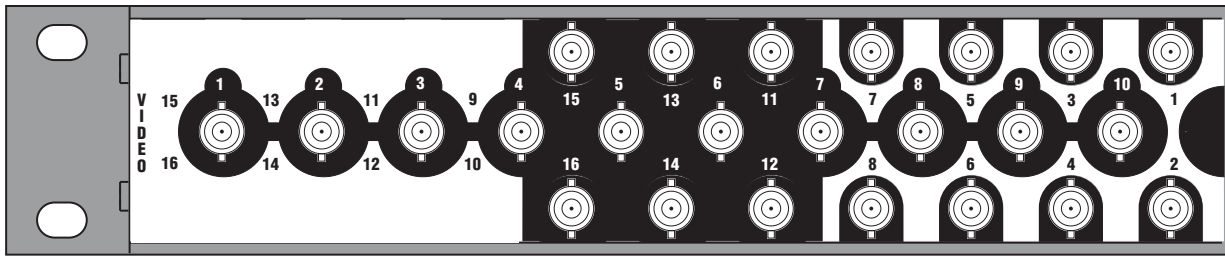


The configuration shown in [Figure 13](#) is 16 Inputs by 4 Outputs.

Figure 13. 16x4 Video BNC Backplane

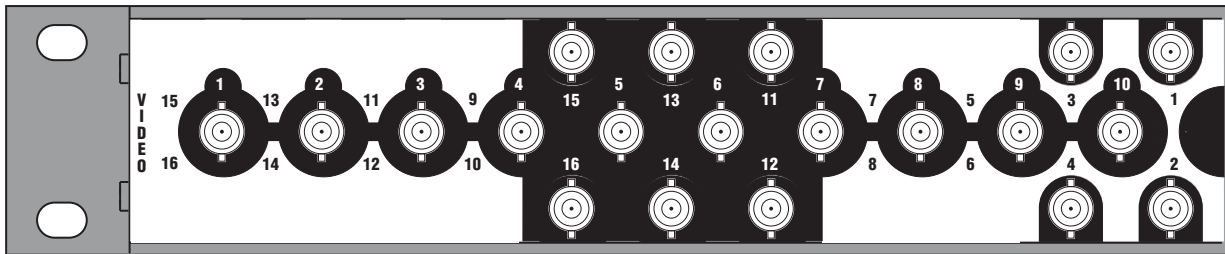


The configuration shown in [Figure 14](#) is 16 Inputs by 2 Outputs.

Figure 14. 16x2 Video BNC Backplane

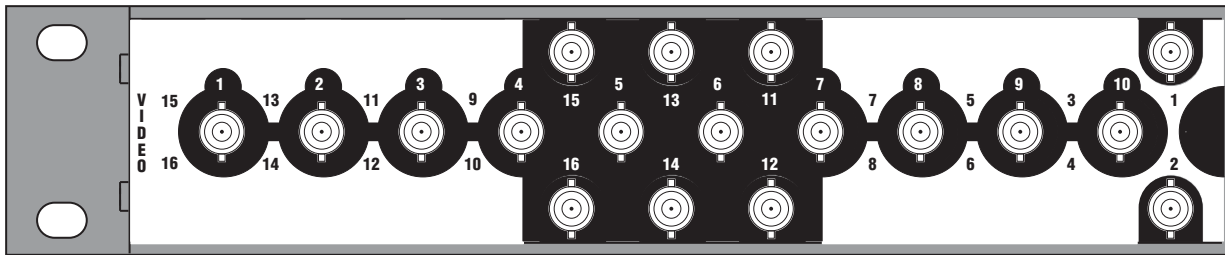


The configuration shown in [Figure 15](#) is 8 Inputs by 8 Outputs.

Figure 15. 8x8 Video BNC Backplane

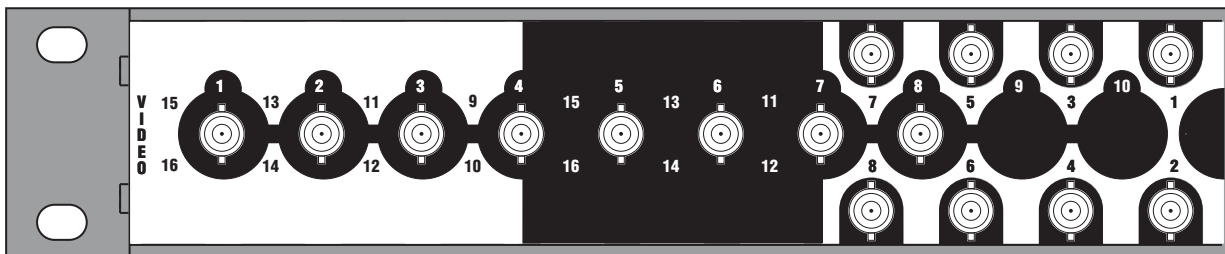


The configuration shown in [Figure 16](#) is 8 Inputs by 4 Outputs.

Figure 16. 8x4 Video BNC Backplane

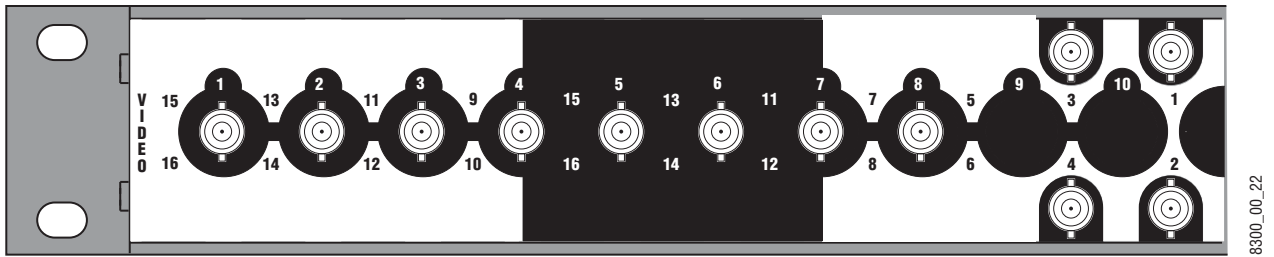

The empty configuration shown in [Figure 17](#) is used on systems that have audio with no video.


Figure 17. Empty Video Backplane

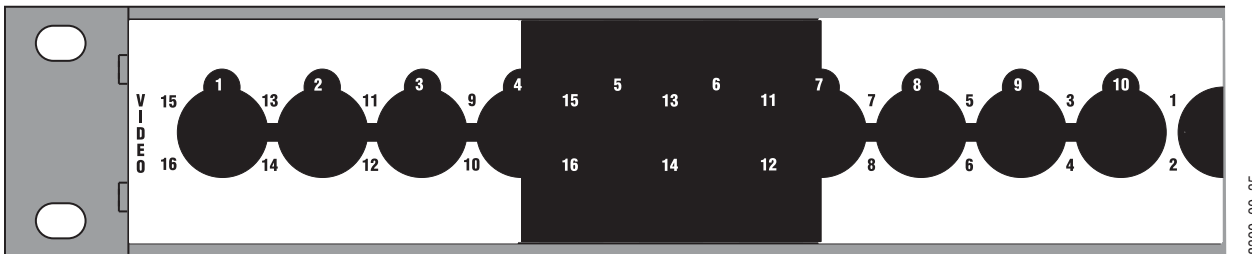

## Digital Audio Configuration


The configuration shown in [Figure 18](#) is 16 Inputs by 16 Outputs of single stream digital (AES) audio.

Figure 18. 16x16 Audio Single Stream BNC Backplane

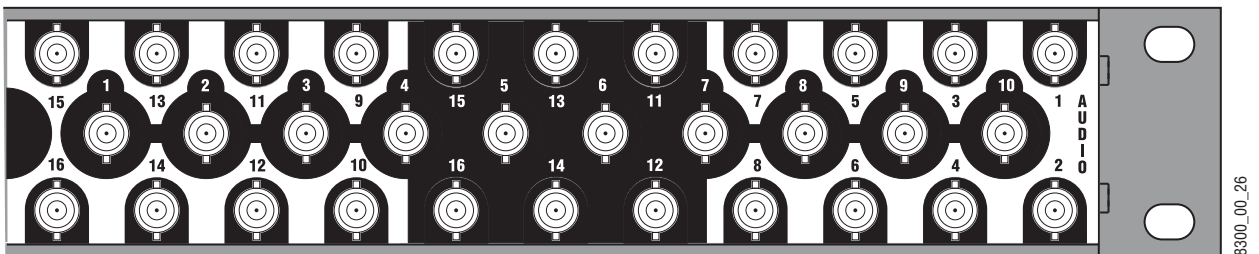


The configuration shown in [Figure 19](#) is 16 Inputs by 8 Outputs of single stream digital (AES) audio.

Figure 19. 16x8 Audio Single Stream BNC Backplane

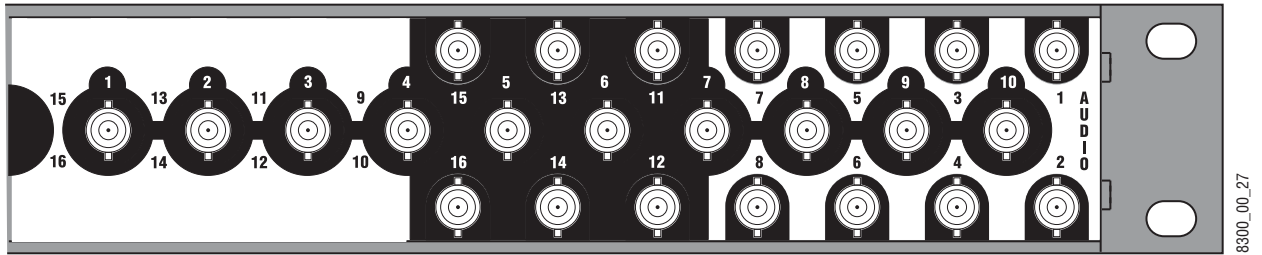


The configuration shown in [Figure 20](#) is 16 Inputs by 4 Outputs of single stream digital (AES) audio.

Figure 20. 16x4 Audio Single Stream BNC Backplane

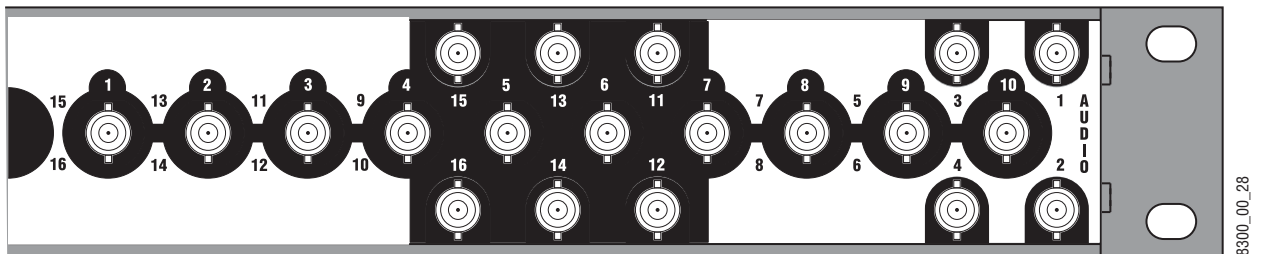

The configuration shown in [Figure 21](#) is 16 Inputs by 2 Outputs of single stream digital (AES) audio.


Figure 21. 16x2 Audio Single Stream BNC Backplane

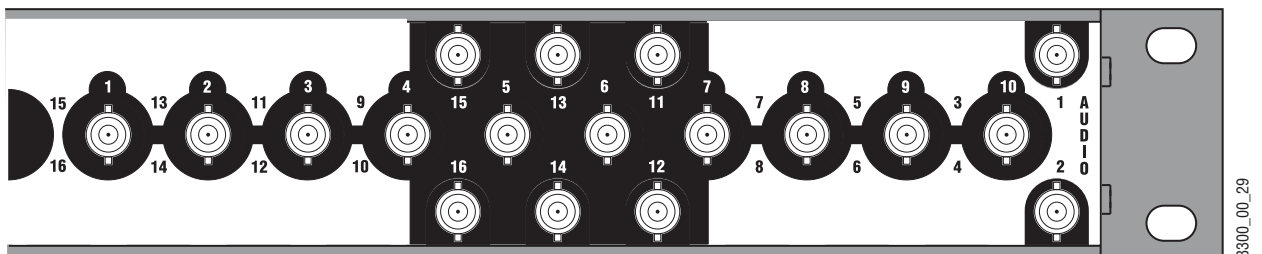




The configuration shown in [Figure 22](#) is 8 Inputs by 8 Outputs of dual stream digital (AES) audio.

Figure 22. 8x8 Audio Dual Stream BNC Backplane

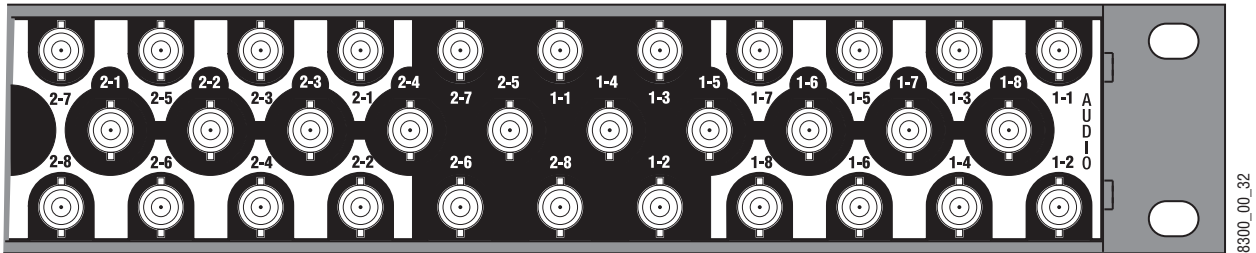


The configuration shown in [Figure 23](#) is 8 Inputs by 4 Outputs of dual stream digital (AES) audio.

Figure 23. 8x4 Audio Dual Stream BNC Backplane

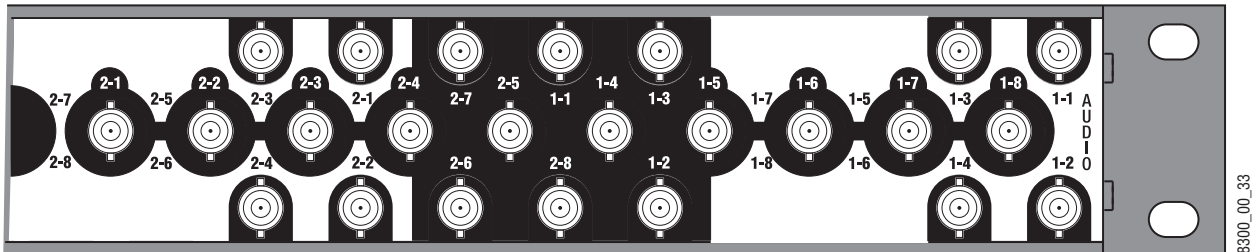

The empty configuration shown in [Figure 24](#) is used on systems that have video with no audio.

Figure 24. Empty Audio Backplane

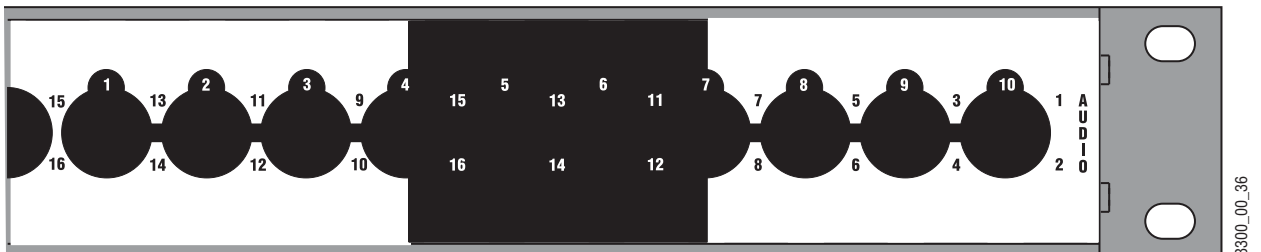

## Analog Audio Configuration

Analog audio backplanes are equipped with Phoenix connectors that each carry two balanced audio channels (typically left and right stereo). Inputs

are located on the left, and outputs are located on the right (as viewed from the rear). Representative analog audio backplanes are shown below.

Figure 25. 16 x 16 Analog Audio


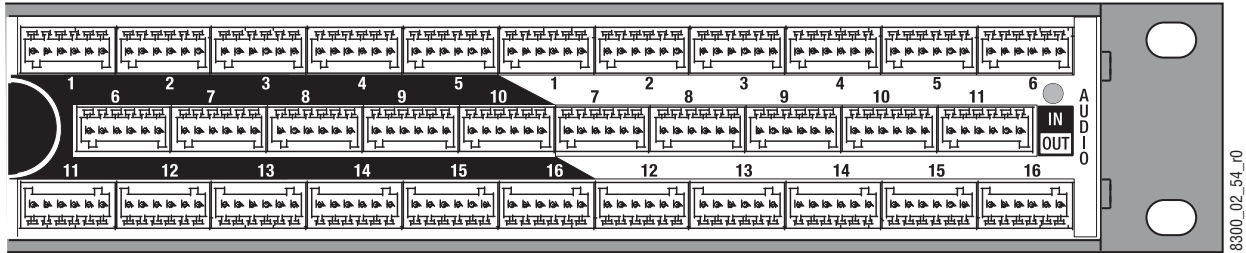


Figure 26. 16 x 4 Analog Audio

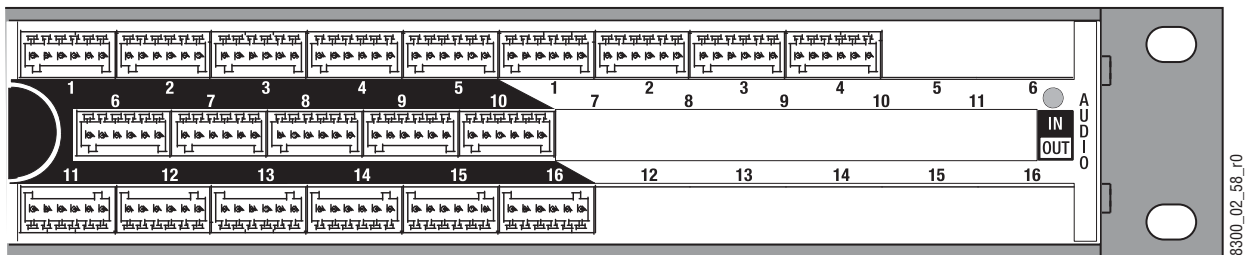

**Note** The bottom row of analog audio connectors are mounted upside down in relation to the top two rows, due to internal board space limitations. The removable connectors are wired the same regardless of row used.

Analog frames also offer a Dual Stereo configuration, which divide the matrix into two groups with independent inputs and outputs. Inputs for one group can only be routed to outputs of the same group, not to outputs of the other group. The inputs and outputs of each group are labeled with a leading number, 1- or 2-. Two Dual Stereo analog configurations are available, one with eight outputs per group (Figure 27), and the other with four outputs per group (Figure 28).

Figure 27. 8 x 8 Dual Stereo Analog Audio


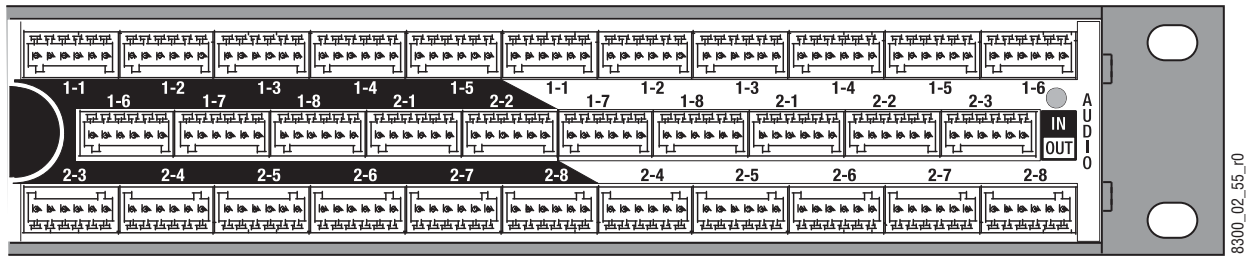


Figure 28. 8 x 4 Dual Stereo Analog Audio

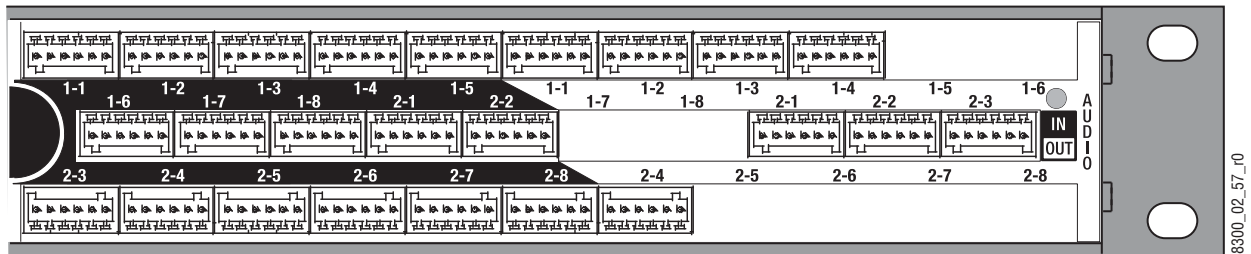

## Acappella Router and Remote Panel Variations


Acappella routers are available in single and dual formats with a variety of inputs and outputs. Options include an integral control panel on the front of the router and redundant power supplies. Table 2 shows how the model number of the Acappella router identifies the configuration of the frame.

Table 2. Acappella Routers Example Model Code

<b>A</b>	<b>16</b>	<b>8</b>	<b>HR-</b>	<b>DU-</b>	<b>LP</b>	Chassis Options, Secondary Signal Format Primary Signal Format	L= Local control panel P = Internal redundant power supply (digital only)
Number of Outputs: 2, 4, 8, or 16 Number of Inputs: 8 or 16							
A = Acappella						V = Analog video S = SD video SR = SD video w/reclocking HR = HD video w/reclocking AU = AES audio, unbalanced 75 Ohm BNC AB = AES audio, balanced 110 Ohm terminals DU = Dual AES audio, balanced, 110 Ohm terminals DBT = AES audio, transformer coupled, 110 Ohm terminals AA = Dual-channel, analog audio, balanced QA = Dual stereo analog audio	

Acappella Remote Control panels are also available in many different configurations (Table 3).

Table 3. Acappella Remote Control Panels Example Model Code

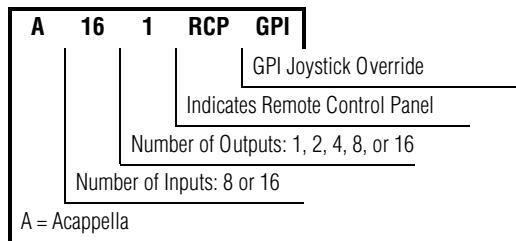

## A84HR-CLP 8x4 HD Router Clean Switch Limitations

### Prelude Configuration

The new Acappella A84HR-CLP matrix type is currently not recognized in the Prelude routing control system. This means the drag-and-drop method of configuration cannot be used.

The *Prelude Instruction Manual* explains how to manually configure and add a new matrix to a Prelude router configuration. Please follow these steps with the exception of the choice of matrix type.

Double-clicking on the Matrix-Type cell in the Prelude configuration screen will bring up a list of available known matrix types allowed to be used for configuration. Choose the option **Acappella HD-R**. All other configuration options are described in the *Prelude Instruction Manual*.

### Frame Sync Validated for HD Operation

The Frame Sync function is currently proven and tested for use only with HD input video sources. The frame sync is capable of SD input video operation, but it is not warranted to work properly in the Acappella 2.2.0 release. If the frame sync does not pass SD input video correctly, two workarounds are available that should fix the problem:


- Change the field rate setting from **Use Reference** to **59.94Hz** or **50Hz** on the Frame Sync web page, depending on the field rate of the video passed through the Acappella and/or the reference signal attached to it. This change forces the video detector to work properly.
- While passing SD video through either output channel 1 or output channel 2 of the Frame Sync function, ensure an HD or SD video signal is present on the other Frame Sync channel as well. This forces valid signals to the timing recovery circuitry when passing SD video.

# Installation

## Acappella Frame Rack Installation

The Acappella frame is installed in a standard 483 mm (19 inch) rack. The frame occupies 1 rack unit. Cooling is by horizontal front-to-back airflow. See [Figure 29](#).

Figure 29. Acappella Installation Front View

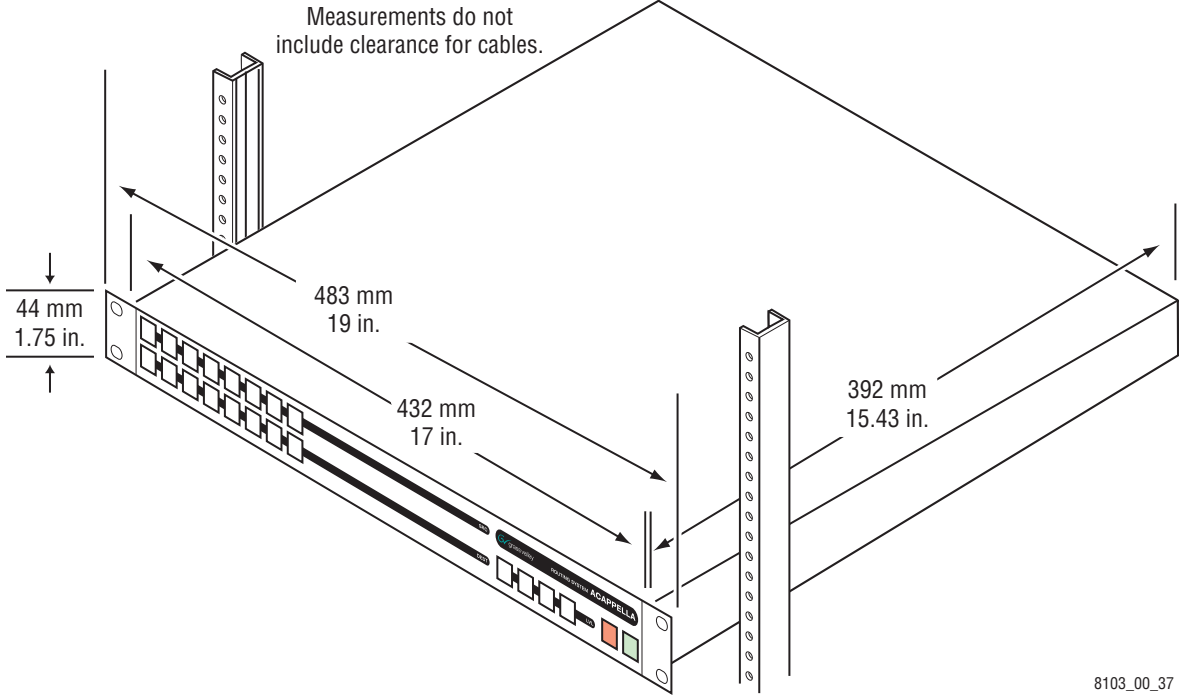


**Note** The depth shown is for the frame. Additional space is needed for cable clearances.

## Remote Panel Rack Installation

Remote panel rack mounting is straightforward and requires no special tools or adaptors. Simply position the Remote Panel in the rack and secure the panel in place. Refer to [Figure 30](#).

Figure 30. Rack Mount Remote Panel Installation

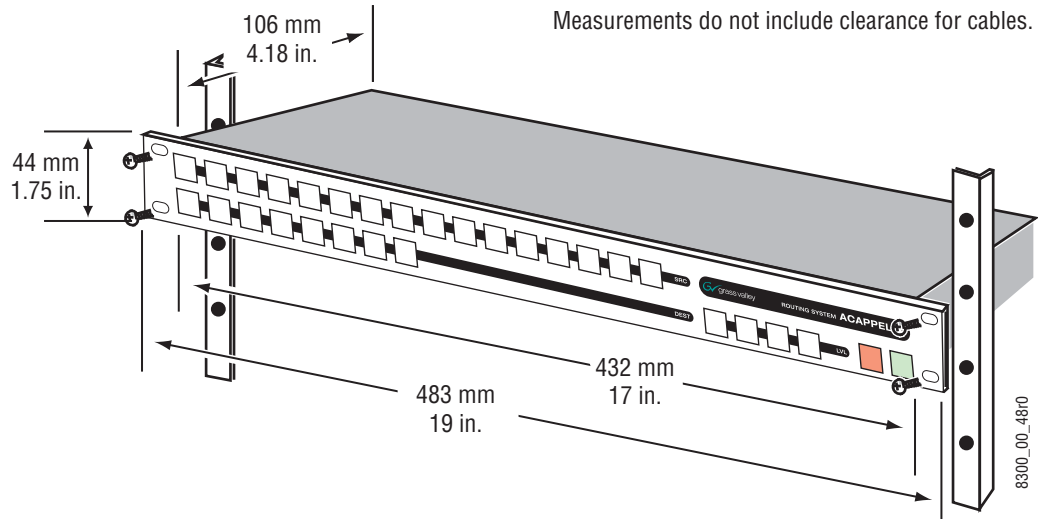

A rear frame support kit is available as an option (ACAP24RACKKIT).

# Acappella Cabling

Figure 31 shows all possible cabling for a 16x16 Acappella frame with 16 Video Inputs and Outputs and 16 single stream AES Audio Inputs and Outputs using BNC connectors. The second Power Supply is optional.

Figure 31. 16x16 Cabling


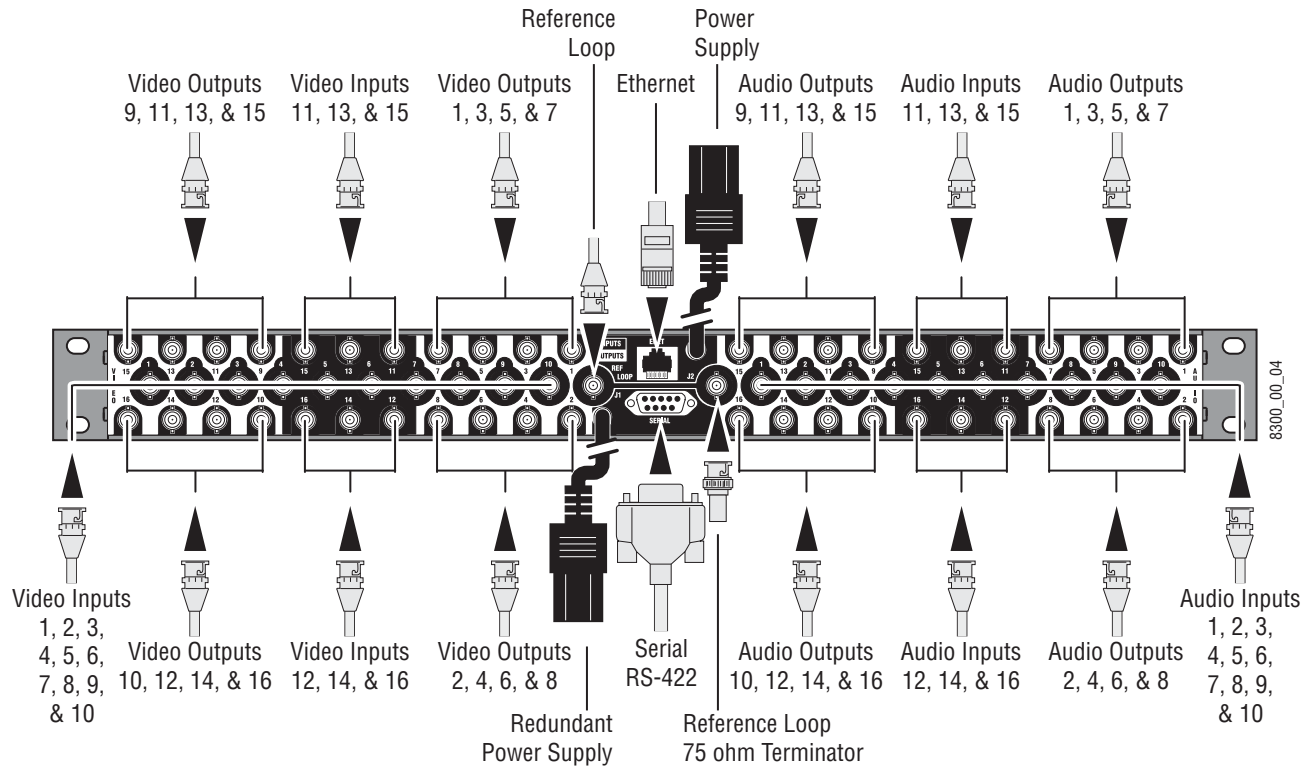


Figure 32 shows all possible cabling for an 8x8 Acappella frame with 8 Video Inputs and Outputs and 8 dual stream AES Audio Inputs and Outputs using BNC connectors. The second Power Supply is optional.

Figure 32. 8x8 Cabling



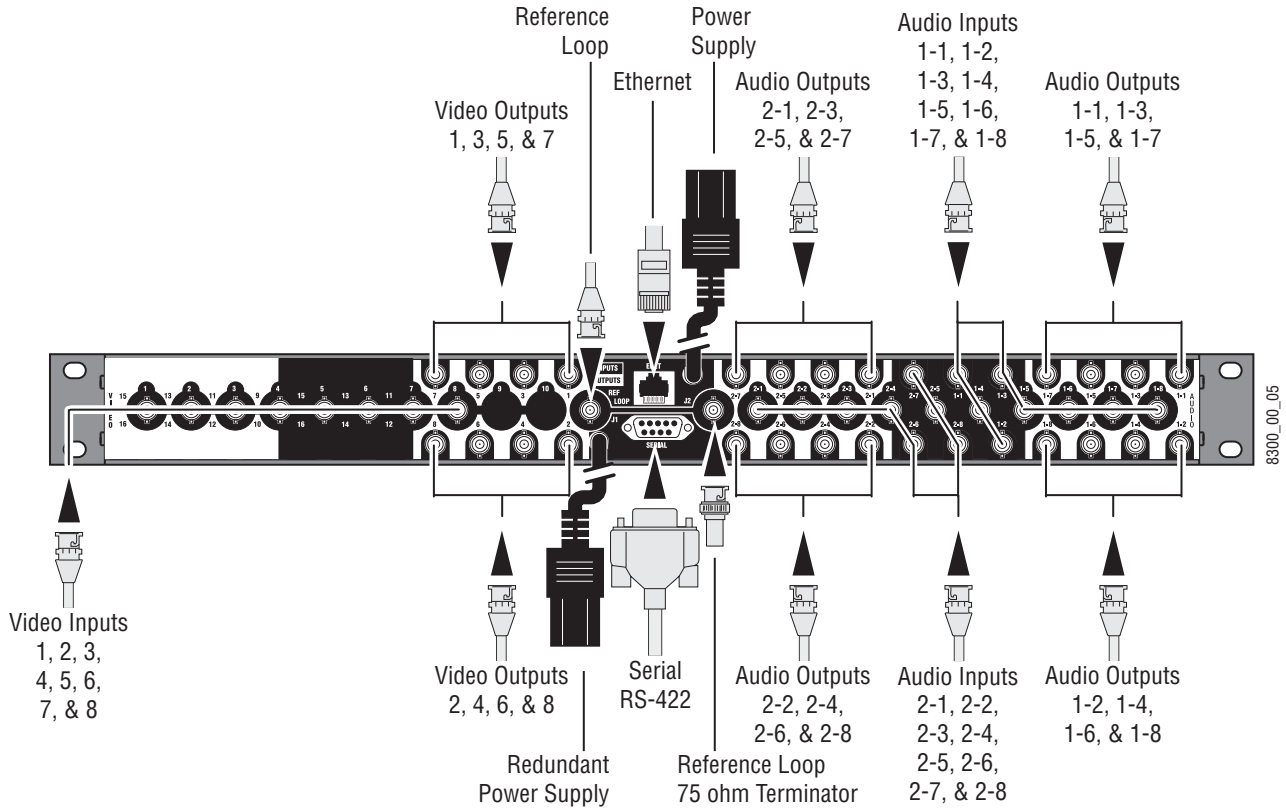

## Analog Audio Pinouts

Phoenix style connectors are used for wiring analog audio. Space limitations required the bottom row of connectors be oriented upside down, but the removable connectors are wired the same regardless of row used.

Figure 33. Analog Audio Backplane



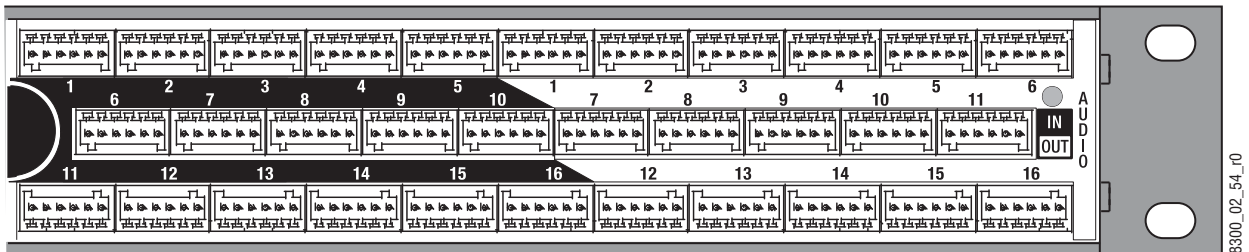


Figure 34. Phoenix Connector Pinouts for Stereo Analog Audio

Top 2 Rows (connector right side up)

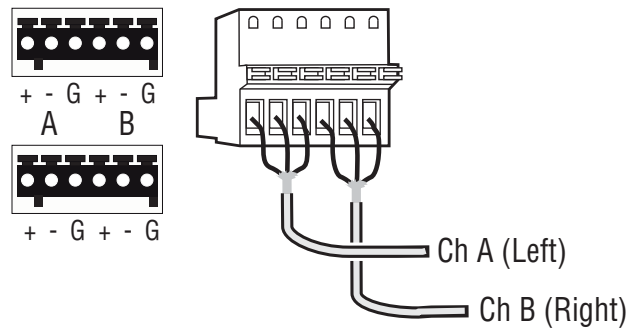

Bottom Row (same connector upside down)

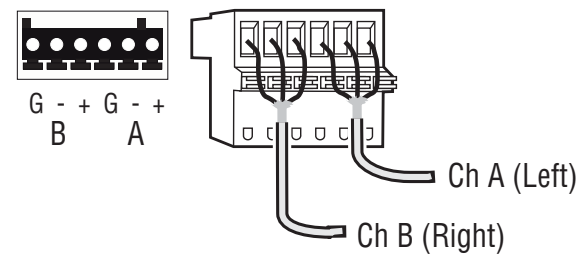

8300\_02\_56\_r0

## Control Cabling

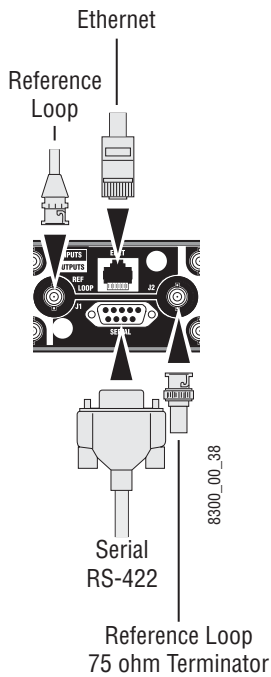


Table 4 shows the connectors in the Control area of the Acappella frame.

Table 4. Control Cabling

Label	Connector		Details
	Type	Gender	
ENET	RJ-45	Female	Ethernet network communication interface is 100Base-T compatible, use Category 5e cable, 8 conductor twisted pair.
SERIAL	9 pin D	Female	RS-422 interface, use serial cable.
REF LOOP	BNC	Female	Video reference supports Color Black or Tri-Level-Sync, use unbalanced 75 ohm connector, Loop-thru cabling supported.

### Serial 9 Pin D Connector Pinout

Table 5 contains pinout information for the Serial RS-422 9 Pin D connector.

Table 5. Serial D Connector Pinouts


Controlled	Pin	Function	Pin	Function
9 Pin D Female 	1	GND	6	TX Com
	2	TX-	7	TX+
	3	RX+	8	RX-
	4	RX Com	9	GND
	5	NC	-	-

**Note** Refer to the latest version of the *Routing Products Protocols Manual* for information about the Terminal/Computer Interface (T/C I) Protocol used to control Acappella systems. This manual is available for download on the Grass Valley web site (see [page 4](#)).

## Ethernet Cabling

The Acappella frame uses Ethernet to communicate. Use standard pin-to-pin (patch) Category 5e cables if you are using switches between the routers, panels, and PC. It is also possible to use a crossover cable to connect an Acappella Router directly to either a Remote Panel or a PC; this option is only practical in very small systems. Figure 35 shows a Closed Network system with an Acappella router, a Remote Panel, and a PC connected to a switch.


Figure 35. Ethernet Cabling

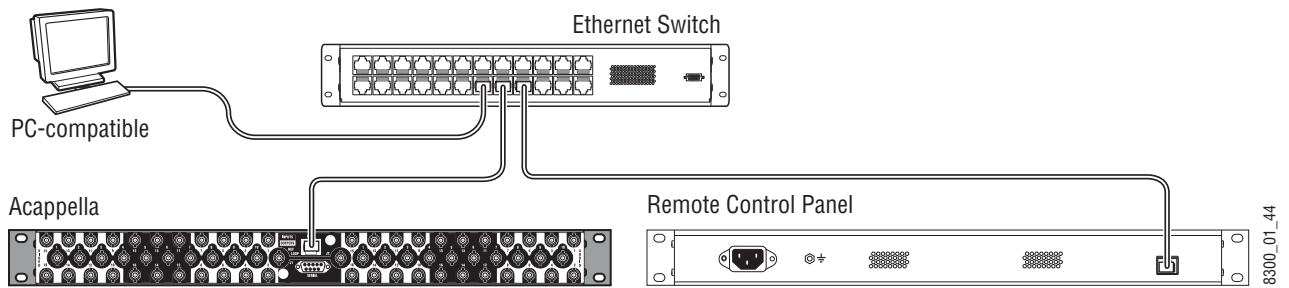

## Reference Cabling

Reference signals are loop-thru with the end of the chain terminated. Color Black or Tri-Level Sync signals are used. The Reference shown in Figure 36 is the default cabling for plug and play.


Figure 36. Video Reference Connections

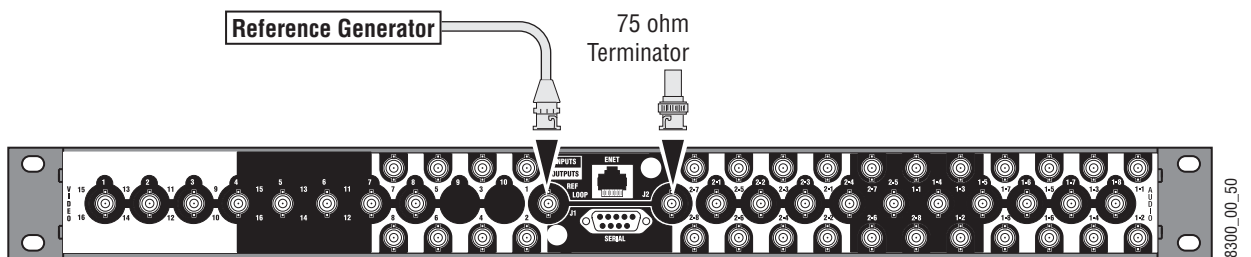

See [Router Reference Configuration Page on page 88](#) to select AES Src 1 instead of the Color Black or Tri-Level Sync Reference. Web Page configuration is required


In [Figure 37](#) a Continuous AES Signal is connected to Audio Input 1.

Figure 37. Reference Signal Cabling Option for Single Stream Audio

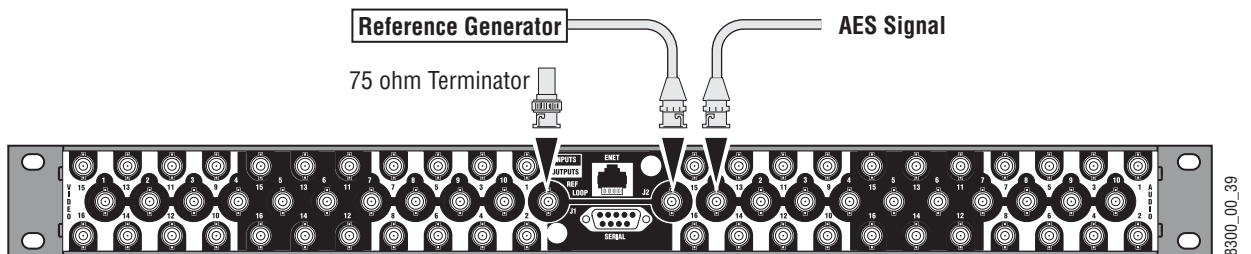

In [Figure 38](#) a continuous feed AES signal is connected to Audio Input 2-1.

Figure 38. Reference Signal Cabling Option for Dual Stream Audio

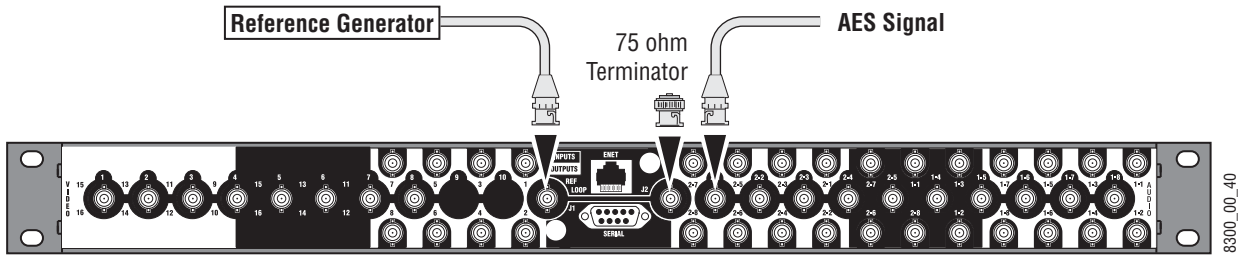


8300\_00\_40

## Remote Panel Cabling

The Remote Panel has connectors for RJ-45 Ethernet and AC Power. See [Figure 39](#).

Figure 39. Remote Panel Cabling

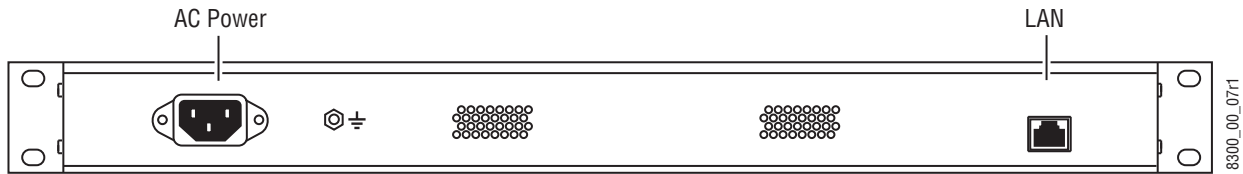

8300\_00\_07r1


## Power

### Digital Frames

The Acappella digital frame uses internal auto-ranging AC power supplies. One Power Supply is standard, the optional second Power Supply is fully redundant.

The frame ships with one or two captive power cords. A separate power cord (shipped with the frame) needs to be attached to each of the captive power cords as shown in [Figure 40](#)


Figure 40. AC Power Supplies

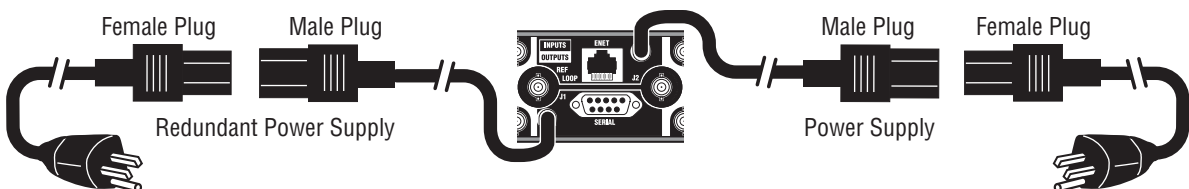

8300\_01\_42r1

A bale clamp is provided to secure the power cords.


Figure 41. Power Cord Bale Clamp

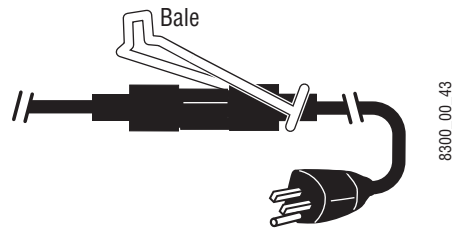

## Analog Frames

The Acappella analog frame uses external auto-ranging AC power supplies. The power supplies connect to the rear of the frame (Figure 40).

Figure 42. External Power Supplies

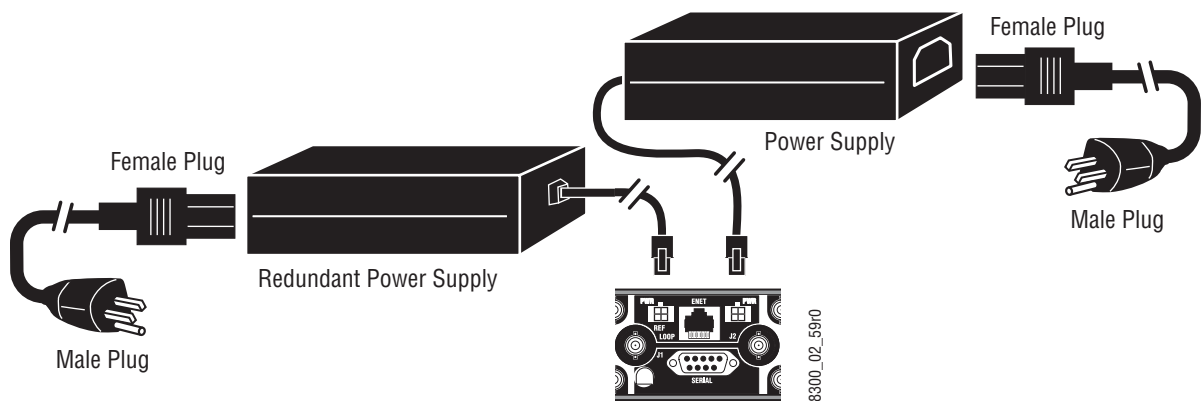

## Defaults for Plug and Play

Default Levels are determined by the router's physical configuration. A router with a physical configuration of 8x8HR-DU would have 3 default Levels; Level 1 is HD wideband reclocking serial digital Video, Level 2 is AES digital Audio 1, Level 3 is AES digital Audio 2.

The default AES digital Audio attributes are; **Audio mode: Normal, Resolution: 20 bit, and Block Align: On.** All other AES digital Audio attributes are inactive.



# Panel Operation


Local Panels and Remote panels expand the functionality of the Acappella router.

A frame that has 8 Inputs, 4 Outputs, digital video and Dual Stream digital AES audio, would have three Levels of 8 inputs and 4 Outputs as follows:

- Eight inputs and four outputs of video,
- Eight inputs and four outputs of audio, and
- A second set of eight inputs and four outputs of audio.

The On Indicators will be lit when there is power to the panel. See [Figure 1](#). Button illumination will be either Off, Backlit, Low Tally, or High Tally depending on the button's status.

Figure 1. 16x8 Local Panel Layout

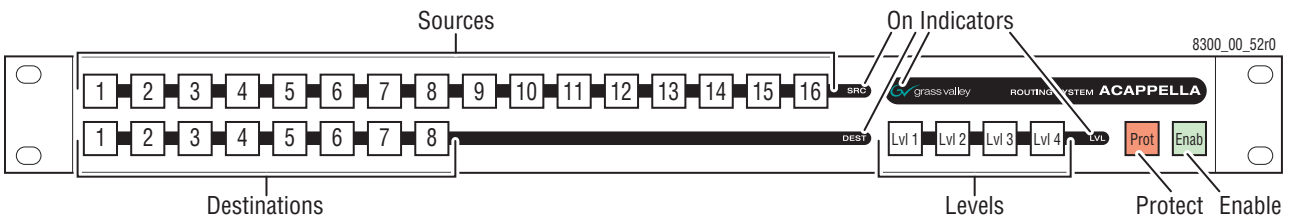

## Enable Button

The **Enable** button is green and is found on the lower right of the panel. See [Figure 1](#).

### Enable Button Action

Press and release of an active **Enable** button causes the following actions:

- Deactivates the panel,
- Inactive **Enable** button is illuminated at Backlight Tally, and
- The **Protect** and **Source** buttons do not operate.

Press and release of an inactive **Enable** button causes the following actions:

- Activates the panel, and
- Active **Enable** button is illuminated at High Tally.

Other button activity on an inactive panel (not enabled):

- Source Tally (on active Destinations) is displayed normally,
- Active Destination can be changed (by press and release of another Destination button) to view Source status on the new Destination,
- Levels can be changed to view Source status on any Level, and
- A Destination Gang preset can be created, but not Taken.

## Protect Button

No change is allowed to the current Source on a protected Destination, either by action on this panel, or by any remote device (via ethernet) action. Any device can enable or disable the Destination protection. The **Protect** button is red and is found on the lower right of the panel. See [Figure 1](#).

### Protect Button Action

Press and release of the inactive **Protect** button to activate a Protect causes the following actions:

- Active **Protect** button is illuminated at High Tally,
- Activates Protect status on the active Destinations, and
- All Destinations in a Destination Gang are protected.

Press and release of the active **Protect** button causes the following actions:

- Inactive **Protect** button is illuminated at Off Tally,
- Deactivates Protect on the active Destinations, and
- All Destinations in a Destination Gang are removed from the Protected state.



# Source Button

## Single Source Button Action

Press and release of a single **Source** button causes the following actions:

- Connects a Source to the active Destination on all active Levels,
- Tallys only the active Source at High Tally illumination intensity,
- All other Sources become inactive at Backlight Tally illumination intensity,

If a Breakaway,

- The single Source button is High Tally,
- The left most active Level button is High Tally,
- The Breakaway level is low tally, and
- Inactive Level Tally remains at Backlight intensity,

If Chop function is active (Local Panel),

- Press and release of a **Source** button inactivates the Chop, and
- Connects the Source to the active Destination,

**Note** Chop is a toggle between two Sources to a single Destination.

If Destination Gang and All Levels are active (Local Panel),

- Press and release of a **Source** button connects that Source to all Destinations in the Gang,
- All **Destination** buttons (in the Gang) are High Tally, and
- Active **All Level** button Tally is updated to High Tally,

If Destination Gang is active, but not All Levels active (Local Panel),

- Press and release of a **Source** button connects that Source to all Destinations in the Gang for only the active Levels,
- The individual **Destination** buttons (in the Gang) are either Low Tally to indicate Breakaway, or High Tally to indicate no Breakaway, and
- All active **Level** button Tally is updated to indicate either Breakaway as Low Tally, or no Breakaway as High Tally.

**Note** Chop is not available on a Remote Panel. The Chop will only be on the Local Panel and on the Local Levels output. It will not change the output of the Remote Levels in the system. However, if any Source is selected by any panel in the system it will stop the Chop.

## Multiple Source Button Action (Local Panel)

Press and release of a **Source** button while press and hold of the current **Source** button causes the following actions:

- Initiates the Chop function between two Sources on a single Destination,
- If Destination Gang is currently active, Chop will not invoke, and
- Both **Source** buttons are High Tally during active Chop function.

After Chop function is activated, press of any button will inactivate the Chop.

**Note** Chop is not available on a Remote Panel. The Chop will only be on the Local Panel even in systems that have remote levels. However, if any Source is selected by any panel in the system it will stop the Chop.

## Destination Button

### Single Destination Button Action

Single **Destination** button press and release causes the following actions:

- Activates that Destination,
- Inactivates all other Destinations,
- Active **Destination** button is High Tally,
- Inactive **Destination** buttons are Backlight Tally,
- Updates the Source Tally and active Level Tally to reflect the active Destination status,
- Inactive Level Tally remains at Backlight Tally, and
- Destination Gang is cancelled.

### Multiple Destination Button Action

Press and release of a **Destination** button while press and hold of active **Destination** button will create a Destination Gang condition with the following actions:

- A second press and release of a secondary **Destination** button (while the primary **Destination** button is still depressed) will drop or add (toggle) that Destination from the Destination Gang,

- If any Destination is currently Protected, that Destination will not be added to the Gang,

When a secondary Destination is added to the Destination Gang,

- High Tally if it is connected to the same Source (on all active Levels) as the primary Destination,
- Low Tally if it is connected to a different Source (on any active Level) as the primary Destination, and
- All active **Level** button Tally is updated to indicate either Breakaway as Low Tally, or no Breakaway as High Tally.

## Level Button

The left most enabled **Level** button is the Tally Level, it is High Tally and the Source Tally is updated to be the Source on this Level.

### Single Level Button Action

Press and release of a disabled **Level** button causes the following actions:

- Activates the Level,
- High Tally if the Source connected on that Level is the same Source as the left most Tally Level button,
- Low Tally if the Source connected on that Level is not the same Source as the left most Tally Level button


Press and release of enabled **Level** button causes the following actions:

- Inactivates that Level, and
- **Level** button is Backlight Tally.

# Multi-Level Switching

There are two modes of multi-Level switching: All-Level Takes and Breakaway Takes. All-Level Takes switch the same input number on all Levels, to the controlled Destination, as shown in [Figure 2](#).


Figure 2. Traditional All-Level Take

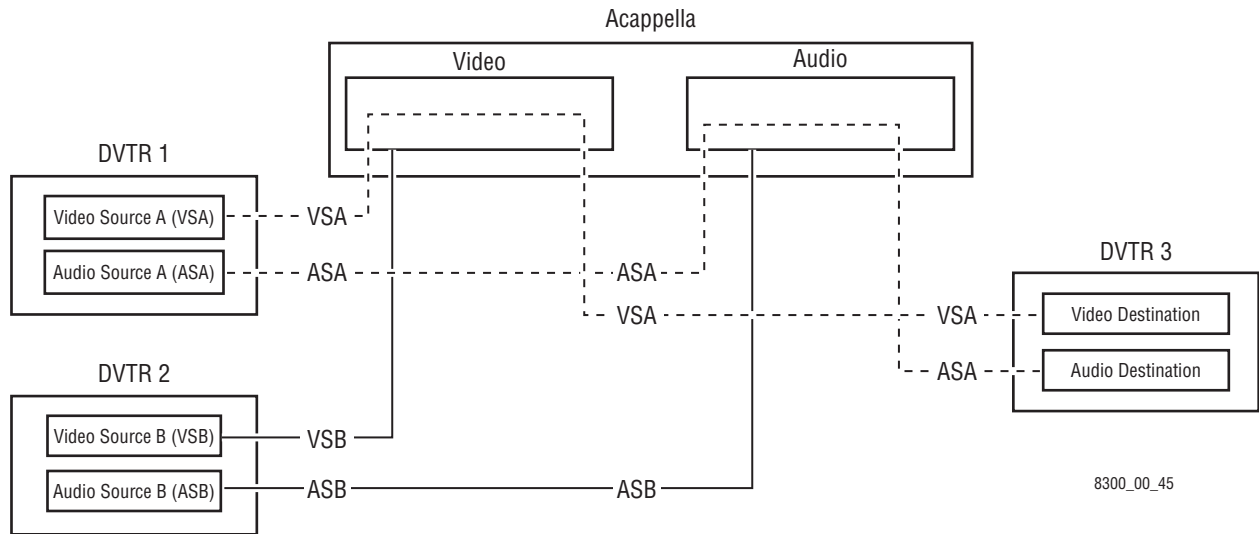

8300\_00\_45

A Breakaway Take is performed by accessing the control Levels of a Destination individually and selecting a different Source on at least one Level other than that selected on the others. Breakaways allow a Destination to selectively utilize video and audio from different Sources.

Figure 3. Breakaway Take

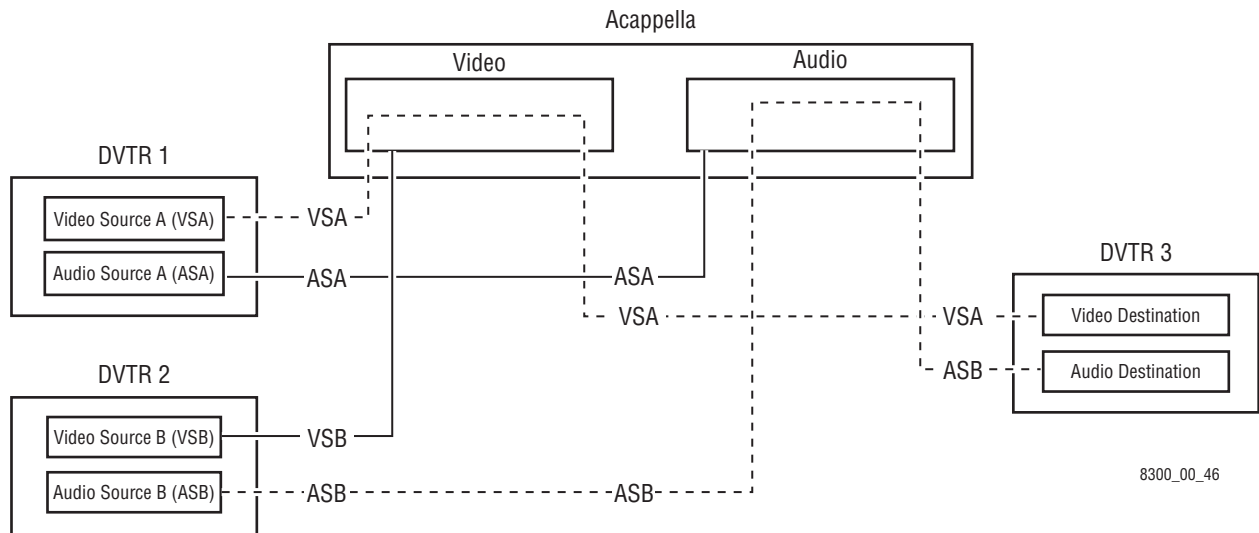

8300\_00\_46

# *Software and Configuration*

## **Network Configuration**

### **PC Requirements**

A customer supplied PC is used for software installation and initial system configuration. This PC must meet the following minimum requirements:

- 256 Mb RAM,
- 10 Mb available hard disk space,
- 100BaseT Ethernet Network Interface Card,
- Monitor with a screen resolution of 1024 x 768,
- Windows XP SP2 and above operating system,
- Logged in with Administrator-level privileges for the local machine, and
- Internet Explorer version 6.0 or later.

### **PC Network Configuration**

The PC you will use must be configured to operate on the Acappella stand-alone network. This is accomplished by setting the IP address of the PC to be compatible with the IP addresses of the Acappella system components. In general, the first three octets of the IP address must be the same, and the last IP address octet must be unique for each device on the network.

See [Table 1 on page 54](#) for a recommended IP address for your PC that will work with an Acappella system using default network settings.

The exact method used to change the IP address of a PC varies, depending on the computer's operating system. Before changing the PC's IP address you should note down the existing values so you can easily reconfigure the computer back to normal operation when finished using it with Acappella.

## Default System IP Addresses

Acappella systems ship with default IP addresses shown in [Table 1](#).

Table 1. Acappella System Default IP Addresses

Device	IP Address	Subnet Mask	Gateway
Acappella Matrix Frame	192.168.0.40	255.255.255.0	192.168.0.1
Acappella Remote Panel	192.168.0.41	255.255.255.0	192.168.0.1
User Provided PC (recommended setting)	192.168.0.1	255.255.255.0	192.168.0.1

These defaults will need to be changed, especially if your Acappella system has multiple frames and/or multiple remote panels. See [Setting IP Addresses on page 60](#) for specific instructions.

**CAUTION** Encore and Prelude control systems employ consecutive IP addresses for redundant matrix controller operation. Even though Acappella frames do not support matrix controller redundancy, if they reside on an Encore or Prelude network, the next higher IP address must be reserved and cannot be assigned to another device on the network. Serious system communications problems can occur if this next higher Acappella frame IP address is used on an Encore or Prelude network.

## Software

Acappella ships with a software CD. Several applications on the CD enable you to make adjustments to the Acappella configuration. After you have added a PC to the Acappella network, you need to install the Acappella software on the PC.


### Software Installation

The Acappella Software CD will install the Acappella Matrix software, Acappella Remote Panel software, NetConfig application (a Network Configuration Tool), NetConfig Instruction Manual, and the Acappella Instruction Manual on a PC.

1. Insert Acappella Software CD, it will autostart. If the CD does not start look for the Setup.exe file.


2. Click **Next** when the Welcome screen appears.

Figure 4. Welcome Window

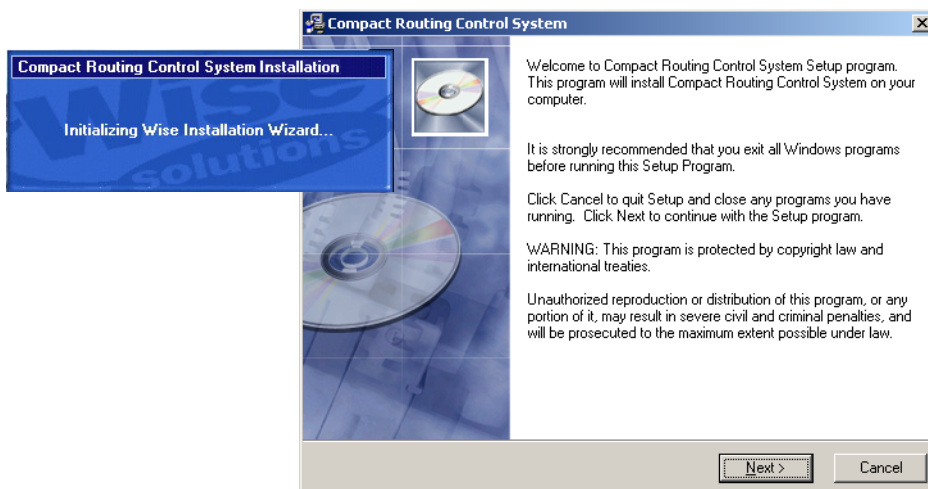


3. Select **I Agree**, then click **Next**.

Figure 5. License Windows

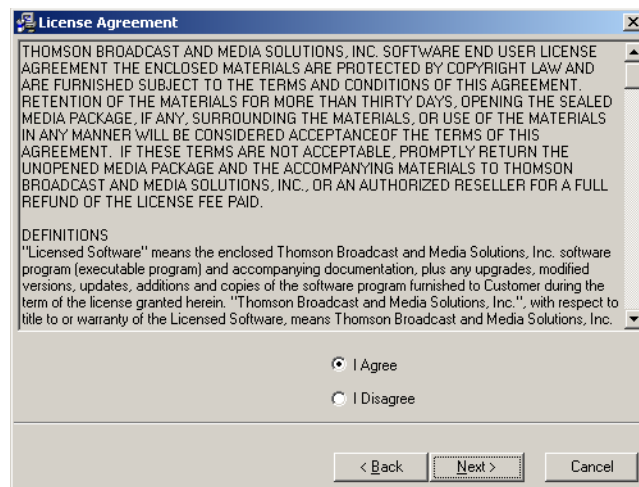


4. Click **Next** to accept the default directory or **Browse** to select a different location for the directory.

Figure 6. Directory Window

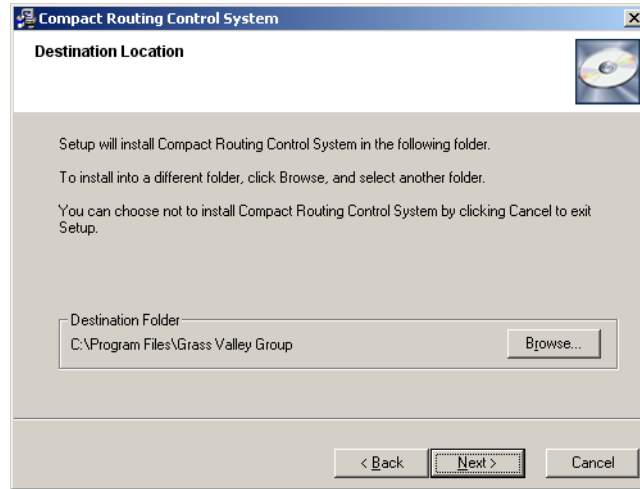

5. Click **Next** to accept all the applications or deselect any applications you don't want and then click **Next**.


Figure 7. Applications Window

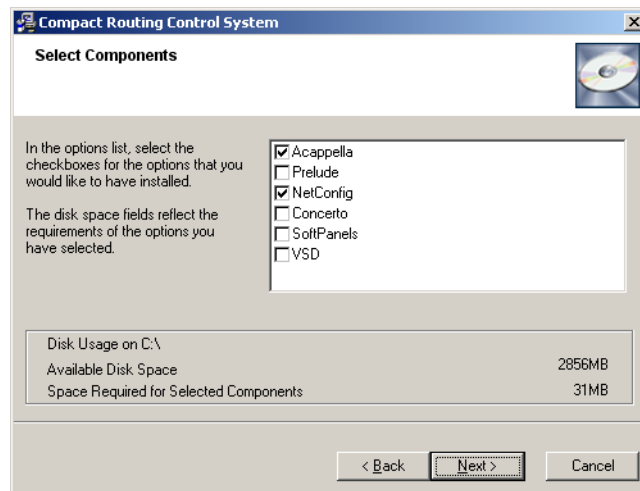




6. Click **Yes** to backup current files. This only applies to upgrading or reinstalling the software.

Figure 8. Start Installation Window

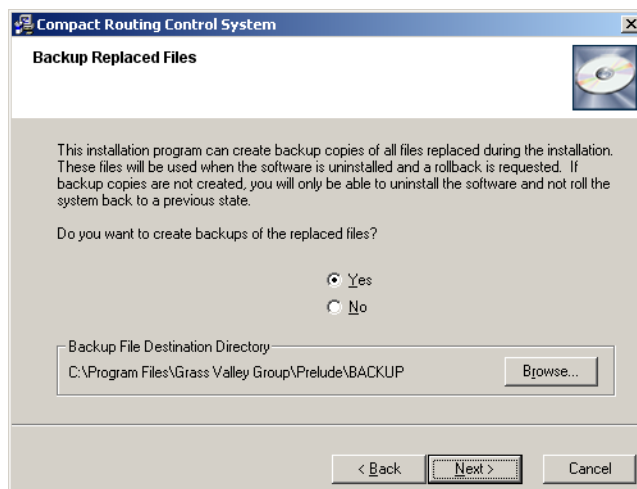


7. Click **Next** to begin the Installation.

Figure 9. Start Installation Window

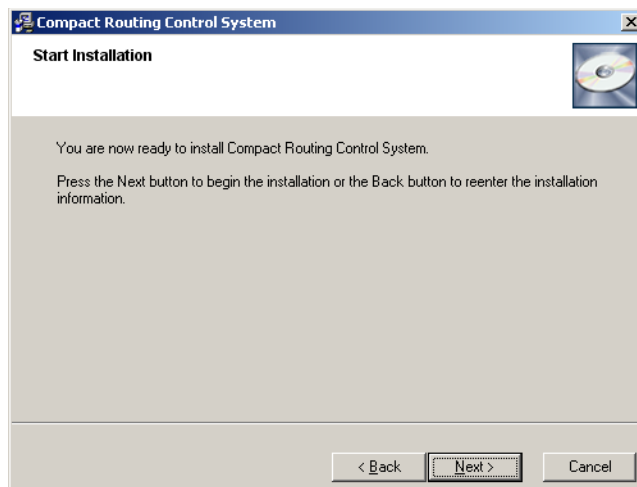


Status windows will appear while the software is loading.

Figure 10. Status Windows

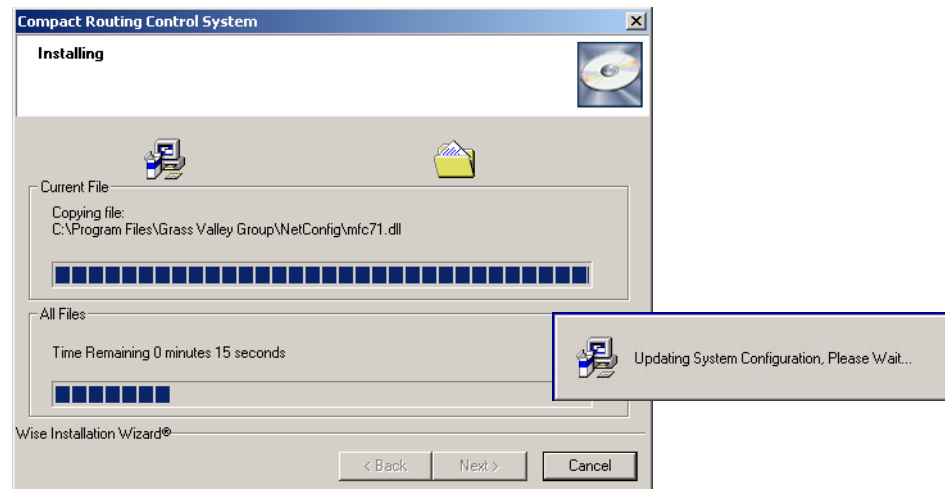

8. Click Finish to complete the Installation.


Figure 11. Finish Window

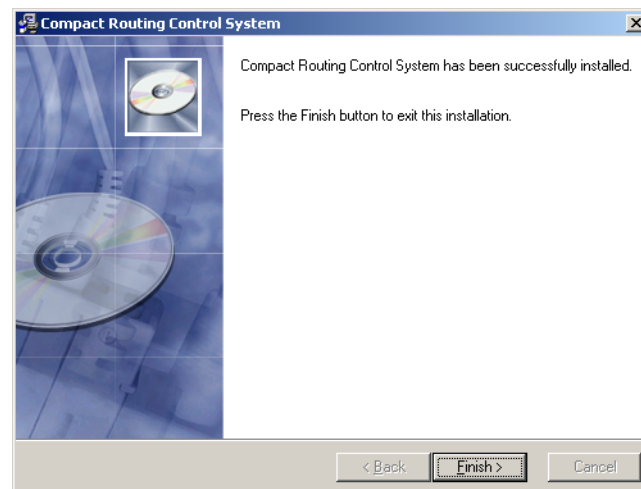

## NetConfig

The NetConfig application is designed to make network configuration simple. NetConfig discovers devices on the network, and these devices can be configured remotely using the PC on which NetConfig has been installed. NetConfig incorporates a web browser that displays web pages served by the devices on the network. NetConfig is also used for software installation to these devices.

Acappella routers are shipped with the NetConfig client installed as are many other Grass Valley products. Once the NetConfig software is installed on a PC, you will be able to view and interact with all the NetConfig client devices on the same network.




To open NetConfig find the shortcut on the PC's desktop.

The left side of the NetConfig application screen displays the logical tree of the devices on the network. The root of the logical tree is the name and the IP address of the PC on which NetConfig is running. The current status of each discovered device is reported by the color of its icon. A red dot, for example, indicates a device is no longer communicating, which might mean it has been disconnected from the network.

The right portion of the screen is the web browser view. When you click a device on the left, the home page for that device is displayed in the web browser view on the right.

In a closed network, Acappella and an Acappella Remote panel would appear as shown in [Figure 12](#).

Figure 12. NetConfig Window

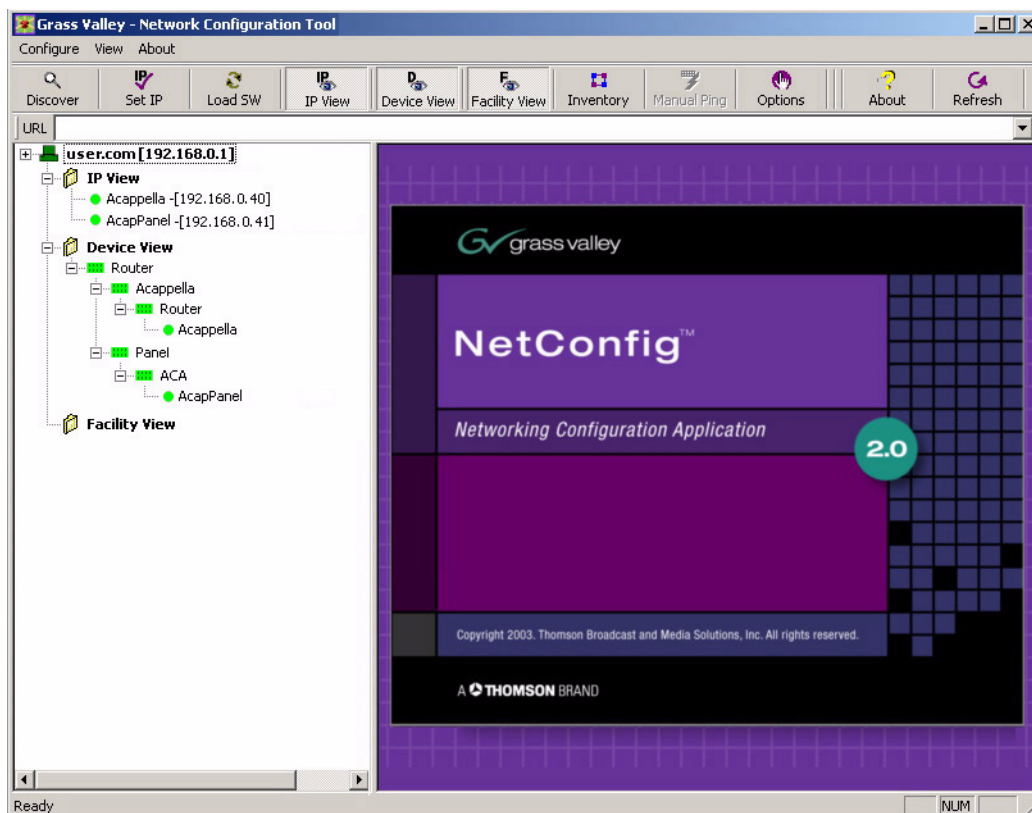

Select the device that you want to view from either the IP View or the Device View. See [Acappella Configuration Pages on page 66](#) for details.

## NetConfig Manual

A NetConfig manual .pdf file is installed onto the PC along with the NetConfig application. The manual is located in a Documentation subdirectory in the NetConfig directory.


## Setting IP Addresses

In most cases, Acappella IPs need to be changed to match your facility's network requirements. Acappella system default IP addresses must be changed, especially when the system has more than one Acappella router and/or more than one Remote Panel, since the same device types ship with the same IP addresses (see [Default System IP Addresses on page 54](#)).

**CAUTION** Encore and Prelude control systems employ consecutive IP addresses for redundant matrix controller operation. Even though Acappella frames do not support matrix controller redundancy, if they reside on an Encore or Prelude network, the next higher IP address must be reserved and cannot be assigned to another device on the network. Serious system communications problems can occur if this next higher Acappella frame IP address is used on an Encore or Prelude network.

Resolving duplicate IP addresses is easily accomplished with NetConfig. If a device is installed on the network with the same IP address as another device, when the new device is discovered a warning message will be displayed. The IP View will also show the two devices with the same address with an IP symbol as shown in [Figure 13](#). This can occur if new devices with factory default IP addresses are installed on the network.


Figure 13. Devices with Duplicate IP Addresses

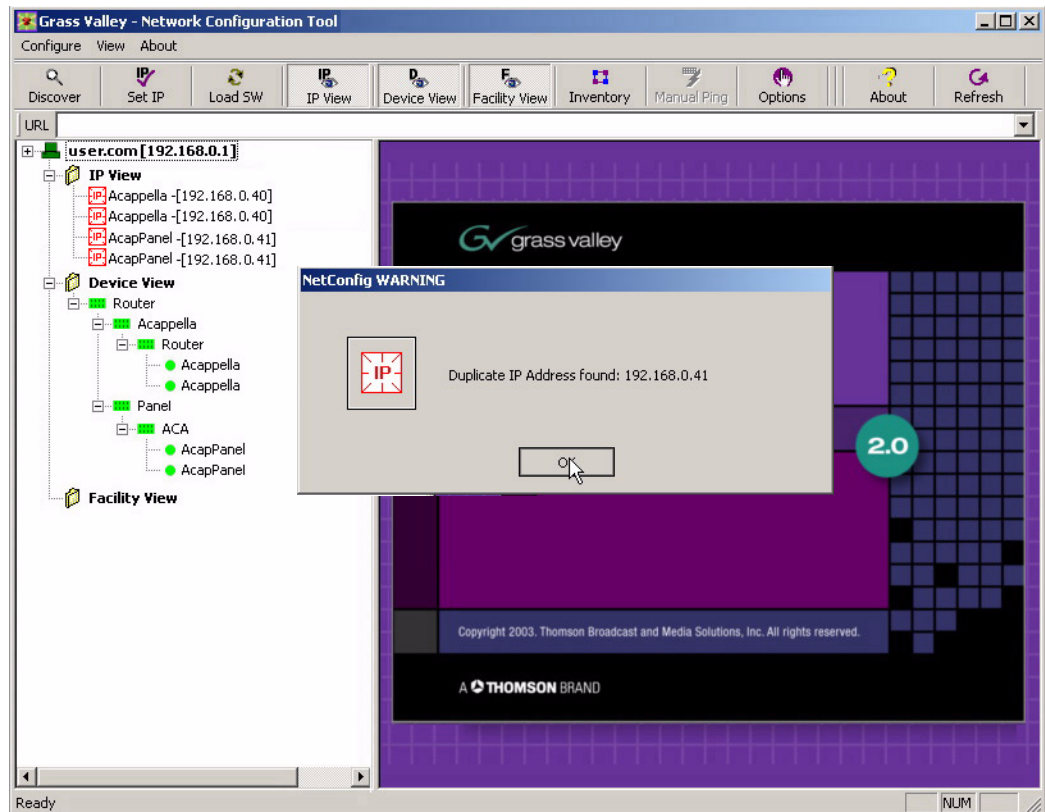

**To Resolve Duplicate IP addresses:**


1. Select the NetConfig **Set IP** icon on the toolbar or the Device IP Addresses in the Configure pull-down.

Figure 14. Set IP




- Highlight one of the devices with a duplicate IP address.

Figure 15. Duplicate IP

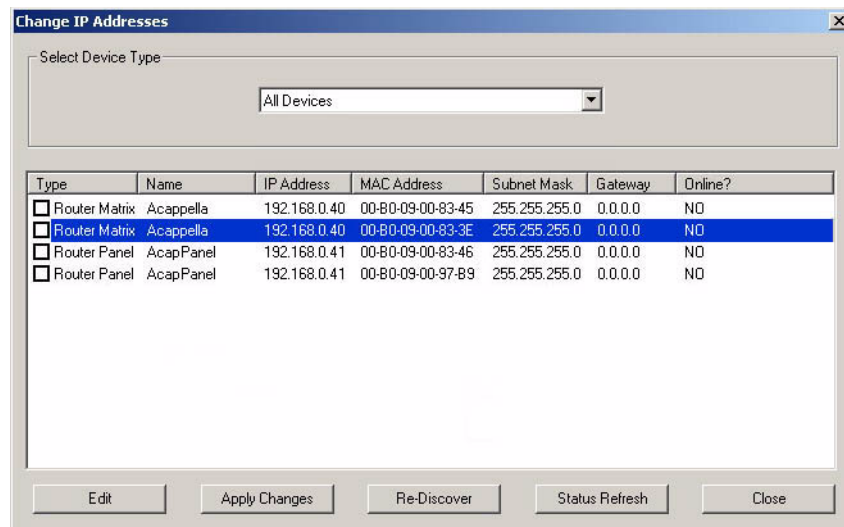


- Click **Edit**, then change the last octet of at device's IP address to be unique. The first three octets of all the IP addresses must be identical, so all the devices are on the same network.

Figure 16. Change IP

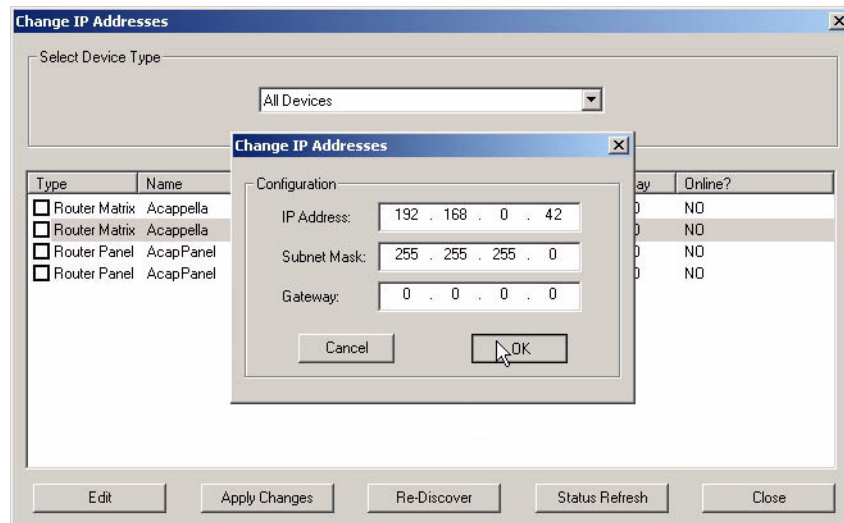

4. Click **Apply Changes**. The device resets, and the new IP address will be reported in the left pane of NetConfig screen.

Figure 17. New IP Address

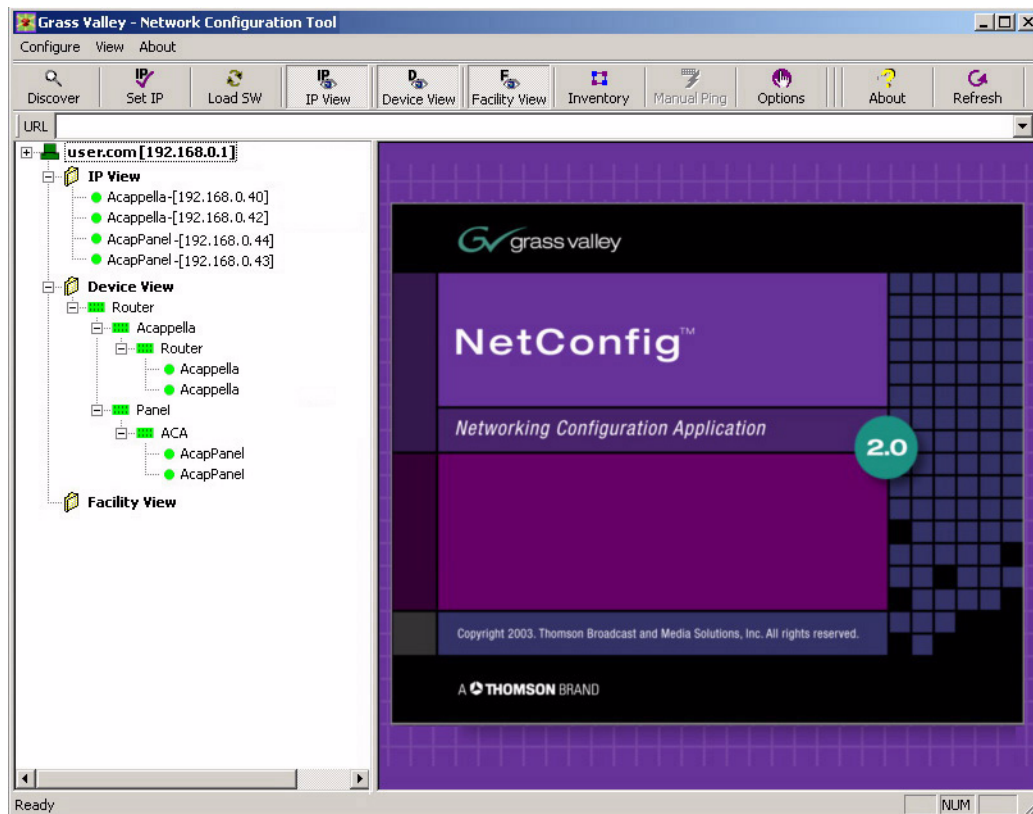


When all devices have unique IP addresses, it can be extremely helpful to label each device with its currently assigned IP address. Sticky labels that can be removed are advisable, since the IP address may be changed in the future. To identify a specific remote panel when several are connected at once, send a reset command to a panel and see which front panel buttons go off and back on.

## Load Software

Use NetConfig to load software to Acappella routers and Acappella Remote Panels.


1. Open NetConfig and select the **Load SW** button in the toolbar.

Figure 18. Load SW




2. The Load Software window will open with Router displayed. Navigate through the folders to view the latest versions of Acappella panel and matrix software available for loading, as shown in [Figure 19](#).

Figure 19. Update Devices Window

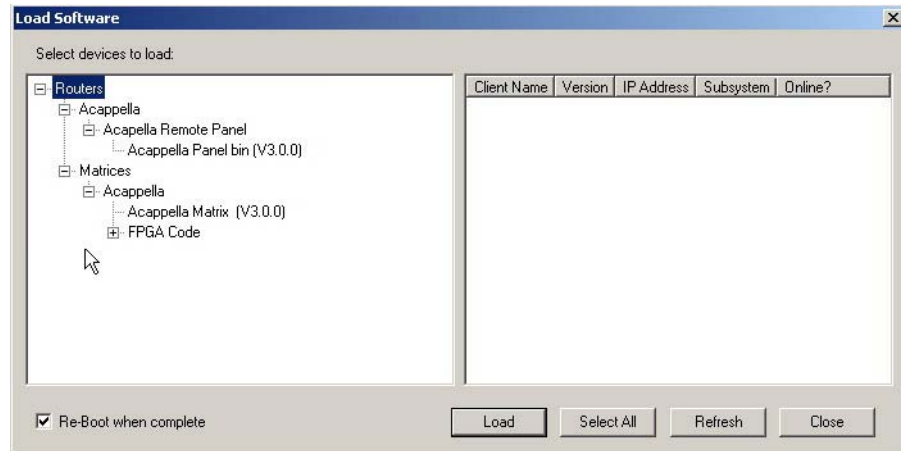

3. Highlight **Acappella Matrix** for Acappella matrices. Matrices will appear in the right pane of the window, see [Figure 20](#).

Figure 20. Acappella Matrix

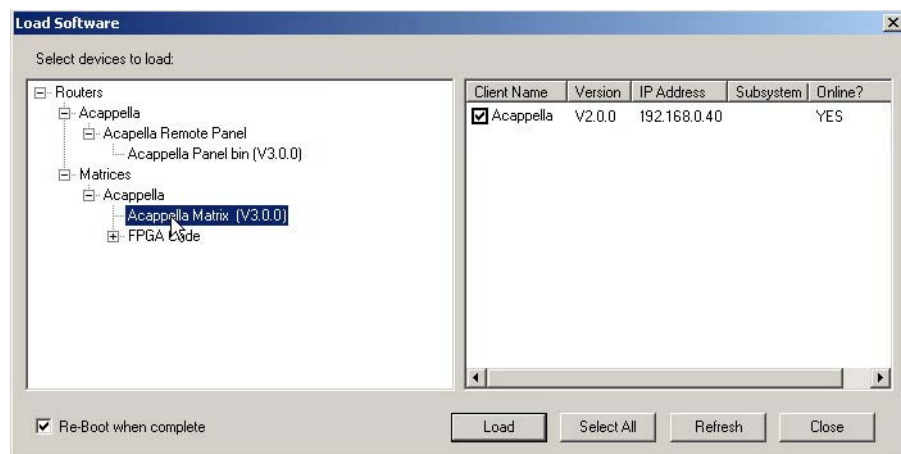


4. Check the box for the Acappella to update in the **Client Name** list.
5. Check the **Re-Boot when complete** checkbox in the lower lefthand corner to have the matrix re-boot when the software update is complete.
6. Click the **Load** button to begin the update.
7. Once all matrix downloads are complete, use the **Refresh** button to update the window and check that the version of software has been downloaded to each selected device successfully.



8. Highlight **Acappella Panel bin** for Remote Panels. The Remote Panels on the network will appear in the right pane of the window, see [Figure 21](#).

Figure 21. Remote Panels

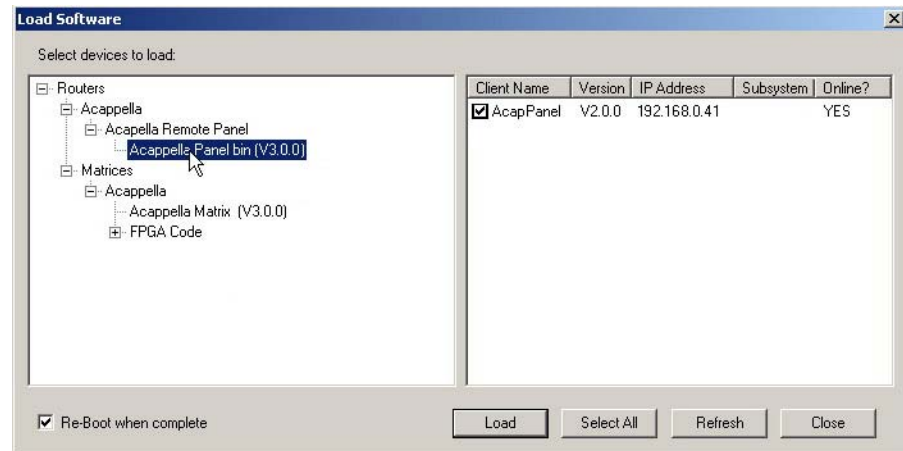

9. Check the box for the Acappella Remote Panel to update in the **Client Name** list.
10. Check the **Re-Boot when complete** checkbox in the lower left corner to have the panel(s) re-boot when the software update is complete.
11. Click the **Load** button to begin the update.
12. Once all Panel downloads are complete, use the **Refresh** button to update the window and check that the version of software has been downloaded to each selected device successfully.
13. When finished, select the **Close** button.

## Web Browser Interface

Enter the IP address set for the Acappella matrix frame or Remote panel into a web browser to access the Acappella configuration pages. If you don't know what these IP addresses are, you can use NetConfig to see the IP Addresses of all the devices on that network.

# Acappella Configuration Pages


## Router Configuration

Acappella routers use a set of web pages to provide information and to allow user defined configuration changes. The pages are accessed by either NetConfig or a web browser.

## Router Status Page

The Router Status page is a read only page. Some of the information displayed here is entered automatically such as Product Part Number, Serial Number, etc. The Location and Asset Tag can be changed on a different page. The Level, Source (SRC), and Destination (DST), Crosspoint status will reflect the current state of the router when the page was accessed. To update the Crosspoint information click on the **Refresh** button.

Figure 22. Router Status Page

**Cody\_Acap\_16x16 Router Status** 

Model: [A1616HR-AU-LP](#)  
 Description: [16x16x2 Vid-AES w/Local Panel and Redundant Power](#)  
 Location: [Bay4\\_Rack5](#)  
 Product Part Number: [610-1052-00](#)  
 Serial Number: [rbara'sQA](#)  
 Matrix PCB Number: [1-6560-00c](#)  
 Firmware Versions:

Medic	Ref	Video Matrix	Audio Matrix
001	005	003	003

Software Version: [V3.0.0b1 - Apr 01 2008 08:37:00](#)  
 Configuration Version: [V3.0.0a6](#)  
 Boot Version: [1.0.0 - 5272 acap](#)  
 Asset Tag:

**Router Crosspoint Status**

Legend: Local Remote  
Lock  
/Protect

Destination	Level 1	Level 2
	SD/HD Video	AES Stereo
DST 1	SRC 1	SRC 1
DST 2	SRC 1	SRC 1
DST 3	SRC 1	SRC 1

### Refresh Button

An refresh button icon located at the top of this and other Acappella web pages updates the web page with the latest information (Figure 22).

## Router System Configuration Page

The Router System Configuration page is used to make adjustments to the router system parameters.

Figure 23. Router System Configuration Page

**Cody\_Acap\_16x16 Router System Configuration**

Model: A1616HR-AU-LP  
 Description: 16x16x2 Vid-AES w/Local Panel and Redundant Power  
 Location: Bay4\_Rack5

**System Parameters**

Router Name:   
 Location:   
 Asset Tag:   
 Local Panel Dim Button Intensity:  Range 1 to 4 (1=low, 4=bright)  
 Serial Control Port Baud Rate:  Range 300 to 115200  
 Serial Control Port Parity:  None=0, Odd=1, Even=2  
 Serial Control Port Data Bits:  Range 7 to 8  
 Serial Control Port Stop Bits:  Range 1 to 2

**Post Save Selection - Force router reset if box checked**

Do reset

Changes to above Serial Control Port parameters will take effect only after router reset.

The first three user configuration items are optional and can be left blank:

### Router Name:

This field is used to give the router a unique name. The name entered here will appear at the top of each of the router web pages. The name will also appear in the NetConfig logical tree list under **IP View** and **Device View**. The field will accept up to 60 characters. However, it is recommended that entries be kept short to keep the name from wrapping.

### Location:

This field is used to give the router a physical location name. The location entered here will appear in the header for each of the router web pages. The field will accept up to 60 characters. However, it is recommended that entries be kept short to keep the name from wrapping.

### Asset Tag:

This field is used to track internal capital asset numbers that a user might assign to a router. The field will accept up to 20 characters.

The following two settings come from the factory with default settings. User adjustments can be made to these settings. The default settings can be restored on the [Router Factory Defaults Page](#) page.

#### **Local Panel Dim Button Intensity:**

This setting is used to adjust the button brightness at Low Tally.

#### **Serial Control Port Baud Rate:, Parity:, Data Bits:, and Stop Bits:**

These settings are used for serial interface settings for the 9 pin D connector on the router. These settings are configured according to the requirements of the controlling serial device.

The following two controls are used to change the settings:

#### **Do reset**

When checked, the router will be reset when the **Save New Settings** button is clicked.

#### **Save New Settings**

This button saves changes to the **Router Name, Location, Asset Tag, and Local Panel Dim Button Intensity** fields.

To view changes after clicking the **Save New Settings** button, click on the **Refresh** button.

## Router Network Configuration Page

Router Network Configuration page is used to change the IP Address, SubNet Mask, and Gateway IP Address, of the router.

Figure 24. Router Network Configuration Page

**Cody\_Acap\_16x16 Router Network Configuration**

[Status](#)  
[System Config](#)  
[Network Config](#)  
[Video Config](#)  
[AES Config](#)  
[Remote Config](#)  
[Reference Config](#)  
[Factory Default](#)  
[Router Applications](#)  
[Maintenance](#)

Model: [A1616HR-AU-LP](#)  
 Description: [16x16x2 Vid-AES w/Local Panel and Redundant Power](#)  
 Location: [Bay4\\_Rack5](#)

**Network Parameters**

MAC Address: [00:b0:09:00:87:fa](#)  
 IP Address:   
 SubNet Mask:   
 Gateway IP Address:   
 System Identifier:  Default  1  2  3  4  5  
 Manual Select  
 Matrix Control Port Number: [6050](#)  
 System Broadcast Select:  Use Broadcast  Use Multicast  
 Max Router Hops:

**Post Save Selection - Force router reset if box checked**

Do reset

Changes to above parameters take effect only after 'Save' operation.  
IP addresses and subnet mask take effect only after device reset.

### Setting IP Addresses with Web Page

**CAUTION** If there is more than one panel or frame in a system, duplicate IP addresses may exist. To resolve duplicate IP Addresses see [Setting IP Addresses on page 60](#).

The IP addresses of the device can be set directly from its web page by entering the new numbers in the **Ethernet IP**:, **Subnet Mask**: and **Gateway IP**: fields.

You will need to check **Do reset** and **Save New Settings** before the change will take effect.

### System Identifier:

Leave this setting to **Default** on an Acappella system running on its own network.

If your Acappella system is running on a network shared by Prelude or Encore systems, you can isolate them from one another by assigning different ports for each system. The easiest way to do this is to assign one of the System Identifier buttons (Default, 1 - 5) to all the components of the first system, and then assign a different button to all the components of the

next system. The **Matrix Control Port Number** reports the actual port that will be used by the device. For example, if you wish to run an Acappella system on the same network as an Encore system, you can choose button **1** (port 6051) for the Acappella frame and all the Acappella panels. The Encore system can continue to use the default port setting (6050).

**Note** All components on an individual system must use the same System Identifier (port) number.

Alternatively, you can assign a specific port number to a device by choosing **Manual Select**, which opens a text entry field. This feature is intended only for qualified system administrators experienced with network configuration.

### **System Broadcast Select:**

Leave this setting at **Use Broadcast** if your Acappella system has none or only a small number of remote panels (three or less).

Selecting **Use Multicast** makes this Acappella device employ a more efficient networking mechanism, useful for systems with several remote panels.

**Note** All components on an individual system must use the same Broadcast settings.

## Router Video Configuration Page (Non Frame Sync)

The Router Video Configuration page is used to set parameters on a Destination by Destination basis. This web page on Non Frame Sync Acappella systems is similar to [Figure 25](#).

Figure 25. Router Video Configuration Page

Table 2. Rates

143Mb/s	SD or Wideband
270 Mb/s	SD or Wideband
360 Mb/s	SD or Wideband
540 Mb/s	SD or Wideband
1.485 Gb/s	HD only
Bypass	Non-reclocking
Auto	Reclocking

**Note** Analog Video Acappella systems do not display a Video Configuration Page because there are no user adjustments of the analog video.

On Digital Video systems, the Router Video Configuration Page will not appear unless the Acappella router has a video level.

The default setting is **Auto**.

**Auto** reclocking will lock to a signal rate of either 143 Mb/s, 270 Mb/s, 360 Mb/s, 540 Mb/s, or 1.485 Gb/s (1.485 Gb/s is HD Wideband).

**Bypass** will pass the signal without reclocking.

Selecting a signal rate such as 270 Mb/s will cause the Output to lock to the selected signal rate. If the incoming signal is not the selected rate the Output will be put into Bypass mode. For example, if the incoming signal is 1.485 Gb/s and the reclocking rate selected is 540 Mb/s which is incor-

rect, then the signal would be in Bypass with no reclocking and the Output would report Not Locked.

After selecting a new reclocking rate, the router will try to lock the Output to that rate. It may take several seconds and clicking the **Refresh** button to see the change. [Figure 25](#) shows Bypass and Auto settings. If a signal rate such as 270 Mb/s is selected as the Reclocking Rate then the Output would show **270 Mb/s**.



## Router Video Configuration Page (With Frame Sync)

The A84HR-CLP 8x4 HD Router with Clean Switch Acappella hardware has a Router Video Configuration page similar to [Figure 26](#).

Destinations DST 1 and DST 2 are read-only fields and reported as **Auto (Default)** and the Output column is reporting the present video format detected on this output. The Frame Sync column will report if the FS-1 function is **Present** or **Not Present**. All of this information comes from the Video Frame Sync Configuration web page ([Figure 27 on page 75](#)).

**Note** Frame Sync FS-2 is not active at this time.

Figure 26. Acappella Video Config Web Page

**ACAP\_30 Router Video Configuration**

Model: A84HR-CLP  
 Description: 8x4x1 Vid w/Clean; Local Panel and Redundant Power  
 Location: Modular Lab

**Level 1 Video Outputs**

Destination	Reclocking Rate	Output	Frame Sync
DST 1	AUTO (default)	1080i (HD 50Hz)	FS-1 Present
DST 2	AUTO (default)	1080i (HD 50Hz)	<input type="button" value="Configure"/>
DST 3	<input type="text" value="Auto"/>	270 Mb/s	FS-2
DST 4	<input type="text" value="Auto"/>	1.485 Gb/s	Not Present

Select the **Configure** button in the Frame Sync column (or use the Frame Sync link under the Video Config link on the left) to access the Video Frame Sync Configuration web page (see [page 74](#)).

## Video Frame Sync Configuration Web Page (Frame Sync Systems Only)

The Video Frame Sync Configuration web page is shown in [Figure 27 on page 75](#). Use the instructions below to configure the parameters available on this page. The Output 1 and Output 2 controls are identical in operation.

### Output Rate

The Output Rate control allows you to select from three radio button choices:

- **Use Reference** – selecting this choice sets the router to use the external reference connected to the Acappella REF LOOP for the timing reference for Output 1 and Output 2. The reference input standard is reported on the Router Reference Configuration web page.
- **59.94Hz** – select this setting when you want to use the internally generated test signal at a 59.94Hz frame rate.
- **50Hz** – select this setting when you want to use the internally generated test signal at a 50Hz frame rate.

### Video Format

**Note** Before selecting your video format, make sure the frame reference input is connected and recognized by the router (see [Router Reference Configuration Page on page 88](#)).

The video format control provides a pulldown menu to select from one of the following:

- **AUTO (default)** – the video format is automatically detected by the router.
- **SD** – the video format is forced by the module to be SD video (serial digital).
- **720p** – the video format is forced by the module to be 720p video (high definition).
- **1080i** – the video format is forced by the module to be 1080i video (high definition).

**Note** When forcing the video to a specific format make sure the reference source fed to the router is compatible with this format.

Figure 27. Router Video Frame Sync Configuration Web Page

## ACAP\_30 Router Video Frame Sync Configuration

Model: [A84HR-CLP](#)

Description: [8x4x1 Vid w/Clean; Local Panel and Redundant Power](#)

Location: [Modular Lab](#)

### Frame Sync Module Configuration

Firmware Version: [V1.0.3](#)

**Output Rate:**  Use Reference  59.94Hz  50Hz

Output 1	Output 2
<p><b>STATUS</b></p> <p>Detected Source: <a href="#">1080i (HD 59.94Hz)</a></p> <p>Total Video Delay: <a href="#">60.926277</a> (msec)</p> <p><b>CONFIGURATION</b></p> <p>Video Format: <input type="text" value="AUTO (default)"/></p> <p>Test Signal Output: <input type="text" value="None"/></p> <p>Loss of Signal: <input type="text" value="Freeze"/></p> <p>Manual Freeze: <input checked="" type="radio"/> None <input type="radio"/> Frame <input type="radio"/> Field</p> <p>Audio V-Fade: <input type="radio"/> Disabled <input checked="" type="radio"/> Enabled</p> <p>Vertical Offset:</p> <p style="text-align: center;">Lines</p> <div style="text-align: center;"> <input type="button" value="&lt;&lt;"/> <input type="button" value="&lt;"/> <input type="text" value="0"/> <input type="button" value="*"/> <input type="button" value="&gt;"/> <input type="button" value="&gt;&gt;"/> </div> <div style="text-align: center;"> <input type="button" value=" &lt;"/> <input style="width: 100px;" type="text"/> <input type="button" value="&gt; "/> </div> <p style="text-align: center;">0 <span style="float: right;">1125</span></p> <p>Horizontal Offset:</p> <p style="text-align: center;">Pixels</p> <div style="text-align: center;"> <input type="button" value="&lt;&lt;"/> <input type="button" value="&lt;"/> <input type="text" value="0"/> <input type="button" value="*"/> <input type="button" value="&gt;"/> <input type="button" value="&gt;&gt;"/> </div> <div style="text-align: center;"> <input type="button" value=" &lt;"/> <input style="width: 100px;" type="text"/> <input type="button" value="&gt; "/> </div> <p style="text-align: center;">0 <span style="float: right;">2200</span></p>	<p><b>STATUS</b></p> <p>Detected Source: <a href="#">1080i (HD 59.94Hz)</a></p> <p>Total Video Delay: <a href="#">60.926277</a> (msec)</p> <p><b>CONFIGURATION</b></p> <p>Video Format: <input type="text" value="AUTO (default)"/></p> <p>Test Signal Output: <input type="text" value="None"/></p> <p>Loss of Signal: <input type="text" value="Freeze"/></p> <p>Manual Freeze: <input checked="" type="radio"/> None <input type="radio"/> Frame <input type="radio"/> Field</p> <p>Audio V-Fade: <input type="radio"/> Disabled <input checked="" type="radio"/> Enabled</p> <p>Vertical Offset:</p> <p style="text-align: center;">Lines</p> <div style="text-align: center;"> <input type="button" value="&lt;&lt;"/> <input type="button" value="&lt;"/> <input type="text" value="0"/> <input type="button" value="*"/> <input type="button" value="&gt;"/> <input type="button" value="&gt;&gt;"/> </div> <div style="text-align: center;"> <input type="button" value=" &lt;"/> <input style="width: 100px;" type="text"/> <input type="button" value="&gt; "/> </div> <p style="text-align: center;">0 <span style="float: right;">1125</span></p> <p>Horizontal Offset:</p> <p style="text-align: center;">Pixels</p> <div style="text-align: center;"> <input type="button" value="&lt;&lt;"/> <input type="button" value="&lt;"/> <input type="text" value="0"/> <input type="button" value="*"/> <input type="button" value="&gt;"/> <input type="button" value="&gt;&gt;"/> </div> <div style="text-align: center;"> <input type="button" value=" &lt;"/> <input style="width: 100px;" type="text"/> <input type="button" value="&gt; "/> </div> <p style="text-align: center;">0 <span style="float: right;">2200</span></p>

## Test Signal Output

One of two internally generated test signal outputs may be placed on the output with this control for troubleshooting and other purposes. The Output Rate of the test signal must be set as 59.94Hz or 50Hz with the Output Rate control (see [Output Rate on page 74](#)).

The Test Signal Output choices are as follows:

- **None** – no test signal placed on the output.
- **Color Bars** – a 75% color bars test signal will be placed on the output at the frame rate selected in the Output Rate control.
- **Blue Screen** – a 75% blue screen test signal will be placed on the output at the frame rate selected in the Output Rate control.

## Loss of Signal

The action of the output signal on loss of signal or sync can be selected from one of the following:

- **Freeze** – the output video will freeze on the last good video frame.
- **Pass** – when sync is lost on the input signal, the signal will continue to be passed to the output.
- **Blue Screen** – upon loss of signal the output video will freeze on the last good frame and display it for one second after which a 75% blue screen will be displayed.

## Manual Freeze

A Manual freeze can be performed by the user at any time with this control. Select one of the following to do a manual freeze:

- **None** – no manual freeze.
- **Frame** – freezes the last full frame of video (goes between Field 1 and Field 2). This is the best choice for a progressive video signal (720p).
- **Field** – the recommended setting for a moving interlaced (1080i) video freeze. Provides a cleaner image as it is not switching between fields.

**Note** The **Field** radio button will be greyed out when a progressive HD signal is present.

## Audio V-Fade

When this control is enabled, embedded audio present on the Output 1 and Output 2 video signals will be muted during a switch between the two video inputs eliminating any pops or clicks in the audio.

## **Vertical and Horizontal Offsets**

These controls allow you to adjust the vertical and horizontal offset of the frame sync reference outputs independently. The adjustment parameters for each control are given on the web page for each video format.

Before setting these controls it is important to understand that there is a relationship between these Frame Sync offset controls and the offset controls on the Router Reference Configuration web page.

The Vertical and Horizontal Offset controls on the Video Frame Sync Configuration web page have a range of zero to one frame minus one pixel. Depending on the position of the input video with respect to the reference frame start, this offset will cause the electrical delay through the frame sync to wrap around at 2 frames minus 5 lines. The full range of delay control is from one frame minus 5 lines to 2 frames minus 5 lines. With the input video aligned with the reference frame start, and zero frame sync offset, the nominal electrical delay through the sync is one frame period.

## Router AES Configuration Page

**Note** Analog Audio Acappella systems do not display an AES Configuration Page.

Figure 28. Router AES Output Configuration Page

**Cody\_Acap\_16x16 Router AES Output Configuration**

Model: A1616HR-AU-LP  
 Description: 16x16x2 Vid-AES w/Local Panel and Redundant Power  
 Location: Bay4\_Rack5

Resolution:  20 bit  24 bit

**Level 2 AES Outputs**

Destination Signals	Bypass	Audio Mode	Invert	Sum	Muting	Output Signals	Block
DST 1 Chan A Chan B	<input type="checkbox"/> Bypass	<input checked="" type="radio"/> Normal <input type="radio"/> Swap <input type="radio"/> A Only <input type="radio"/> B Only	<input type="checkbox"/> Invert	<input type="checkbox"/> Sum	<input type="checkbox"/> Mute	A B	<input type="checkbox"/> Align
			<input type="checkbox"/> Invert	<input type="checkbox"/> Sum	<input type="checkbox"/> Mute		
DST 2 Chan A Chan B	<input type="checkbox"/> Bypass	<input checked="" type="radio"/> Normal <input type="radio"/> Swap <input type="radio"/> A Only <input type="radio"/> B Only	<input type="checkbox"/> Invert	<input type="checkbox"/> Sum	<input type="checkbox"/> Mute	A B	<input type="checkbox"/> Align
			<input type="checkbox"/> Invert	<input type="checkbox"/> Sum	<input type="checkbox"/> Mute		
DST 3 Chan A Chan B	<input type="checkbox"/> Bypass	<input checked="" type="radio"/> Normal <input type="radio"/> Swap <input type="radio"/> A Only <input type="radio"/> B Only	<input type="checkbox"/> Invert	<input type="checkbox"/> Sum	<input type="checkbox"/> Mute	A B	<input type="checkbox"/> Align
			<input type="checkbox"/> Invert	<input type="checkbox"/> Sum	<input type="checkbox"/> Mute		
DST 4 Chan A Chan B	<input type="checkbox"/> Bypass	<input checked="" type="radio"/> Normal <input type="radio"/> Swap <input type="radio"/> A Only <input type="radio"/> B Only	<input type="checkbox"/> Invert	<input type="checkbox"/> Sum	<input type="checkbox"/> Mute	A B	<input type="checkbox"/> Align
			<input type="checkbox"/> Invert	<input type="checkbox"/> Sum	<input type="checkbox"/> Mute		
DST 5 Chan A Chan B	<input type="checkbox"/> Bypass	<input checked="" type="radio"/> Normal <input type="radio"/> Swap <input type="radio"/> A Only <input type="radio"/> B Only	<input type="checkbox"/> Invert	<input type="checkbox"/> Sum	<input type="checkbox"/> Mute	A B	<input type="checkbox"/> Align
			<input type="checkbox"/> Invert	<input type="checkbox"/> Sum	<input type="checkbox"/> Mute		
DST 6 Chan A Chan B	<input type="checkbox"/> Bypass	<input checked="" type="radio"/> Normal <input type="radio"/> Swap <input type="radio"/> A Only <input type="radio"/> B Only	<input type="checkbox"/> Invert	<input type="checkbox"/> Sum	<input type="checkbox"/> Mute	A B	<input type="checkbox"/> Align
			<input type="checkbox"/> Invert	<input type="checkbox"/> Sum	<input type="checkbox"/> Mute		

Several digital audio attributes may be assigned. The defaults are Resolution **20 bit**, Audio Mode **Normal** (Stereo) and Block Align **On**.

### Resolution:

This attribute determines how the signal bits are processed. A signal has 24 bits with the last four bits designated as auxiliary (AUX) bits.

In **20 bit** mode the four AUX bits pass through the router unaffected by any processing. If channels A and B are swapped, the four AUX bits stay in the same place. If the signal is muted, the four AUX bits are not muted.

In **24 bit** mode the router will treat the four AUX bits as though they are part of the audio data. If Channels A and B are swapped, the four AUX bits will swap locations. If the audio is muted, the four AUX bits will be muted.

The **Bypass** setting is used to pass an asynchronous signal. Placing a Destination signal into **Bypass** mode makes the other settings in the table disappear. Unchecking the **Bypass** setting returns the last saved settings.

Figure 29. Bypass Mode

Destination Signals	Bypass	Audio Mode	Invert	Sum	Muting	Output Signals	Block
DST 1 Chan A Chan B	<input checked="" type="checkbox"/> Bypass					A B	

Audio Mode	Invert	Output Signals
<input checked="" type="radio"/> Normal <input type="radio"/> Swap <input type="radio"/> A Only <input type="radio"/> B Only	<input type="checkbox"/> Invert <input type="checkbox"/> Invert	A B
<input type="radio"/> Normal <input checked="" type="radio"/> Swap <input type="radio"/> A Only <input type="radio"/> B Only	<input type="checkbox"/> Invert <input type="checkbox"/> Invert	B A
<input type="radio"/> Normal <input type="radio"/> Swap <input checked="" type="radio"/> A Only <input type="radio"/> B Only	<input type="checkbox"/> Mute <input type="checkbox"/> Mute	A A
<input type="radio"/> Normal <input type="radio"/> Swap <input type="radio"/> A Only <input checked="" type="radio"/> B Only	<input type="checkbox"/> Mute <input type="checkbox"/> Mute	B B

### Audio Mode

There are four variations in this mode:

- **Normal** Channel A to Channel A and Channel B to Channel B,
- **Swap** Channel A to Channel B and Channel B to Channel A,
- **A Only** Channel A to Channel A and to Channel B, and
- **B Only** Channel B to Channel A and to Channel B.

Only one of the four variations can be active.

Invert	Sum	Muting	Output Signals
<input checked="" type="checkbox"/> Invert	<input type="checkbox"/> Sum	<input type="checkbox"/> Mute	-A
<input checked="" type="checkbox"/> Invert	<input type="checkbox"/> Sum	<input type="checkbox"/> Mute	-B
<input type="checkbox"/> Invert	<input checked="" type="checkbox"/> Sum	<input type="checkbox"/> Mute	A+B
<input type="checkbox"/> Invert	<input checked="" type="checkbox"/> Sum	<input type="checkbox"/> Mute	A+B
<input checked="" type="checkbox"/> Invert	<input checked="" type="checkbox"/> Sum	<input type="checkbox"/> Mute	-A-B
<input checked="" type="checkbox"/> Invert	<input checked="" type="checkbox"/> Sum	<input type="checkbox"/> Mute	-A-B

### Invert

When a channel is inverted a - (minus sign) will appear in front of the A or B in the Output column.

### Sum

When the channels are summed both an A and a B will appear in the Output column. A + (plus sign) will appear between the two letters unless the channels are inverted.

Muting	Output Signals
<input checked="" type="checkbox"/> Mute	Muted
<input checked="" type="checkbox"/> Mute	Muted

### Mute

This attribute creates digital silence. **Mute** overrides all other settings. Removing a **Mute** restores the previously applied settings. If a Source lacking a signal is selected, the router will internally generate a synchronous silence signal to keep downstream equipment locked.

## AES Attributes Reference

The AES Attributes are illustrated here for general reference. Acappella uses Channel A for Channel 1 or Left, and Channel B for Channel 2 or Right.

Figure 30. AES Attributes

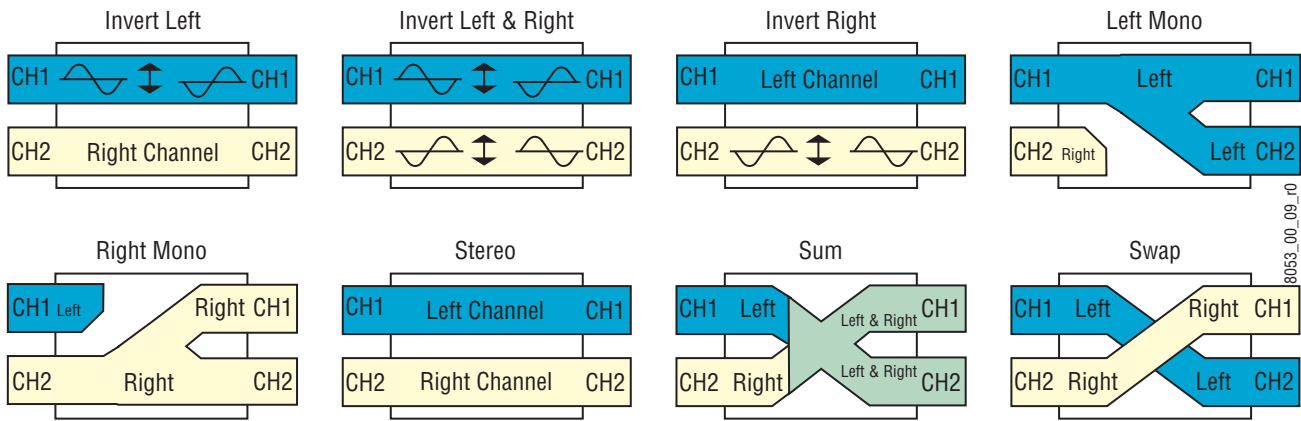



Table 3. AES Attributes

AES Attribute	Description
Invert Left	Inverts Left (Channel 1) only. Right (Channel 2) is not affected.
Invert Right	Inverts Right (Channel 2) only. Left (Channel 1) is not affected.
Right Mono	Right (Channel 2) is sent to both Channel 1 and Channel 2.
Sum	Left (Channel 1) and Right (Channel 2) are combined.

AES Attribute	Description
Invert Left & Right	Inverts Left (Channel 1) and Right (Channel 2).
Left Mono	Left (Channel 1) is sent to both Channel 1 and Channel 2.
Stereo	Neither Left (Channel 1) nor Right (Channel 2) is affected.
Swap	Left (Channel 1) and Right (Channel 2) are swapped.



Figure 31. AES Attribute Combinations

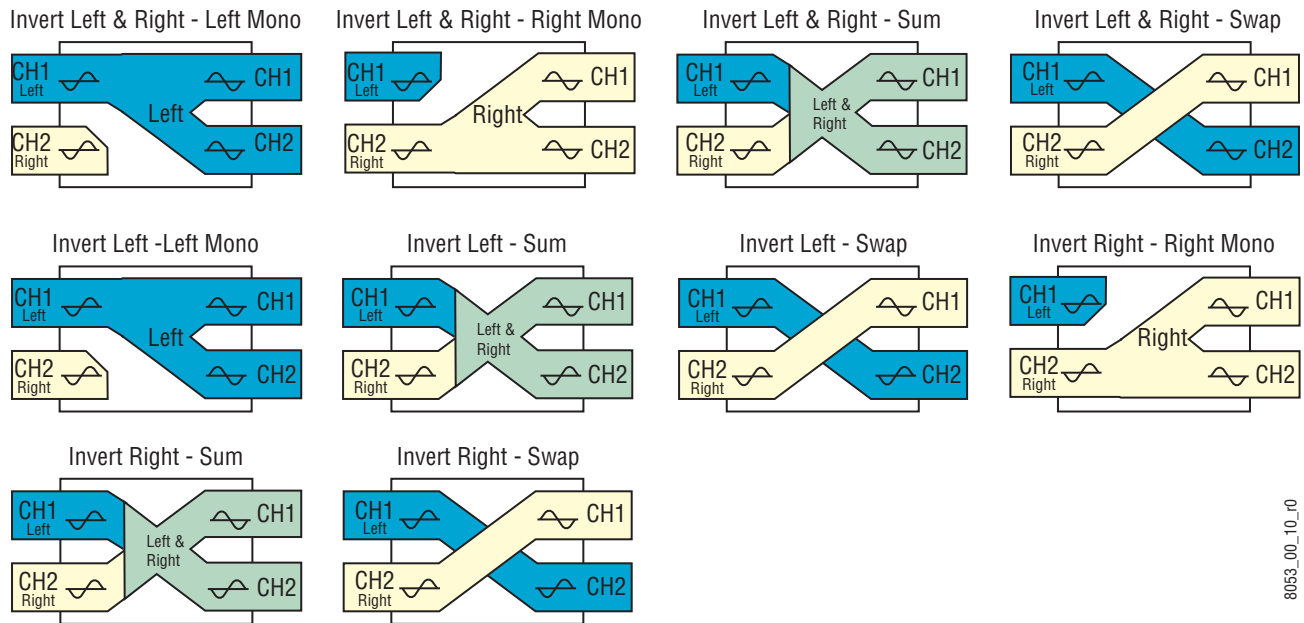

8053\_00\_10\_r0

Table 4. AES Attribute Combinations

AES Attribute Combination	Description
Invert Left & Right - Left Mono	Inverts Left (Channel 1) and Right (Channel 2) then Left (Channel 1) is sent to both Channel 1 and Channel 2.
Invert Left & Right - Right Mono	Inverts Left (Channel 1) and Right (Channel 2) then Right (Channel 2) is sent to both Channel 1 and Channel 2.
Invert Left & Right - Sum	Inverts Left (Channel 1) and Right (Channel 2) then Left (Channel 1) and Right (Channel 2) are combined.
Invert Left & Right - Swap	Inverts Left (Channel 1) and Right (Channel 2) then Left (Channel 1) and Right (Channel 2) are swapped.
Invert Left - Left Mono	Inverts Left (Channel 1) no effect on Right (Channel 2) then Left (Channel 1) is sent to both Channel 1 and Channel 2.
Invert Left - Sum	Inverts Left (Channel 1) no effect on Right (Channel 2) then Left (Channel 1) and Right (Channel 2) are combined.
Invert Left - Swap	Inverts Left (Channel 1) no effect on Right (Channel 2) then Left (Channel 1) and Right (Channel 2) are swapped.
Invert Right - Right Mono	Inverts Right (Channel 2) no effect on Left (Channel 1) then Right (Channel 2) is sent to both Channel 1 and Channel 2.
Invert Right - Sum	Inverts Right (Channel 2) no effect on Left (Channel 1) then Left (Channel 1) and Right (Channel 2) are combined.
Invert Right - Swap	Inverts Right (Channel 2) no effect on Left (Channel 1) then Left (Channel 1) and Right (Channel 2) are swapped.

## Router Remote Configuration Page

The Remote Configuration page allows you to create systems using more than one frame.

Figure 32. Local Frame with Remote Configuration Disabled

The screenshot shows the 'Acappella Router Matrix Configuration' page. On the left is a navigation menu with links: Status, System Config, Network Config, Video Config, AES Config, Remote Config, Reference Config, Factory Default, Router Applications, and Maintenance. The main content area displays: Model: A88HR-L, Description: 8x8x1 Vid w/Local Panel, Location: Studio One, and IP Address: 192.168.0.44. A 'Remote Config' section has radio buttons for 'Disabled' (selected) and 'Enabled'. Below is a 'Matrix Configuration' table:

Level / Name	Type	IP Address
1 SD/HD Video	HDVideo	192.168.0.44

The example screens in Figure 33 and Figure 34 show two frames creating a four Level system. Figure 33 shows a frame that has a single Wideband HD reclocking 8x8 Level. By combining this frame with another frame that has a single Wideband HD reclocking 8x8 Level, and two Digital Audio AES 8x8 Levels (Figure 34), you have created a four Level system with two Levels of Video and two Levels of Audio.

Figure 33. Single Level Local Frame with Three Remote Levels

The screenshot shows the 'Acappella Router Matrix Configuration' page with 'Remote Config' set to 'Enabled' and 'Number Remote Levels' set to '3'. The 'Matrix Configuration' table is as follows:

Level / Name	Type	IP Address	Disable	Move
1 SD/HD Video	HDVideo	192.168.0.44	<input type="checkbox"/>	<input type="radio"/> Down
2 REMOTE1	Acappella HD-R	192.168.0.43	<input checked="" type="checkbox"/>	<input type="radio"/> Up <input type="radio"/> Down
3 REMOTE2	Acappella SD-B	192.168.0.43	<input checked="" type="checkbox"/>	<input type="radio"/> Up <input type="radio"/> Down
4 REMOTE3	Acappella AES	192.168.0.43	<input checked="" type="checkbox"/>	<input type="radio"/> Up

A dropdown menu is open for the 'Type' of level 2, showing options: Acappella HD-R, Acappella SD-B, Acappella SD-R, Acappella AES, Acappella AES-1, and Acappella AES-2.

The order of levels in the configuration of the two frames must match. If the single Level frame is configured as Level 1, it has to be Level 1 on all frames in the system. You can create systems with up to 4 Levels. To change the order of the Levels use the Move column radio buttons.

Figure 34. Three Level Local Frame with One Remote Level

**Acappella Router Matrix Configuration**

Model: A88HR-DU-L  
 Description: 8x8x3 Vid-AES-AES w/Local Panel  
 Location: Studio One  
 IP Address: 192.168.0.43

Remote Config:  Disabled  Enabled  
 Number Remote Levels:  1

**Matrix Configuration**

Level / Name	Type	IP Address	Disable	Move
1 REMOTE1	Acappella HD-R	192.168.0.44	<input checked="" type="checkbox"/>	<input type="radio"/> Down
2 SD/HD Video	HDVideo	192.168.0.43	<input type="checkbox"/>	<input type="radio"/> Up <input type="radio"/> Down
3 AES Stereo	AESAud-2	192.168.0.43	<input type="checkbox"/>	<input type="radio"/> Up <input type="radio"/> Down
4 AES Stereo	AESAud-1	192.168.0.43	<input type="checkbox"/>	<input type="radio"/> Up

Save New Matrix Config and Reset Router      Cancel Changes

Changes to above configuration will take effect only after router reset.


### Create a Four Level HD Wideband System

This example uses four separate frames of 16x16 SD Digital Video to create a four level system.

1. Select first frame, enable 3 remote Levels on the Remote Config Web page.

- Verify IP Addresses and Type are correct for remote Levels, select **Save New Matrix Config and Reset Router**.

Figure 35. First Frame Level 1

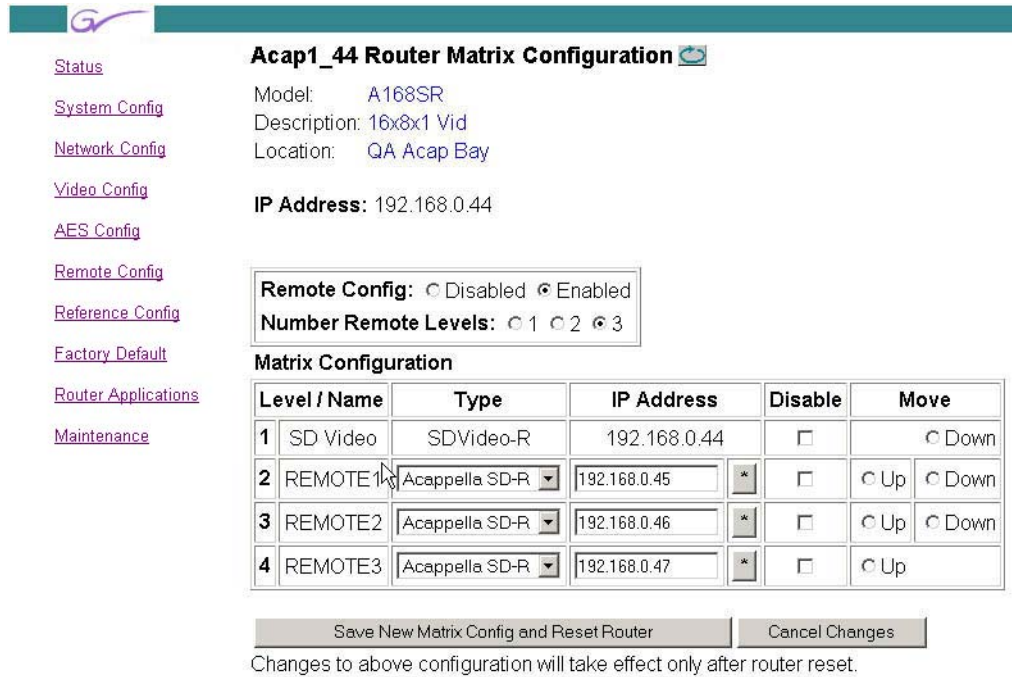

**Acap1\_44 Router Matrix Configuration**

Model: A168SR  
 Description: 16x8x1 Vid  
 Location: QA Acap Bay

IP Address: 192.168.0.44

Remote Config:  Disabled  Enabled  
 Number Remote Levels:  1  2  3

Level / Name	Type	IP Address	Disable	Move
1 SD Video	SDVideo-R	192.168.0.44	<input type="checkbox"/>	<input type="radio"/> Down
2 REMOTE1	Acappella SD-R	192.168.0.45	<input type="checkbox"/>	<input type="radio"/> Up <input type="radio"/> Down
3 REMOTE2	Acappella SD-R	192.168.0.46	<input type="checkbox"/>	<input type="radio"/> Up <input type="radio"/> Down
4 REMOTE3	Acappella SD-R	192.168.0.47	<input type="checkbox"/>	<input type="radio"/> Up

Save New Matrix Config and Reset Router    Cancel Changes

Changes to above configuration will take effect only after router reset.

- Select second frame, enable 3 remote Levels.

4. Use **Down** to move the Level to it proper place as Level 2.

**Note** To move Levels always use the **Up** and **Down** buttons, never try to reorder Levels using IP Addresses.

Figure 36. Second Frame Level 2 Move Down

**Acap2\_45 Router Matrix Configuration**

[Status](#)  
[System Config](#)  
[Network Config](#)  
[Video Config](#)  
[AES Config](#)  
[Remote Config](#)  
[Reference Config](#)  
[Factory Default](#)  
[Router Applications](#)  
[Maintenance](#)

Model: A168SR-L  
 Description: 16x8x1 Vid w/Local Panel  
 Location: Acap Rack

IP Address: 192.168.0.45

Remote Config:  Disabled  Enabled  
 Number Remote Levels:  1  2  3

**Matrix Configuration**

Level / Name	Type	IP Address	Disable	Move
1 SD Video	SDVideo-R	192.168.0.45	<input type="checkbox"/>	<input checked="" type="radio"/> Down
2 REMOTE1	Acappella SD-R	192.168.0.44	<input checked="" type="checkbox"/>	<input type="radio"/> Up <input type="radio"/> Down
3 REMOTE2	Acappella SD-R	192.168.0.46	<input checked="" type="checkbox"/>	<input type="radio"/> Up <input type="radio"/> Down
4 REMOTE3	Acappella SD-R	192.168.0.47	<input checked="" type="checkbox"/>	<input type="radio"/> Up

Figure 37. Second Frame Level 2

**Acap2\_45 Router Matrix Configuration**

[Status](#)  
[System Config](#)  
[Network Config](#)  
[Video Config](#)  
[AES Config](#)  
[Remote Config](#)  
[Reference Config](#)  
[Factory Default](#)  
[Router Applications](#)  
[Maintenance](#)

Model: A168SR-L  
 Description: 16x8x1 Vid w/Local Panel  
 Location: Acap Rack

IP Address: 192.168.0.45

Remote Config:  Disabled  Enabled  
 Number Remote Levels:  1  2  3

**Matrix Configuration**

Level / Name	Type	IP Address	Disable	Move
1 REMOTE1	Acappella SD-R	192.168.0.44	<input checked="" type="checkbox"/>	<input type="radio"/> Down
2 SD Video	SDVideo-R	192.168.0.45	<input type="checkbox"/>	<input type="radio"/> Up <input checked="" type="radio"/> Down
3 REMOTE2	Acappella SD-R	192.168.0.46	<input checked="" type="checkbox"/>	<input type="radio"/> Up <input type="radio"/> Down
4 REMOTE3	Acappella SD-R	192.168.0.47	<input checked="" type="checkbox"/>	<input type="radio"/> Up

Changes to above configuration will take effect only after router reset.

5. Verify IP Addresses and Type are correct for remote Levels, select **Save New Matrix Config and Reset Router**.

6. Select third frame, enable 3 remote Levels.

Figure 38. Third Frame Level 3

**Acap3\_46 Router Matrix Configuration**

Model: A168SR-LP  
 Description: 16x8x1 Vid w/Local Panel and Redundant Power  
 Location: Acap Rack

IP Address: 192.168.0.46

Remote Config:  Disabled  Enabled  
 Number Remote Levels:  1  2  3

**Matrix Configuration**

Level / Name	Type	IP Address	Disable	Move
1 SD Video	SDVideo-R	192.168.0.46	<input type="checkbox"/>	<input type="radio"/> Down
2 REMOTE1	Acappella SD-R	192.168.0.47	<input type="checkbox"/>	<input type="radio"/> Up

Save New Matrix Config and Reset Router    Cancel Changes

Changes to above configuration will take effect only after router reset.

7. Use **Down** to move the Level to it proper place as Level 3.

Figure 39. Third Frame Level 3 Move Down

**Acap3\_46 Router Matrix Configuration**

Model: A168SR-LP  
 Description: 16x8x1 Vid w/Local Panel and Redundant Power  
 Location: Acap Rack

IP Address: 192.168.0.46

Remote Config:  Disabled  Enabled  
 Number Remote Levels:  1  2  3

**Matrix Configuration**

Level / Name	Type	IP Address	Disable	Move
1 REMOTE1	Acappella SD-R	192.168.0.47	<input type="checkbox"/>	<input type="radio"/> Down
2 SD Video	SDVideo-R	192.168.0.46	<input type="checkbox"/>	<input type="radio"/> Up <input checked="" type="radio"/> Down
3 REMOTE2	Acappella SD-R	192.168.0.47	<input type="checkbox"/>	<input type="radio"/> Up <input type="radio"/> Down
4 REMOTE3	Acappella SD-R	192.168.0.47	<input type="checkbox"/>	<input type="radio"/> Up

Save New Matrix Config and Reset Router    Cancel Changes

Changes to above configuration will take effect only after router reset.

8. Verify IP Addresses and Type are correct for remote Levels, if not change, then select **Save New Matrix Config and Reset Router**.

Figure 40. Third Frame Level 3 After Move Down

**Acap3\_46 Router Matrix Configuration**

Status: Model: A168SR-LP  
 Description: 16x8x1 Vid w/Local Panel and Redundant Power  
 Location: Acap Rack

IP Address: 192.168.0.46

Remote Config:  Disabled  Enabled  
 Number Remote Levels:  1  2  3

**Matrix Configuration**

Level / Name	Type	IP Address	Disable	Move
1 REMOTE1	Acappella SD-R	192.168.0.44	<input type="checkbox"/>	<input type="radio"/> Down
2 REMOTE2	Acappella SD-R	192.168.0.45	<input type="checkbox"/>	<input type="radio"/> Up <input type="radio"/> Down
3 SD Video	SDVideo-R	192.168.0.46	<input type="checkbox"/>	<input type="radio"/> Up <input type="radio"/> Down
4 REMOTE3	Acappella SD-R	192.168.0.47	<input type="checkbox"/>	<input type="radio"/> Up

Save New Matrix Config and Reset Router    Cancel Changes


Changes to above configuration will take effect only after router reset.

9. Select the fourth frame, enable three remote levels on the Remote Configuration page, order the levels to match the other three frames in the system, with frame four as Level 4.

## Router Reference Configuration Page

Router Reference Configuration Page is used to make adjustments to the reference signal when the signal is out of zero time with the Source signals.

Figure 41. Router Reference Configuration Page

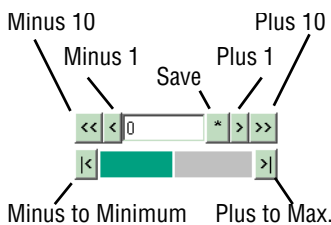

The video reference adjustments are set using the indicators as shown. The bar on the bottom of the indicator will move to the left and right to show how the current adjustment relates to the total range. There are two indicators, one for Vertical Offset and one for Horizontal Offset. With Offsets set to zero (0), switches occur with respect to reference input, as recommended in RP168-2002 for Field 1 and not for Field 2 of the input reference signal.


The default setting depends on your reference signal; NTSC is middle of line 10, PAL is middle of line 6, and Tri-Level is middle of line 7.

The Audio Reference default is to use the Video Reference. To use an AES signal as the Audio Reference select **AES Src1**. See [Reference Cabling on page 43](#) for signal cabling requirements. If AES Src 1 is selected and the signal connected to Source 1 is either not a continuous feed or is missing then **Invalid** will appear. If the signal is connected correctly and is the right type then **AES Present** will appear.



The time Server Reference needs to be enabled to get accurate frame boundary switching. In any system with more than one Acappella frame, one frame will show **State: Server** and the rest of the frames will show a **State: Client**.

Figure 42. Server and Client States

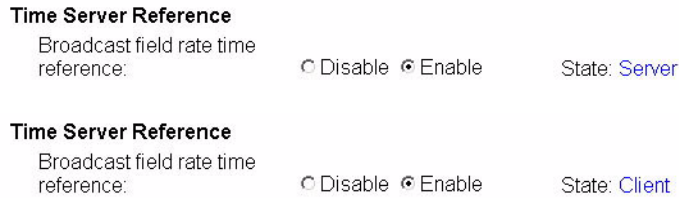

In a system with only one frame and no remote panel the State will show **Sleep**.

**Note** The only time the Time Server is not needed is if there is only one Acappella frame and no remote panels in the system, or if Acappella is being controlled by Encore.

## Router Reference and Frame Sync Settings

Horizontal and Vertical Offset settings can also be made to the video connected to the frame sync outputs on Output 1 and Output 2 on the Video Frame Sync Configuration web page ([Figure 27 on page 75](#)). With zero settings for these frame sync output offsets, each frame sync output will match the reference frame start position.

The Router Reference Configuration Vertical and Horizontal Offset settings will adjust the switch point for input video signals, and also the frame start position of both frame sync output video channels.

## Router Factory Defaults Page

Router Factory Defaults page shows the settings for the items that have factory defaults. To restore the listed settings to the factory defaults click on the **Restore Defaults** button.<sup>55</sup>

Figure 43. Router Factory Defaults

**Acap1\_44 Router Factory Defaults**

[Status](#) Model: [A168HR-AU](#)  
[System Config](#) Description: [16x8x2 Vid-AES](#)  
[Network Config](#) Location: [QA Acap Bay](#)  
[Video Config](#)  
[AES Config](#)  
[Remote Config](#)  
[Reference Config](#)  
[Factory Default](#)  
[Router Applications](#)  
[Maintenance](#)

**Restore Factory Operational Defaults**  
 Does not change Router Name, Location, Asset Tag or Network Configuration

**Factory Operational Defaults listed below:**  
 Local Panel Dim Button Intensity: [2](#)  
 Serial Control Port Baud Rate: [38400](#)  
 Serial Control Port Parity: [0](#)  
 Serial Control Port Data Bits: [8](#)  
 Serial Control Port Stop Bits: [1](#)  
 Time Server Reference: [Enabled](#)

**Restore Factory Signal Path Attribute Defaults**

**Factory Signal Path Attribute Defaults listed below:**  
 Level 1 Digital Video is set to [Reclock, Auto](#)  
 Level 2 Digital Audio is set to [Normal= \(Block Align, No Bypass, No Invert, No Sum, No Mute\)](#)

**Restore All Video Reference Offset Defaults**


**Factory Reference Offset Defaults listed below:**  
 Video Reference  
     Vertical Offset = [0](#) Reference Lines  
     Horizontal Offset = [0.0](#) microseconds  
 Audio Reference  
     AES Reference = [Video](#)

**Restore Remote Config to Local Default**  
 Does not change any remote equipment

## Acap Router Applications Page

The Acap Router Applications page shows the Device ID of the matrix, and permits entering License Key information for the SNMP option (Figure 44).


Figure 44. Acap Router Applications

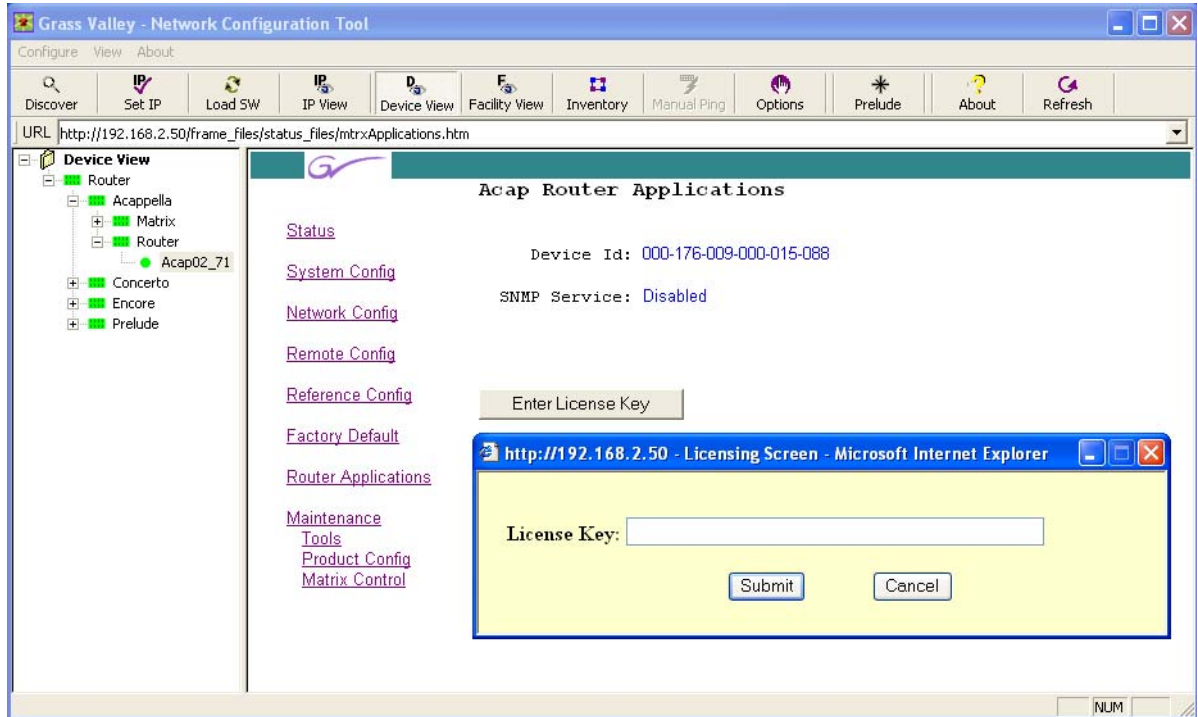

## Maintenance Page

The System Maintenance pages are intended only for use by factory engineers for testing and troubleshooting (Figure 45).

Figure 45. Maintenance Pages

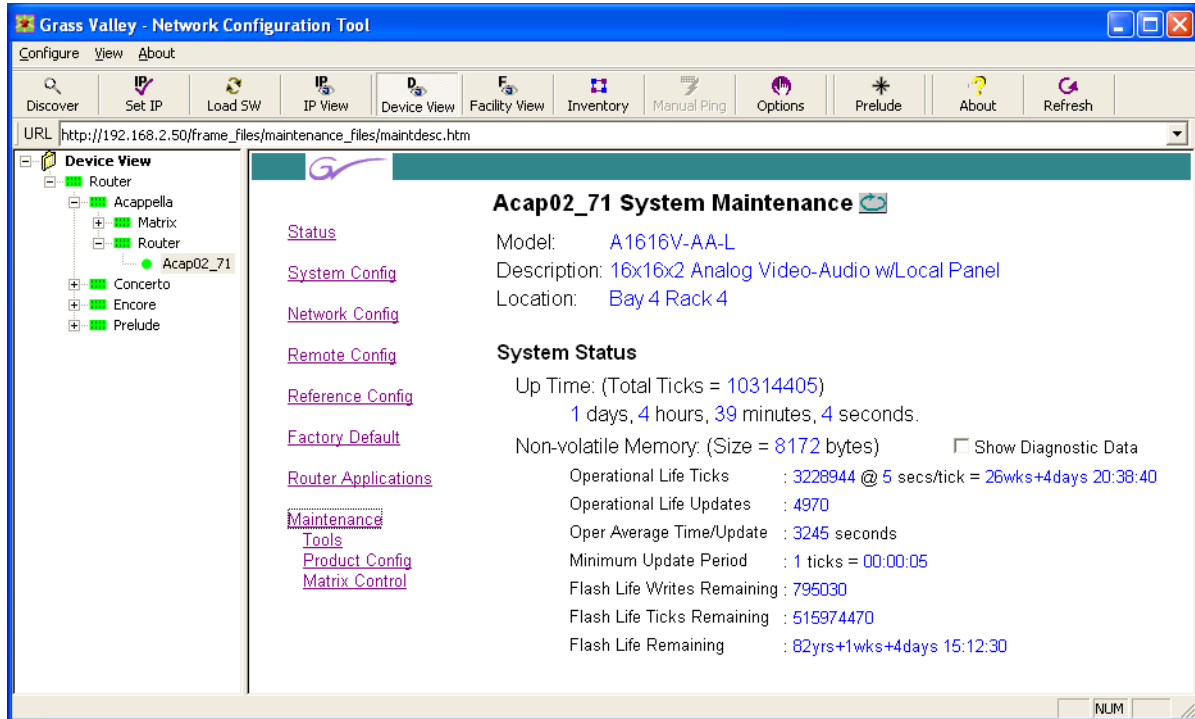

# Remote Panel Configuration

## Panel Description Page

Panel Description page is a read only page. All of the information displayed here is entered automatically except the Panel Device Name which is entered on a different page.

Figure 46. Remote Panel Description Page

**Product Web Access**

**Panel Description**

[Panel Description](#)

[Panel System](#)

[Panel Network](#)

[Factory Default](#)

[Acapella Dest Settings](#)

[Router Control Settings](#)

Panel System: Acappella  
 Panel Device Name: Acappella Remote Panel  
 Panel Type: 50 Type Name: ACA  
 Panel Programmed Type: 0

Current Panel Connect to Router Server Status: Server Comm OK

Panel Ethernet MAC address: 00:b0:09:00:8c:86

Panel Application Software Version: V1.0.0d12 - Feb 03 13:06:00 2005  
 Panel Boot Software Version: 1.0.0 - 5272 panel

Panel Hardware Information  
 Controller Module Description:  
 10/100BaseT ethernet  
 Ether/F 671-6463-00X1 mods

Switch PCB Module Description:  
 Switch PCB 671-xxxx-00 no info

This is a read only page, however, the above "Panel Device Name" can be revised on the following pages. Change of Panel Device Name will reset panel, and connect again with revised Name.

## Remote Panel System Configuration

Panel System Configuration page is used to make adjustments to the Remote Panel.

Figure 47. Remote Panel System Configuration Page

**Panel System Configuration** Refresh

[Panel Description](#)

[Panel System](#)

[Panel Network](#)

[Factory Default](#)

[Acappella Dest Config](#)

[Router Control Config](#)

[Maintenance](#)

Panel Device Name:

Panel Background Button Intensity:  Range 0 to 9 (0=off, 1=low, 9=bright)

Panel Dim Button Intensity:  Range 1 to 9 (1=low, 9=bright)

Panel Display Intensity:  Range 1 to 7 (1=low, 7=bright)

Panel Console Baud Rate:  Range 9600 to 115200 (parity=none,databits=8,stopbits=1)

Asset Tag:

Location :

**Post Save Selection - Force panel reset if box checked**

Needed if Baud Rate changed - Intensity changes do not need panel reset  
**Caution: Will force panel to reset, and then resume using new settings.**

Do reset

### Panel Device Name:

The panel device name field is optional. This field is used to give the remote Panel a unique name. The name entered here will appear at the top of each of the Remote Panel pages. The name will also appear in the NetConfig logical tree list. The field will accept up to 60 characters. However, it is recommended that entries be kept short to keep the name from wrapping.

### Asset Tag:

This field is used to track internal capital asset numbers that a user might assign to a remote panel. The field will accept up to 20 characters.

### Location:

This field is used to give the remote panel a physical location name. The location entered here will appear in the header for each of the remote panel web pages. The field will accept up to 60 characters. However, it is recommended that entries be kept short to keep the name from wrapping.

The following settings come from the factory with default settings. User adjustments can be made to these settings. The default settings can be restored on the [Remote Panel Network Configuration](#) page.

**Panel Background Button Intensity:**

This setting is used to adjust the button background brightness. This is primarily used to illuminate the panel so the buttons can be seen in a dark environment.

**Panel Dim Button Intensity:**

This setting is used to adjust the button brightness at Low Tally.

**Panel Display Intensity:**

This setting is not used.

**Panel Console Baud Rate:**

This setting is used to adjust the Baud rate.

**Save New Settings**

This button saves changes to the **Router Name**, **Local Panel Dim Button Intensity**, **Panel Display Intensity**, and **Panel Console Baud Rate** fields (reset is required to save Baud Rate changes). To view changes after clicking the **Save New Settings** button, click on the **Refresh** button.

**Note** Intensity changes do not need panel reset, changes are saved by pressing **Enter**.

## Remote Panel Network Configuration

The Panel Network Configuration page is used to change the IP Address, SubNet Mask, Gateway IP Address, and Ethernet Port for the panel.

Figure 48. Remote Panel Network Configuration Page

### Setting IP Addresses with Web Page

**CAUTION** If there is more than one panel or frame in a system, duplicate IP addresses may exist. To resolve duplicate IP Addresses see [Setting IP Addresses on page 60](#).

The IP addresses of the device can be set directly from its web page by entering the new numbers in the **Ethernet IP:**, **Subnet Mask:** and **Gateway IP:** fields.

You will need to check **Do reset** and **Save New Settings** before the change will take effect.

### NetConfig Device ID Setting:

These buttons report the current identity of the control panel. Leave this setting on **Acappella** for use with an Acappella system.



### System Identifier:

Leave this setting to **Default** on an Acappella system running on its own network.

If your Acappella system is running on a network shared by Prelude or Encore systems, you can isolate them from one another by assigning different ports for each system, using the System Identifier buttons. See [System Identifier: on page 69](#) for an explanation of this feature.

**Note** All components on an individual system must use the same System Identifier (port) number.

### System Broadcast Select:

Leave this setting at **Use Broadcast** if your Acappella system has none or only a small number of remote panels (three or less).

Selecting **Use Multicast** makes this Acappella device employ a more efficient networking mechanism, useful for systems with several remote panels.

**Note** All components on an individual system must use the same Broadcast settings.


## Saving Settings

You must select **Do Reset** and click on **Save New Settings** before any changes made to this page will take effect. Remember that all components of a specific system must have the same port settings, so if you change this you must change all the others components to match.

## Remote Panel Factory Defaults

Panel Factory Defaults page displays the factory default settings. This is a read only page.

Figure 49. Remote Panel Factory Defaults Page

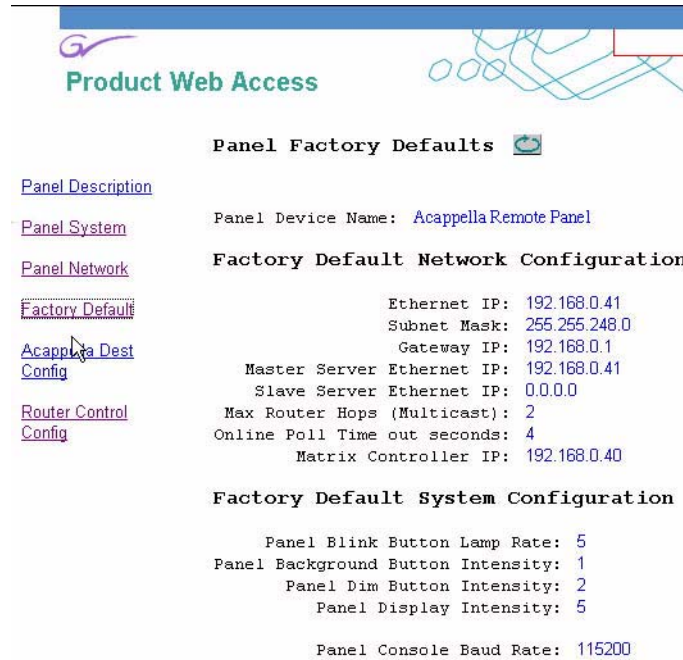

## Remote Panel Acappella Destination Configuration

Destination Configuration page is used to assign physical connector to specified Destination button. A reset is required for reassignments to take effect.

Figure 50. Remote Panel Destination Configuration Page

**Acappella Destination Configuration**

Panel Device Name: [Acappella Remote Panel](#)

Remote Panel Dest Map: Range 0 to 16 (0 indicates a disabled button)

Dest Button 1:	7
Dest Button 2:	2
Dest Button 3:	3
Dest Button 4:	4
Dest Button 5:	5
Dest Button 6:	6
Dest Button 7:	15
Dest Button 8:	8
Dest Button 9:	9
Dest Button 10:	10
Dest Button 11:	11
Dest Button 12:	12
Dest Button 13:	13
Dest Button 14:	14
Dest Button 15:	0
Dest Button 16:	1

**Post Save Selection - Force panel reset if box checked**

Caution: Will force panel to reset, and then resume using new panel destination settings

Do reset

## Remote Panel Router Configuration

This Router Configuration page is used to select Levels to be used by the Remote Panel.

Figure 51. Router Configuration Type

**Router Control Configuration**

Panel Device Name: [Acappella Remote Panel](#)

**Matrix Level Control Configuration**

Level	Type	IP Address		Disable
1	Acappella HD-R	192.168.0.44	*	<input type="checkbox"/>
2	Acappella HD-R	192.168.0.43	*	<input type="checkbox"/>
3	Acappella HD-R Acappella SD-B Acappella SD-R	192.168.0.40	*	<input type="checkbox"/>
4	Acappella AES Acappella AES-1 Acappella AES-2	192.168.0.42	*	<input type="checkbox"/>

**Post Save Selection - Force panel reset if box checked**

Caution: Will force panel to reset, and then resume using new control settings.

Do reset

Select the Acappella Router Level type from the dropdown menu (Table 5) and enter the IP Address of the router.

Table 5. Level Types

Acappella HD-R	HD Wideband Digital Video Reclocking
Acappella SD-R	SD Digital Video Reclocking
Acappella SD-B	SD Digital Video Non-reclocking
Acappella AES	AES/EBU Digital Audio
Acappella AES-1	AES/EBU Digital Audio Dual Stream 1
Acappella AES-2	AES/EBU Digital Audio Dual Stream 2

Check **Do reset** and click **Save New Settings** to apply selection.

Remote panels can use Levels from any Acappella frame in the system.

To use fewer than four Levels select the Disable box for the Level. See [Figure 52](#).

Figure 52. Router Configuration Type

**Router Control Configuration**

Panel Device Name: [Acappella Remote Panel](#)

**Matrix Level Control Configuration**

Level	Type	IP Address	Disable
1	Acappella HD-R	192.168.0.44	<input type="checkbox"/>
2	Acappella HD-R	192.168.0.43	<input type="checkbox"/>
3	Disabled		<input checked="" type="checkbox"/>
4	Acappella HD-R	192.168.0.42	<input type="checkbox"/>

Post Save Selection - Force panel reset if box checked

Caution: Will force panel to reset, and then resume using new control settings.

Do reset

Save New Settings      Cancel Changes

## External System Control of Acappella

### Serial Control

An Acappella router can be controlled using the 9 pin RS-422 D connector on the rear of the router. Acappella supports the Terminal/Computer Interface (T/CI) protocol that employs synchronous serial ASCII commands.

Commands may be issued to control the router by either an operator entering commands manually (using a terminal interface like hyperterminal), or by an automation or other external system. This connection is point-to-point; a cable from the serial connector on the Acappella router to the command Input device.

**Note** Refer to the latest version of the *Routing Products Protocols Manual* for information about the Terminal/Computer Interface (T/CI) Protocol used to control Acappella systems. This manual is available for download on the Grass Valley web site (see [page 4](#)).

## Encore Control

### Acappella Matrix

An Acappella matrix can be controlled directly by an Encore system. The Acappella matrix is treated the same as other matrices (Concerto for example) and communicates via Ethernet.

An Acappella matrix is configured for control by Encore using the same procedures as other matrix types. However, each Acappella frame can be configured with only one video level and one audio level. Multiple video or audio levels (up to four each) require multiple Acappella frames.

### Control Panels

Acappella, Encore, and MS7000 remote panels used to control Acappella matrices through the Encore system are configured the same as panels controlling other matrix types. If you use Acappella remote panels to control multiple frame Acappella matrices (multiple levels), you will also need to use Acappella frame web pages for configuration (see [Remote Panel Router Configuration on page 100](#)).

## Indigo AV Mixer HD Expansion

Refer to the separate Indigo AV Mixer documentation set for information about installation and operation of the Acappella A84HR-CLP Router with the Indigo system. Specific Acappella system settings for this use are included here for user convenience.

## Router Reference Configuration

The Vertical and Horizontal Offset controls on the Router Reference Configuration web page should be set to specific values when using the input reference from an Indigo AV Mixer.

The setting will depend on the router Reference Input Standard (525 NTSC or 625 PAL) reported on the Router Reference Configuration web page and the video source format on Output 1 and Output 2 you intend to use. The vertical and horizontal offset values for each Reference Input Standard and Output 1 and Output 2 video source format are given below.

### 525 NTSC Reference

- 1080i 59.94: **Vertical Offset:** 0 lines, **Horizontal Offset:** -1.5 microseconds
- 720p 59.94: **Vertical Offset:** 0 Lines, **Horizontal Offset:** -1.5 microseconds
- SD NTSC 59.94: **Vertical Offset:** 0 Lines, **Horizontal Offset:** -0.3 microseconds

## 625 PAL Reference

- 1080i 50: **Vertical Offset:** -2 lines, **Horizontal Offset:** +4.1 microseconds
- 720p 50: **Vertical Offset:** -3 Lines, **Horizontal Offset:** -16.6 microseconds
- SD PAL 50: **Vertical Offset:** -2 Lines, **Horizontal Offset:** +5 microseconds

## Router Video Configuration

For Acappella router operation as an input expansion option with the Indigo AV Mixer, set the CONFIGURATION parameters on the Video Frame Sync Configuration web page to the following:

- Output Rate: **Use Reference**
- Video Format: **AUTO (default)**

**Note** Before setting this Video Format pulldown, make sure the reference from the Indigo AV Mixer is connected to the router REF LOOP BNC and recognized on the Router Reference Configuration web page. The router must see the reference first before assigning the video standard or no video may appear on the output.

- Test Signal Output: **None**
- Loss of Signal: **Freeze**
- Manual Freeze: **None**
- Audio V-Fade: **Disabled**
- Vertical Offset: **0 Lines**
- Horizontal Offset: **0 Pixels**





# *Maintenance and Troubleshooting*

## **Field Replaceable Units**

Acappella frames are not serviced in the field. Return faulty units to a designated repair depot. See *Contacting Grass Valley* [on page 4](#).

## **Troubleshooting**

### **Check Connections**

- Connections should be tight and electrically sound
- Cables should be checked for damage

### **Check Inputs**

- AC power connections,
- Signal input (video, audio) must be present and within specifications,
- Cable length should be within recommended limits,
- Reference Signal must be present, within specifications, and must not be electrically noisy, and
- Input Video Signals are required to be zero timed for proper switch point.

# Problems and Solutions

## Switching Problems

### Switching Latency

All crosspoints involved in a Take do not switch in the same vertical interval. This can be caused by noisy or missing VI Reference signal and/or incorrect timing on the Input signals. All Input Video signals are required to be zero timed. Digital Audio signals are automatically phased to the Reference signal.

If using a remote panel, check that the Time Server Reference setting is enabled on the Router Reference Configuration web page.

## SNMP Monitoring

Acappella supports the Simple Network Management Protocol (SNMP) for system monitoring. SNMP Agents reside on the monitored equipment, and SNMP monitoring software residing on a PC communicate to accomplish the system monitoring.

SNMP messages originating from Thomson Grass Valley equipment conform to the following standards:

- 1157 - SNMP v1
- 1901-1907 - SNMP v2c
- 3416 - Protocol Operations for SNMPv2
- MIB-II - (SysGroup and SNMP Group only)

## SNMP Managers

**Note** Customers using the Thomson Grass Valley NetCentral application receive the required Management Information Bases (MIBs) with the NetCentral software. Customers using a Third Party SNMP Manager should contact Customer Service for instructions on obtaining MIBs.

### NetCentral SNMP Manager

The Thomson Grass Valley NetCentral system is a suite of software modules, residing on one or more centrally located PC-compatible computers. These modules work together to monitor and report the operational status

of devices using Simple Network Management Protocol (SNMP). The Net-Central product is sold separately.

Acappella SNMP Software supports the following MIBs:

- Thomson Common Matrix MIB
- GVG-Acappella MIB
- GVG-Element MIB

### **Third Party SNMP Managers**


Other industry standard Third Party SNMP Managers can monitor Acappella matrices. For their installation & configuration, please contact your SNMP Manager Software vendor.

### **Acappella SNMP Agent Licensing**

The Acappella SNMP Agent is an optional component. A License Key is needed to activate the SNMP Agent. Each license key is valid for an individual Acappella matrix, and is generated based on the Device ID of that matrix. The license is purchased from Thomson Grass Valley sales, and the license key is obtained from Customer Support by providing them the Device ID(s) and purchase confirmation.

The Acappella Device ID is displayed on the Acap Router Application web page. Clicking on the **Enter License Key** button opens a window allowing entry of the license key (Figure 53).

Figure 53. Acappella Device ID and License Key Entry

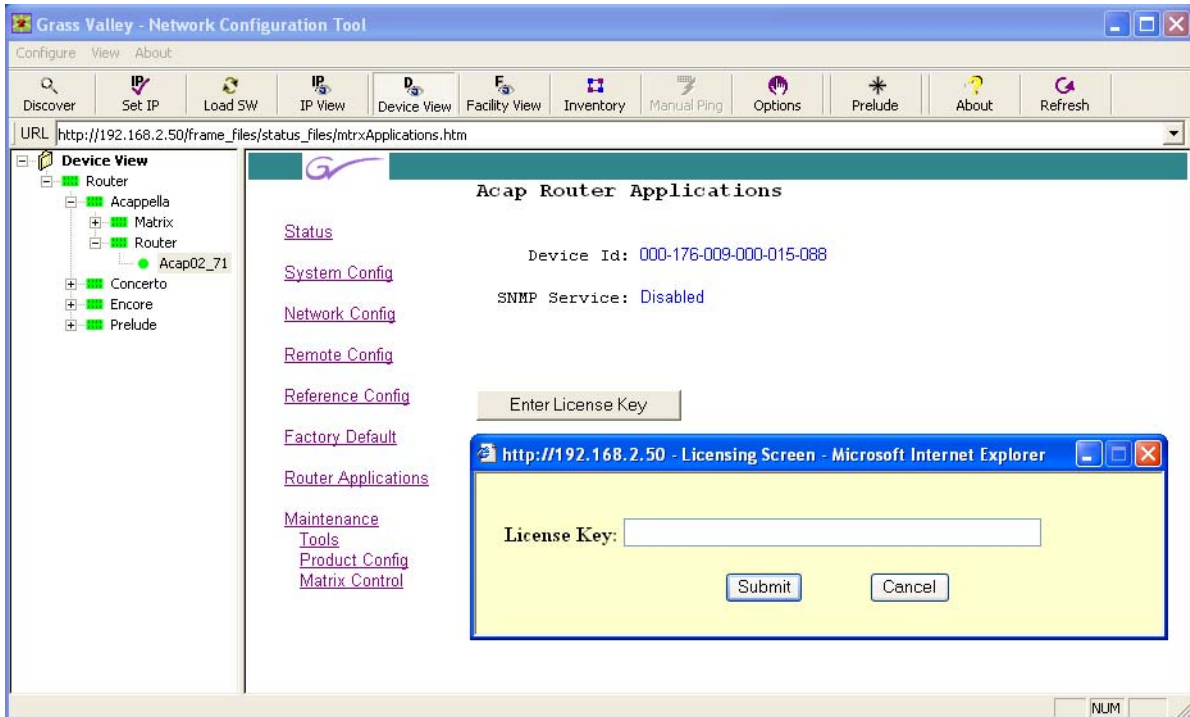

## Monitored Acappella Matrix Parameters

The following groups of parameters can be monitored with the Acappella SNMP Agent software.

Table 6. Acappella Monitored Parameters

Category	Parameter	Description
General Information	Frame Type	Identify the frame type, e.g.: Acappella_Frame
	Router Name	Acappella Matrix Name configured from the Web page.
	Model No	Model number of Acappella matrix, such as A88SR-DU-LP
	Description	example: 16x4x2 Vid-AES
	Product Part Number	example: 610-1196-00
	Firmware Name	Name of the firmware, such as Medic FW, Reference FW, Video Matrix FW etc.
	Firmware Version	Version of the Firmware, such as 001, 005 etc.
	Software Version	
	Configuration Version	example: V3.0.0d1
	Boot Version	example: 1.0.0 - 5272 acap
	Location	Location of Acappella matrix. This can be configured from SNMP Manager, as well as Web page. This is stored as persistent data, so is retained across reboots.
	Asset Tag	Asset tag of Acappella matrix. This can be configured from SNMP Manager, as well as Web page. This is stored as persistent data, so is retained across reboots.
Network Information	IP Address	
	Subnet Mask	
	Gateway Address	
Product Configuration	Config Version	Version number of Acappella configuration.
	Number of Sources	
	Number of Destinations	
	Number of Levels	
	Number of Channels	
	Number of Controllers	
Control Point Information	Physical Matrices	
	Control Point IP Address	IP Address of the Control point that is configured in Acappella Matrix
	Control Point Status	Status of the Control point, such as Active/Faulty/Missing.
Reference Signal Information	Control Point Type	Type of the control point such as Controller or NP Client.
	Reference Name	Name of the reference signal currently connected to Acappella Matrix, such as Video Reference #1 etc.,
Frame Fan Information	Reference Status	Status of the reference signal, such as Present/Faulty/Missing
	Fan Name	Name of the Fan such as Fan #1, Fan #2
Power Supply Information	Fan Status	Running or Missing
	Power Supply Name	Name of the power supply, such as PS#1, PS#2
	Power Supply Status	Running or Missing

Table 6. Acappella Monitored Parameters - (continued)

Category	Parameter	Description
Input / Output Signal Information	Signal Alias	The Alias name of the signal.
	Signal Type	Signal type, such as SD/HD Video, AES signal etc.,
	Signal State	State of the signal, such as Detected/Not Detected etc.,
	Signal Last Changed	Time at which signal state was last changed.
	Signal Specific	This an OID and can be used to extend the signal information to another table.
	Signal Notify	Indicates the current status of Signal Alarm Config and allows a manager to control whether or not the agent will generate the Signal State notification.
	Matrix Index Number	Indicates the matrix index number of current signal.
	Connector Number	Gives the current connector number of signal.
	Signal Description	Signal description, such as SD/HD Video, AES signal etc.,
	Output Connected To	Matrix Input connector number currently connected to output. If the signal is an input signal, this value will be -1.

## Acappella Matrix Traps

The following events are monitored by the Acappella SNMP agent software and trap messages can be sent to all configured SNMP managers.

Table 7. Acappella Trap Messages

Trap	Description
Reference Signal	If Acappella matrix loses Reference signal a trap message is sent to the manager. This error trap is cleared once Reference signal is restored.
Fan Error	If any error occurs in the fan a trap message is sent to the manager. This error trap is cleared once the fan is restored to the correct state.  Digital Acappella has two fans and alarms for each. Analog Acappella may have only one fan and one alarm.
Input Signal Loss	If Acappella matrix detects loss of a digital input signal, a trap message is sent to the manager. This error trap is cleared once Input signal is restored back. Analog signal loss cannot be detected.  <b>Note</b> The SNMP Agent software does not send traps on changes in the Input signal status unless it is configured to do so. This trap needs to be enabled using Acappella Matrix Web Page page.
Output Signal Loss	If Acappella matrix detects loss of an output digital signal, a trap message is sent to the manager. This error trap is cleared once Output signal is restored. Analog signal loss cannot be detected.  <b>Note</b> The SNMP Agent software does not send traps on changes in the Output signal status unless it is configured to do so. This trap needs to be enabled using Acappella Matrix Web Page screen.
Loss of Control Point	If Acappella matrix detects it losses its control point, a trap message is sent to the manager. This error trap is cleared once the control point is restored.
Power Supply Error	If any error occurs in the power supply a trap message is sent to the manager. This error trap is cleared once the power supply is restored to the correct state.  <b>Note</b> Acappella matrix hardware need part numbers ending in -01 or higher to receive this trap.

## Source and Destination Signal Loss Configuration

Digital signal loss SNMP traps are configured using the Acappella web pages. The SNMP settings are only available if SNMP is licensed on that matrix. Analog signal loss cannot be detected or reported.

The web pages available for configuration depend on the matrix type. For example, if the matrix is digital video only, there will be no AES configuration web page.

Video Destination and Source SNMP configuration is accessed via the **Video Config** web page (Figure 54 and Figure 55). AES SNMP is accessed via the **AES Config** web page (Figure 56 on page 113 and Figure 57 on page 114).

Clicking on the **Go to Input Config** or **Go to Output Config** button toggles the display between the Source and Destination configuration pages. The **Signal Alarm** can be turned on or off for each Destination and Source.

Figure 54. Video Destination SNMP Configuration

The screenshot shows the 'Fred's AcapPilot#02 Router Video Configuration' page. The left sidebar contains a 'Device View' tree with the following structure:

- Router
  - Acappella
    - Matrix
    - Panel
    - Router
      - Fred's AcapPi
      - X2 Fred's Acc
  - Concerto
  - Encore
  - Prelude

The main content area includes the following elements:

- Navigation Links:** Status, System Config, Network Config, Video Config, AES Config, Remote Config, Reference Config, Factory Default, Router Applications, Maintenance.
- Metadata:** Model: A88HR-DU-LP, Description: 8x8x3 Vid-AES-AES w/Local Panel and Redundant Power, Location: Fred's Cube.
- Action:** Go To Input Config...
- Level 2 Video Outputs Table:**

Destination	Reclocking Rate	Signal Alarm	Output
DST 1	270 Mb/s	<input checked="" type="checkbox"/> Enable	Not Locked
DST 2	Auto	<input checked="" type="checkbox"/> Enable	Not Locked
DST 3	Auto	<input checked="" type="checkbox"/> Enable	Not Locked
DST 4	Auto	<input checked="" type="checkbox"/> Enable	Not Locked
DST 5	Auto	<input checked="" type="checkbox"/> Enable	Not Locked
DST 6	Auto	<input checked="" type="checkbox"/> Enable	Not Locked
DST 7	270 Mb/s	<input checked="" type="checkbox"/> Enable	Not Locked
DST 8	Auto	<input checked="" type="checkbox"/> Enable	Not Locked

Figure 55. Video Source SNMP Configuration

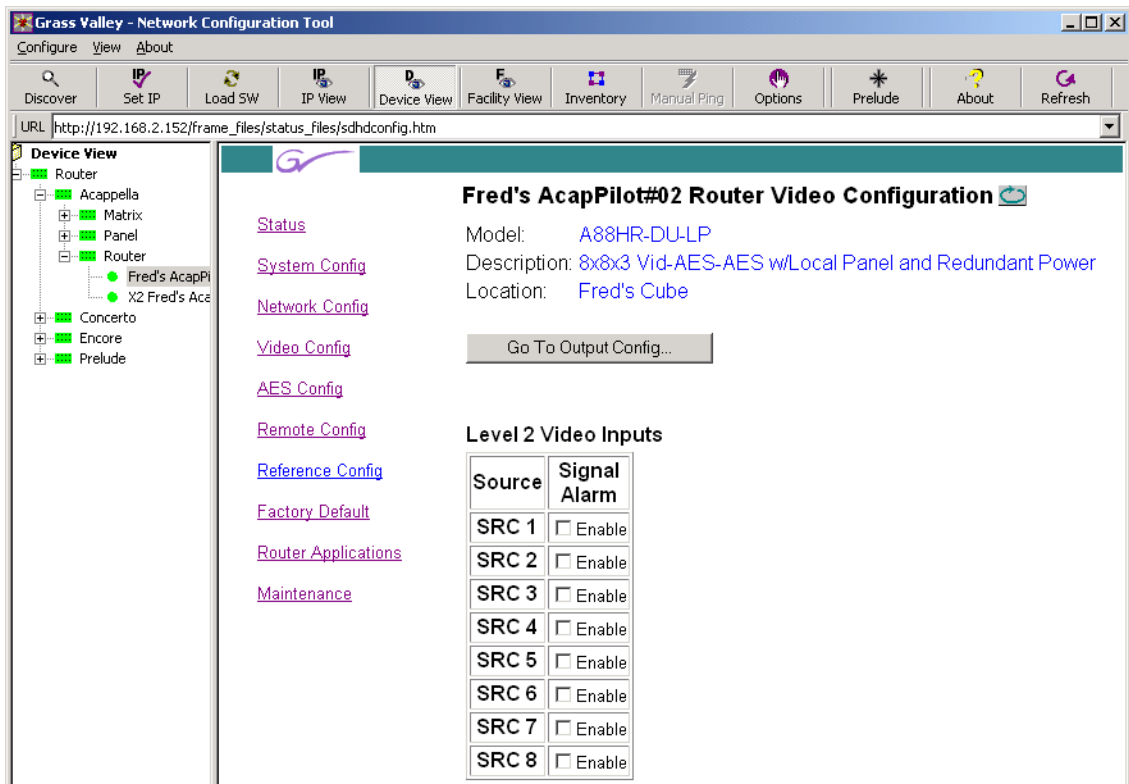




Figure 56. AES Source SNMP Configuration

The screenshot displays the 'Fred's AcapPilot#02 Router AES Output Configuration' page. The left sidebar shows a tree view of the network topology, with 'Fred's AcapPilot' selected under the 'Router' category. The main content area features a navigation menu with links for Status, System Config, Network Config, Video Config, AES Config (highlighted), Remote Config, Reference Config, Factory Default, Router Applications, and Maintenance. The right side of the page shows the router's details and two tables for AES inputs.

**Fred's AcapPilot#02 Router AES Output Configuration**

Model: A88HR-DU-LP  
 Description: 8x8x3 Vid-AES-AES w/Local Panel and Redundant Power  
 Location: Fred's Cube

Go To Output Config...

**Level 4 AES Inputs**

Source	Signal Alarm
SRC 1	<input type="checkbox"/> Enable
SRC 2	<input type="checkbox"/> Enable
SRC 3	<input type="checkbox"/> Enable
SRC 4	<input type="checkbox"/> Enable
SRC 5	<input type="checkbox"/> Enable
SRC 6	<input type="checkbox"/> Enable
SRC 7	<input type="checkbox"/> Enable
SRC 8	<input type="checkbox"/> Enable

**Level 3 AES Inputs**

Source	Signal Alarm
SRC 1	<input checked="" type="checkbox"/> Enable
SRC 2	<input checked="" type="checkbox"/> Enable
SRC 3	<input checked="" type="checkbox"/> Enable
SRC 4	<input checked="" type="checkbox"/> Enable
SRC 5	<input checked="" type="checkbox"/> Enable
SRC 6	<input checked="" type="checkbox"/> Enable
SRC 7	<input checked="" type="checkbox"/> Enable
SRC 8	<input checked="" type="checkbox"/> Enable

Figure 57. AES Destination SNMP Configuration

**Fred's AcapPilot#02 Router AES Output Configuration**

Model: A88HR-DU-LP  
 Description: 8x8x3 Vid-AES-AES w/Local Panel and Redundant Power  
 Location: Fred's Cube

Resolution:  20 bit  24 bit

**Level 4 AES Outputs**

Destination Signals	Bypass	Audio Mode	Invert	Sum	Muting	Output Signals	Block	Signal Alarm
DST 1 Chan A Chan B	<input type="checkbox"/> Bypass	<input checked="" type="radio"/> Normal <input type="radio"/> Swap <input type="radio"/> A Only <input type="radio"/> B Only	<input type="checkbox"/> Invert <input type="checkbox"/> Invert	<input type="checkbox"/> Sum <input type="checkbox"/> Sum	<input type="checkbox"/> Mute <input type="checkbox"/> Mute	A B	<input type="checkbox"/> Align	<input checked="" type="checkbox"/> Enable
DST 2 Chan A Chan B	<input type="checkbox"/> Bypass	<input checked="" type="radio"/> Normal <input type="radio"/> Swap <input type="radio"/> A Only <input type="radio"/> B Only	<input type="checkbox"/> Invert <input type="checkbox"/> Invert	<input type="checkbox"/> Sum <input type="checkbox"/> Sum	<input type="checkbox"/> Mute <input type="checkbox"/> Mute	A B	<input type="checkbox"/> Align	<input type="checkbox"/> Enable
DST 3 Chan A Chan B	<input type="checkbox"/> Bypass	<input checked="" type="radio"/> Normal <input type="radio"/> Swap <input type="radio"/> A Only <input type="radio"/> B Only	<input type="checkbox"/> Invert <input type="checkbox"/> Invert	<input type="checkbox"/> Sum <input type="checkbox"/> Sum	<input type="checkbox"/> Mute <input type="checkbox"/> Mute	A B	<input type="checkbox"/> Align	<input type="checkbox"/> Enable
DST 4 Chan A Chan B	<input type="checkbox"/> Bypass	<input checked="" type="radio"/> Normal <input type="radio"/> Swap <input type="radio"/> A Only <input type="radio"/> B Only	<input type="checkbox"/> Invert <input type="checkbox"/> Invert	<input type="checkbox"/> Sum <input type="checkbox"/> Sum	<input type="checkbox"/> Mute <input type="checkbox"/> Mute	A B	<input type="checkbox"/> Align	<input type="checkbox"/> Enable
DST 5 Chan A Chan B	<input type="checkbox"/> Bypass	<input checked="" type="radio"/> Normal <input type="radio"/> Swap <input type="radio"/> A Only <input type="radio"/> B Only	<input type="checkbox"/> Invert <input type="checkbox"/> Invert	<input type="checkbox"/> Sum <input type="checkbox"/> Sum	<input type="checkbox"/> Mute <input type="checkbox"/> Mute	A B	<input type="checkbox"/> Align	<input type="checkbox"/> Enable
DST 6 Chan A Chan B	<input type="checkbox"/> Bypass	<input checked="" type="radio"/> Normal <input type="radio"/> Swap <input type="radio"/> A Only <input type="radio"/> B Only	<input type="checkbox"/> Invert <input type="checkbox"/> Invert	<input type="checkbox"/> Sum <input type="checkbox"/> Sum	<input type="checkbox"/> Mute <input type="checkbox"/> Mute	A B	<input type="checkbox"/> Align	<input type="checkbox"/> Enable
DST 7 Chan A Chan B	<input type="checkbox"/> Bypass	<input checked="" type="radio"/> Normal <input type="radio"/> Swap <input type="radio"/> A Only <input type="radio"/> B Only	<input type="checkbox"/> Invert <input type="checkbox"/> Invert	<input type="checkbox"/> Sum <input type="checkbox"/> Sum	<input type="checkbox"/> Mute <input type="checkbox"/> Mute	A B	<input type="checkbox"/> Align	<input type="checkbox"/> Enable
DST 8 Chan A Chan B	<input type="checkbox"/> Bypass	<input checked="" type="radio"/> Normal <input type="radio"/> Swap <input type="radio"/> A Only <input type="radio"/> B Only	<input type="checkbox"/> Invert <input type="checkbox"/> Invert	<input type="checkbox"/> Sum <input type="checkbox"/> Sum	<input type="checkbox"/> Mute <input type="checkbox"/> Mute	A B	<input type="checkbox"/> Align	<input type="checkbox"/> Enable

# Specifications

## Mechanical and Power

Table 8. Mechanical and Power Specifications, Maximum Configuration

Component	Depth (allow room behind for cabling)	Width	Height	Weight	Rack Units	Voltage Input	Power Consumption (Maximum)
Router	392 mm 15.43 in.	483 mm 19 in.	44 mm 1.75 in.	4.89 kg. 10.78 lbs.	1	100-240 V AC 50-60 Hz	≤ 40 W
Remote Panel	106 mm 4.18 in.	483 mm 19 in.	44 mm 1.75 in.	1.04 kg. 2.3 lbs.	1	100-240 VAC 50-60 Hz	≤ 25 W

### Environmental

Temperature	0 - 40 degrees Celsius
Humidity	10-90%, non-condensing

## Video Specifications

### Video Reference

Table 9. Video Reference Specifications

Video Format	NTSC 525	Line Standard switching middle of line 10
	PAL 625	Line Standard switching middle of line 6
	Tri-Level	Line Stand switching middle of line 7
Vertical Offset (0 midpoint)		Adjustable from -15 lines up to +16 lines
Horizontal Offset (0 midpoint)	NTSC 525	Adjustable up to ± 31.5 μs
	PAL 625	Adjustable up to ± 31.1
	Tri-Level	720p/59.94 & 720p/60 adjustable up to ± 10.4 μs 720p/50 adjustable up to ± 12.7 μs 1080i/59.94 & 1080i/60 adjustable up to ± 14.2 μs 1080i/50 adjustable up to ± 17.2 μs 1080p/24 & 1080fs/48 adjustable up to ± 18.1 μs
Impedance/Connector		High, Looping – BNC
Return Loss		> 40 5dB (0.1 MHz-5 MHz) 75 ohm Termination

## SD Digital Video

Table 10. SD Digital Video Specifications

<b>SD Inputs</b>		
Type	Serial digital video conforming to SMPTE 259M	
Connector	BNC	
Return loss	> 15 dB (10 MHz- 540 MHz)	
Impedance	75 ohms	
Cable equalization	Automatic ≤ 300 meters of Belden 1694A or equivalent for data rate ≤ 540 Mbps	
<b>SD Outputs</b>		
Type	Serial digital video conforming to SMPTE 259M	
Connector	BNC	
Return loss	> 15 dB (10 MHz-540 MHz)	
Signal amplitude	800 mV ±10% when terminated into 75 ohm	
Impedance	75 ohms	
<b>Operational Modes</b>		
Reclocking	SR	Automatic or manual selection of 143 Mbps, 270 Mbps, 360 Mbps, & 540 Mbps
Non reclocking	S	Non-reclocked operation or bypass switched from 10 Mbps to 540 Mbps with signals that have a maximum ones/zeros ratio of 20:1
<b>DVB-ASI</b>		
Supported	Polarity is preserved.	

## Wideband Digital Video

Table 11. Wideband Digital Video Specifications

<b>Wideband Inputs</b>		
Type	Serial digital video conforming to SMPTE 292M	
Connector	BNC	
Return loss	> 15dB (10 MHz-1.5GHz)	
Impedance	75 ohms	
Cable equalization	Automatic ≤ 100 meters of Belden 1694A or equivalent for data rate ≤ 1.485 Gbps	
<b>Wideband Outputs</b>		
Type	Serial digital video conforming to SMPTE 259M or SMPTE 292M	
Connector	BNC	
Return loss	> 15dB (10 MHz-1.5GHz)	
Signal amplitude	800 mV ±10% when terminated into 75 ohm	
Impedance	75 ohms	
<b>Operational Modes</b>		
Reclocking	Automatic or manual selection of 143 Mbps, 270 Mbps, 360 Mbps, 540 Mbps, & 1.485 Gbps	
<b>DVB-ASI</b>		
Supported	Polarity is preserved.	

## Analog Video

Table 12. Analog Video Specifications

<b>Analog Input</b>	
Connector	BNC (IEC 60169-8)
Input impedance	75 ohm self terminating.
Input Return Loss	> 40dB, DC to 10MHz
Signal Type, Nominal Level	Composite Analog Video, or RGB 1Vpp, max 2Vpp
Cable Equalization	None
Clamping	None
Coupling	DC
<b>Analog Video Output</b>	
Connector	BNC (IEC 60169-8)
Impedance	75 ohm source terminated
Return Loss	> 40dB, DC to 10MHz
Nominal Level	1Vpp, max 2Vpp into 75 ohm termination
Coupling	DC
DC Offset	<50mV
Equalization	None
<b>Analog Video Performance</b>	
Frequency Response	±0.1dB DC to 10MHz, +0.5/-0.5dB, 10-30MHz, 0 to -3dB @ 120MHz
Gain Uniformity	±0.1dB
Differential Gain	<0.15% @1Vpp
Differential Phase	<0.15° @1Vpp
K-Factor/ Pulse-to-bar	<0.5%
Tilt	<0.5%
Chroma/Luma Gain Inequality	<0.5%
Crosstalk	<-60dB DC to 4.43MHz most hostile condition
Hum and Noise	>70dB below 700mV unweighted with 10MHz bandwidth
Delay Scatter	±1° @4.43MHz between any two paths
Electrical Length	TBD
Temperature Range	0° to 40° C

# Audio Specifications

## AES Digital Audio

Table 13. AES Digital Audio Specifications

<b>General</b>	
Switch Point	Next audio sample after video switches
Switching Transients	No discontinuity, switching is frame synchronous
Signal Format	Unbalanced AES-3id-1995, SMPTE-276-M (specifies AES3)
<b>AES Inputs</b>	
Format	SMPTE-276-M (specifies AES3)
Cable Length	350M of RG59/U (9259) for 75 ohm systems 450M of 8281 for 75 ohm systems
Connector	BNC
Impedance	75 ohm
Return loss	≥ 25dB 0.1-6mhz 75 ohms unbalanced
Sample rate	48KHz
<b>AES Outputs</b>	
Format	SMPTE-276-M (specifies AES3)
Connector	BNC
Impedance	75 ohm
Voltage	1 Vpp into 75 ohms
Rise-time	Approximately 19nS
Return loss	≥ 25dB 0.1-6mhz
Input to output delay	≤ 4.2 audio samples
Reclocking	Yes
Output Jitter	≤1nS
Sample rate	48KHz

## Analog Audio

Table 14. Analog Audio Specifications

<b>Analog Inputs</b>	
Signal Type	Balanced Analog Audio
Connector	6 position friction clamp connector for channel pair (+,-,GND,+,-,GND)
Max Input Level	+24dBu
CMRR @ 50-60Hz	>70dB
CMRR @ 20kHz	>=55dB
Input Common Mode Voltage Range	+/- 40V
Input Impedance Differential	>15k Ohms
ESD (Static Withstand Voltage)	10kV @ 330 Ohms, 150pF

Table 14. Analog Audio Specifications - (continued)

<b>Analog Audio Outputs</b>	
Signal Type	Balanced Analog Audio
Connector	6 position friction clamp connector for channel pair (+, -, GND, +, -, GND)
Max Output Level (System is voltage mode and not designed to support more than three outputs loaded with 600 Ohms.)	+24dBu Balanced, 10k Ohm Load (no cable)
	+18dBu Unbalanced, 10k Ohm Load (no cable, one of the outputs grounded)
	+24dBu Balanced into 600 Feet Belden 8451 cable + 600 Ohms. Capacitance of cable equivalent to 0.022uF.
Output Impedance	<= 25 Ohms Differential
OCMR (Output Common Mode Rejection)	>=46dB
DC on Output Differential	<= +/- 50mV
<b>Analog Audio Performance</b>	
Gain	Unity (0dB)
THD+N	<0.01%, 20Hz – 20kHz
IMD (SMPTE 4:1)	<0.01%, +24dBu, 600 Ohm/Hi Z load.
Crosstalk	>83dB isolation, 20Hz – 20kHz, all hostile
Frequency Response	20Hz-20kHz +/-0.1dB @1kHz -3dB @200kHz with smooth roll-off after 200kHz
Noise (22kHz un-weighted, RMS)	-85dBu
Gain Error	+/- 0.1dB typical, +/- 0.25dB max, with 10k Ohms or larger load





# *Native Protocol*

Acappella Matrix 3.2.4 and newer software supports Native Protocol. Refer to the separate *Routing Products Protocols Manual* for specific information about the currently supported Acappella commands.



# Index

## Numerics

- 16x16
  - cabling [39](#)
  - single stream [39](#)
- 20 bit [78](#)
- 24 bit [78](#)
- 8x8
  - cabling [40](#)
  - dual stream [40](#)

## A

- A Only [79](#)
- A84HR-CLP
  - configuring with Prelude [36](#)
  - limitations [36](#)
- AC power supplies
  - external [45](#)
  - internal [44](#)
- Acap Router Applications page [91](#)
- Acappella
  - control by Encore [102](#)
- Acappella Destination Configuration page [99](#)
- AES Attributes [79](#)
  - defaults [45](#)
  - settings [78](#)
- All-Level Take [52](#)
  - Illustration [52](#)
- analog audio
  - pinouts [41](#)
- asset tag
  - remote panel [94](#)
  - router [67](#)
- Audio Analog
  - dual stereo [34](#)
- Audio Backplane Analog
  - 16x16 [34](#)
  - 16x4 [34](#)
- Audio Backplane BNC
  - 16x16 [31](#)
  - 16x2 [32](#)

- 16x4 [32](#)
- 16x8 [32](#)
- 8x4 [33](#)
- 8x8 [33](#)
- Empty [33](#)
- Audio Backplane Dual Analog
  - 8x4 [35](#)
  - 8x8 [35](#)
- Audio V-Fadet
  - Frame Sync [76](#)
- Auto (Default) setting
  - with Frame Sync [73](#)
- Auto reclocking [71](#)

## B

- B Only [79](#)
- Backplane Audio Analog [33](#)
  - 16x16 [34](#)
  - 16x4 [34](#)
- Backplane Audio BNC
  - 16x16 [31](#)
  - 16x2 [32](#)
  - 16x4 [32](#)
  - 16x8 [32](#)
  - 8x4 [33](#)
  - 8x8 [33](#)
  - Empty [33](#)
- Backplane Audio Dual Analog
  - 8x4 [35](#)
  - 8x8 [35](#)
- Backplane Video
  - 16x16 [29](#)
  - 16x2 [30](#)
  - 16x4 [30](#)
  - 16x8 [30](#)
  - 8x4 [31](#)
  - 8x8 [30](#)
  - Empty [31](#)
- Breakaway Take
  - Illustration [52](#)
- button

- Local Panel Destination [50](#)
- Local Panel Enable [47](#)
- Local Panel Level [51](#)
- Local Panel Protect [48](#)
- Local Panel Source [49](#)

## C

- cabling
  - 16x16 [39](#)
  - 8x8 [40](#)
  - control [42](#)
  - Ethernet [42](#)
  - Remote Panel [44](#)
- consecutive IP addresses
  - Encore control [54, 60](#)
  - Prelude control [54, 60](#)
- control
  - cabling [42](#)
- Crosspoint
  - Switching Latency [106](#)

## D

- defaults
  - AES Attributes [45](#)
  - factory [90, 98](#)
- Device ID [91](#)
- Device View [59](#)
- Do Reset [97](#)
- Do reset [68](#)
- documentation online [4](#)
- DST 1, 2
  - Auto (Default) setting [73](#)
- dual stereo configuration [34](#)
- dual stream
  - 8x8 [40](#)
- duplicate IP address
  - resolving [61](#)

## E

- Encore
  - consecutive IP addresses [54, 60](#)
  - control of Acappella [25, 102](#)
  - panels configured to control Acappella [102](#)
- Ethernet

- cabling [42](#)

## F

- factory
  - defaults [90, 98](#)
- FAQ database [4](#)
- features [26](#)
- Frame model codes [35](#)
- Frame Sync
  - and Router Reference [89](#)
  - Audio V-Fade [76](#)
  - limitation for SD use [36](#)
  - Loss of Signal [76](#)
  - Manual Freeze [76](#)
  - Output Rate [74](#)
  - Test Signal Output [76](#)
  - Vertical and Horizontal Offsets [77](#)
  - video configuration [74](#)
  - Video Format [74](#)
- frequently asked questions [4](#)
- Front
  - 16x1 [28](#)
  - 16x16 [27](#)
  - 16x2 [28](#)
  - 16x4 [28](#)
  - 16x8 [27](#)
  - 8x1 [29](#)
  - 8x4 [28](#)
  - 8x8 [28](#)
  - No Local Panel [27](#)

## G

- general description [25](#)
- Grass Valley web site [4](#)

## I

- Indigo AV Mixer
  - expansion configuration settings [102](#)
  - expansion option [25](#)
- information
  - router [66](#)
- installation
  - panel rack mount [38](#)
  - router rack mount [37](#)

Invert [79](#)  
 IP address  
   consecutive [54, 60](#)  
   resolving duplicate [61](#)  
   setting [60](#)  
   setting with web page [69](#)  
 IP View [59](#)

## L

levels  
   used by remote panel [100](#)  
 license key  
   SNMP [107](#)  
 Local Panel Destination  
   button [50](#)  
 Local Panel Enable  
   button [47](#)  
 Local Panel Level  
   button [51](#)  
 Local Panel Protect  
   button [48](#)  
 Local Panel Source  
   button [49](#)  
 location  
   remote panel [94](#)  
   router [67](#)  
 Loss of Signal  
   Frame Sync [76](#)

## M

Maintenance page [92](#)  
 manual  
   NetConfig [60](#)  
 Manual Freeze  
   Frame Sync [76](#)  
 Multi-Level Switching [52](#)  
 multiple frame configuration example [82](#)  
 Mute [79](#)

## N

name  
   router [67](#)  
 Native Protocol commands [121](#)

NetCentral [106](#)  
 NetConfig [59](#)  
   main screen description [59](#)  
   manual [60](#)  
 NetConfig Device ID Setting [96](#)  
 network configuration  
   of PC [53](#)  
 Normal [79](#)

## O

On Indicators [47](#)  
 online documentation [4](#)  
 Output Rate  
   Frame Sync [74](#)

## P

panel  
   rack mount installation [38](#)  
 Panel Description page [93](#)  
 panel device name [94](#)  
 Panel Factory Defaults page [98](#)  
 Panel Network Configuration page [96](#)  
 Panel System Configuration page [94](#)  
 PC  
   network configuration [53](#)  
   requirements [53](#)  
 pinouts  
   analog audio [41](#)  
   Serial D connector [42](#)  
 Prelude  
   A84HR-CLP configuration [36](#)  
   consecutive IP addresses [54, 60](#)  
   control of Acappella [25](#)  
   not recognize A84HR-CLP [36](#)  
 problem  
   reference [106](#)

## R

rack mounting  
   rear frame support [38](#)  
 rear frame support kit [38](#)  
 redundant operation [54, 60](#)  
 reference

- adjustments 88
- problem 106
- video 43
- Refresh button Icon 66
- Remote Panel
  - cabling 44
- remote panel
  - asset tag 94
  - levels used by 100
  - location 94
- Remote Panel model codes 36
- Remote Panel router
  - settings 100
- restore defaults 90
- router
  - asset tag 67
  - information 66
  - location 67
  - name 67
  - rack mount installation 37
- Router AES Configuration page 78
- Router Factory Defaults page 90
- router name 67
- Router Network Configuration page 69
- Router Reference
  - and Frame Sync 89
- Router Reference Configuration page 88
- Router Remote Configuration page 82
- Router Status page 66
- Router System Configuration page 67
- Router Video Configuration page 71, 73
- RS-422 101

## S

- Save New Settings 68, 97
- SD
  - limitation with Frame Sync 36
- Serial
  - D connector pinouts 42
- Serial Control 101
- settings
  - AES Attributes 78
  - Remote Panel router 100
  - system 95
  - Video 71

- Simple Network Management Protocol (SNMP)
  - 106

- single stream
  - 16x16 39
- SNMP
  - license key 107
  - licensing 107
  - monitored parameters 109
  - NetCentral manager 106
  - signal loss configuration 111
  - standards 106
  - third-party manager 107
  - traps 110
- SNMP monitoring 106
- SNMP option
  - license key 91
- software 59
  - installation on PC 54
  - loading to devices 63
  - NetConfig 59
- Software CD 54
- software download from web 4
- Sum 79
- Swap 79
- Switching Latency, Problems 106
- system
  - settings 95
- System Broadcast Select 70, 97
- System Identifier 69, 97

## T

- Take
  - All-Level 52
  - All-Level Illustration 52
  - Breakaway Illustration 52
- Terminal/Computer Interface (T/CI) protocol
  - 101
- Test Signal Output
  - Frame Sync 76

## V

- Vertical and Horizontal Offsets
  - Frame Sync 77
- Video
  - settings 71

- Video Backplane
  - 16x16 [29](#)
  - 16x2 [30](#)
  - 16x4 [30](#)
  - 16x8 [30](#)
  - 8x4 [31](#)
  - 8x8 [30](#)
  - Empty [31](#)
- video configuration
  - Frame Sync [74](#)
- Video Format
  - Frame Sync [74](#)
- video reference [43](#)

## W

- web browser Interface [65](#)
- web page
  - Acap Router Applications [91](#)
  - Acappella Destination Configuration [99](#)
  - Maintenance [92](#)
  - Panel Description [93](#)
  - Panel Factory Defaults [98](#)
  - Panel Network Configuration [96](#)
  - Panel System Configuration [94](#)
  - Router AES Configuration [78](#)
  - Router Factory Defaults [90](#)
  - Router Network Configuration [69](#)
  - Router Reference Configuration [88](#)
  - Router Remote Configuration [82](#)
  - Router Status [66](#)
  - Router System Configuration [67](#)
- web page, Frame Sync [73](#)
- web page, non Frame Sync
  - Router Video Configuration [71](#)
- web site documentation [4](#)
- web site FAQ database [4](#)
- web site Grass Valley [4](#)
- web site software download [4](#)

