


K2 Summit Production Client Quick Start Guide

86231210 March 17, 2009
Before you begin, unpack the following items...

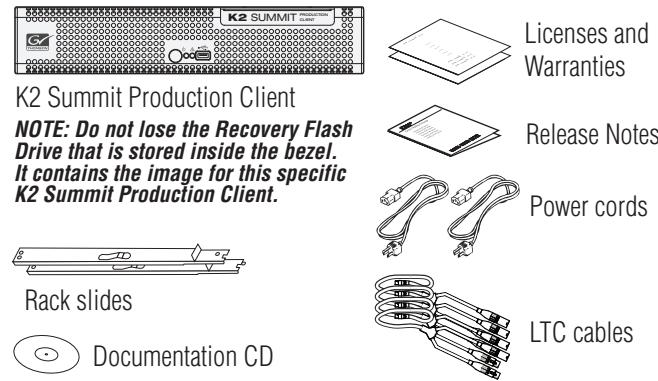

...and locate the documentation you need.

Documentation path to install K2 client with internal storage



Documentation path to install K2 client with shared or direct-connect storage



*Cabling Guide packed with RAID primary chassis

1. Make cable connections

Bi-directional channels

Each channel (C1, C2, etc.) can be both an input (record channel) and an output (play channel). Connect video/audio IN and OUT to each channel, as appropriate for your intended use.

SDI connections

IN1 - Active
IN2 - Unused
IN3 - Unused
OUT1 - Active
OUT2 - Active. Duplicates OUT 1.

Ethernet connections

Internal or direct-connect storage:
-Port 1 - Control network
-Port 2 - FTP/Streaming
-Ports 3 & 4 - Not used

Shared iSCSI storage basic:
-Port 1 - Control network
-Port 2 - Media (iSCSI) network

Shared iSCSI storage redundant:
-Port 1 & 4 - Control network
-Port 2 - Media (iSCSI) network A
-Port 3 - Media (iSCSI) network B

Shared FC storage basic:
-Port 1 - Control network

Shared FC storage redundant:
-Port 1 & 4 - Control network

1 Make connections as desired on each channel

2 Make Ethernet connections

3 Connect keyboard and mouse

4 Connect VGA monitor

5 Connect power cord

5 Connect power cord

5 Connect Optional Fibre Channel card for connection to standalone direct-connect storage or shared Fibre Channel storage.

2. Start up

- Before power on, take note of the chassis serial number, located behind the bezel/fan.
- Locate the Recovery Flash Drive, which is labeled with this unit's serial number. Make sure it remains stored with this specific unit.
- Replace the bezel/fan and identify the following: Standby switch, Power LED, Service LED.
- Press the standby switch to power on.
- Log on with the default Windows admin account:
 - Username: Administrator
 - Password: adminK2
- On the Windows desktop, check the system tray. When the network icon indicates connectivity, the K2 Summit Production Client is operational.

Normal startup sequence
Power LED goes on and stays on. Service LED stays off.

3. Disable write filter

The K2 Summit Production Client has a file-based write filter to protect from changes and increase on-air reliability. The write filter must be disabled before making changes and enabled after changes are complete.


Disable the write filter as follows:

- Click **Start | All Programs | Grass Valley | Write Filter Utility**. FBWF Manager opens.

- Set Filter to **Disable**.

- Click **OK**.

- When prompted, restart the K2 Summit Production Client.

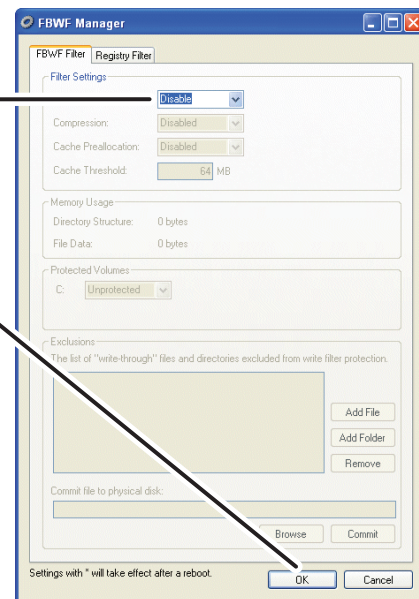

To enable the write filter, set Filter to **Enable** and restart.

4. Configure network and, if necessary, storage


- Use SiteConfig as appropriate for your K2 system and on-site networking.

- Standalone internal or direct-connect storage** – Install SiteConfig on a control point PC, discover the K2 Summit Production Client, and configure network interfaces.
 - Configure Control Team for the control network.
 - If desired, configure Media Connection #1 for the FTP/Streaming network.
 Refer to *K2 Release Notes* for instructions.
- Shared storage** – Configure network interfaces as instructed in the *K2 SAN Installation and Service Manual*.

- Configure network name resolution via host files or otherwise, as required by on-site networking. FTP/Streaming network hostnames must include “_he0” suffix.

- Configure storage as follows:


- Internal storage** – No storage configuration is necessary. Storage is pre-configured.
- Direct-connect storage** – Use Storage Utility to Bind RAID disks and make file system. Refer to the *K2 System Guide*.
- Shared storage** – Use the K2 System Configuration application to add the K2 Summit Production Client to the K2 SAN and configure it on the SAN. Refer to the *K2 SAN Installation and Service Manual*.

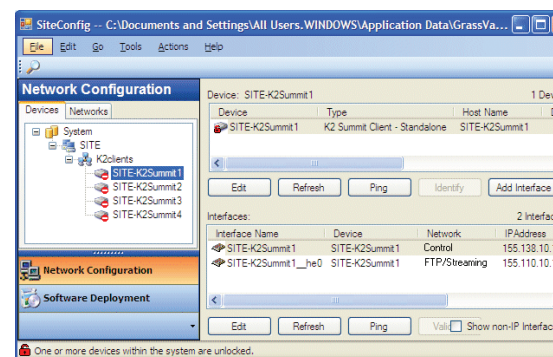

Default network settings
DHCP is enabled and the chassis serial number is the hostname.

5. Configure channels

- Open AppCenter and logon with the K2 administrator account (K2Admin/K2admin). If a licensing message appears, refer to *K2 Release Notes*.

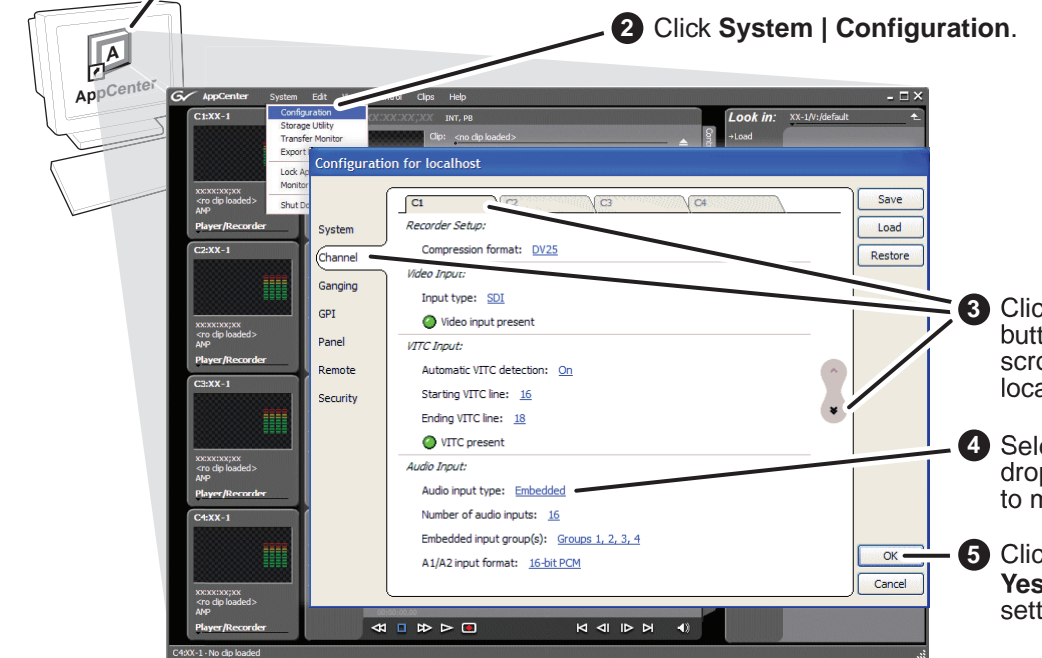

- Click **System | Configuration**.
- Click tabs, buttons, and scroll bar to locate settings.
- Select from drop-down lists to make settings.
- Click **OK** and **Yes** to save settings.

- When changes are complete, enable the write filter.

Continue with Quick Start procedures on the reverse side.

5. Record and play

Bi-directional channels

A channel becomes an input channel when you begin recording. The same channel becomes an output channel when you load a clip for playback.

1 Select a channel

2 Begin record

3 Stop record

4 Drag a clip into the channel

5 Play the clip

Timecode for Record

On the AppCenter menu, click **Control | Options**. On the Options dialog box click **Timecode** and select the timecode for recording and display.

6. Create a playlist

1 Select Playlist

2 Drag clips into the channel

3 Play the list

7. Monitor

Click **View | Video Monitor**

- Toolbar
- Full Screen
- Video Monitor


Video monitor support

The VGA resolution must be 1024 x 768 x 32 or greater to support live (moving) video monitoring.



8. For more information...


In AppCenter, click **Help | AppCenter Help Topics** and read the complete documentation for operating and configuring K2 Summit Production Client channels.

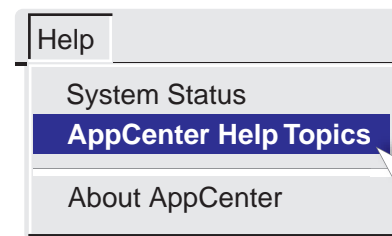

Go to <http://www.grassvalley.com/support> and find solutions to problems.



Find the complete documentation set for K2 products on the Documentation CD:

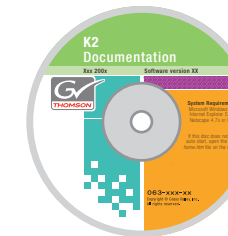

- User Guide
- System Guide
- Service Manual
- SAN Manual
- RAID Instruction Manuals



Use the following information to contact product support by phone during business hours. Afterhours phone support is available for warranty and contract customers.

| | |
|---------------------------------------|---------------------------------------|
| International (France) | +800 80 80 20 20 +33 1 48 25 20 20 |
| International (United States, Canada) | +800 547 8949 +1 530 478 4148 |

Go to <http://www.grassvalley.com/support/contact/phone> for phone numbers to contact your local support center directly during normal business hours.

